



Bobcat®


Parts Manual

S175

S185

TURBO

S/N 5252 11001 & Above
S/N 5253 11001 & Above
S/N 5250 11001 & Above
S/N 5251 11001 & Above

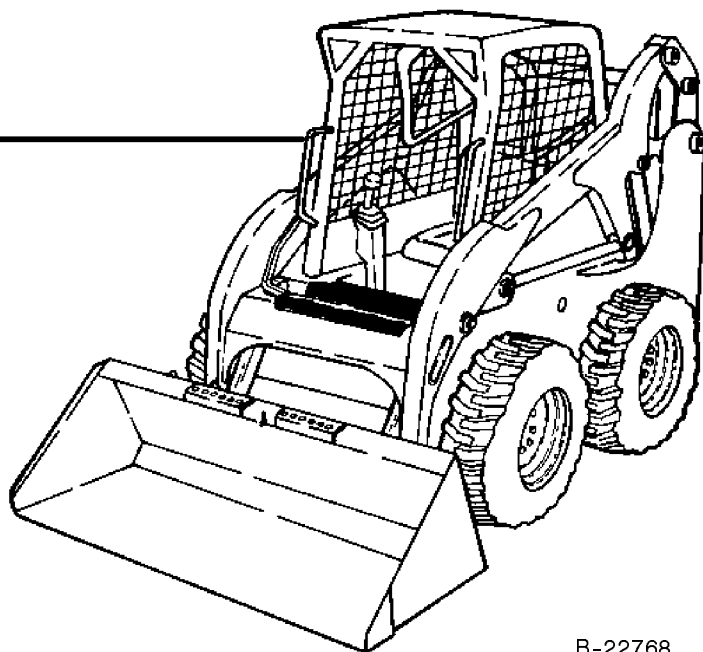

B-22768

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)



GENERAL INFORMATION


When using the machine serial number, use the complete number.

Some Serial Number breaks are not available at time of printing. These are listed as & Below or & Above.


The number shown in the quantity column in this manual is the number of parts needed for the illustration on the page. For some parts an "x" will be shown in the quantity column. This "x" indicates that the quantity to be used is "As Needed".

When references L.H. and R.H. are used in this manual, it is done from the operator's seat in the forward operating position.


Some of the illustrations and information found in this parts manual were supplied to Bobcat by machine component companies.

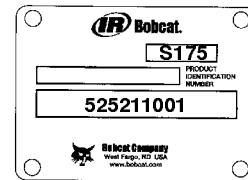


Domestic

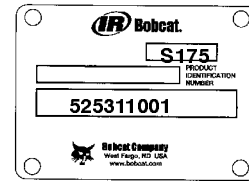

Export

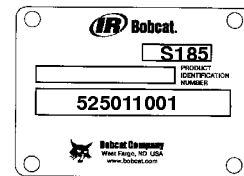

Turbo Engine Domestic

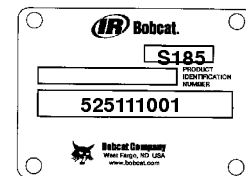

Turbo Engine Export

ABBREVIATIONS & SYMBOLS

SALES = Order from Gwinner Sales Department

NSS = Not Serviced Separately

NAP = Not Available as Parts

***** = Changed or Added Sections, Pages or Part Numbers

Disposition Code Definition (Found in the Remarks Column)

[A] = Use Up

[B] = Use Up on Other Application (See PNI)

[C] = File PDR Report With Bobcat Parts Sales

[D] = Part Number Error

Explications en francais	Grid Nb	3
Erklärungen auf deutsch	Grid Nb	4
Spiegazioni in italiano	Grid Nb	5
Explicaciones en espanol	Grid Nb	6
Verklaring in het Nederlands	Grid Nb	7

NOTE D'INFORMATION

Pour toute référence au numéro de série de l'engin, toujours donner le numéro complet.

Le chiffré apparaissant dans la colonne des quantités de ce manuel représentent le nombre de pièces nécessaires pour l'illustration reprise sur la page. Dans certains cas, on lira un "x" dans la colonne des quantités. Cet "x" indique que la quantité nécessaire est "selon besoin".

Pour toute référence vers la GAUCHE ou la DROITE dans ce manuel, considérer que la personne se trouve assise dans le siège de l'opérateur, en position de fonctionnement en marche avant.

Certaines illustrations et informations reprises dans ce manuel de pièces de rechange ont été fournies à Bobcat/Ingersoll-Rand par des fabricants de composants.

ABREVIATIONS & SYMBOLES

SALES	= Commander au Service Ventes à Bruxelles
NSS	= Pas vendu séparément
NAP	= Non disponible comme pièce de rechange
*	= Chapitre, page ou numéro de pièce modifié ou supplémentaire
BTI	= Bobcat Technical Information Bulletin : voir à la fin de la microfiche du modèle concerné ou la microfiche générale reprenant l'ensemble des "BTI".
was 6535403	= était avant 6535403
adj. (adjustment)	= réglage
Assembly	= ensemble
available W/Ref.	= disponible avec réf.
bulk/sold per foot	= en vrac/vendu par pied
does not include	= ne comprend pas
included with	= compris dans
I.D.	= D.I. (diamètre intérieur)
O.D.	= D.E. (diamètre extérieur)
not in kit	= pas en kit
W/ - WO/	= inclus/ - non inclus/
Qty	= quantité requise
see page/ref.	= voir page/réf.
used with ref/	= utilisé avec réf.
0,05 inch thickness	= 0,05 pouce d'épaisseur (un pouce = 25.4 mm)
weld on	= à souder

ALLGEMEINE INFORMATIONEN

Bei Angabe der Maschinen-Seriennummer stets die komplette Nummer angeben.

Bei der in der Mengenspalte (Anzahl) in diesem Handbuch angegebenen Zahl handelt es sich um die Anzahl von Teilen, die für die Abbildung auf der betreffenden Seite benötigt werden. Bei manchen Teilen in der Mengenspalte ist ein "x" angegeben. Dieses "x" weist darauf hin, dass sich die Anzahl der verwendeten Teile auf den "Bedarf" bezieht.

Bei Verwendung der Seitenangaben links und rechts in diesem Handbuch gelten diese für die Blickrichtung vom Fahrersitz aus, und zwar in Vorwärts-Betriebsrichtung.

Einige der in diesem Ersatzteilhandbuch aufgeführten Abbildungen und Informationen wurden der Bobcat/Ingersoll-Rand von den Herstellern von Maschinenbauteilen zur Verfügung gestellt.

ABKÜRZUNGEN UND SYMBOLE

SALES	= Bestellung bei der Verkaufsabteilung in Brüssel
NSS	= Nicht einzeln erhältlich
NAP	= Nicht als Ersatzteil erhältlich
*	= Geänderte oder hinzugefügte Abschnitte, Seiten oder Teilenummern
BTI	= Bobcat Technical Information Bulletin : Siehe am Ende der Mikrokarte des jeweiligen Modells oder der allgemeinen Mikrokarte der BTI.
was 6535403	= War 6535403
adj.	= Einstellung
Assembly	= Baugruppe
available W/Ref.	= erhältlich mit der Referenz
bulk/sold per foot	= Mengenabnahme / Verkauf pro Fuss
does not include	= beinhaltet nicht
included with	= enthalten in
I.D.	= Innendurchmesser
O.D.	= Aussendurchmesser
not in kit	= nicht in Bausatz
W/ - WO/	= mit/ - ohne/
Qty	= Anzahl
see page/ref.	= Siehe Seite / Referenz
used with ref.	= verwendet mit Referenz
0.05 inch thickness	= Dicke : 0.05 Zoll (ein Zoll = 25.4 mm)
weld on	= anschweißen

INFORMAZIONI GENERALI

Quando si usa il numero di serie della macchina usare il numero completo.

Il numero mostrato nella colonna della quantità di questo manuale corrisponde al numero di componenti necessari per l'illustrazione della pagina. Per alcuni componenti appare "X" nella colonna delle quantità. Questa "X" indica che la quantità da usare è "come necessario".

Se in questo manuale si fa riferimento alla parte destra o sinistra, si intende dal sedile dell'operatore nella posizione in avanti di funzionamento.

Alcune delle illustrazioni e informazioni trovate in questo manuale di componenti sono state fornite alla Bobcat/Ingersoll-Rand da società di componenti di macchine.

SIMBOLI E ABBREVIAZIONI

SALES	= Ordinare al servizio vendite di Bruxelles
NSS	= Non vendute separatamente
NAP	= Non disponibile come componente
*	= Sezioni, pagine o numeri di componente cambiati o aggiunti
BTI	= (Bobcat Technical information) Ved. al termine del microfiche del modello relativo oppure microfiche generale
was 6535403	= era 6535403
adj. (adjustment)	= regol. (regolazione)
Assembly	= Complessivo
available W/Ref.	= disponibile con rif.
bulk/sold per foot	= alla rinfusa/venduto al piede
does not include	= non comprende
Included with	= compreso con
I.D.	= d. i.
O.D.	= d. e.
not in kit	= non fa parte del kit
W/ - WO/	= con - senza
Qty	= Qtà
see page/ref	= ved. pagina/rif.
used with ref.	= usato con il rif.
0,05 inch thickness	= spessore 0,05 pollici (un pollice = 25,4 mm)
weld on	= a saldare

INFORMACION GENERAL

Al utilizar el número de serie de la máquina, debe emplearse el número completo.

El número que figura en la columna de “Unidades” en este manual es el número de piezas que se necesitan para la ilustración que consta en la página. En algunas piezas aparece una “x” en la columna de “Unidades”. Esta “x” indica que las unidades a utilizar son “según sea necesario”.

Cuando se empleen las referencias izq. y dcha., éstas se entienden mirando desde el asiento del conductor, en posición de marcha adelante.

Algunas de las ilustraciones y la información que figuran en este manual de piezas han sido facilitadas a Bobcat/Ingersoll-Rand por empresas de componentes de máquinas.

ABREVIATURAS Y SIMBOLOS

VENTAS	= Pedido al Departamento de Ventas de Bruselas
NSS	= No se vende por separado
NAP	= No disponible como pieza de repuesto
*	= Secciones, páginas o referencias modificadas o añadidas
BTI	= (Bobcat Technical Information) Ver al final de la microficha del modelo afectado o en la microficha general “Boletín de Información Técnica Bobcat”.
was 6535403	= era anteriormente el 6535403
adj. (adjustment)	= ajuste
assembly	= conjunto
available W/Ref.	= disponible con la ref.
bulk/sold per foot	= a granel/vendido por pies
does not include	= no incluye
included with	= incluido en
I.D.	= diámetro interior
O.D.	= diámetro exterior
not in kit	= no en el kit
W/ - WO/	= con/ - sin
Qty	= Unidades
see page /ref.	= ver página/ref.
used with ref.	= empleado con la ref.
0,05 inch thickness	= 0,05 pulgadas de espesor (1 pulgada = 25,4 mm)
weld on	= debe ser soldado

ALGEMENE INFORMATIE

Als u het serienummer van de machine gebruikt, geef dan het gehele serienummer.

Het cijfer dat voorkomt in de kolom "Aantal", in deze handleiding, is het aantal onderdelen dat nodig is van de illustratie op de pagina. Voor sommige onderdelen staat er een "x" in de kolom "Aantal". Deze "x" betekent dat er een aantal "zoals nodig" vereist is.


Wanneer er in deze handleiding naar "links" en naar "rechts" gerefereerd wordt, moet dit verstaan worden voor een bestuurder die in de bestuurdersstoel zit in de voorwaartse bedrijfsstand.

Sommige van de illustraties en informatie in deze onderdelen-handleiding werden door firma's van machine-componenten geleverd aan Bobcat/Ingersoll-Rand.

AFKORTINGEN EN SYMBOLEN

SALES	= Bestellen bij de Verkoopafdeling te Brussel
NSS	= Niet afzonderlijk te verkrijgen
NAP	= Niet beschikbaar als onderdeel
*	= Gewijzigde of toegevoegde paragrafen, pagina's of onderdeelnummers
BTI	= Bobcat Technical Information Bulletin : Zie einde van de microfiche van het desbetreffende model of einde van de algemene microfiche die het geheel van alle "BTI" herneemt.
was 6535403	= was vroeger 6535403
adj. (adjustment)	= afstelling
Assembly	= geheel
available W/Ref.	= beschikbaar met ref.
bulk/sold per foot	= bulk/aan de meter verkocht
does not include	= bevat niet
includes with	= is bevat in
I.D.	= ϕ inw. (inwendige diameter)
O.D.	= ϕ uitw. (uitwendige diameter)
not in kit	= niet in de kit
W/ - WO/	= met/ - zonder/
Qty	= vereiste aantal
see page/ref.	= zie pagina/ref.
used with ref/	= gebruikt met ref.
0,05 inch thickness	= 0.05 inch dik (een inch = 25.4 mm)
weld on	= te lassen

**Use only Bobcat belts and hoses
to maintain maximum service life.**

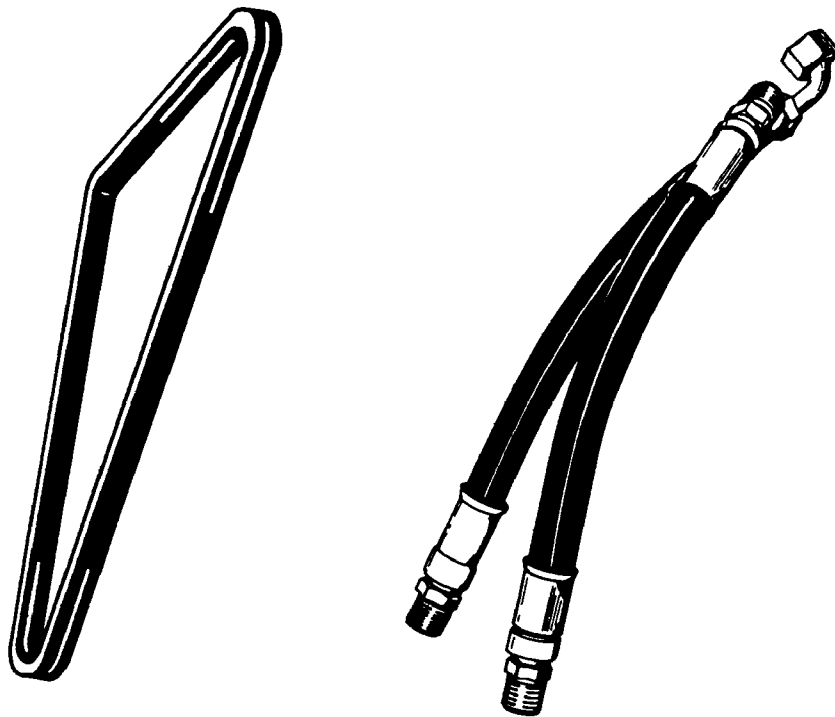

Available from Bobcat Parts.



S175/S185 CONTENTS

MAIN FRAME	11-42
MAINTENANCE ITEMS	11-12
MAINTENANCE SCHEDULE ITEMS	13-20
MAIN FRAME	21-22
OPERATOR CAB	23-26
SEAT & SEAT BAR	27-28
SEAT	29-30
PANELS	31-32
REAR DOOR	33-34
LIFT ARMS & BOBTACH	35-36
BOB-TACH	37-38
FUEL SYSTEM	39-42
DRIVE TRAIN	43-52
DRIVE TRAIN	43-44
AXLE	45-46
MOTOR CARRIER	47-48
DISC BRAKE	49-52
HYDRAULIC SYSTEM	53-98
HYDRAULIC CIRCUITRY	53-66
MANUAL LIFT RELEASE SYSTEM	67-70
AUXILIARY HYDRAULICS	71-72
TILT CYLINDER	73-74
LIFT CYLINDER	75-76
CONTROL PEDALS	77-78
HYDRAULIC CONTROL VALVE	79-94
BICS CONTROL VALVE	95-96
MANUAL LIFT RELEASE VALVE	97-98
HIGH FLOW HYDRAULICS	99-104
HIGH FLOW HYDRAULICS	99-104
HYDROSTATIC SYSTEM	105-136
HYDROSTATIC CIRCUITRY	105-116
HAND CONTROLS	117-120
HYDROSTATIC MOTOR	121-122
HYDROSTATIC PUMP	123-130
GEAR PUMP	131-132
HYDROSTATIC OIL FILTER	133-136
ELECTRICAL SYSTEM	137-158
CAB ELECTRICAL CIRCUITRY	137-138
ENGINE ELECTRICAL CIRCUITRY	139-142
CONTROLS ELECTRICAL	143-154
ALTERNATOR	155-156
STARTER	157-158
POWER UNIT	159-266
COOLING SYSTEM	159-162
ENGINE & ATTACHING PARTS	163-172
THROTTLE	173-174
COOLING FAN DRIVE ASSY.	175-176
ENGINE & GASKET KITS (KUBOTA V2203MDI)	177-178
GEARCASE (KUBOTA V2203MDI)	179-180
CRANKCASE (KUBOTA V2203MDI)	181-182
ROCKER ARM COVER (KUBOTA V2203MDI)	183-184
VALVE ROCKER ARM (KUBOTA V2203MDI)	185-186
CYLINDER HEAD (KUBOTA V2203MDI)	187-188


S175/S185 CONTENTS (Cont'd)

POWER UNIT (CONT'D)	159-266
OIL PAN (KUBOTA V2203MDI)	189-190
PISTON & CRANKSHAFT (KUBOTA V2203MDI)	191-192
FUEL CAMSHAFT (KUBOTA V2203MDI)	193-194
CAMSHAFT (KUBOTA V2203MDI)	195-196
WATER PUMP (KUBOTA V2203MDI)	197-198
WATER FLANGE & THERMOSTAT (KUBOTA V2203MDI)	199-200
MANIFOLDS (KUBOTA V2203MDI)	201-202
ENGINE STOP LEVER (KUBOTA V2203MDI)	203-204
GOVERNOR (KUBOTA V2203MDI)	205-206
SPEED CONTROL PLATE (KUBOTA V2203MDI)	207-208
INJECTION PUMP (KUBOTA V2203MDI)	209-212
INJECTOR NOZZLES (KUBOTA V2203MDI)	213-214
INJECTOR HOLDER (KUBOTA V2203MDI)	215-216
ENGINE & GASKET KITS (KUBOTA V2003TMDI)	217-218
GEARCASE (KUBOTA V2003TMDI)	219-220
OIL COOLER (KUBOTA V2003TMDI)	221-222
CRANKCASE (KUBOTA V2003TMDI)	223-224
ROCKER ARM COVER (KUBOTA V2003TMDI)	225-226
VALVE ROCKER ARM (KUBOTA V2003TMDI)	227-228
CYLINDER HEAD (KUBOTA V2003TMDI)	229-230
OIL PAN (KUBOTA V2003TMDI)	231-232
PISTON & CRANKSHAFT (KUBOTA V2003TMDI)	233-234
FUEL CAMSHAFT (KUBOTA V2003TMDI)	235-236
CAMSHAFT (KUBOTA V2003MDI)	237-238
WATER PUMP (KUBOTA V2003TMDI)	239-240
WATER FLANGE & THERMOSTAT (KUBOTA V2003TMDI)	241-242
MANIFOLDS (KUBOTA V2003TMDI)	243-244
TURBO CHARGER (KUBOTA V2003TMDI)	245-246
OIL PIPE (KUBOTA V2003TMDI)	247-248
ENGINE STOP LEVER (KUBOTA V2003TMDI)	249-250
GOVERNOR (KUBOTA V2003TMDI)	251-252
SPEED CONTROL PLATE (KUBOTA V2003TMDI)	253-254
BOOST COMPENSATOR (KUBOTA V2003TMDI)	255-256
INJECTION PUMP (KUBOTA V2003TMDI)	257-260
INJECTOR NOZZLES (KUBOTA V2003TMDI)	261-262
INJECTOR HOLDER (KUBOTA V2003TMDI)	263-264
AIR CLEANER	265-266
ACCESSORIES & OPTIONS	270-427
ACS CONVERSION KIT	270-271
ACCESS COVER	272-273
AXLE SEAL KIT	274-275
BACK-UP ALARM	276-277
BEACON	278-279
BLOCK HEATER	280-281
BOB-TACH LEVERS	282-283
BUCKET POSITIONING VALVE KIT	284-287
BUCKET POSITIONING VALVE	288-289
CAB DOOR	290-299
CAB ENCLOSURE	300-303
CAB WINDOWS	304-307
COUNTERWEIGHT KIT	308-311
DECALS	312-315
DELUXE CAB	316-317
DUAL BATTERY KIT	318-319


S175/S185 CONTENTS (Cont'd)

ACCESSORIES & OPTIONS (Cont'd)	270-427
ELECTRICAL CONNECTOR KIT	320-321
ELECTRICAL CONTROLS KIT	322-327
ENGINE MOUNT KIT	328-329
EUROPEAN ACCESSORIES	330-343
FIRE EXTINGUISHER	344-345
F.O.P.S. KIT	346-347
FLASHER LIGHTS	348-349
FRONT AUXILIARY	350-351
GAS SPRING KIT	352-353
HAND CONTROL KIT	354-357
HEATER & A/C	358-373
HORN KIT	374-375
LIFT LIT	376-379
LIGHT KIT	380-381
MUFFLER/PURIFIER KIT	382-383
POWER BOB-TACH KIT	384-387
POWER BOB-TACH	388-391
REAR AUXILIARY	392-395
REAR AUXILIARY VALVE	396-397
REAR DOOR LOCK	398-399
REAR WIPER	400-401
SEAL ENCLOSURE KIT	402-403
SEAT	404-407
SEAT BELT	408-413
SOUND KIT	414-415
SOUND OPTION	416-417
SOUND REDUCTION HARDHAT	418-419
STROBE LIGHT	420-421
TIRES & RIMS	422-425
BULK ITEMS	426-427
NUMERICAL INDEX	428-476
NUMERICAL INDEX	428-476


MAINTENANCE ITEMS
S175/S185



— 1



— 4




— 2



— 5



— 3




— 6




— 7




— 8

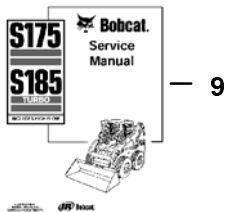


— 9

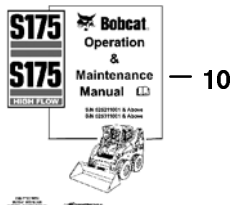

— 10

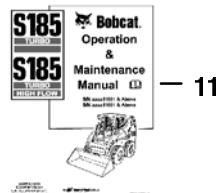

— 11




— 12

B-22669

MAINTENANCE ITEMS (Cont'd)
S175/S185

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6675517	FILTER	Engine Oil (6 Pack) - See Page 179 See Page 219		x
2	6667352	ELEMENT	Fuel - See Page 39		x
3	6598362	CARTRIDGE	Inner Air Cleaner -See Page 265		x
4	6598492	CARTRIDGE	Outer Air Cleaner -See Page 265		x
5	6661248	ELEMENT	Hydrostatic # 3 Media -		
6	6674687	BATTERY	See Page 135		x
7	6563328	FLUID	See Page 139		x
			Hyd./Hydro. - (2) 2.5 Gal. -		
	6722344	FLUID	- See Page 426		x
			Hyd./Hydro. - (5 Gal.) -		
			See Page 426		x
	6563330	FLUID	Hyd./Hydro. - 55 Gallon Drum -		
			See Page 426		x
8	6657301	MOTOR OIL	10W30 CE/SG - 1 Qt. -		
			See Page 426		x
	6724557	MOTOR OIL	10W30 CE/SG - 1 Gallon -		
			See Page 426		x
	6674205	MOTOR OIL	10W30 CE/SG - 2.5 Gal. -		
			See Page 426		x
	6657299	MOTOR OIL	15W40 CE/SG - 1 Qt. -		
			See Page 426		x
	6724558	MOTOR OIL	15W40 CE/SG - 1 Gallon -		
			See Page 426		x
	6674204	MOTOR OIL	15W40 CE/SG - 2.5 Gal. -		
			See Page 426		x
	6657303	MOTOR OIL	30 CE/SG - 1 Qt. -		
			See Page 426		x
	6724559	MOTOR OIL	30 CE/SG - 1 Gallon -		
			See Page 426		x
	6674206	MOTOR OIL	30 CE/SG - 2.5 Gal. -		
			See Page 426		x
9	6902732	MANUAL	service		1
10	6902688	MANUAL	operation & maintenance - S175		1
11	6902690	MANUAL	operation & maintenance - S185		1
12	6718719	HANDBOOK	operator		1

MAINTENANCE SCHEDULE ITEMS
S175/S185









B-22774

MAINTENANCE SCHEDULE ITEMS (Cont'd)

50 Hour Service Schedule

[illegible]

MAINTENANCE SCHEDULE ITEMS
Model S175/S185

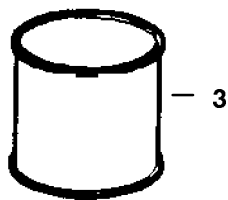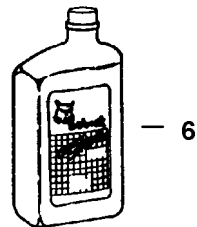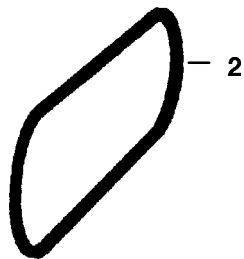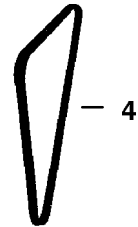


B-22775

MAINTENANCE SCHEDULE ITEMS (Cont'd)

250 Hour Service Schedule

[illegible]

MAINTENANCE SCHEDULE ITEMS (Cont'd)
Model S175/S185





B-22776

MAINTENANCE SCHEDULE ITEMS (Cont'd)

500 Hour Service Schedule

[illegible]

MAINTENANCE SCHEDULE ITEMS
Model S175/S185

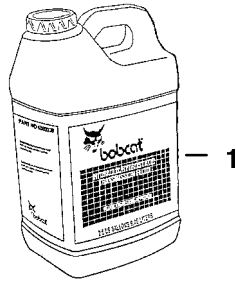


B-22777

MAINTENANCE SCHEDULE ITEMS (Cont'd)

1000 Hour Service Schedule

[illegible]

MAIN FRAME

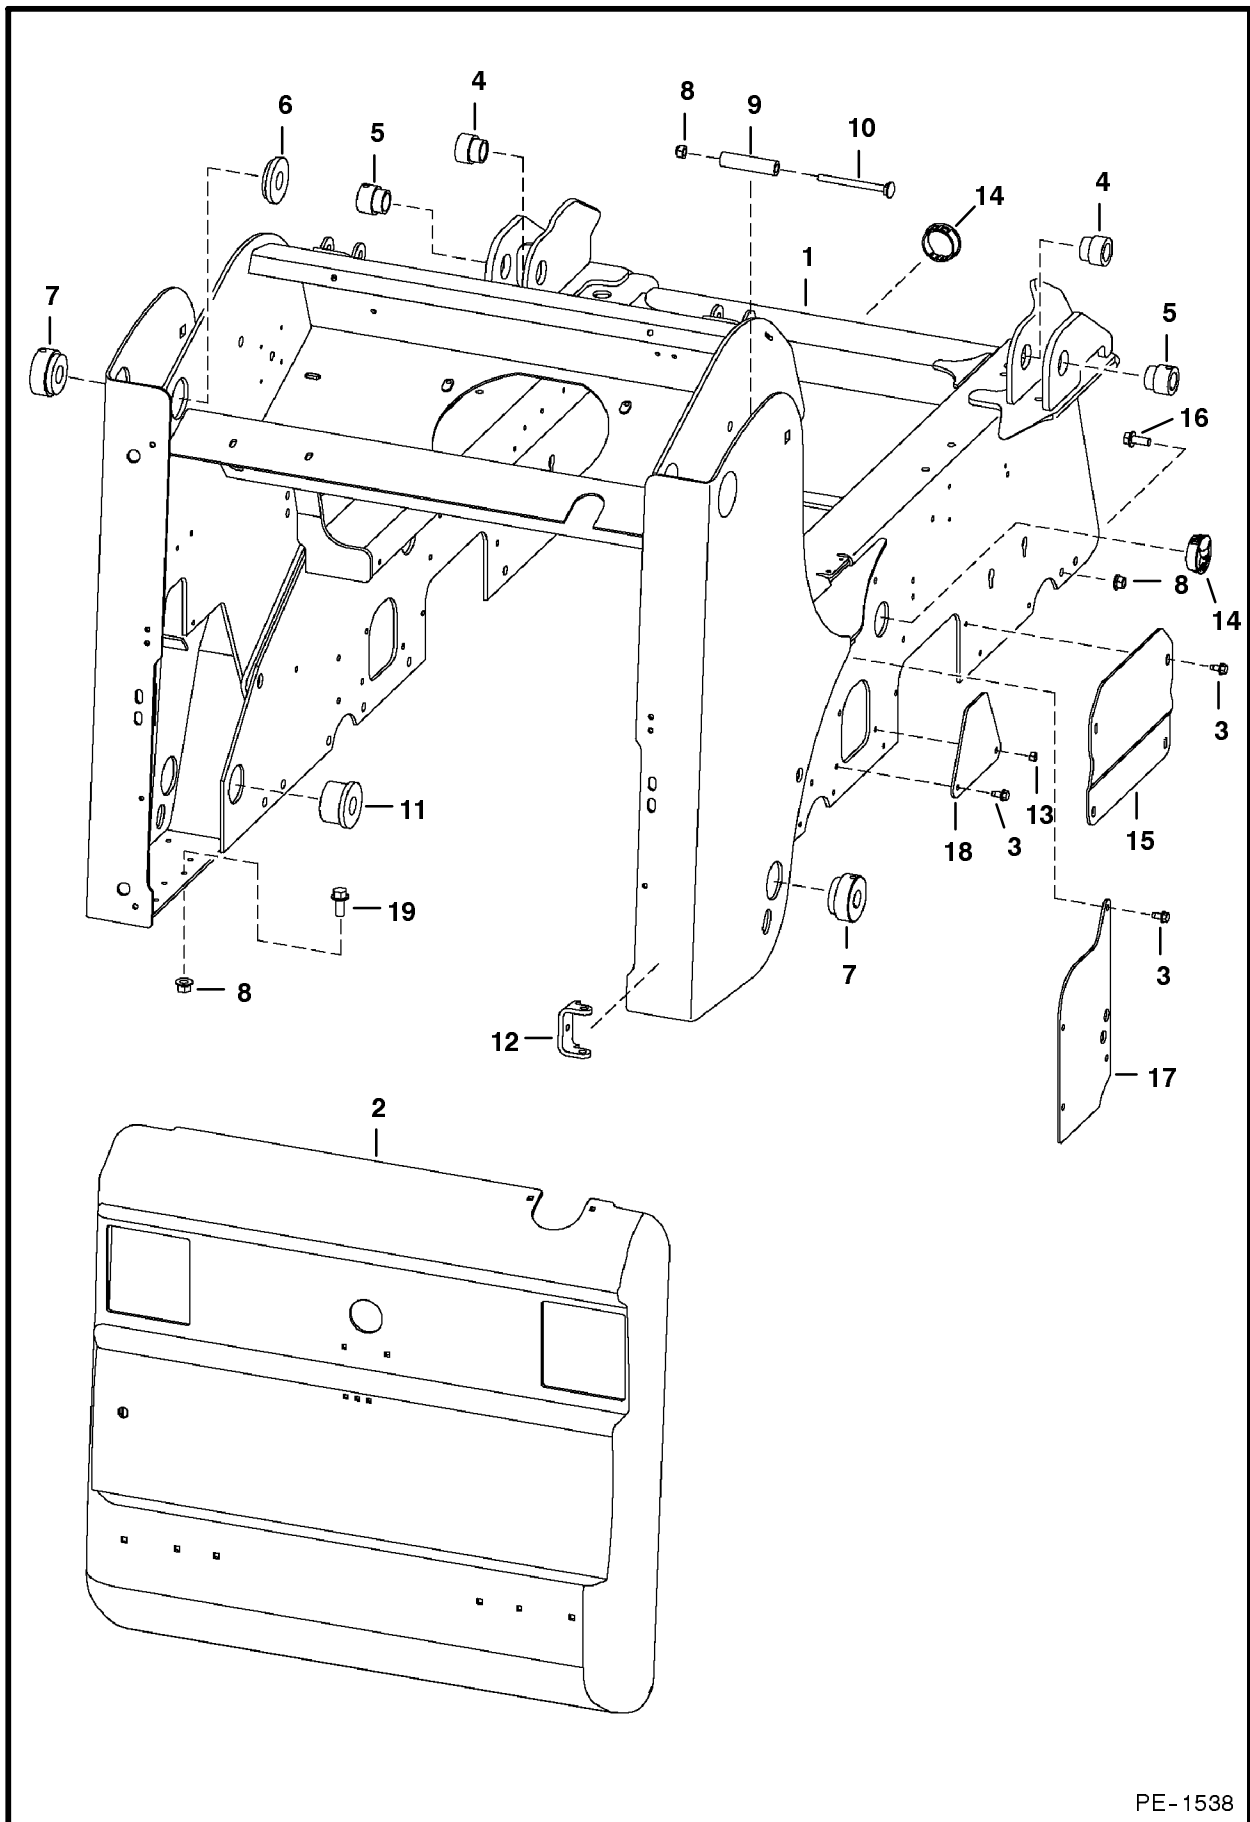


PE-1538

MAIN FRAME (Cont'd)

[illegible]

OPERATOR CAB

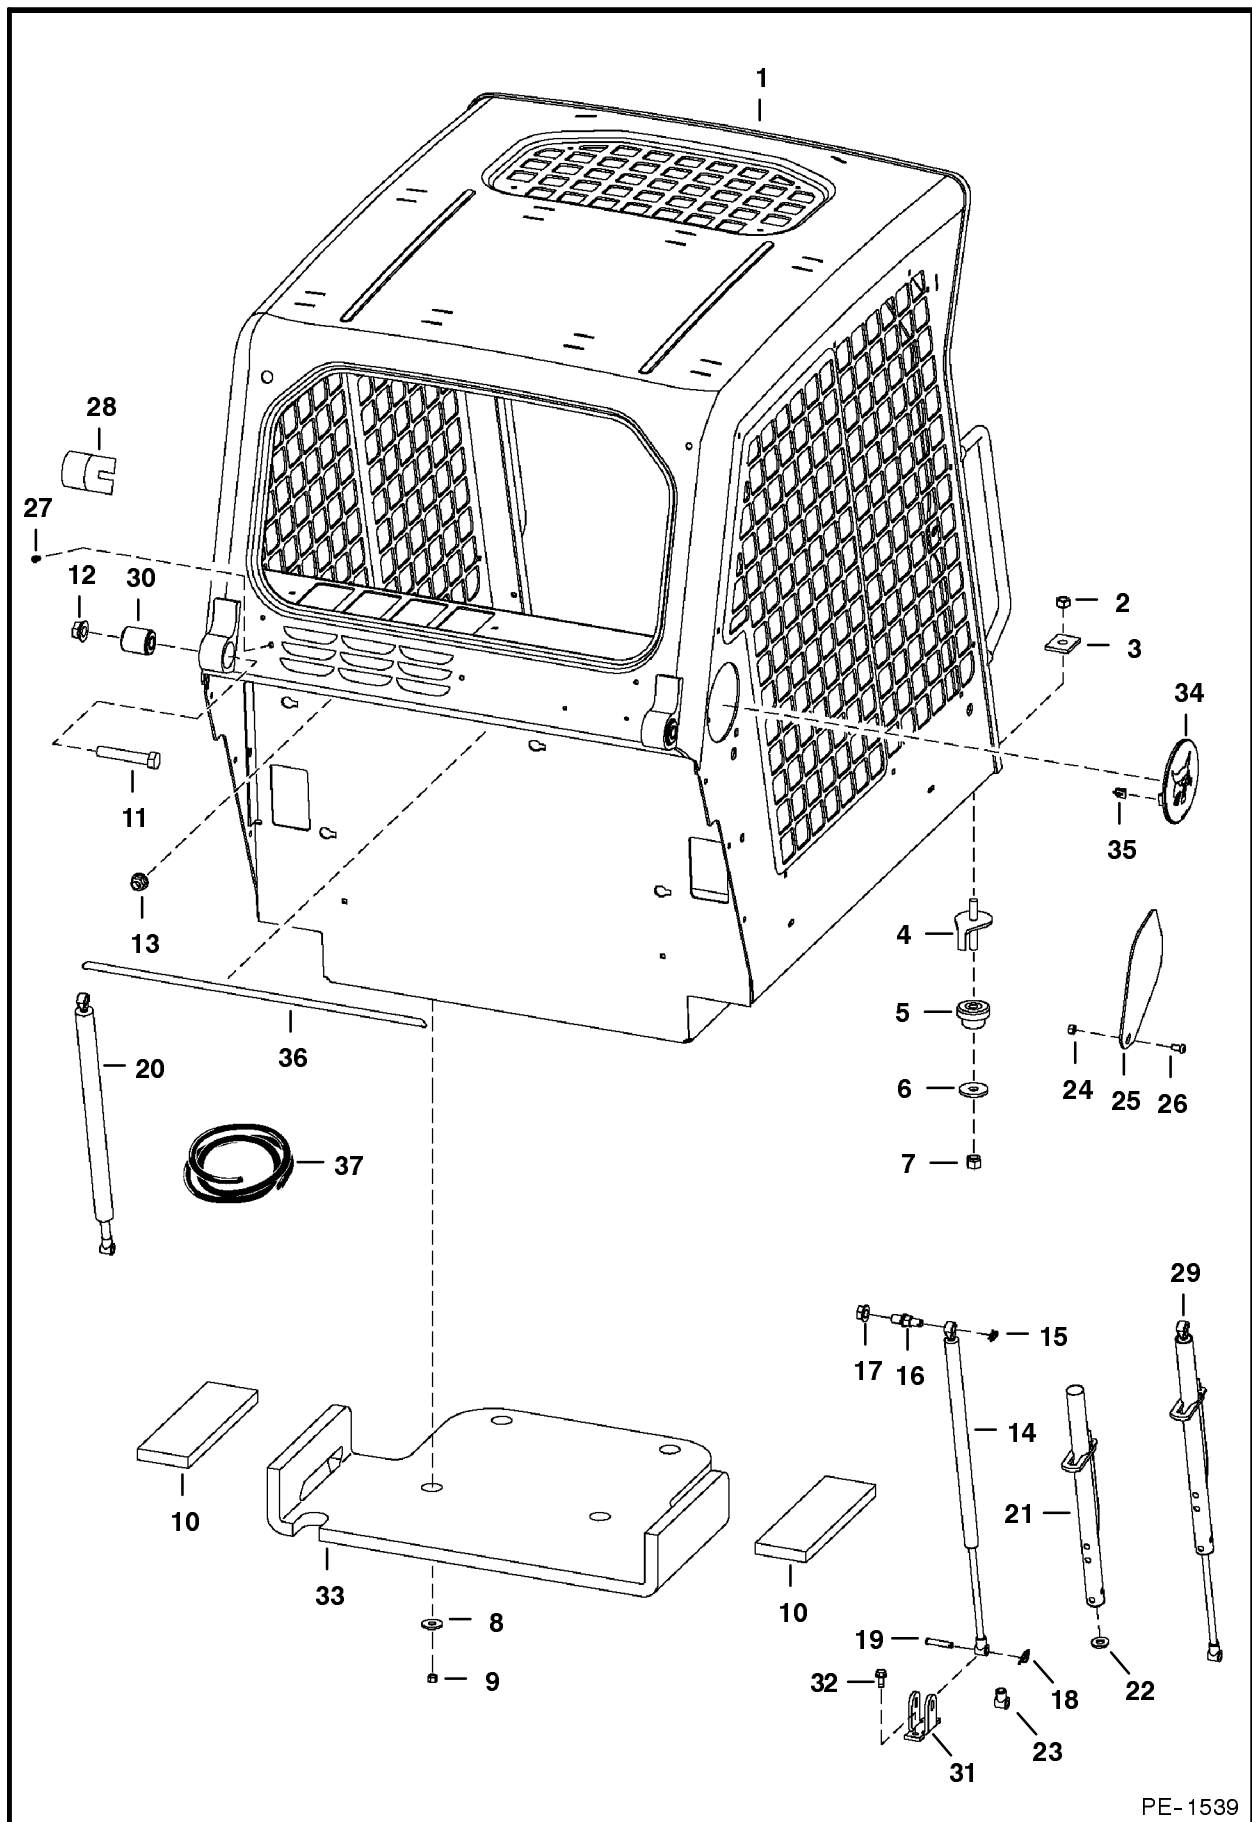


PE-1539

OPERATOR CAB (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6719672	OPERATOR CAB	includes cab decals		1
2	59D-8	NUT			2
3	6553709	WASHER	rectangular		2
4	6702971	BOLT			2
5	6560633	MOUNT			2
6	6515817	WASHER			2
7	85D-8	NUT			2
8	619021	WASHER			4
9	59D-5	NUT			4
10	6729012	INSULATION	seat pan		2
11	17C-1056	BOLT			2
12	53D-10	NUT			2
13	53D-6	NUT			4
14	6675135	GAS SPRING	R.H.		1
15	6675140	SNAP RING			2
16	6719064	MOUNT			2
17	95D-8	NUT			2
18	6631418	PIN	ring		2
19	6567743	PIN			2
20	6675134	GAS SPRING	L.H.		1
	6675136	GAS SPRING	L.H. - heavy duty		1
21	6708189	TUBE	stop - R.H.		1
22	6701174	WASHER			1
23	6675257	ROD END			1
24	95D-5	NUT			2
25	6718784	COVER			2
26	25G-512	BOLT			2
27	6675033	INSERT	filter cover		2
28	6579613	STOP			2
29	NSS	GAS SPRING	R.H. - W/latch - Order Ref. 14 & 21-23		
30	6562602	BUSHING			1
31	6706349	MOUNT	gas spring		2
32	84G-3112	BOLT			4
33	6729013	INSULATION	seat pan		1
34	6733107	PLUG ASSY.	W/Ref. 35		2
35	6679990	CLIP			6
36	NAP	SEAL	31" (787,4 mm) long - Order Ref. 37		1
37	6679994	SEAL	bulk - Sold Per Foot		x

OPERATOR CAB

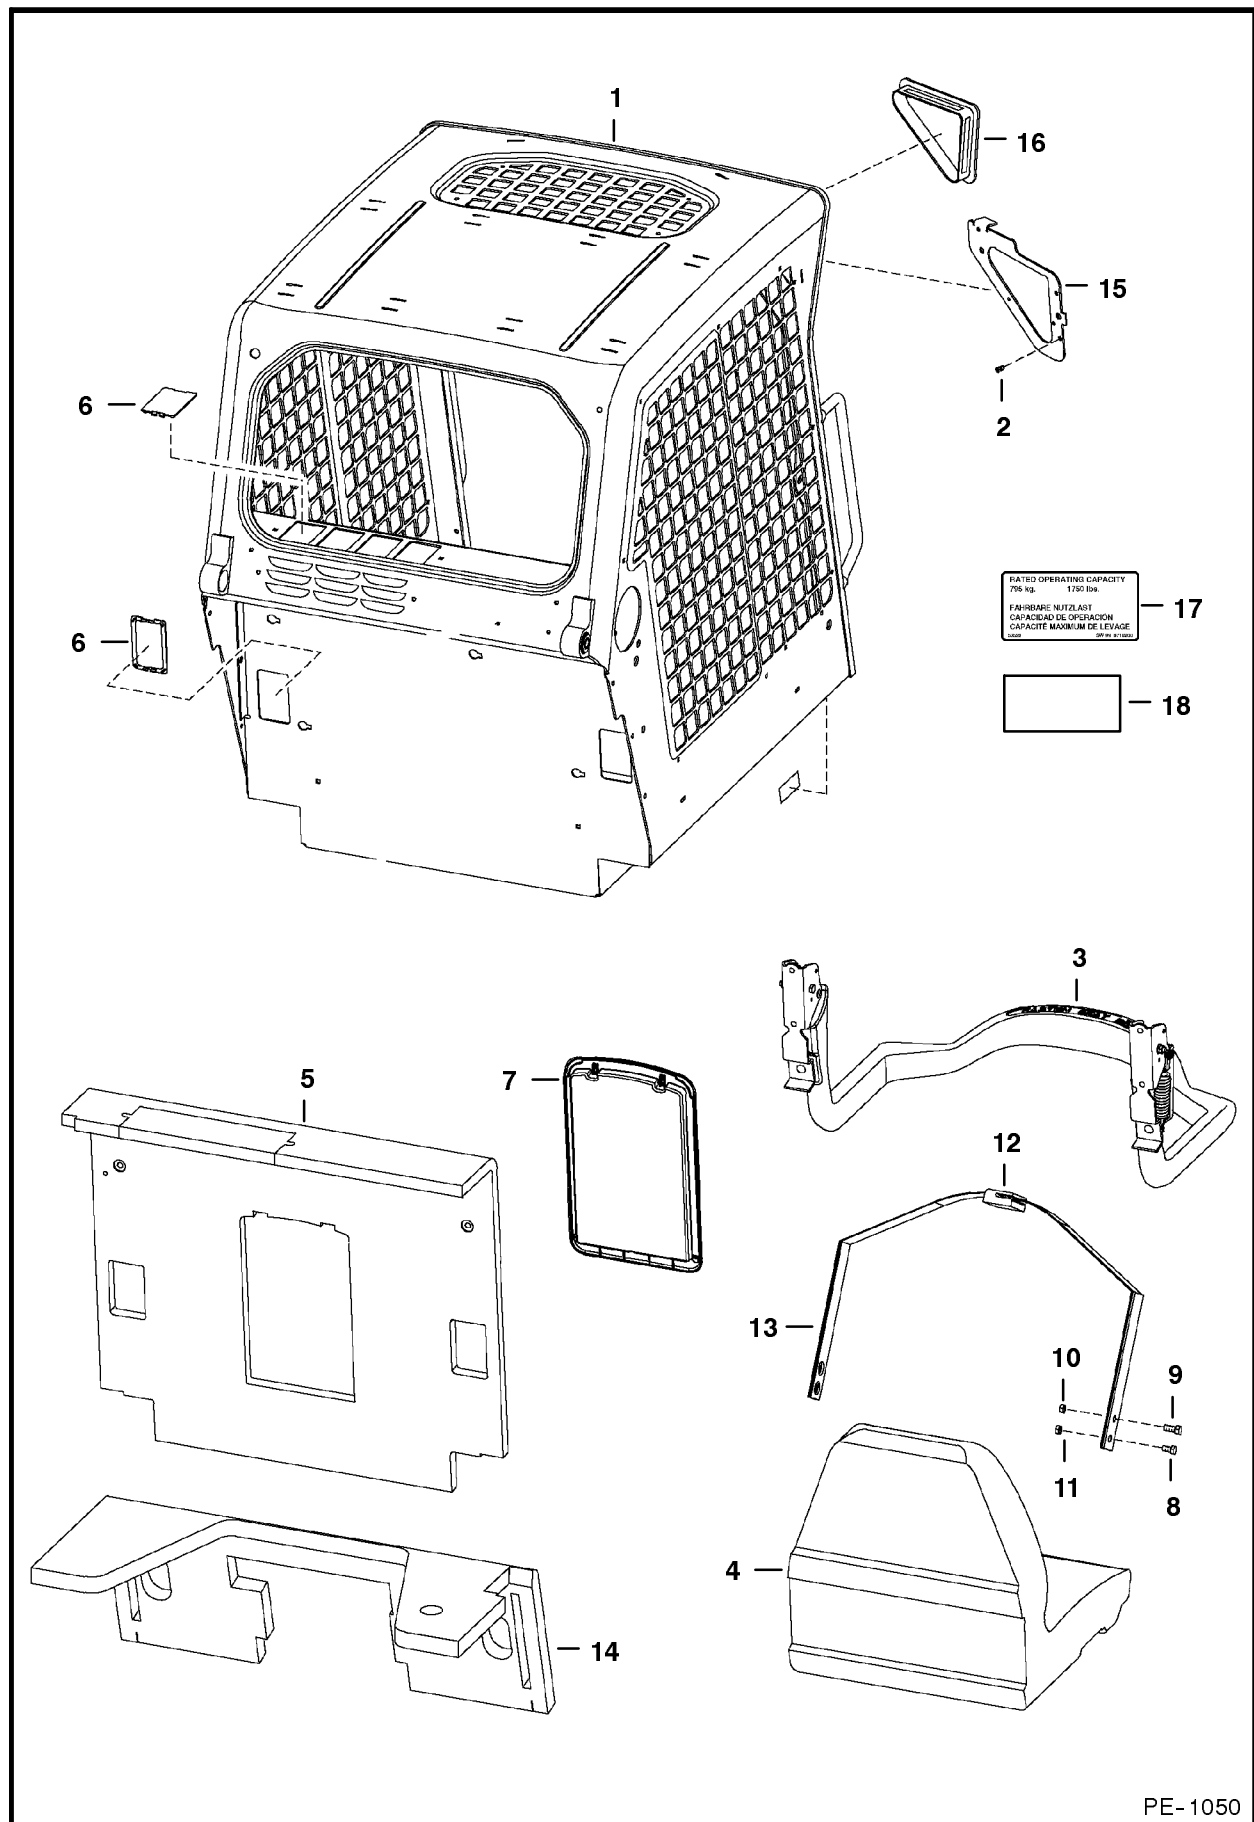


PE-1050

OPERATOR CAB (Cont'd)

[illegible]

SEAT & SEAT BAR

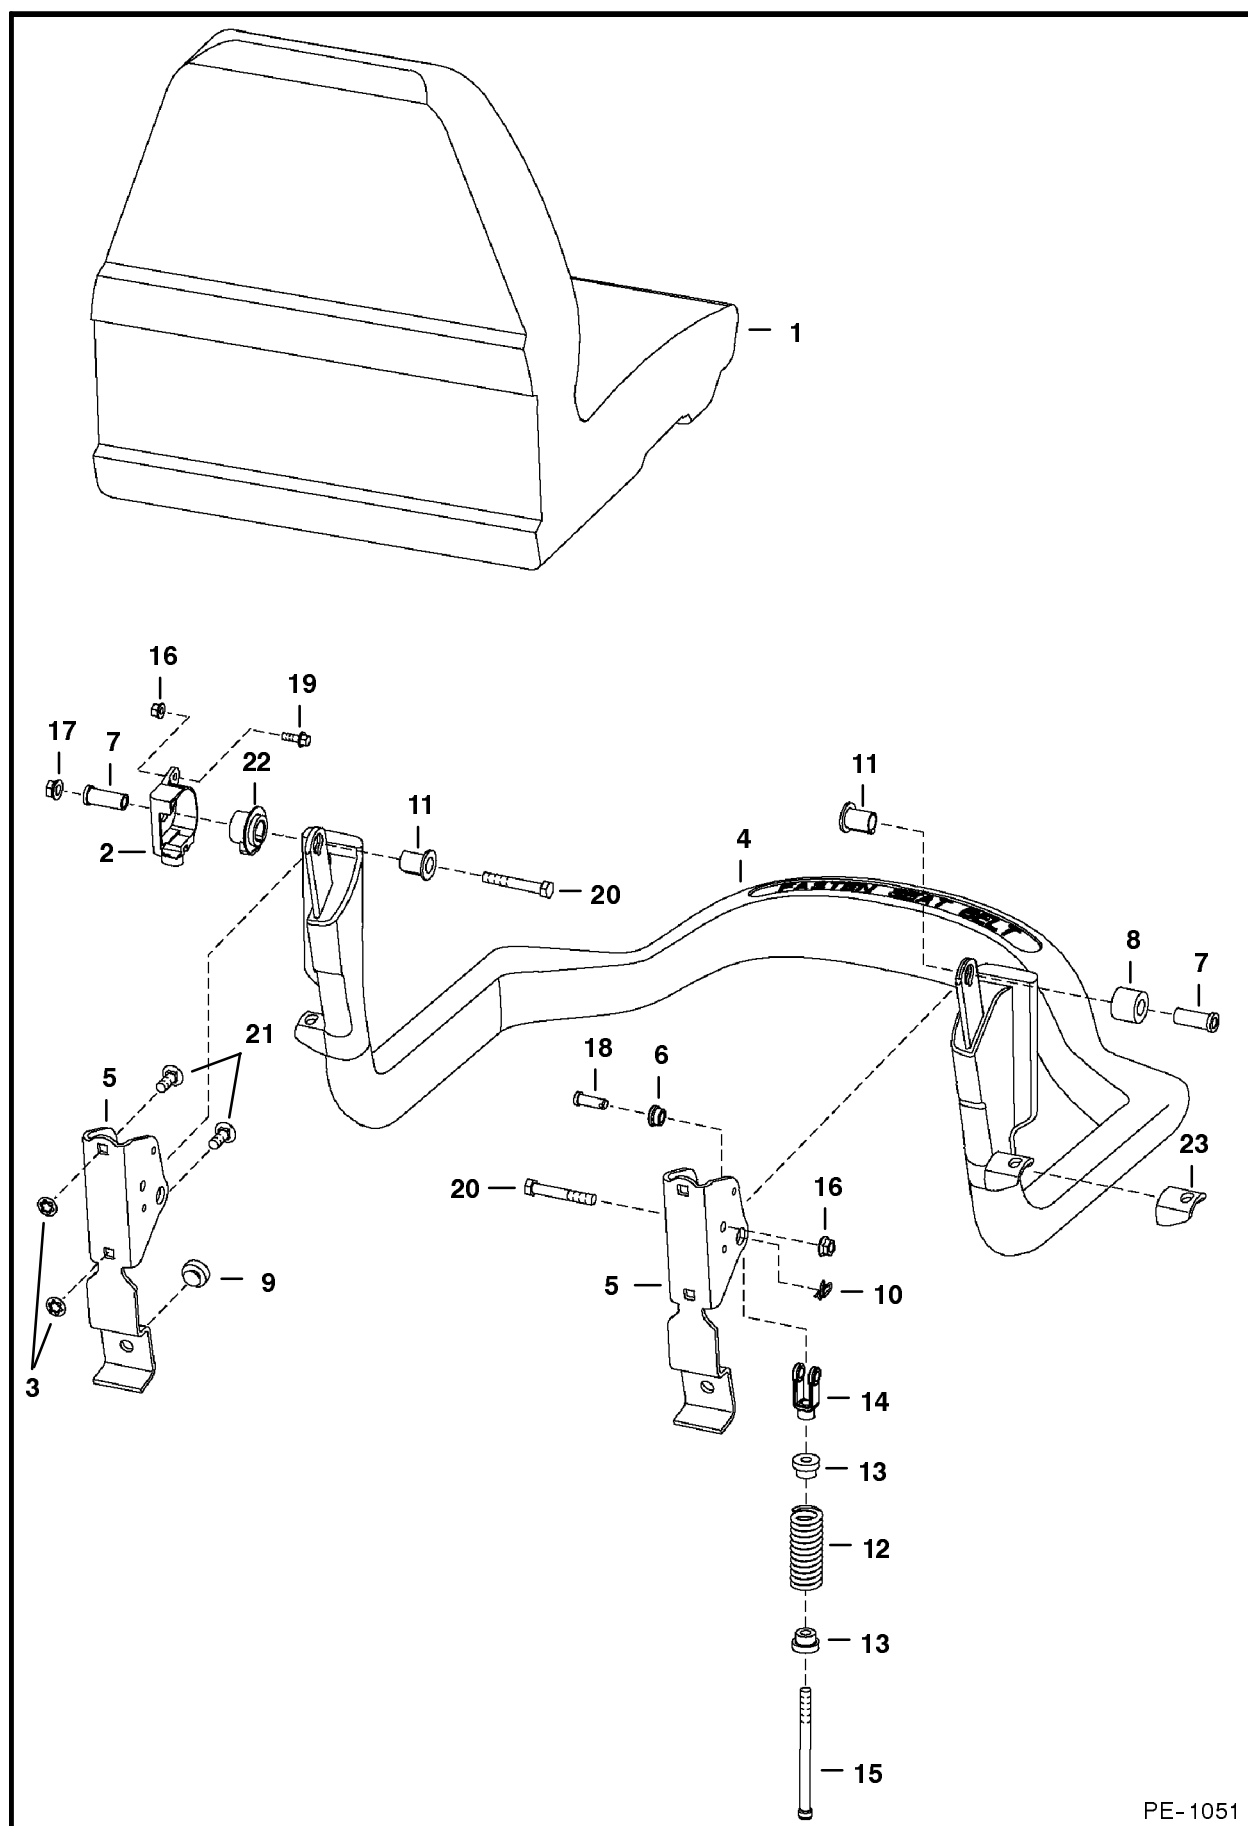


PE-1051

SEAT & SEAT BAR (Cont'd)

[illegible]

SEAT (Michigan)

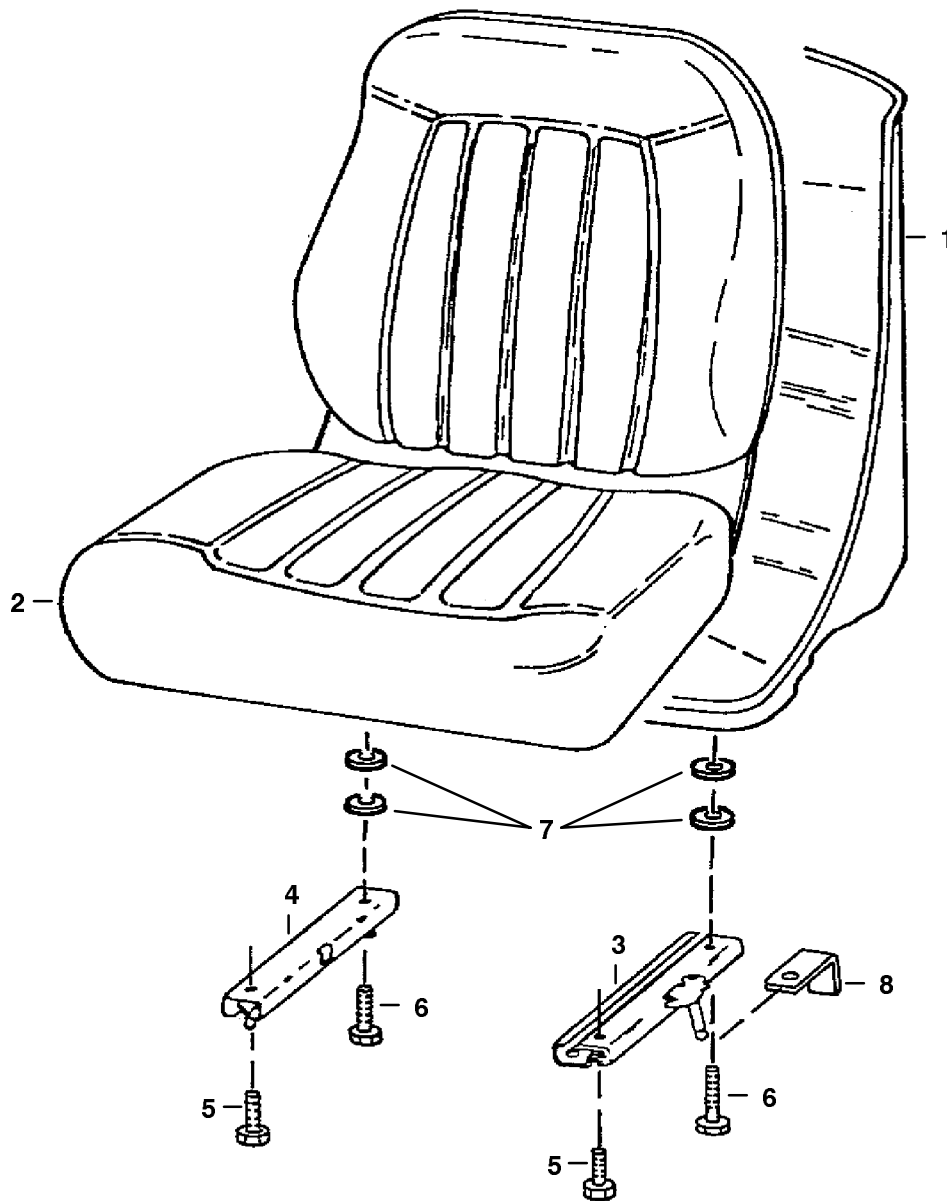


B-14720

SEAT (Cont'd) (Michigan)

[illegible]

PANELS

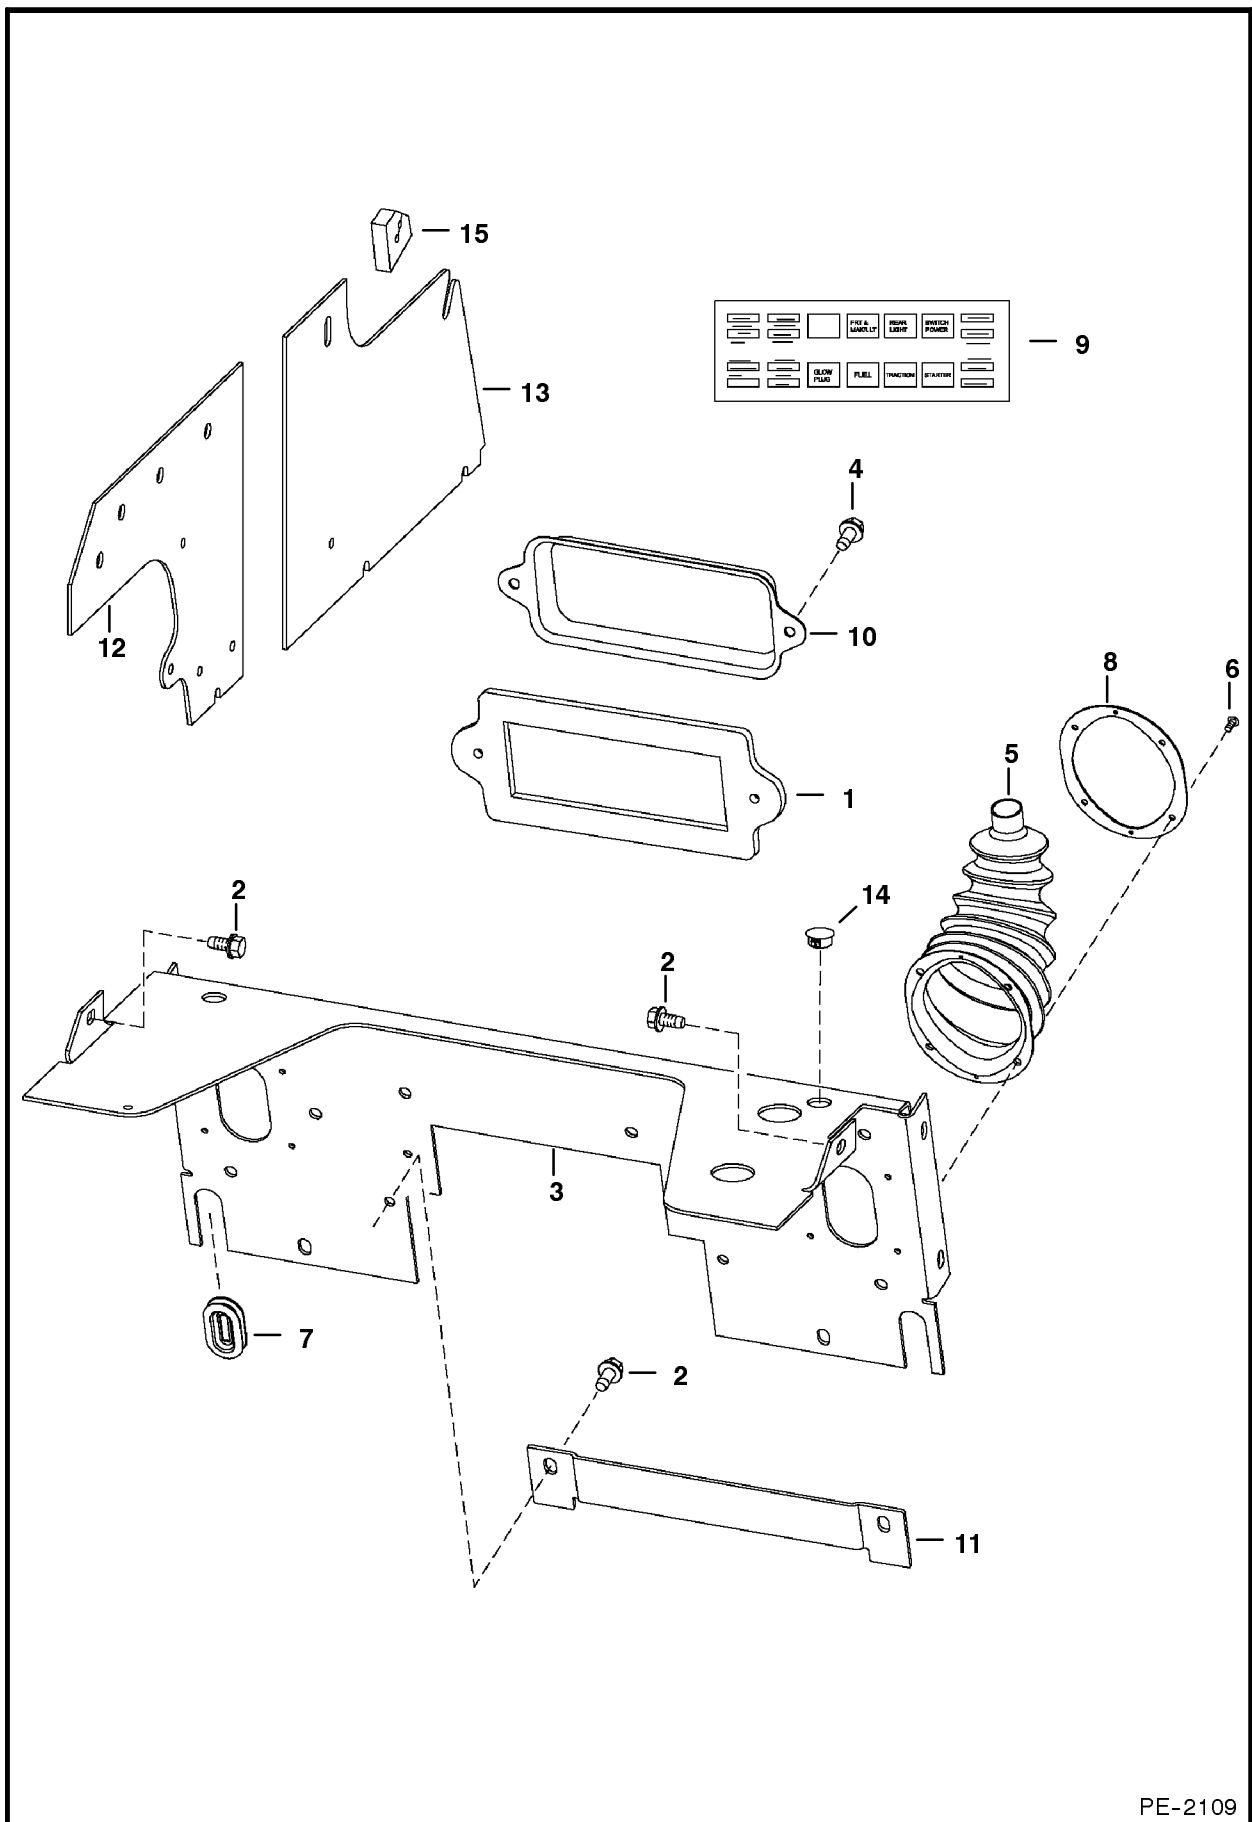


PE-2109

PANELS (Cont'd)

[illegible]

REAR DOOR

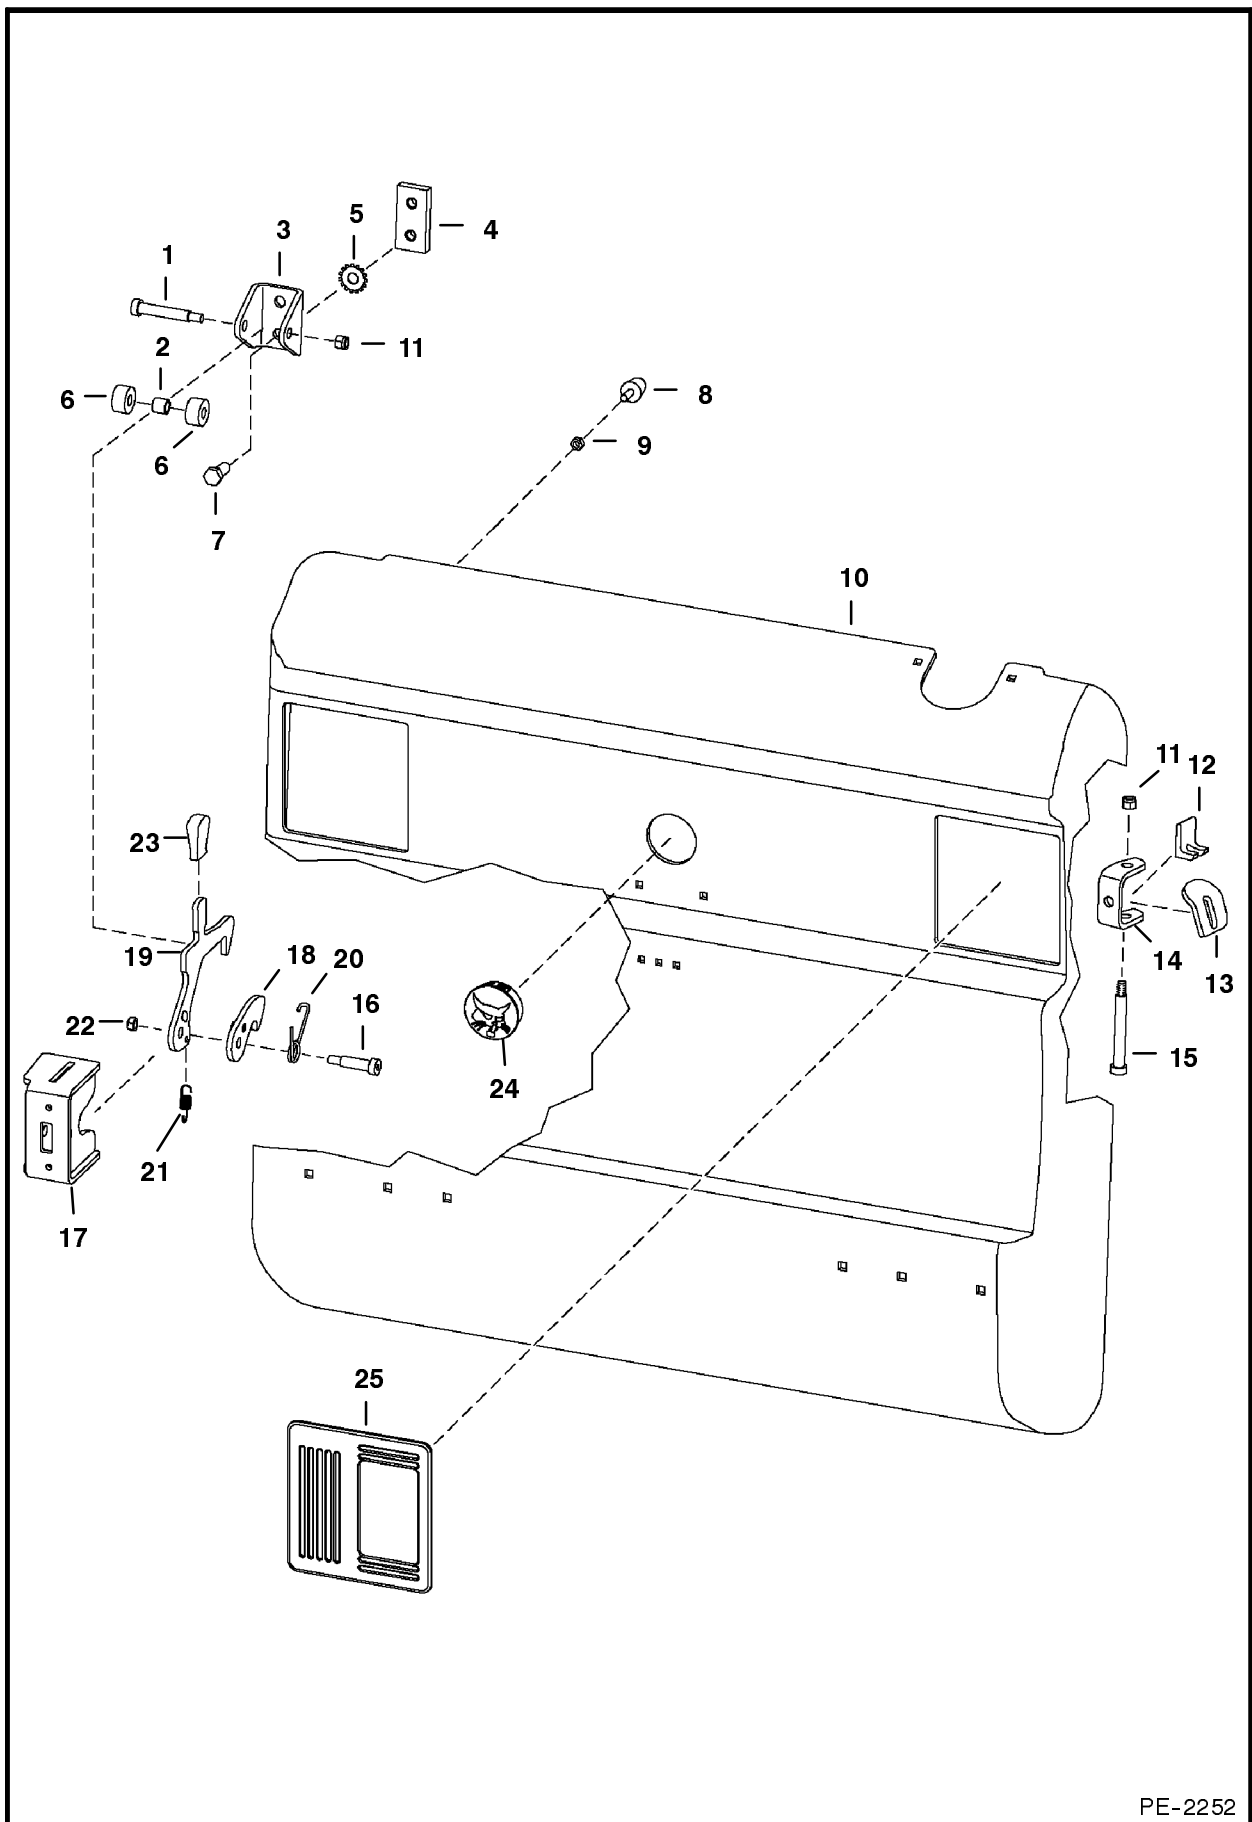


PE-2252

REAR DOOR (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	38C-840	BOLT	carriage		1
2	6809734	BUSHING			1
3	6809727	CHANNEL			1
4	6719525	BAR	threaded striker		1
5	6675273	WASHER	lock		2
6	6809726	ROLLER			2
7	17C-820	BOLT			2
8	6733616	BUMPER	tapered		2
9	61D-5	NUT			2
10	6729991	REAR DOOR			1
11	59D-6	NUT			3
12	6719766	STOP			1
13	6714126	DOOR STOP			1
14	6733575	HINGE	weld on		2
15	6809845	BOLT			2
16	38C-824	BOLT			1
17	6729939	LATCH PLATE	weld on		1
18	6733667	LATCH			1
19	6732715	LATCH			1
20	6810132	SPRING			1
21	6810141	SPRING			1
22	85D-6	NUT			1
23	6564452	GRIP			1
24	6718796	PLUG			1
25	6670287	COVER			2

LIFT ARMS & BOBTACH

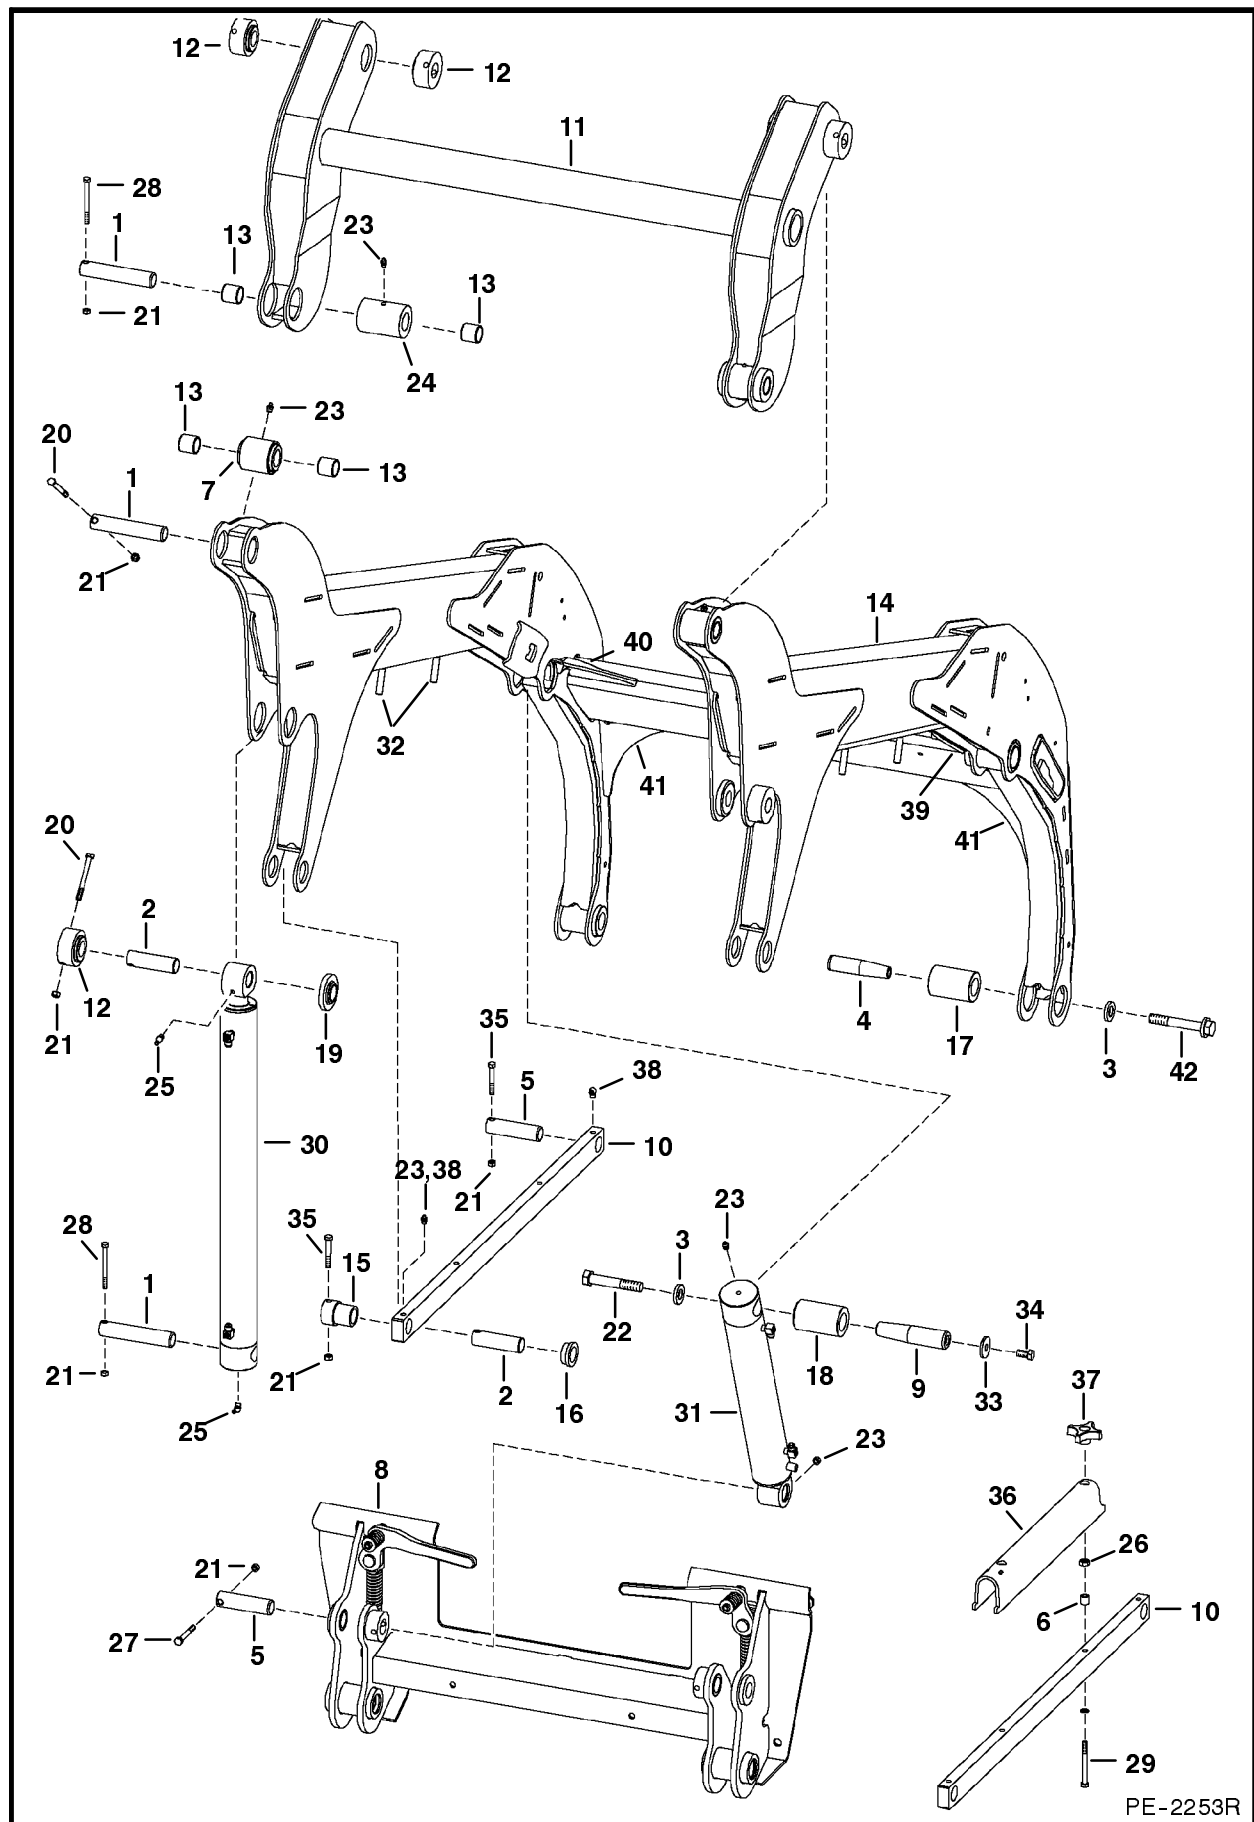


PE-2253R

LIFT ARMS & BOBTACH (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6717560	PIN	1.25" x 6.20" (31,8 mm x 157,5 mm)		6
2	6718789	PIN	1.25" x 4.40" (31,8 mm x 111,8 mm)		4
3	27E-10	WASHER			4
4	6734661	PIN	tapered - 1.5" x 4.17" - (38,1 mm x 105,6 mm)		2
5	6577954	PIN			4
6	6532347	SPACER			2
7	6717039	BUSHING	weld on		2
8		BOB-TACH	See Page 37		2
9	6734662	PIN	tapered - 1.5" x 5.7" - (38,1 mm x 144,8 mm)		2
10	6727863	ROD LINK			2
11	6732264	FRAME LINK			1
12	6717246	BUSHING	weld on		6
13	6717562	BUSHING	wear		8
14	6737182	LIFT ARM			1
15	6717026	BUSHING	weld on		2
16	6717025	BUSHING	weld on		2
17	6735662	BUSHING	weld on		2
18	6734660	BUSHING	weld on		2
19	6717041	BUSHING	weld on		2
20	17C-656	BOLT			4
21	85D-6	NUT			14
22	17C-1080	BOLT			2
23	10H-25	GREASE ZERK			4
24	6732265	BUSHING	weld on		2
25	11H-15	GREASE ZERK			4
26	6718942	NUT			2
27	17C-648	BOLT			2
28	17C-660	BOLT			4
29	6730290	BOLT	stainless steel		2
30		CYLINDER	lift - See Page 75		2
31		CYLINDER	tilt - See Page 73		2
32	1313995	STUD	weld on		4
33	6731160	WASHER			2
34	17C-1016	BOLT			2
35	17C-640	BOLT			4
36	6718312	STOP	lift arm		1
37*	6684932	KNOB	Was 6679130 [A]		2
38	12H-15	GREASE ZERK			4
39	6718880	GUSSET	R.H.		1
40	6718879	GUSSET	L.H.		1
41	6717961	GUSSET			2
42*	17C-1072	BOLT			2

BOB-TACH

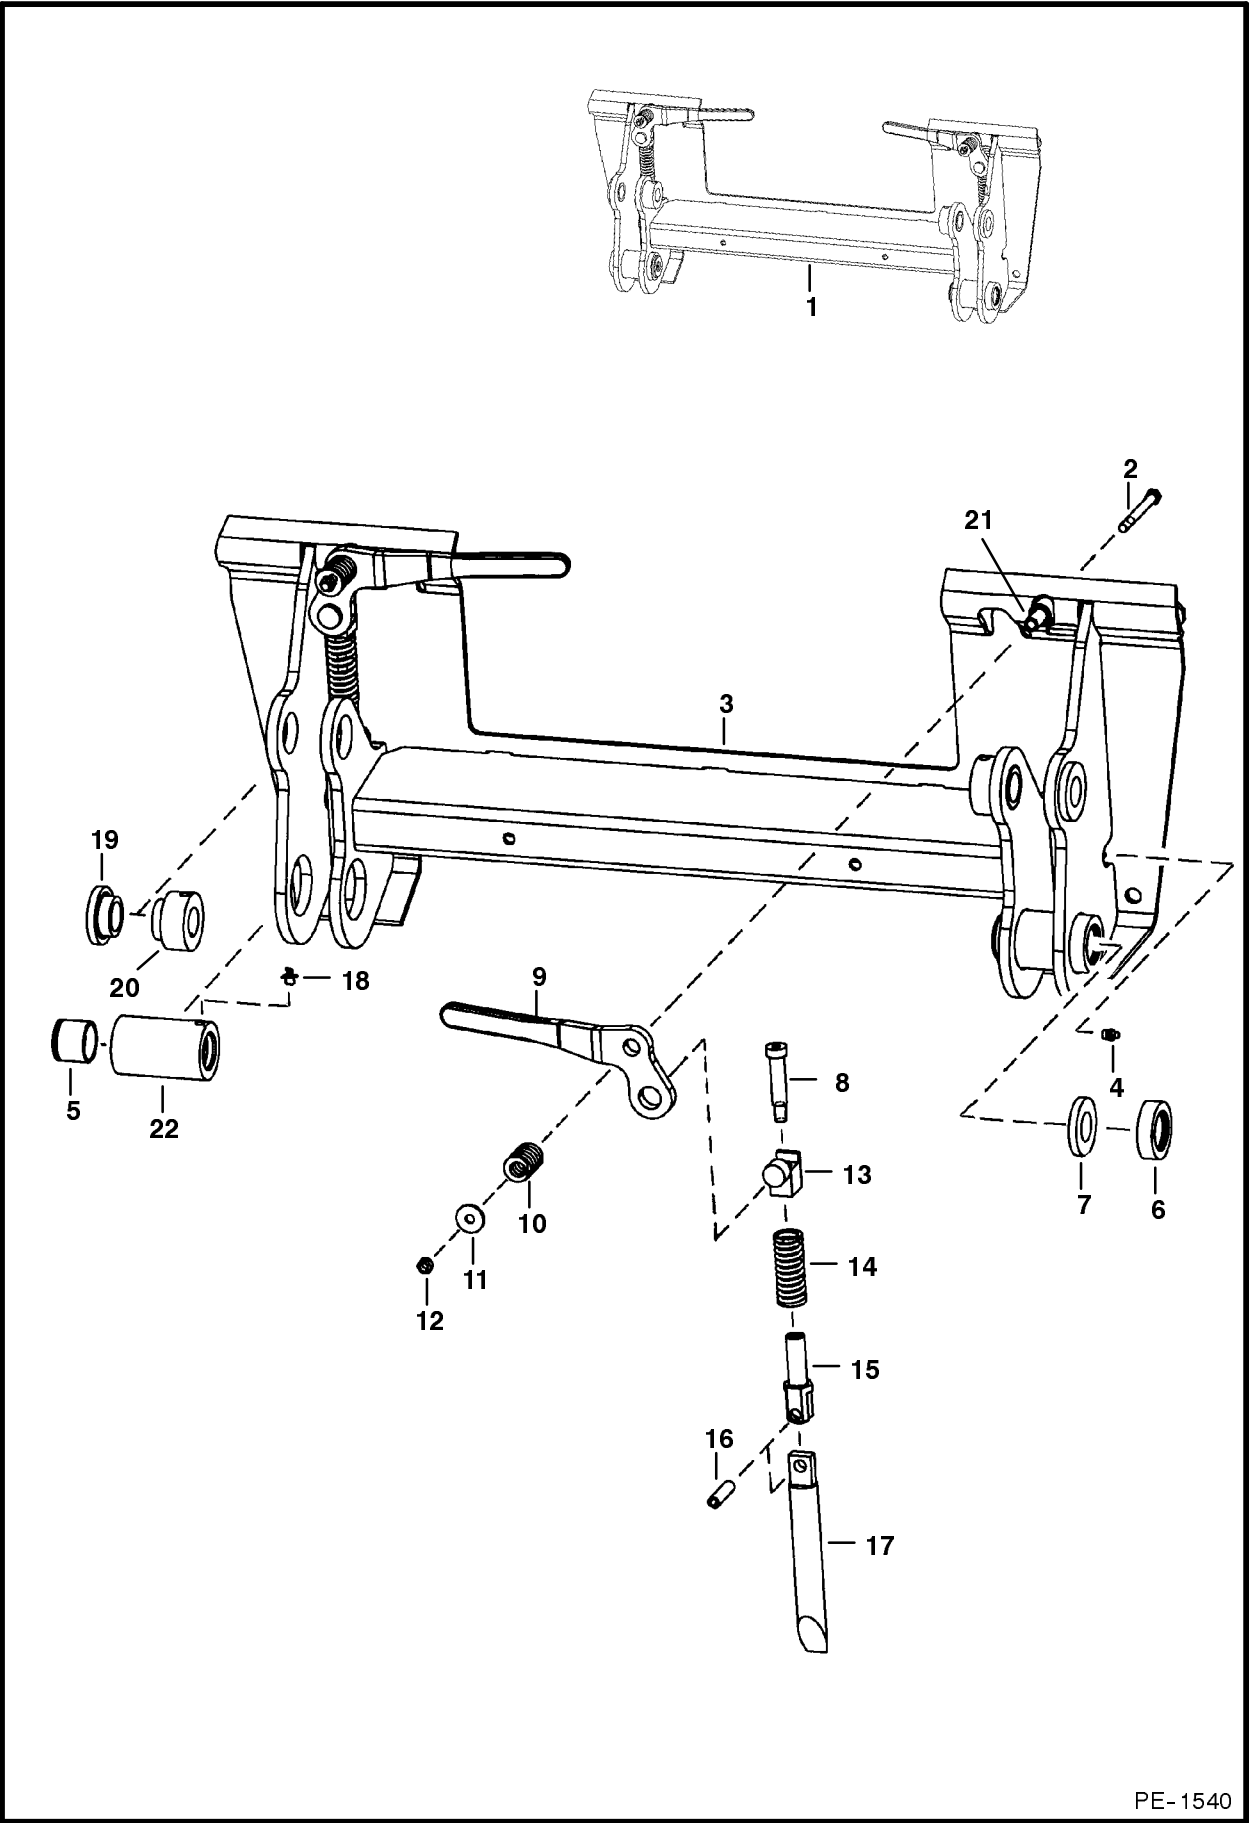


PE- 1540

BOB-TACH (Cont'd)

[illegible]

FUEL SYSTEM

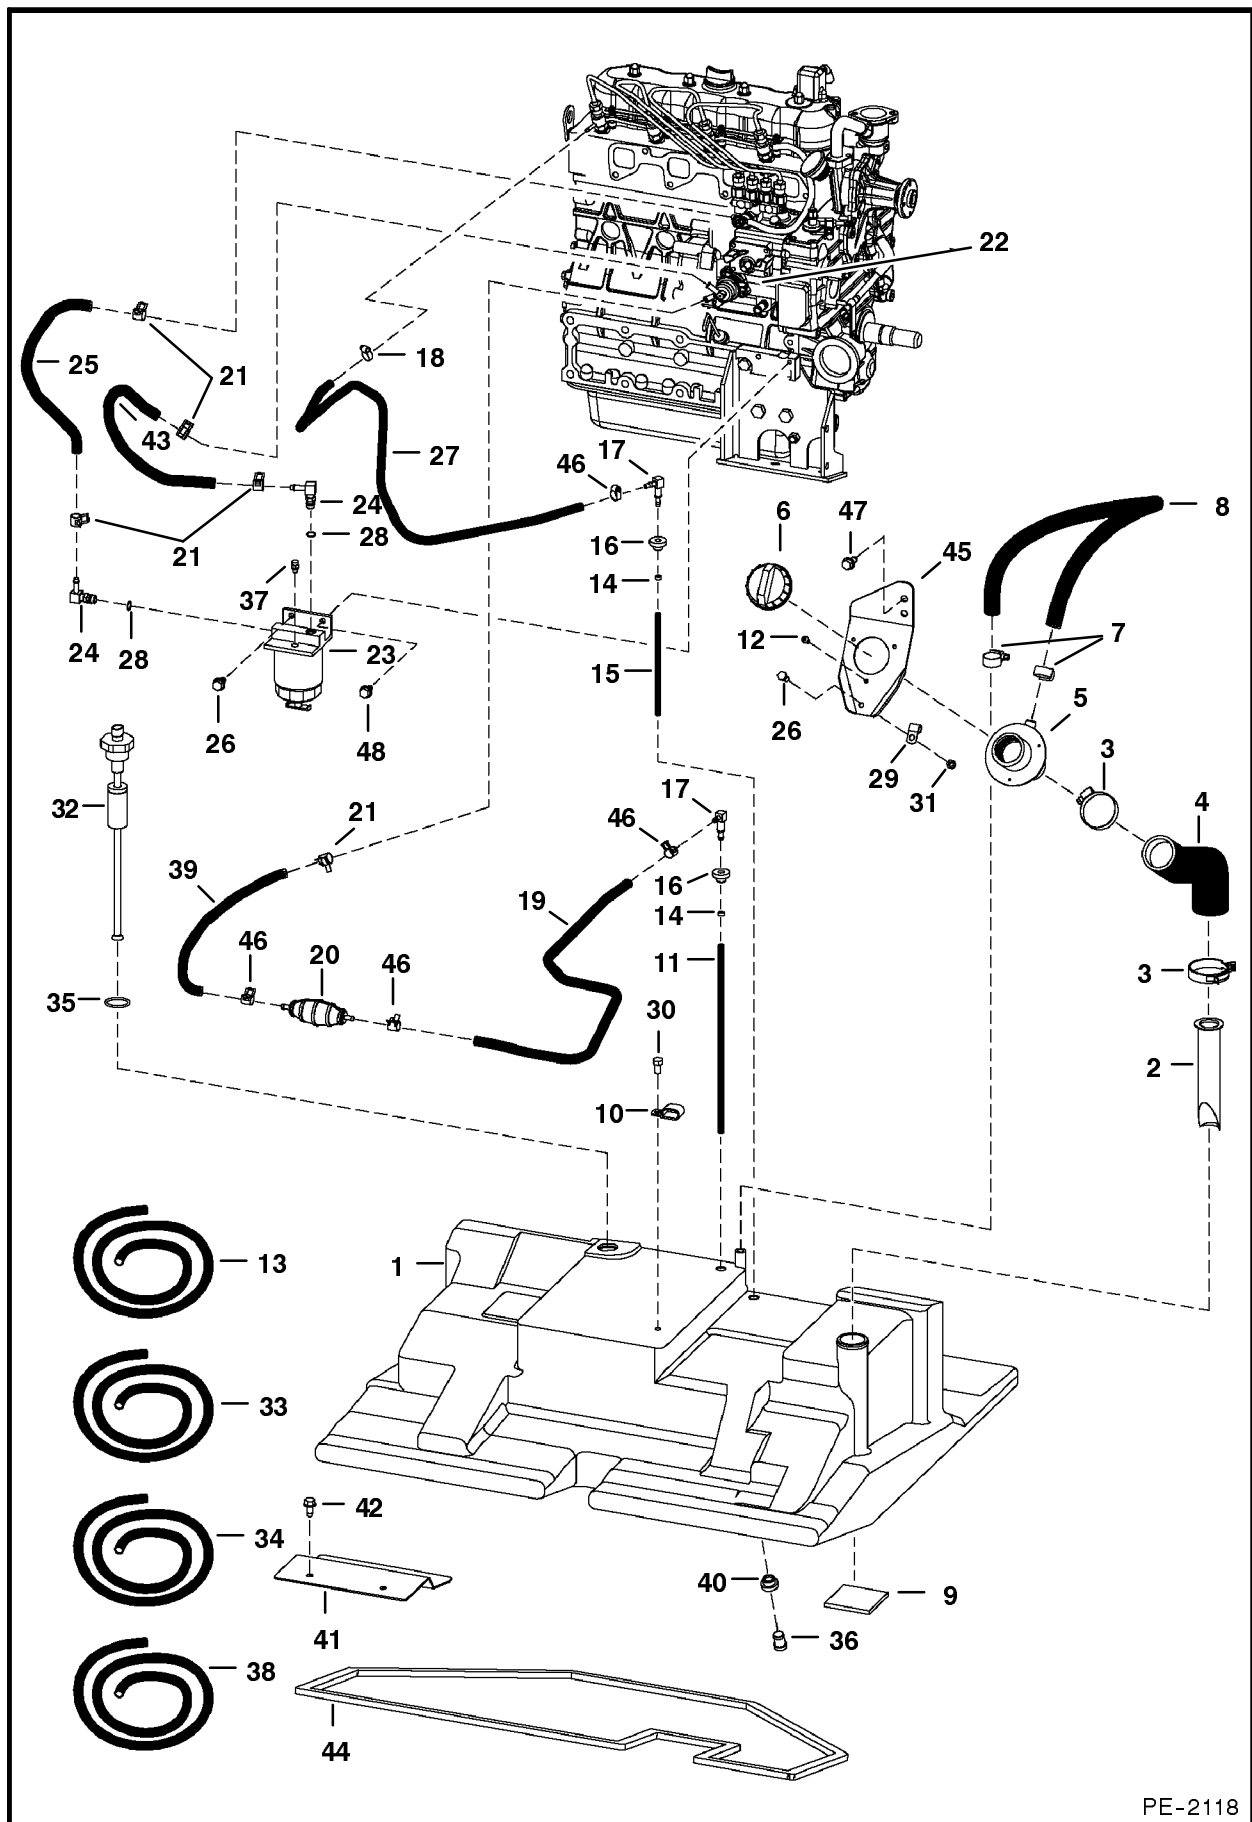


PE-2118

FUEL SYSTEM (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6736660	TANK			1
2	6569219	SCREEN			1
3	42H-32	CLAMP	worm gear		2
	5HM-58	CLAMP	constant tension		2
4	6717704	HOSE			1
5	6701449	FILLER TUBE			1
6	6661114	CAP	green		1
	NAP	CAP	locking - W/Key - Code GC020		1
	6654374	KEY	Code GC020		1
	6661696	CAP	locking - W/Key - Code PK510		1
	6587458	KEY	Code PK510		1
7	42H-10	CLAMP	worm gear		2
	5HM-24	CLAMP	constant tension		2
8	NAP	HOSE	24" (609,6 mm) long - Order Ref. 13		1
9	6578278	PAD	self adhesive one side		2
10	31H-27	CLAMP			1
11	6729854	HOSE	12.5" (317,5 mm) long		1
12	6706517	SCREW			3
13	6578172	HOSE	bulk - Sold Per Foot		x
14	6661213	CLAMP			2
15	6729853	HOSE	10.25" (260,4 mm) long		1
16	6553411	BUSHING			2
17*	7101291	ELBOW	Was 6681462 [A]		2
18	42HS-4	CLAMP			1
19	NAP	HOSE	35" (889,0 mm) long - Order Ref. 33		1
20	6657734	PUMP	hand primer		1
21	5HM-14	CLAMP			5
22	6655216	FUEL PUMP	See Page 209 & See Page 257		1
23	6667353	FILTER ASSY.			1
	6667352	ELEMENT			1
	72F-1	DRAIN COCK			1
24	6715183	ELBOW	W/Ref. 28		2
25	NAP	HOSE	13" (330,2 mm) long - Order Ref. 34 - connects to Ref. 12 See Page 209 &		
			See Page 257		2
26	84G-3112	BOLT			3
27	NAP	HOSE	53" (1346,2 mm) long - Order Ref. 38 - connects to Ref. 12 See Page 209 & See Page 257		1
28	79K-5	O-RING			x
29	30H-22	CLAMP			1
30	17C-610	BOLT			1
31	85D-5	NUT			1
32	6680436	SENSOR	fuel - W/Ref. 35		1
33	6577821	HOSE	bulk - Sold Per Foot		x
34	6577822	HOSE	bulk - Sold Per Foot		x
35	6717579	GASKET			1
36	6717401	PLUG	fuel drain		1

FUEL SYSTEM (Cont'd)

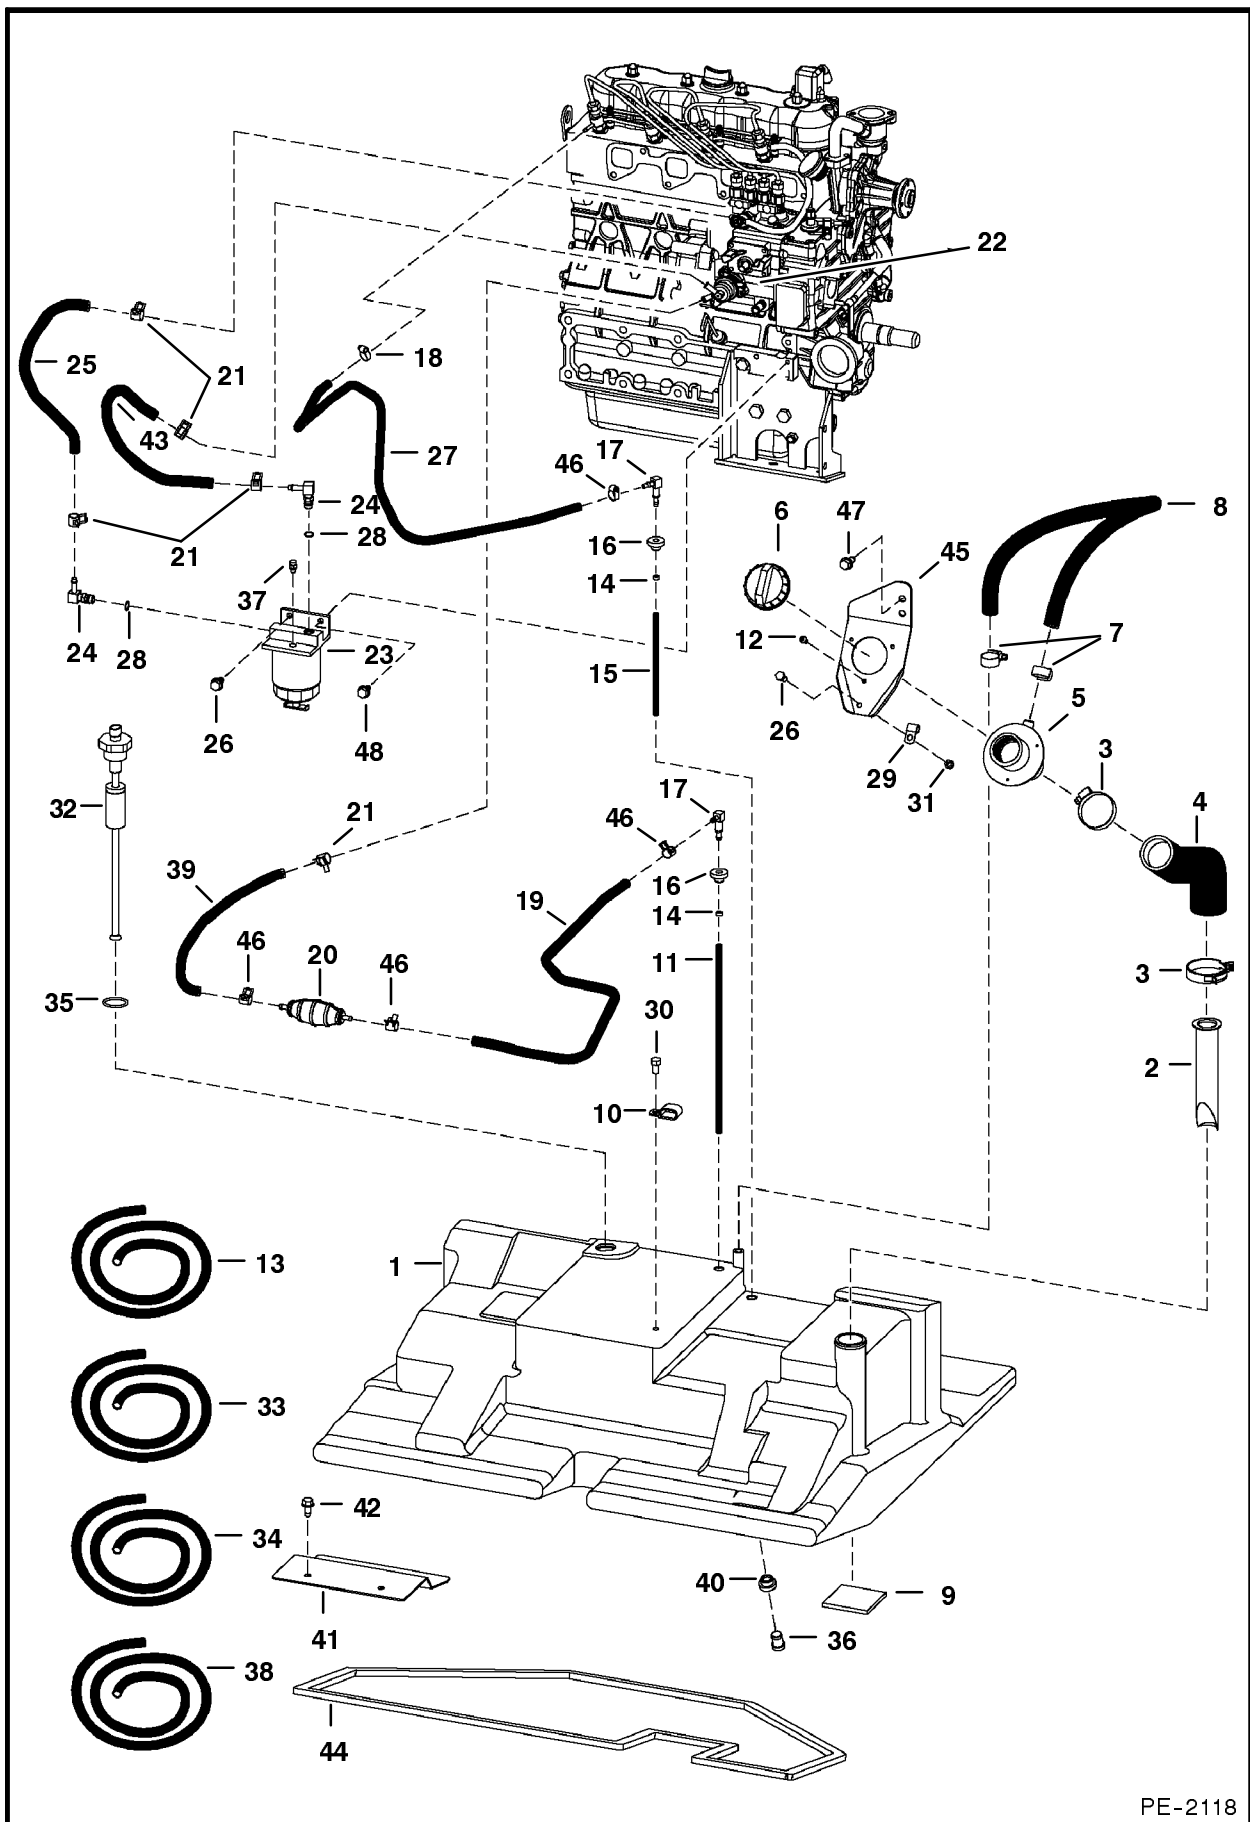


PE-2118

FUEL SYSTEM (Cont'd)

[illegible]

DRIVE TRAIN

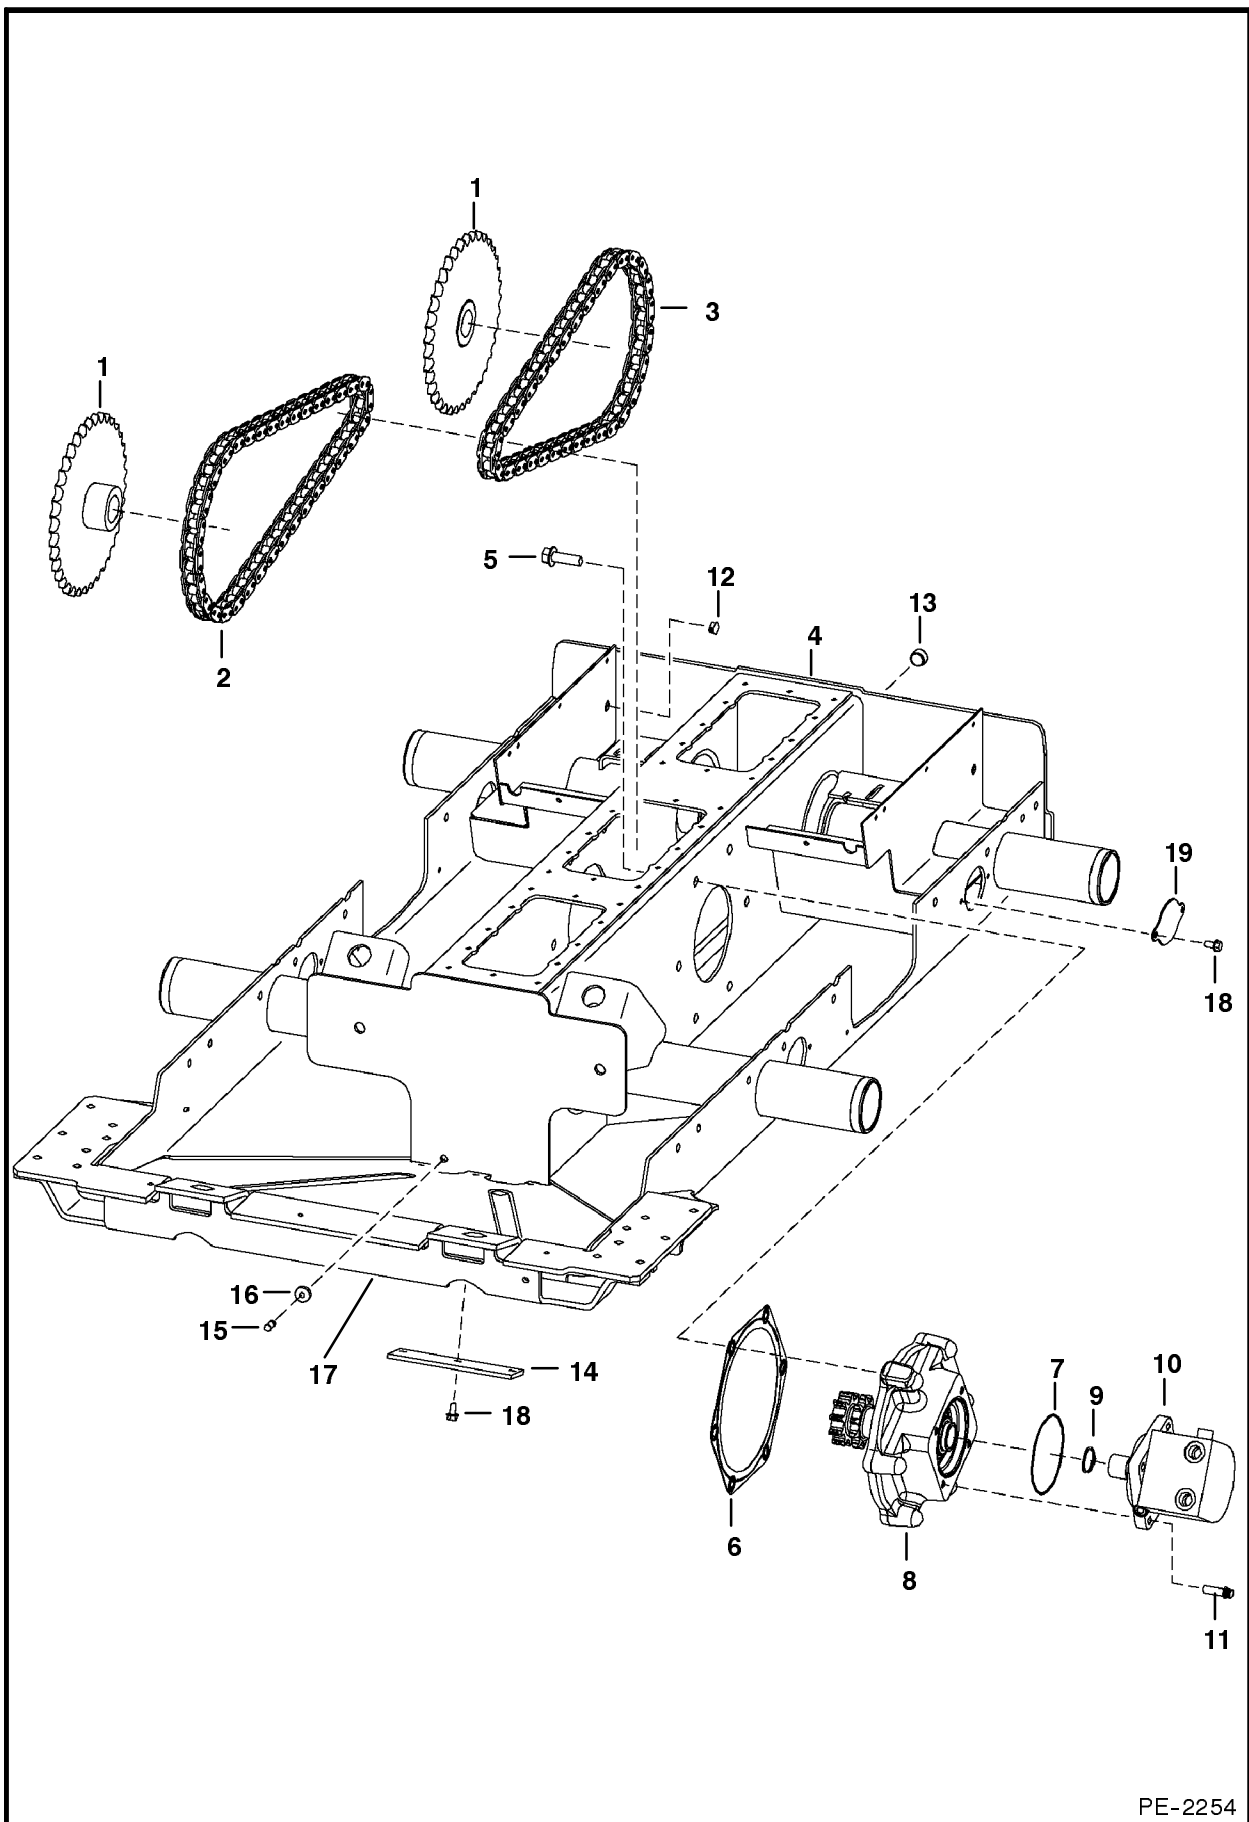


PE-2254

DRIVE TRAIN (Cont'd)

[illegible]

AXLE

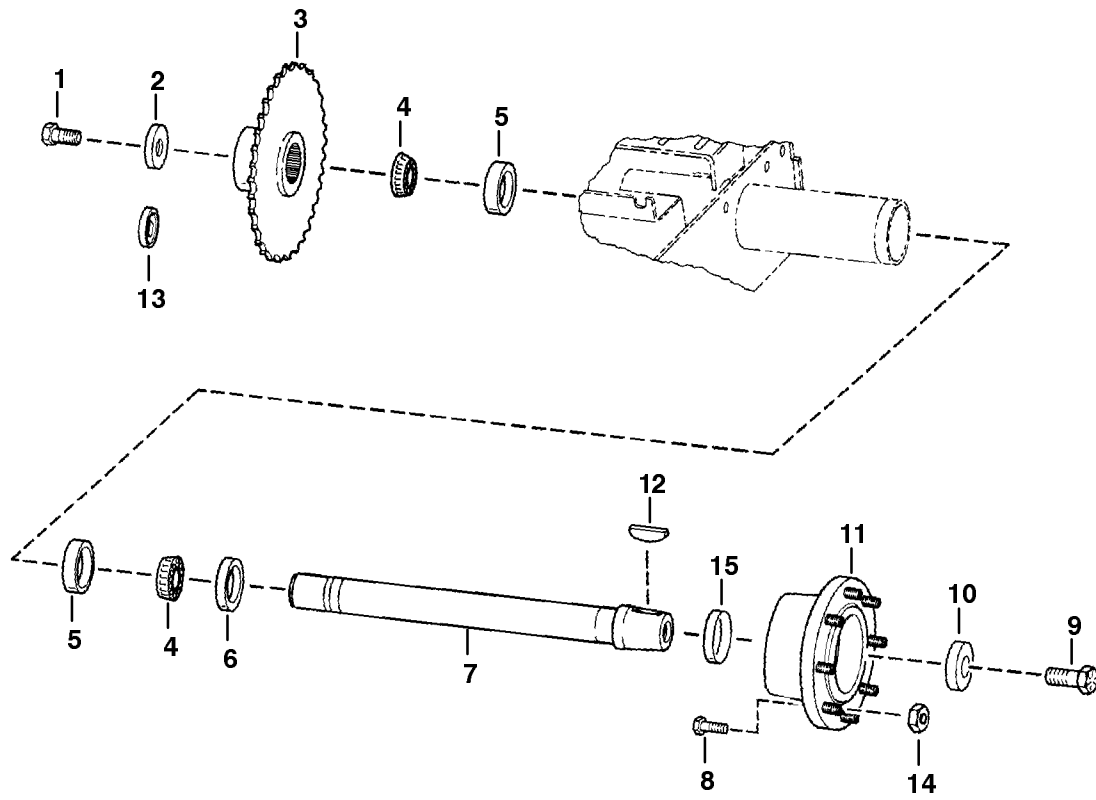


C-3270

AXLE (Cont'd)

[illegible]


MOTOR CARRIER

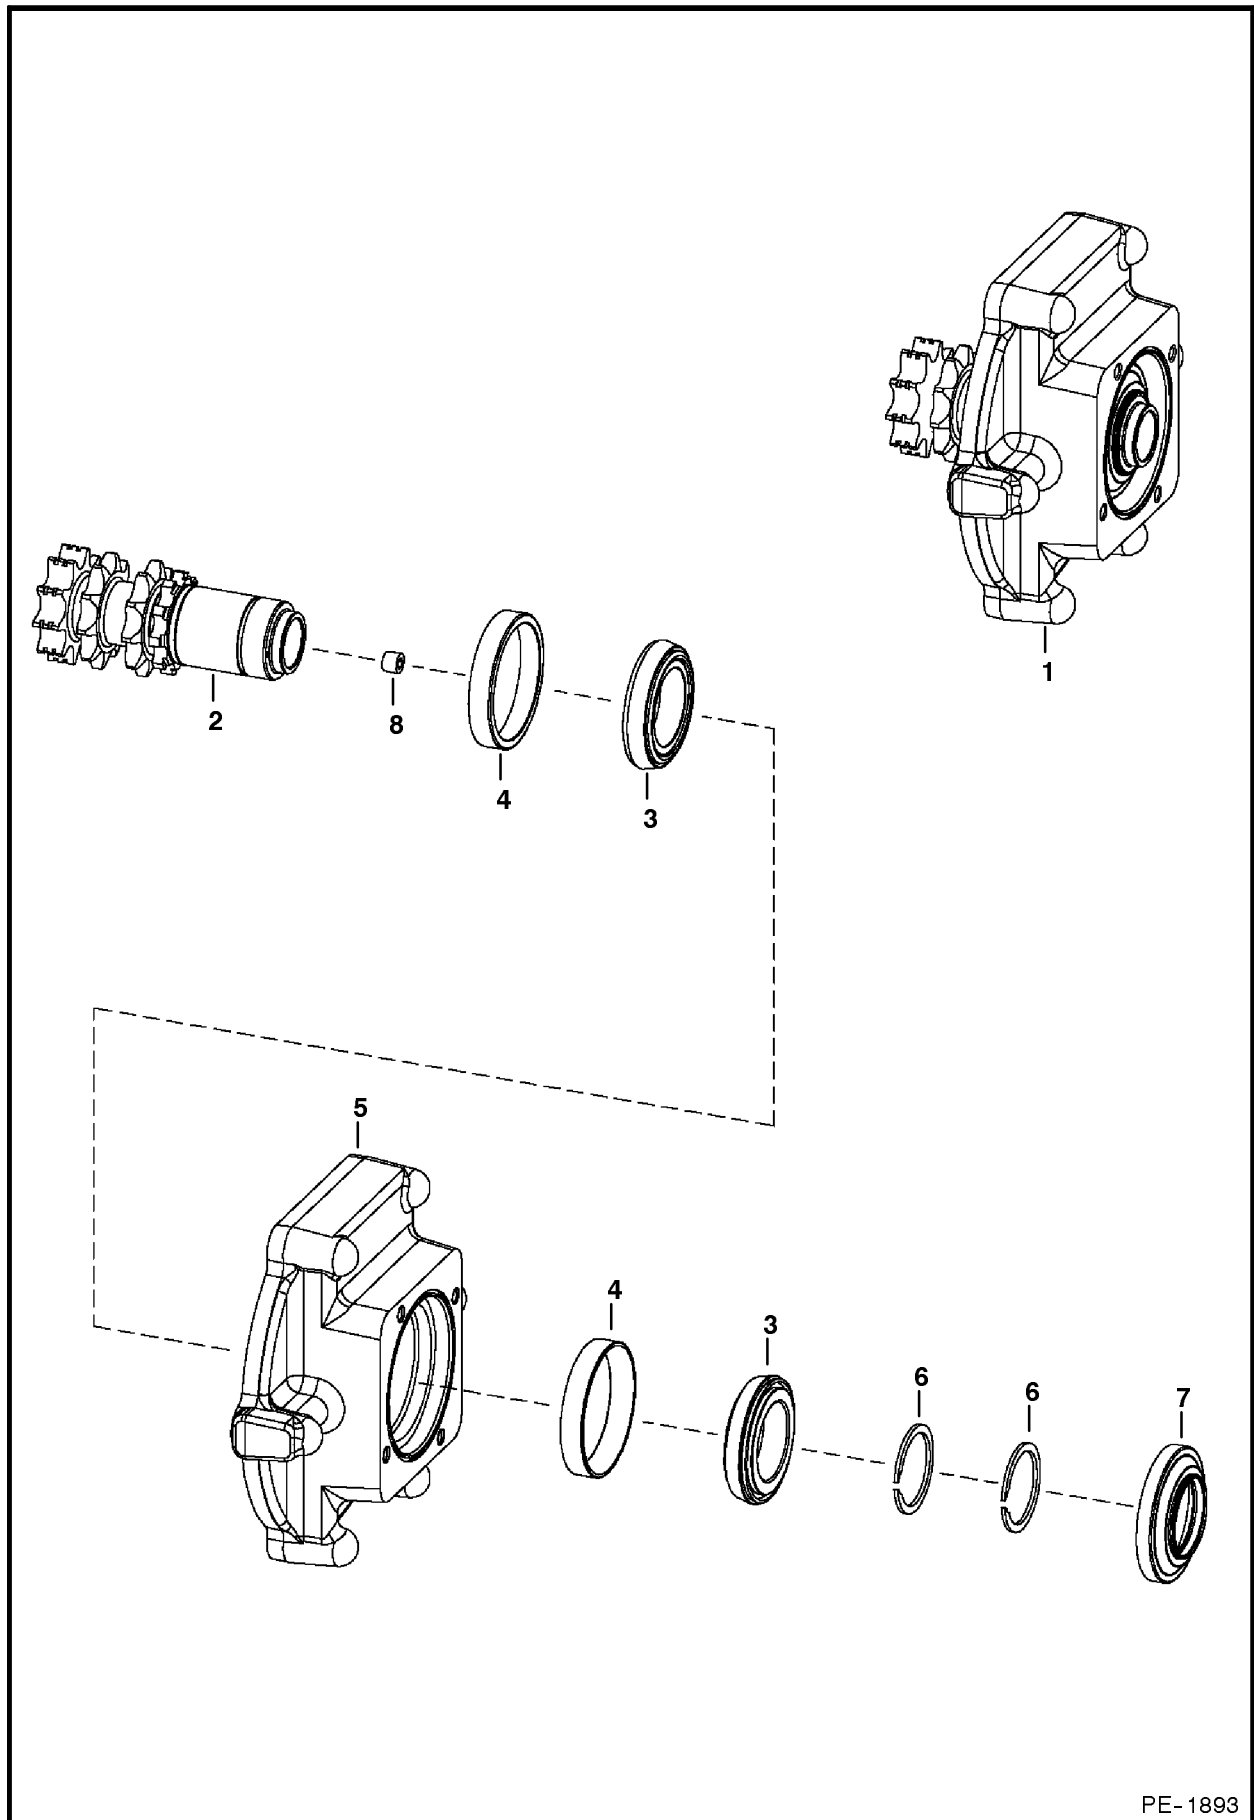

MOTOR CARRIER (Cont'd)

[illegible]

DISC BRAKE (Non-Flat Top Chaincase)

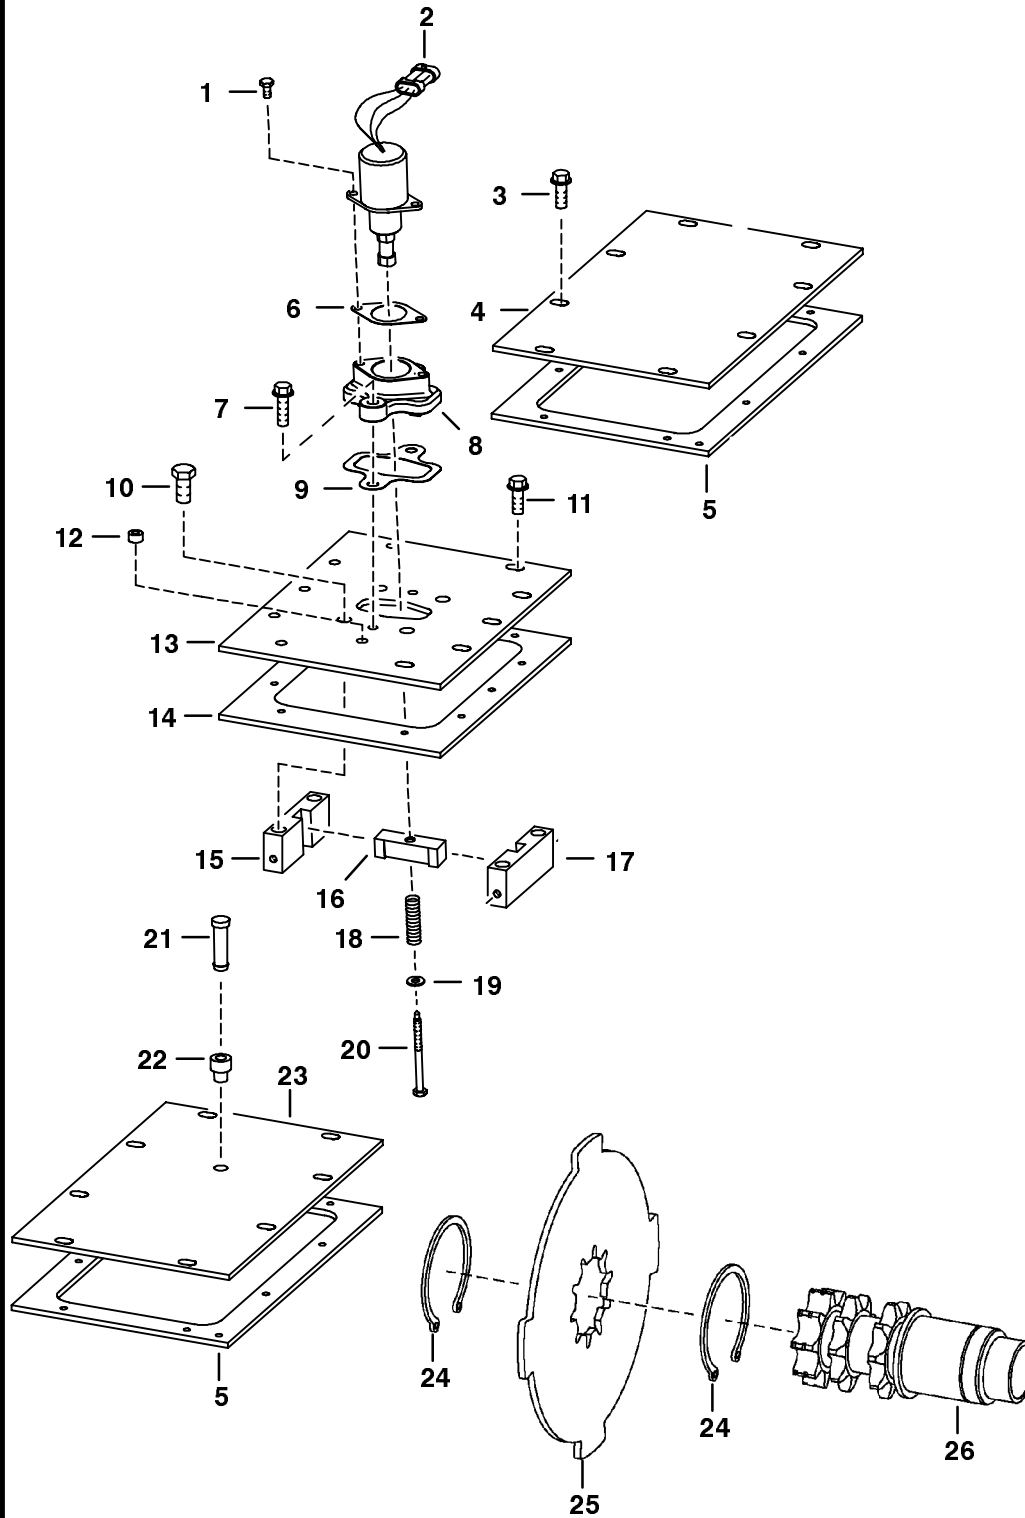


B-17108

DISC BRAKE (Cont'd)
(Non-Flat Top Chaincase)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	17C-412	BOLT			2
2	6681512	SOLENOID			1
3	84G-3712	BOLT			14
4	6729173	COVER			1
5	6703097	GASKET			2
6	6706737	GASKET			1
7	84G-3720	BOLT			2
8	6706718	MOUNT			1
9	6708016	GASKET			1
10	17C-820	BOLT			4
	47C-820	BOLT			4
11	84G-3716	BOLT			10
12	6544654	BUSHING	spacer		1
13	6706042	COVER			1
14	6706968	GASKET			1
15	6719056	BLOCK	guide - L.H.		1
16	6714278	GUIDE			1
17	6719057	BLOCK	guide - R.H.		1
18	6708018	SPRING			1
19	25E-13	WASHER			1
20	6708267	BOLT			1
21	6680970	BREATHER			1
22	6553411	BUSHING			1
23	6700330	COVER			1
24	6658672	SNAP RING			4
25	6716228	BRAKE	disc		2
26	6733621	SHAFT	double snap ring groove -		
			See Page 47		2


*** DISC BRAKE
(Flat Top Chaincase)**

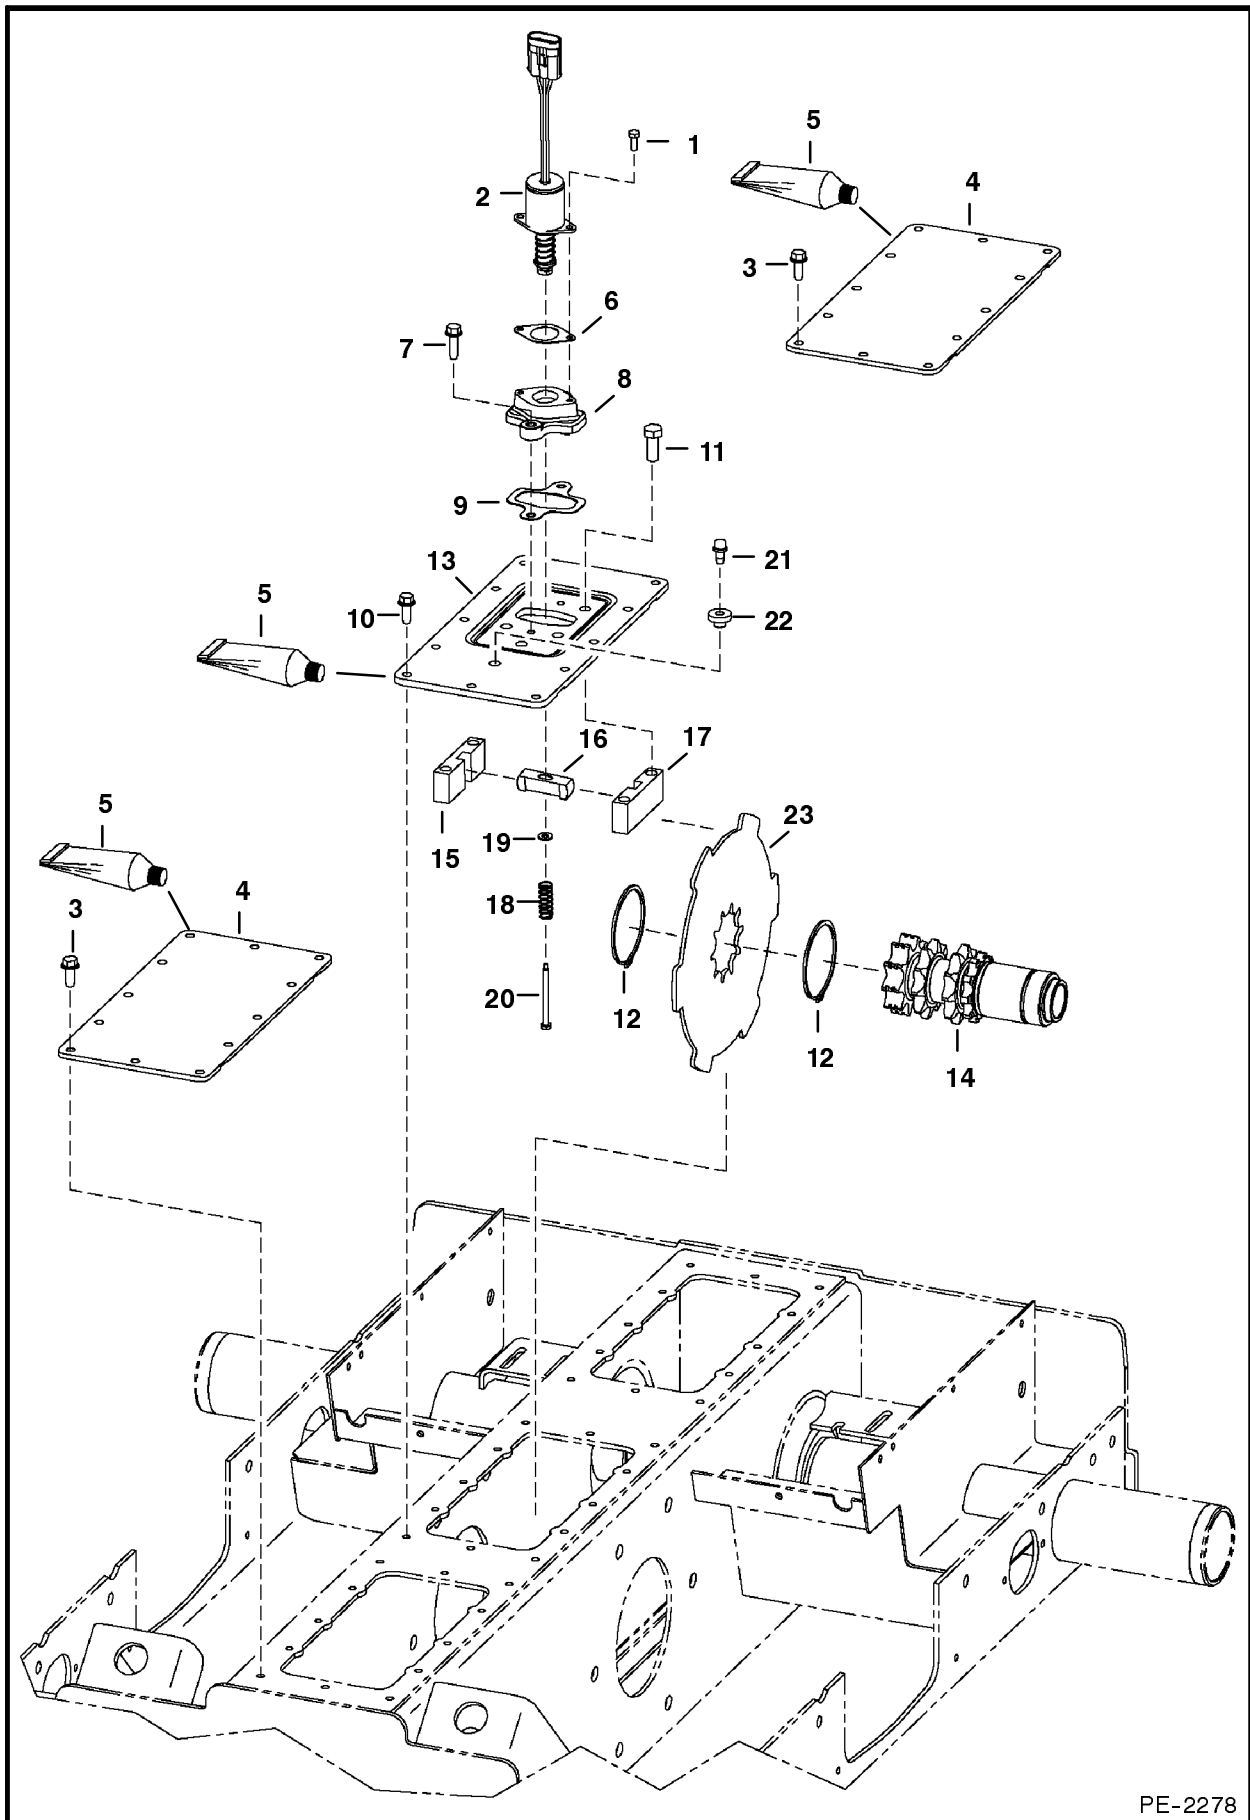

PE-2278

[illegible]

HYDRAULIC CIRCUITRY (W/O Bucket Position Valve)

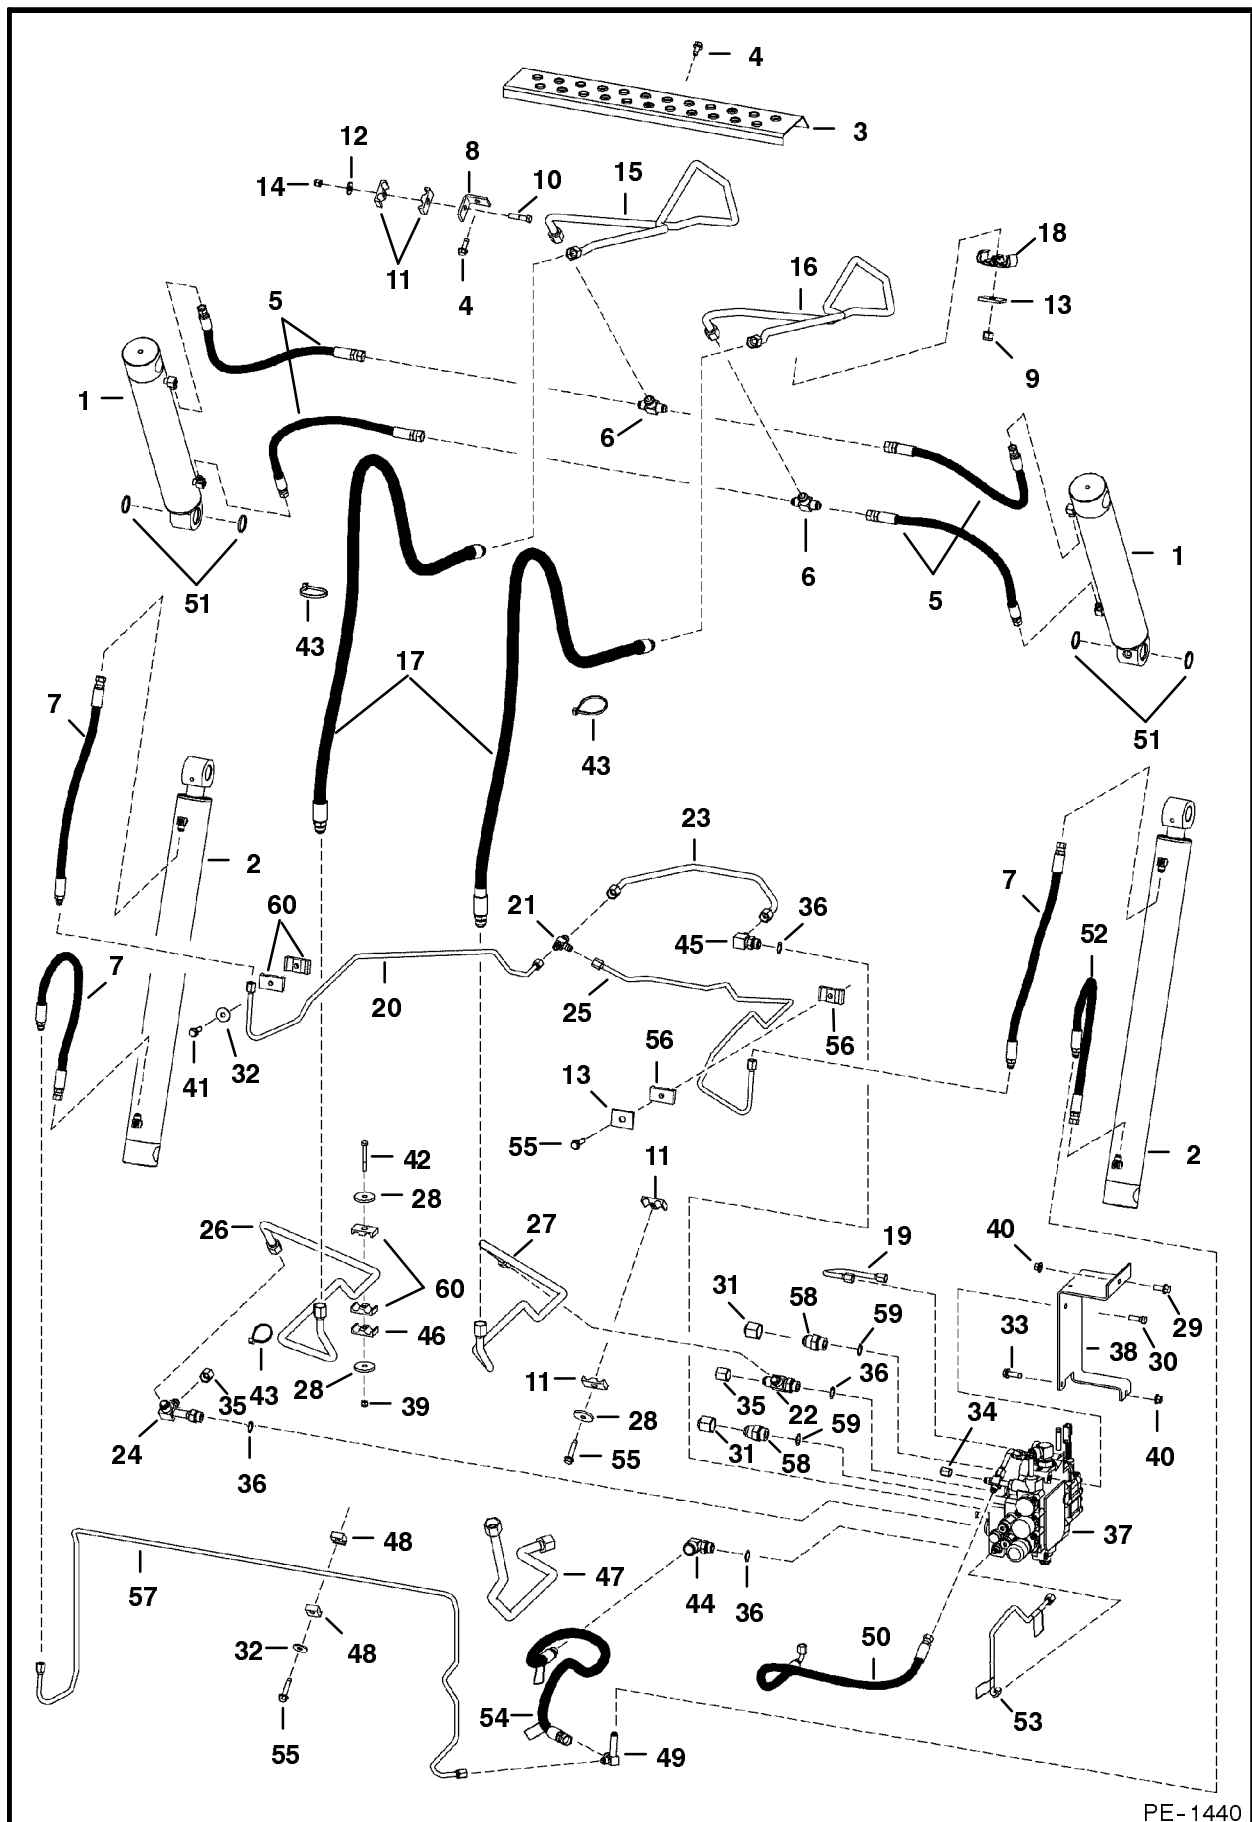


HYDRAULIC CIRCUITRY (Cont'd)

(W/O BPV) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1		CYLINDER	tilt - See Page 73		2
2		CYLINDER	lift - See Page 75		2
3	6735669	SHIELD	boom stop		1
4	84G-3712	BOLT			4
5	6718066	HOSE			4
6	6716061	TEE			2
7	6718067	HOSE			3
8	6718238	BRACKET			1
9	59D-8	NUT			2
10	17C-628	BOLT			1
11	6701893	CLAMP			6
12	27E-6	WASHER			1
13	6553709	WASHER			2
14	59D-6	NUT			1
15	6718030	TUBE			1
16	6725337	TUBE			1
17	6719439	HOSE			2
18	6717933	CLAMP			2
19	6735837	TUBE	See Page 67		1
20	6726168	TUBE			1
21	6719424	TEE			1
22	21KB-1010	TEE	W/Ref. 36		1
23	6726166	TUBE			1
24	6730142	TEE	W/Ref. 36		1
25	6733186	TUBE			1
26	6730203	TUBE			1
27	6730202	TUBE			1
28	872229	WASHER			3
29	35C-616	BOLT			2
30	17C-620	BOLT			2
31	36K-8	CAP			2
32	619021	WASHER			2
33	84G-3720	BOLT			1
34	36K-5	CAP			1
35	36K-7	CAP			2
36	79K-10	O-RING			x
37		VALVE	See Page 79		1
38	6726253	MOUNT			1
39	59D-6	NUT			1
40	83D-6	NUT			2
41	84G-3724	BOLT			1
42	17C-644	BOLT			1
43	6624289	TIE			2
44	6814531	ELBOW	W/Ref. 36		1
45	17KB-810	ELBOW	W/Ref. 36		1
46	30H-45	CLAMP			1
47	6727640	TUBE	See Page 113 Ref. 7		1
48	6727707	CLAMP			2
49	6727638	TEE			1
50	6737648	HOSE			1
51	225855	SEAL			4

HYDRAULIC CIRCUITRY (Cont'd) (W/O Bucket Position Valve)

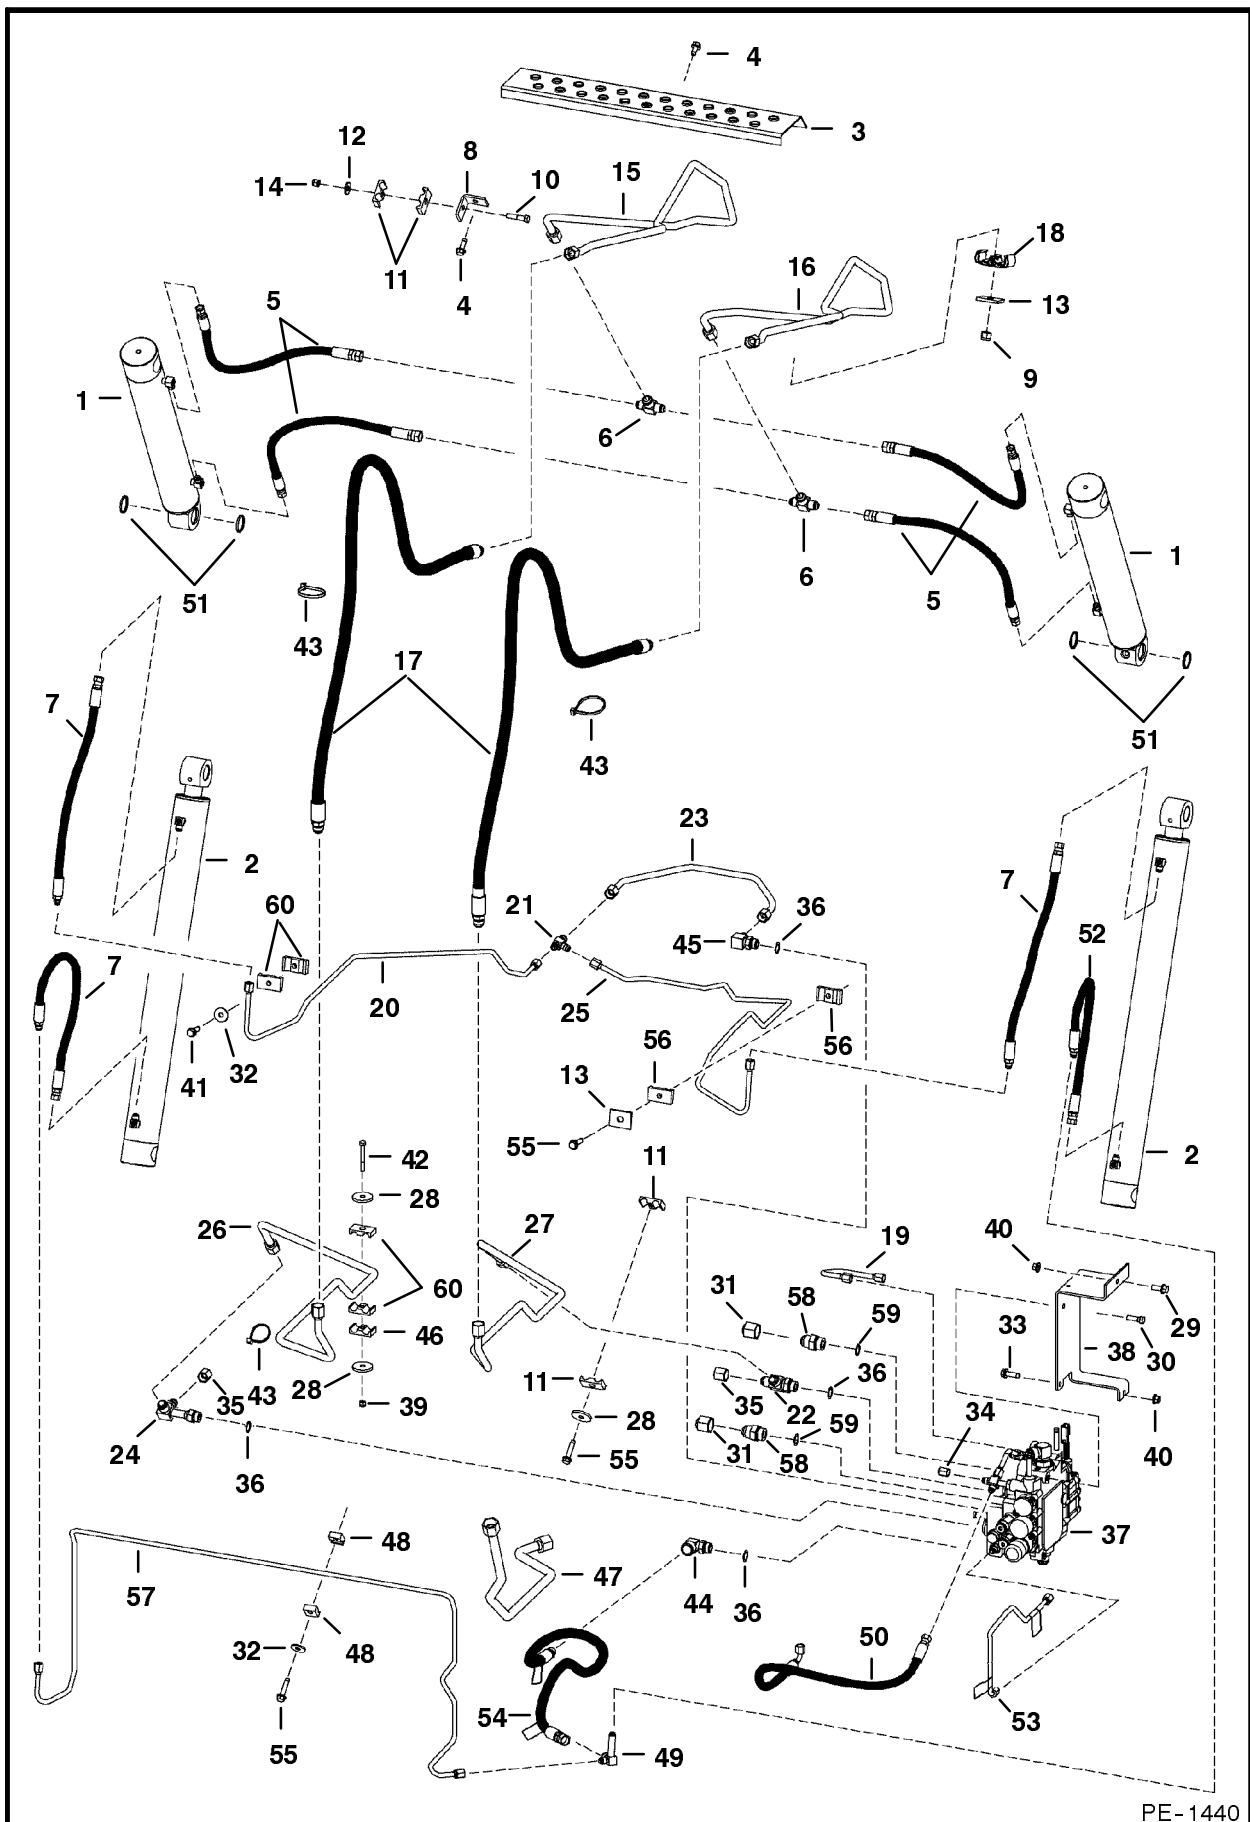


PE-1440

(W/O BPV) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

*** HYDRAULIC CIRCUITRY
(W/O Bucket Positioning Valve)**

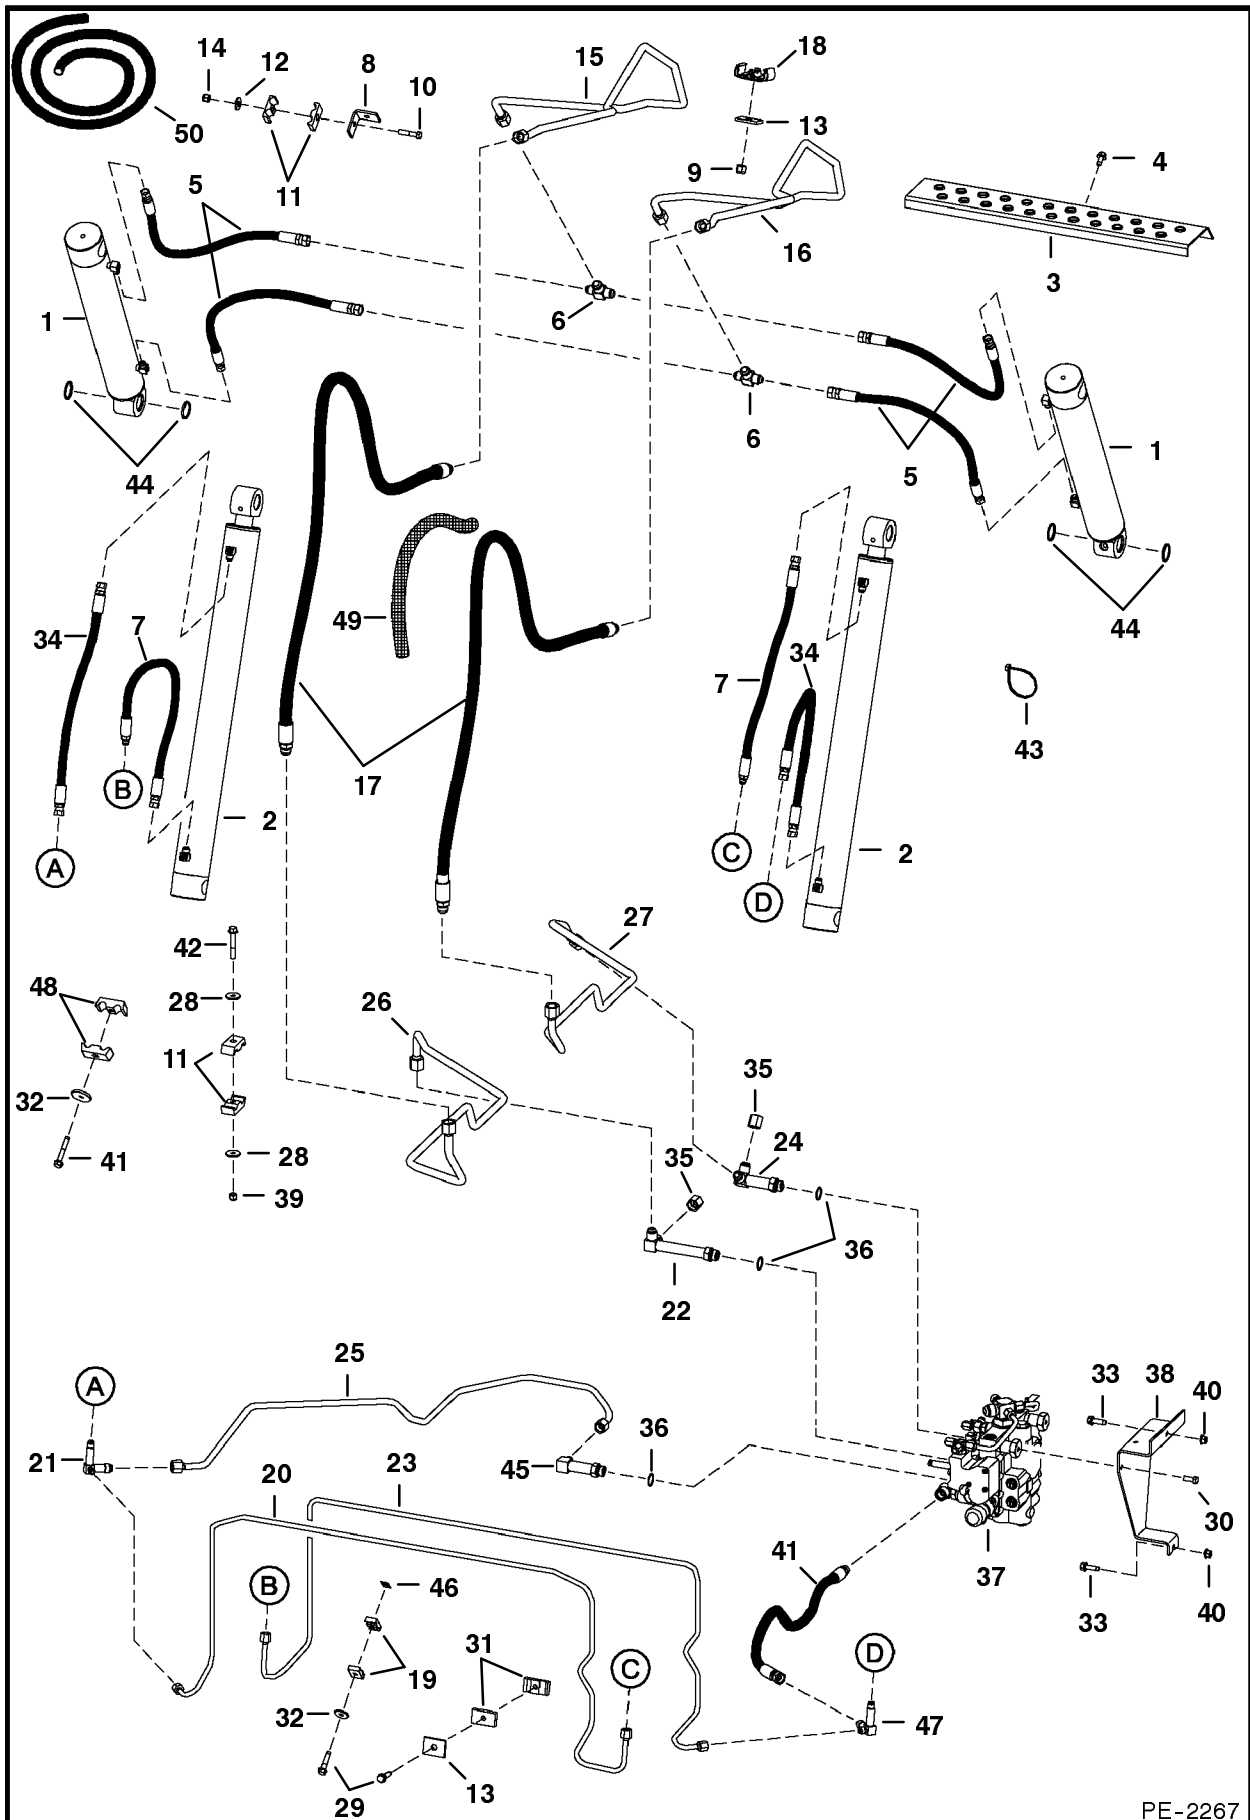


PE-2267

*** HYDRAULIC CIRCUITRY (Cont'd)**

(W/O BPV) (S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*		CYLINDER	tilt - See Page 73		2
2*		CYLINDER	lift - See Page 75		2
3*	6735669	SHIELD	boom stop		1
4*	84G-3712	BOLT			4
5*	6718066	HOSE			4
6*	6716061	TEE			2
7*	6718067	HOSE			2
8*	6718238	BRACKET			1
9*	59D-8	NUT			2
10*	17C-628	BOLT			1
11*	6701893	CLAMP			4
12*	27E-6	WASHER			1
13*	6553709	WASHER			2
14*	59D-6	NUT			1
15*	6734495	TUBE			1
16*	6734496	TUBE			1
17*	6539418	HOSE	W/Ref. 49		2
18*	6717933	CLAMP			2
19*	6726277	CLAMP			4
20*	7101645	TUBE			1
21*	7101648	TUBE			1
22*	6733190	TEE	W/Ref. 36		1
23*	7101649	TUBE			1
24*	6730142	TEE	W/Ref. 36		1
25*	7101646	TUBE			1
26*	6733188	TUBE			1
27*	6733187	TUBE			1
28*	872229	WASHER			4
29*	84G-3728	BOLT			3
30*	17C-620	BOLT			2
31*	6727708	CLAMP			2
32*	619021	WASHER			4
33*	84G-3720	BOLT			1
34*	7102135	HOSE			1
35*	36K-7	CAP			1
36*	79K-10	O-RING			x
37*		VALVE	See Page 83		1
38*	6733189	MOUNT			1
39*	59D-6	NUT			2
40*	83D-6	NUT			4
41*	6727705	HOSE			1
*	6809511	DECAL			2
42*	17C-632	BOLT			1
43*	6624289	TIE			2
44*	225855	SEAL			4
45*	6733191	ELBOW	W/Ref. 36		1
46*	6684033	NUT			1
47*	6727638	TEE			1
48*	6592506	CLAMP			2
49*	NAP	CONDUIT	30" (762 mm) long - Order Ref. 50		2
50*	6643249	CONDUIT	bulk - Sold Per Print		x

HYDRAULIC CIRCUITRY (W/ Bucket Position Valve)

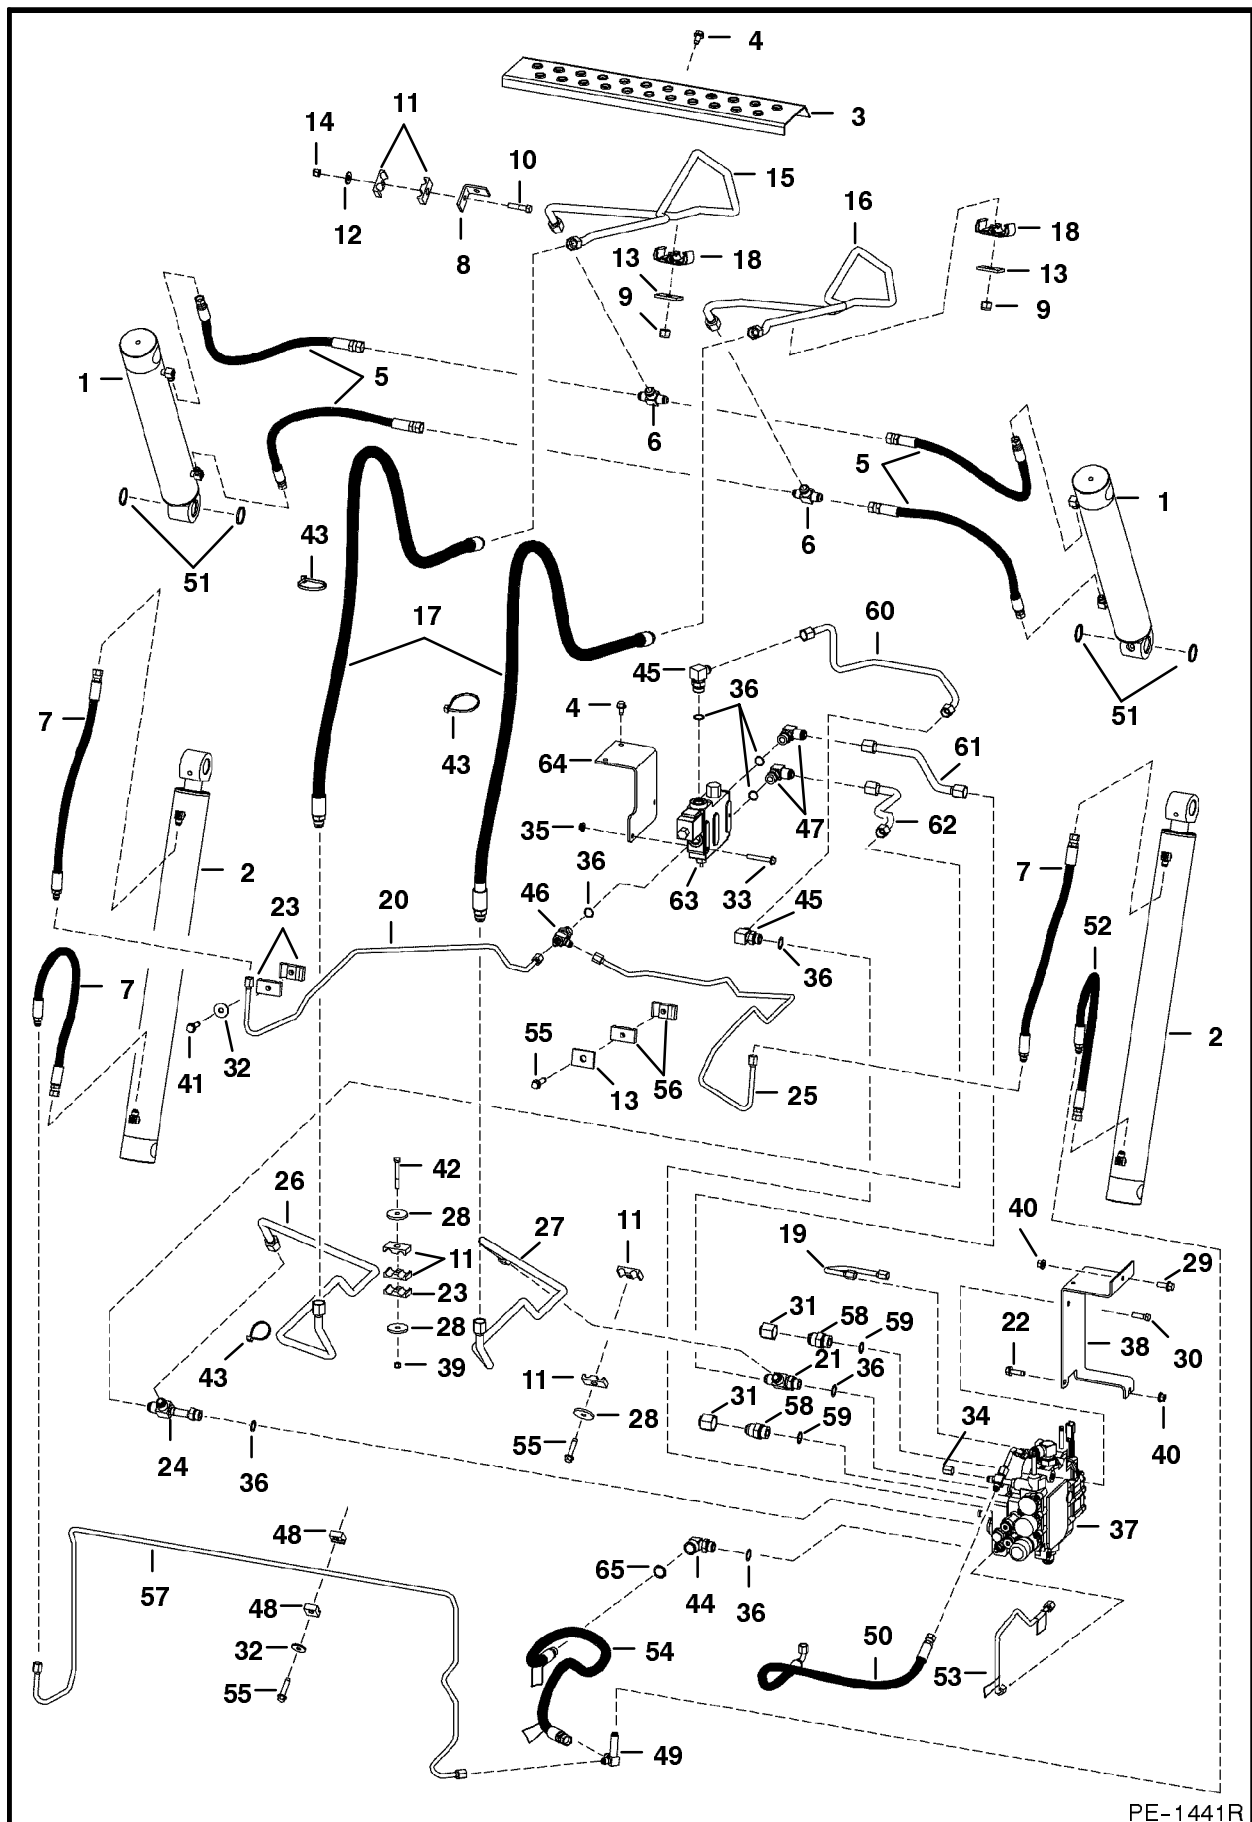


PE-1441R

HYDRAULIC CIRCUITRY (Cont'd)

(W/ BPV) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1		CYLINDER	tilt - See Page 73		2
2		CYLINDER	lift - See Page 75		2
3	6735669	SHIELD	boom stop		1
4	84G-3712	BOLT			4
5	6718066	HOSE			4
6	6716061	TEE			2
7	6718067	HOSE			3
8	6718238	BRACKET			1
9	59D-8	NUT			2
10	17C-628	BOLT			1
11	6701893	CLAMP			6
12	27E-6	WASHER			1
13	6553709	WASHER			2
14	59D-6	NUT			1
15	6718030	TUBE			1
16	6725337	TUBE			1
17	6719439	HOSE			2
18	6717933	CLAMP			2
19	6735837	TUBE	See Page 67		1
20	6726168	TUBE			1
21	10K-7	TEE			1
22	84G-3720	BOLT			1
23	6726277	CLAMP			4
24	6730142	TEE	W/Ref. 36		1
25	6733186	TUBE			1
26	6730203	TUBE			1
27	6730202	TUBE			1
28	872229	WASHER			3
29	35C-616	BOLT			2
30	17C-620	BOLT			2
31	36K-8	CAP			2
32	619021	WASHER			2
33	35C-536	BOLT			2
34	36K-5	CAP			1
35	57D-5	NUT			2
36	79K-10	O-RING			x
37		VALVE	See Page 79		1
38	6726253	MOUNT			1
39	59D-6	NUT			1
40	83D-6	NUT			2
41	84G-3724	BOLT			1
42	17C-644	BOLT			1
43	6624289	TIE			3
44	6814531	ELBOW	W/Ref. 36		1
45	17KB-810	ELBOW	W/Ref. 36		2
46	21KB-610	TEE	W/Ref. 36		1
47	17KB-1010	ELBOW	W/Ref. 36		2
48	6727707	CLAMP			2
49	6727638	TEE			1
50	6737648	HOSE			1
51	225855	SEAL			4

HYDRAULIC CIRCUITRY (Cont'd) (W/ Bucket Position Valve)

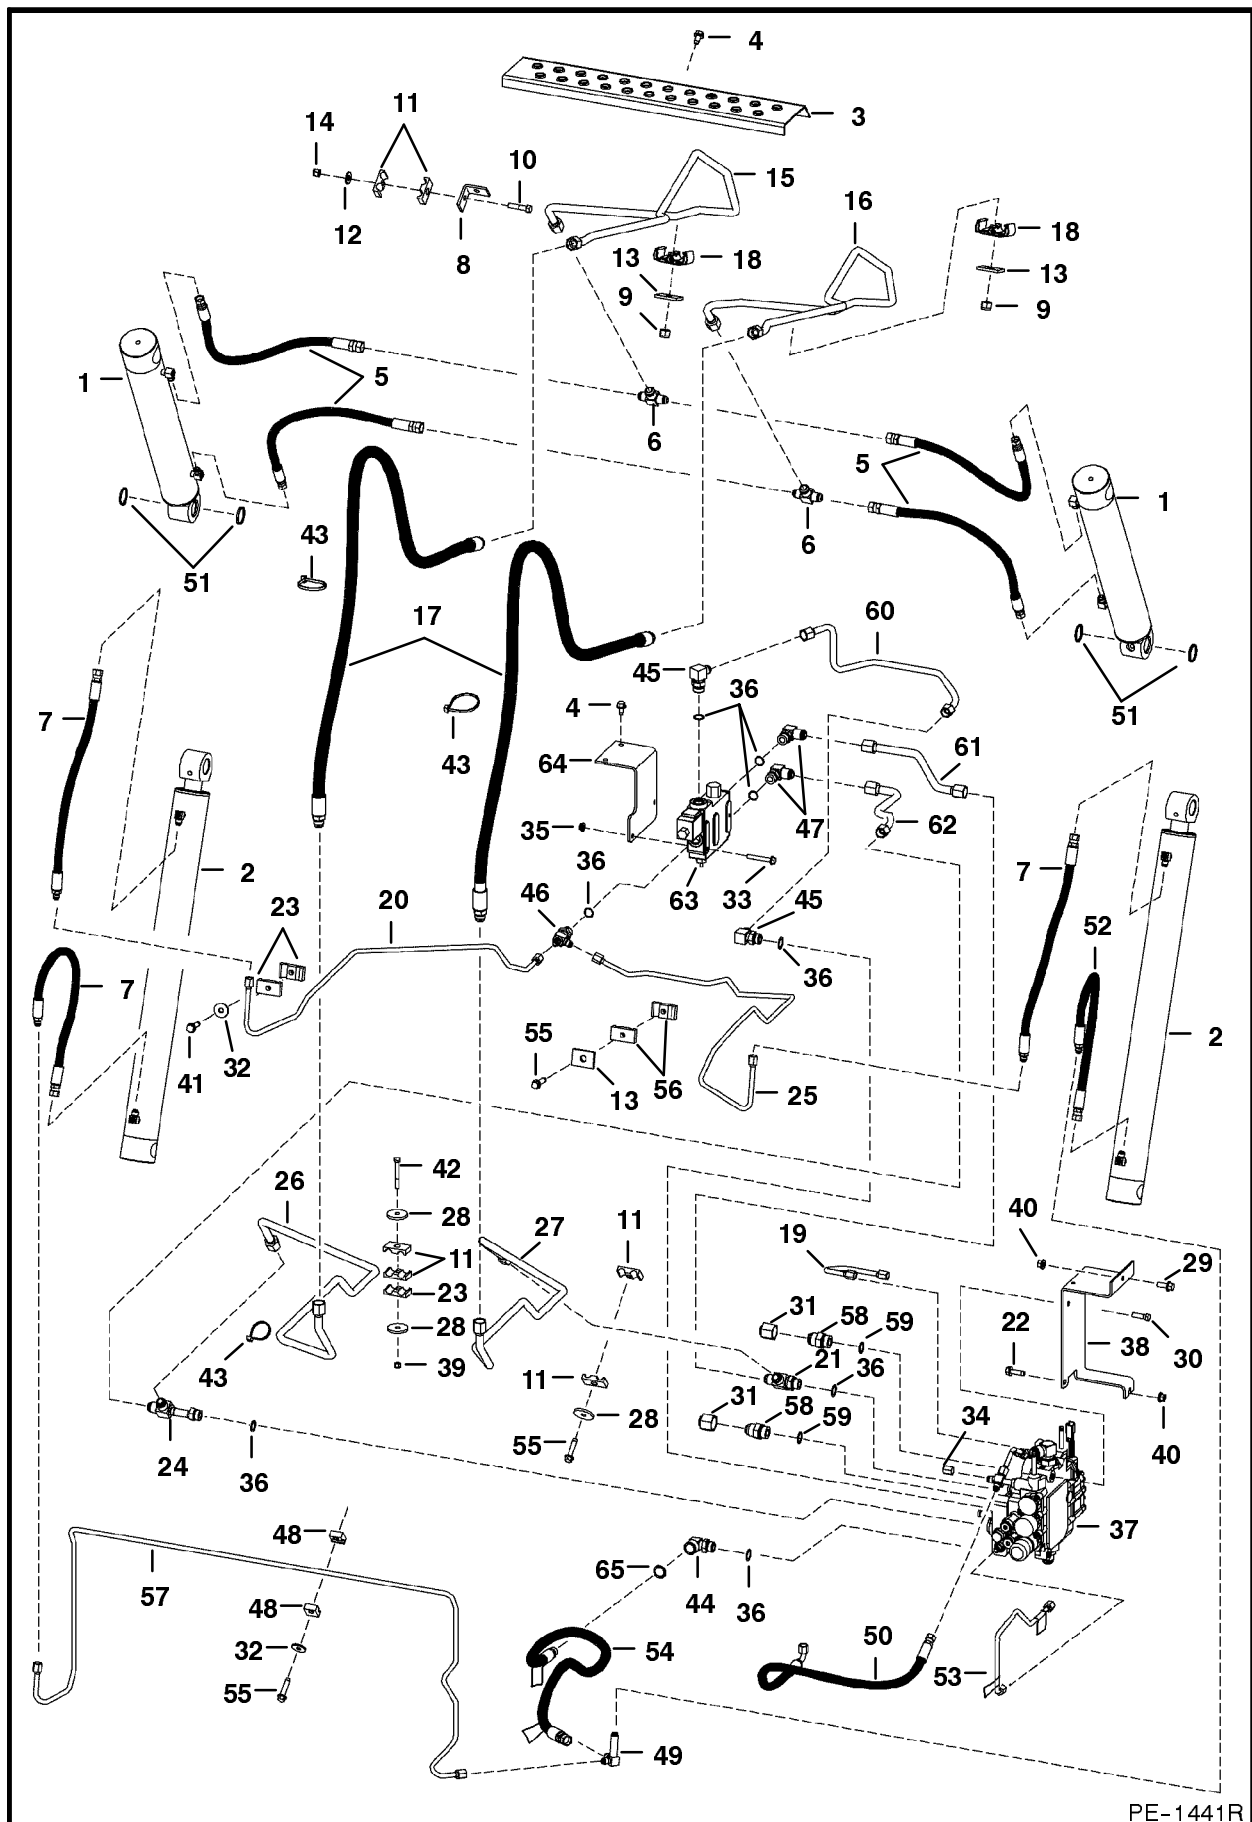


PE-1441R

(W/ BPV) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

*** HYDRAULIC CIRCUITRY
(W/ Bucket Positioning Valve)**

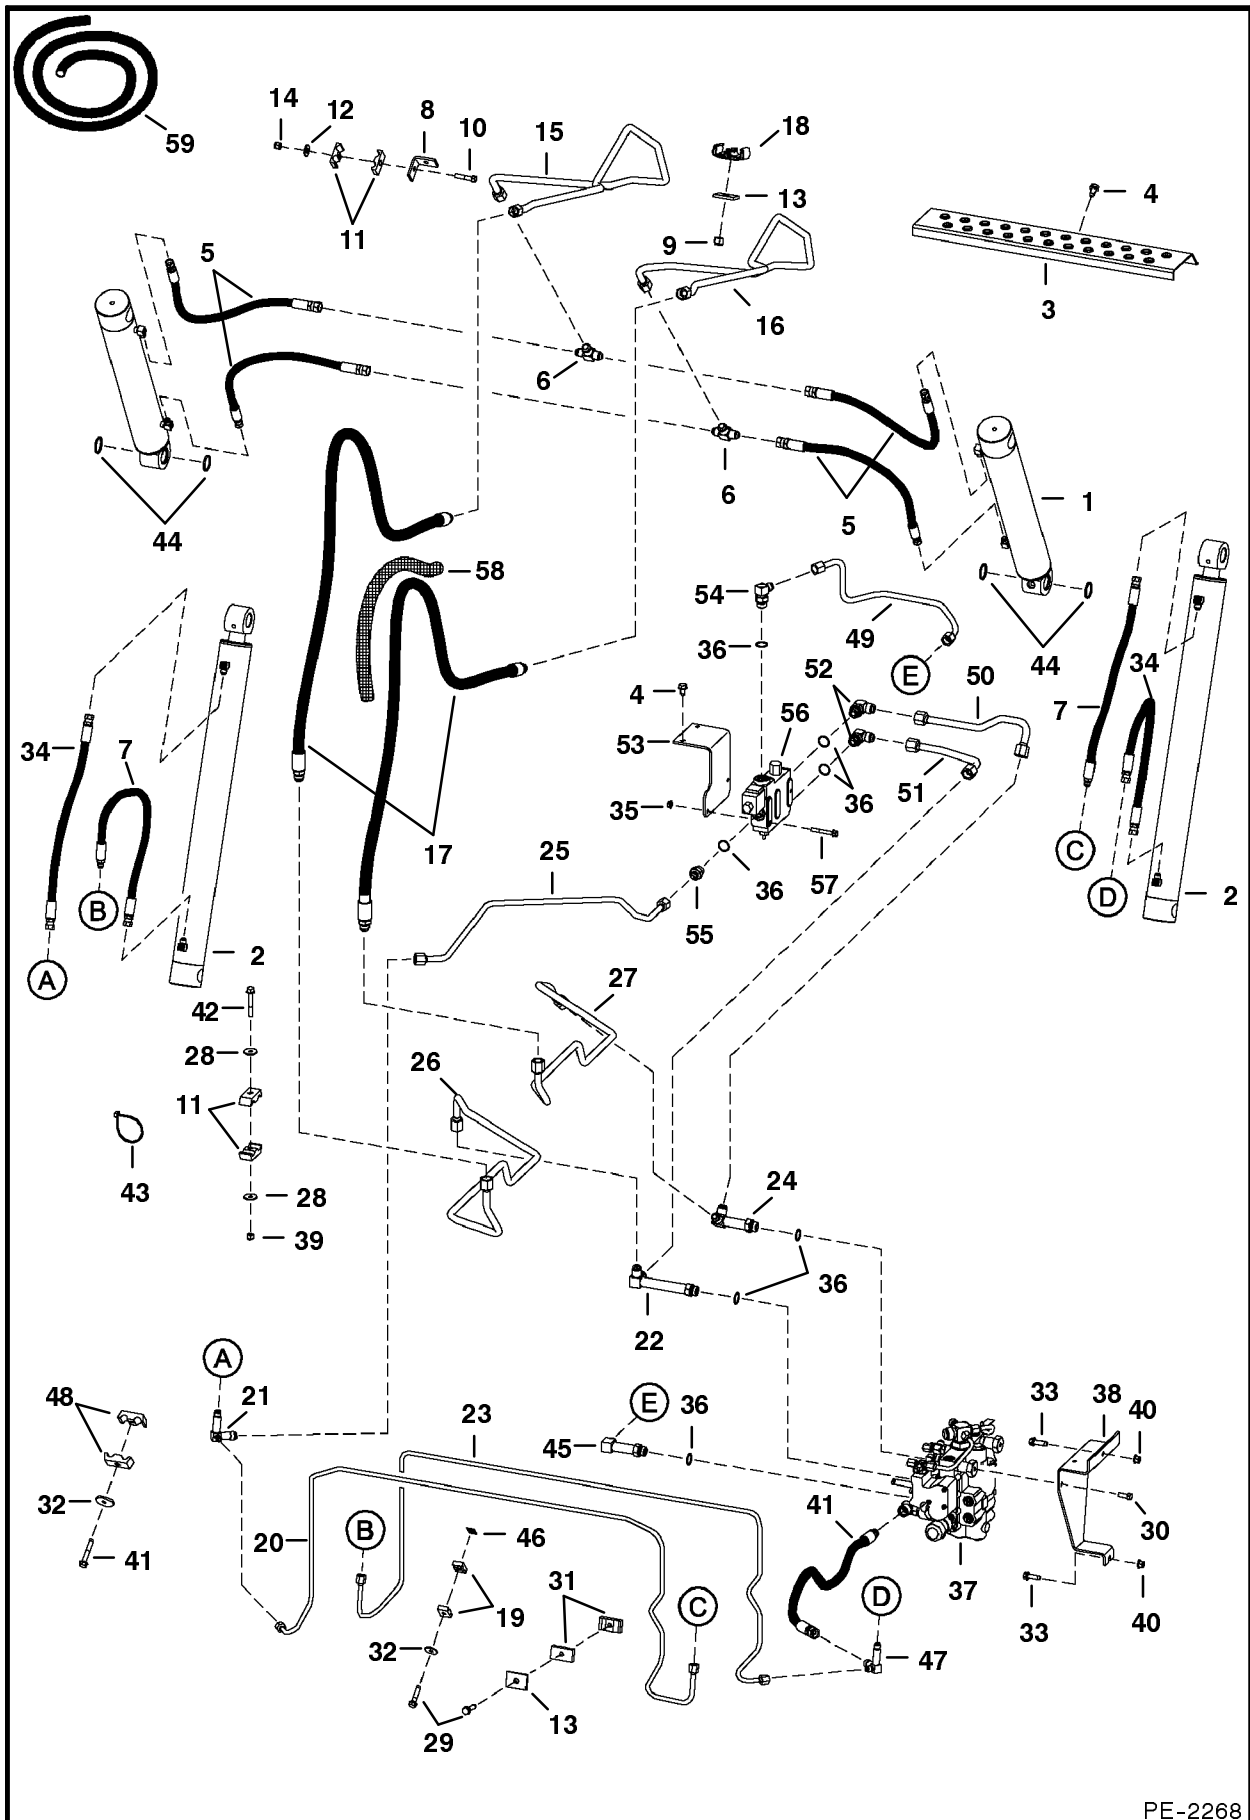


PE-2268

*** HYDRAULIC CIRCUITRY (Cont'd)**

(W/ BPV) (S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*		CYLINDER	tilt - See Page 73		2
2*		CYLINDER	lift - See Page 75		2
3*	6735669	SHIELD	boom stop		1
4*	84G-3712	BOLT			6
5*	6718066	HOSE			4
6*	6716061	TEE			2
7*	6718067	HOSE			2
8*	6718238	BRACKET			1
9*	59D-8	NUT			2
10*	17C-628	BOLT			1
11*	6701893	CLAMP			4
12*	27E-6	WASHER			1
13*	6553709	WASHER			2
14*	59D-6	NUT			1
15*	6734495	TUBE			1
16*	6734496	TUBE			1
17*	6539418	HOSE	W/Ref. 58		2
18*	6717933	CLAMP			2
19*	6726277	CLAMP			4
20*	7101645	TUBE			1
21*	7101648	TEE			1
22*	6733190	TEE			1
23*	7101649	TUBE			1
24*	6730142	TEE	W/Ref. 36		1
25*	7101647	TUBE			1
26*	6733188	TUBE			1
27*	6733187	TUBE			1
28*	872229	WASHER			4
29*	84G-3728	BOLT			1
30*	17C-620	BOLT			2
31*	6727708	CLAMP			2
32*	619021	WASHER			4
33*	84G-3720	BOLT			3
34*	7102135	HOSE			1
35*	57D-5	NUT			2
36*	79K-10	O-RING			x
37*		VALVE	See Page 83		1
38*	6733189	MOUNT			1
39*	59D-6	NUT			2
40*	83D-6	NUT			3
41*	6727705	HOSE			1
*	6809511	DECAL			2
42*	17C-632	BOLT			1
43*	6624289	TIE			2
44*	225855	SEAL			4
45*	6733191	ELBOW	W/Ref. 36		2
46*	6684033	NUT			2
47*	6727638	TEE			1
48*	6592506	CLAMP			2
49*	6734192	TUBE			1
50*	6733196	TUBE			1

* HYDRAULIC CIRCUITRY (Cont'd)
(W/ Bucket Positioning Valve)

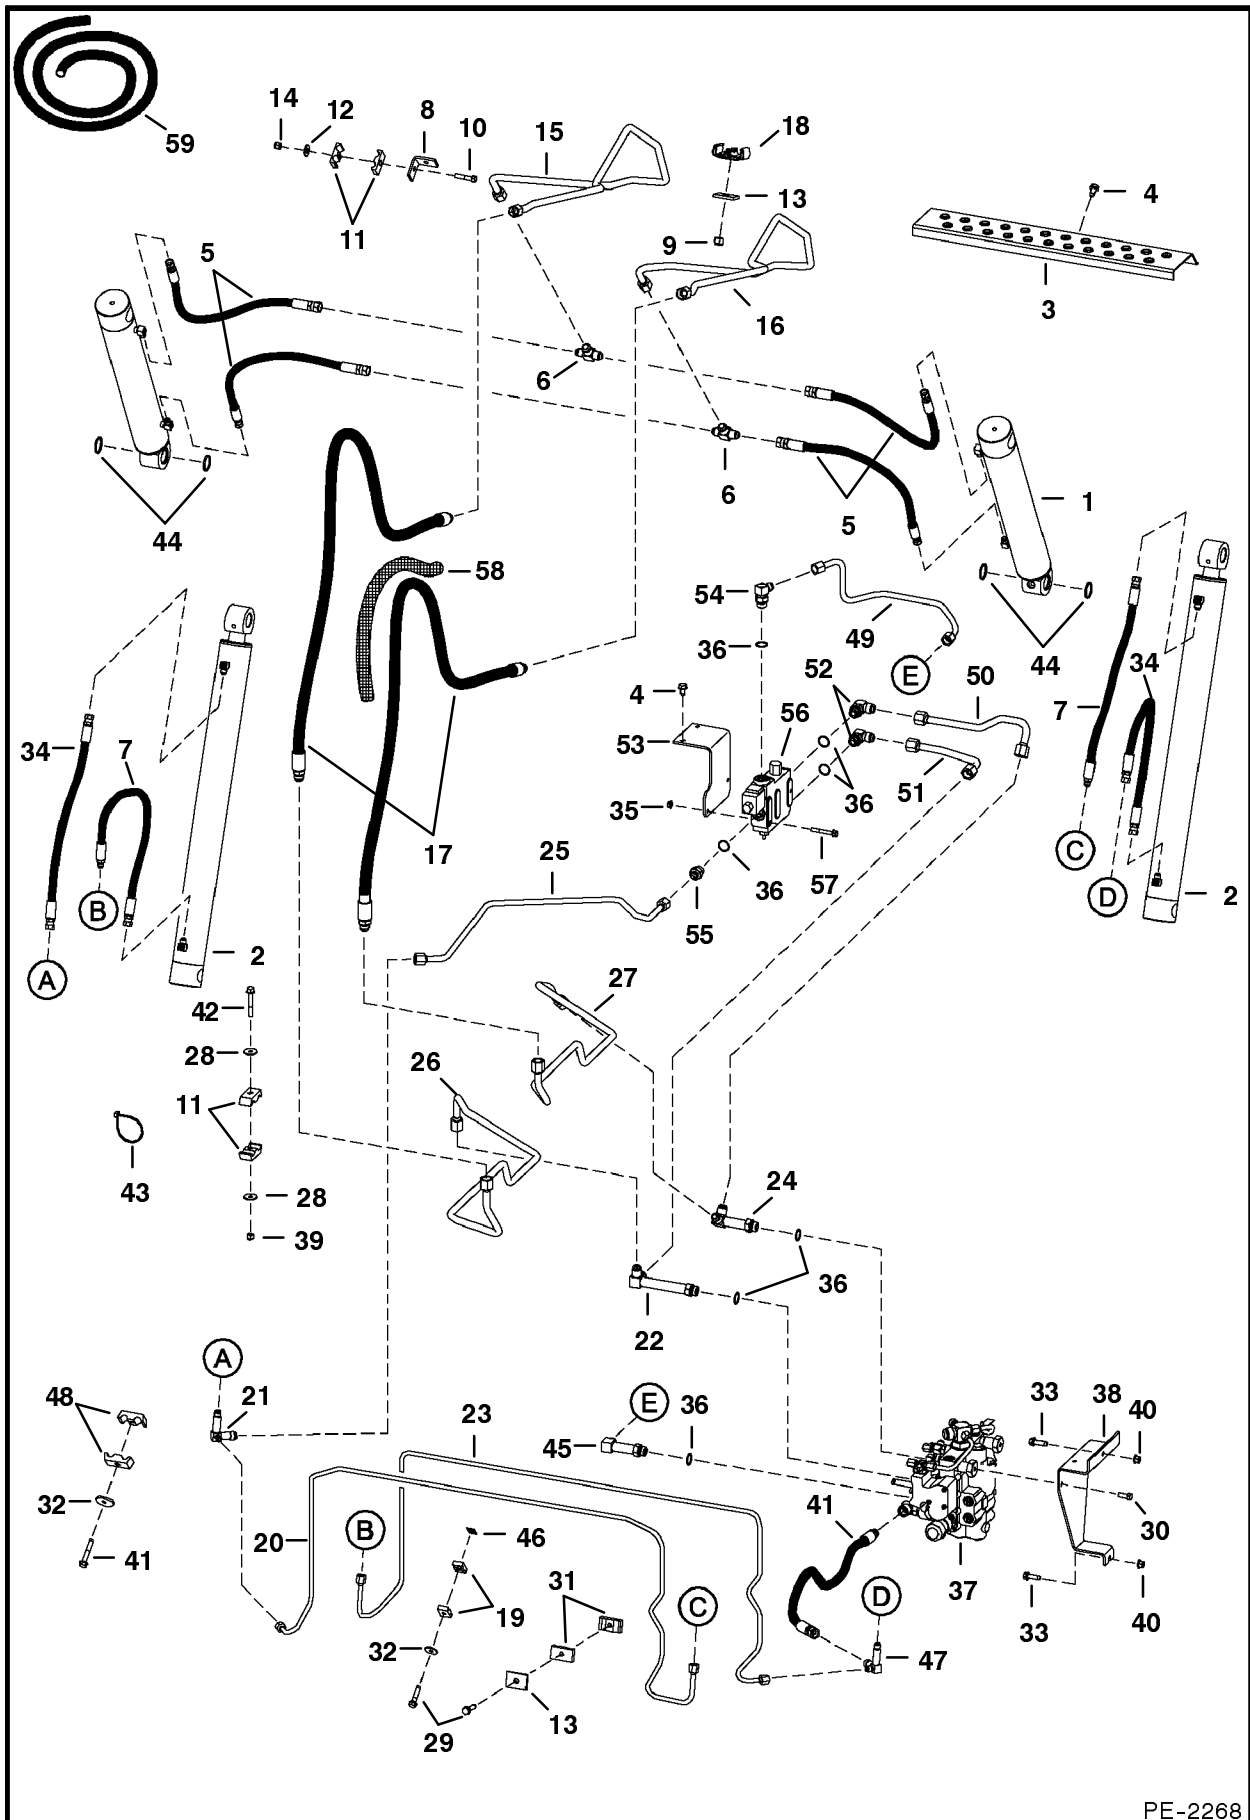


PE-2268

(W/ BPV) (S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

[illegible]

MANUAL LIFT RELEASE SYSTEM

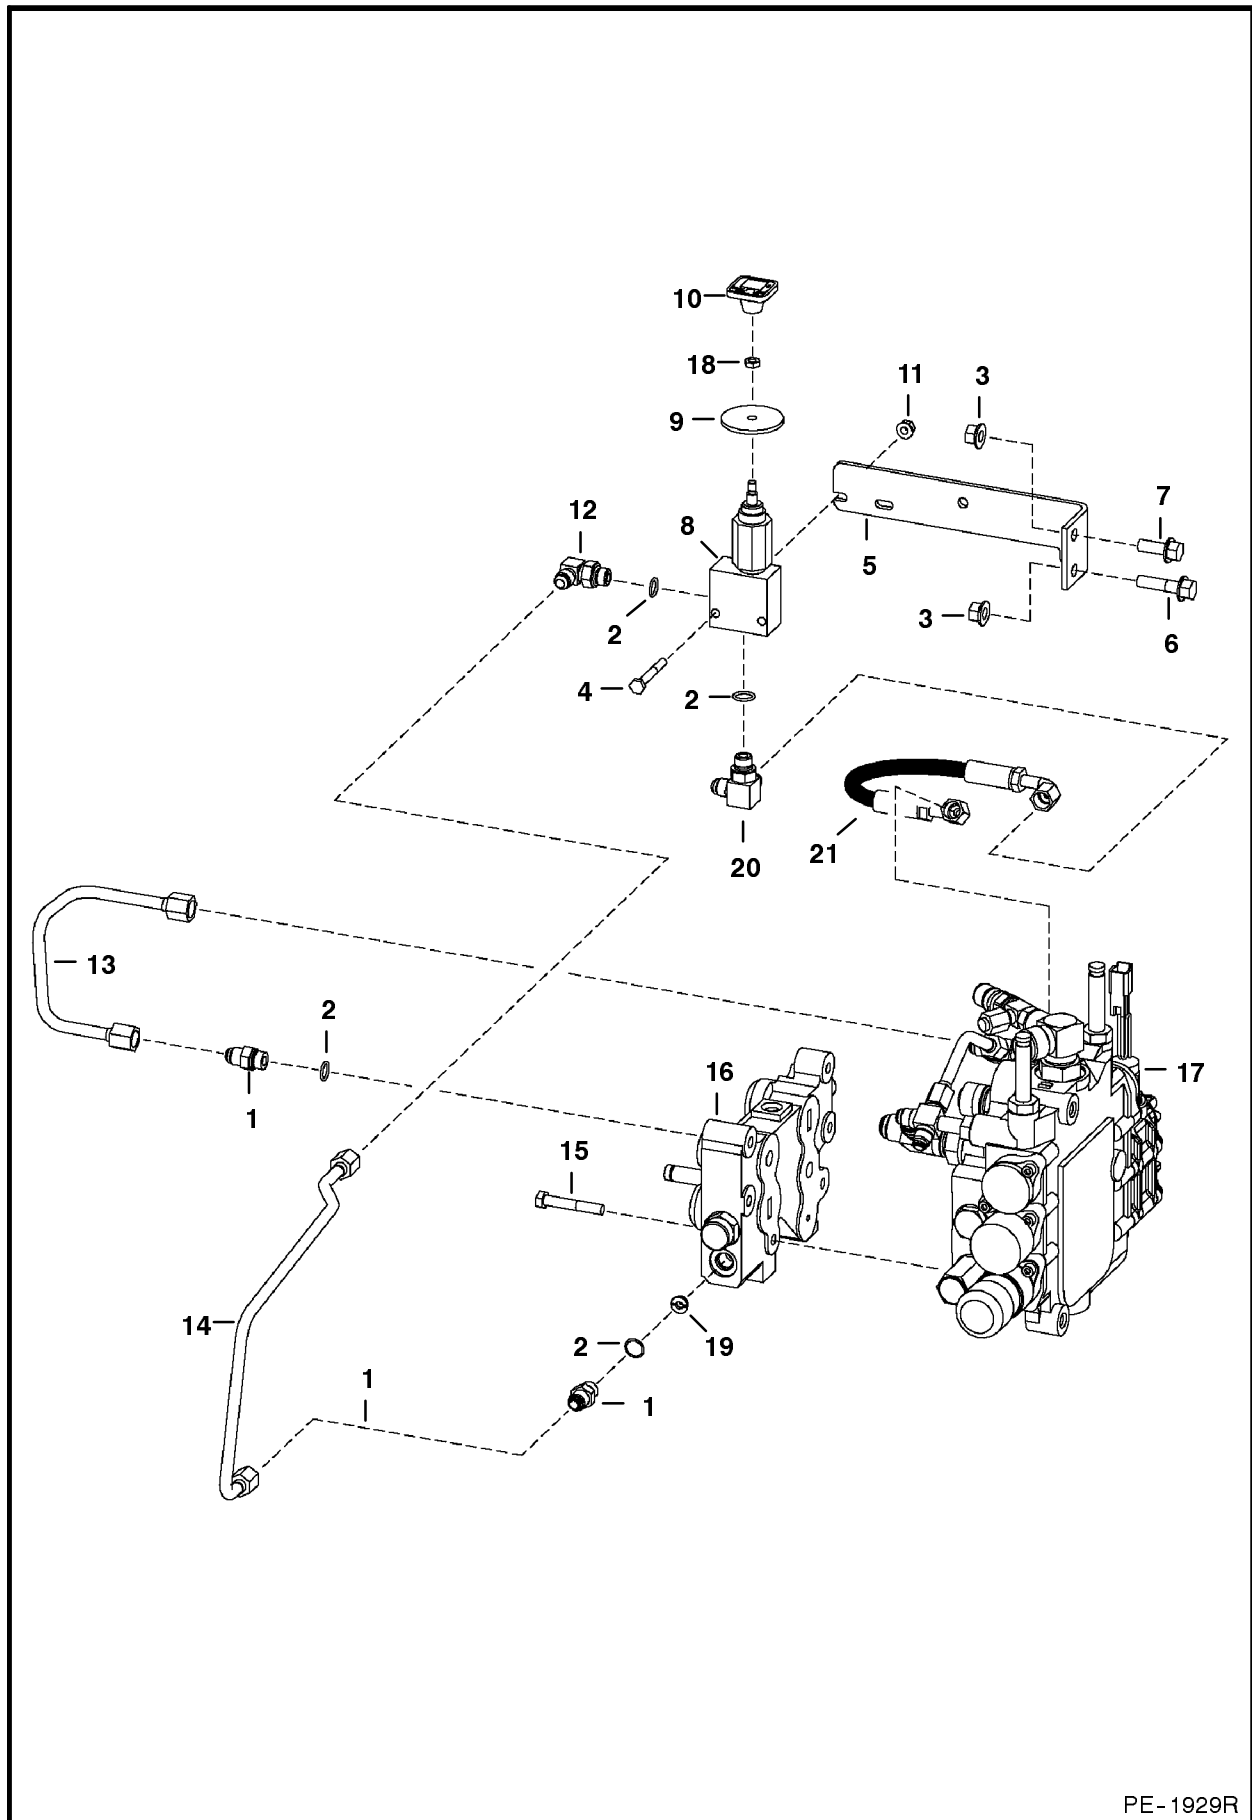


PE-1929R

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

*** MANUAL LIFT RELEASE SYSTEM**

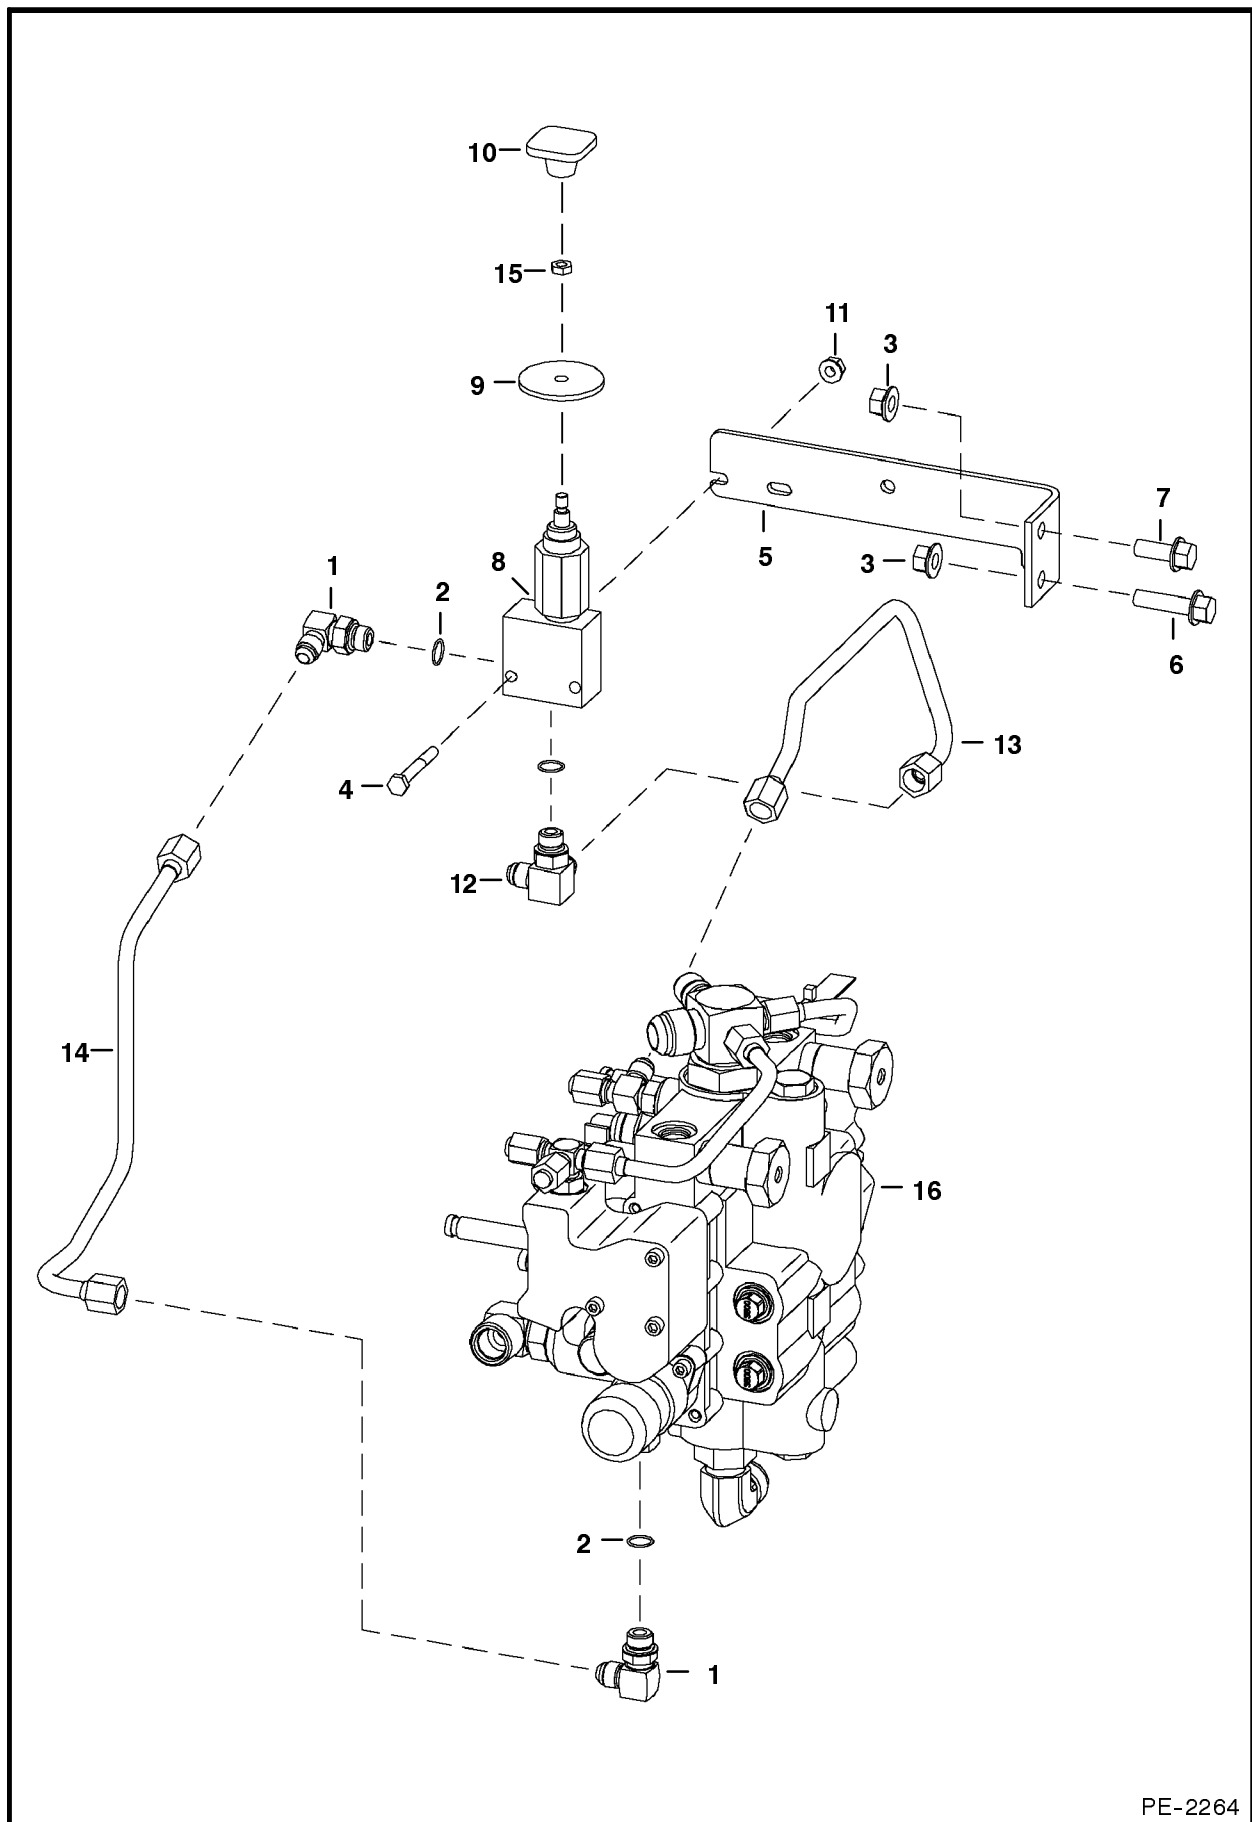


PE-2264

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

[illegible]

AUXILIARY HYDRAULICS (W/Pressure Relief Coupler Block)

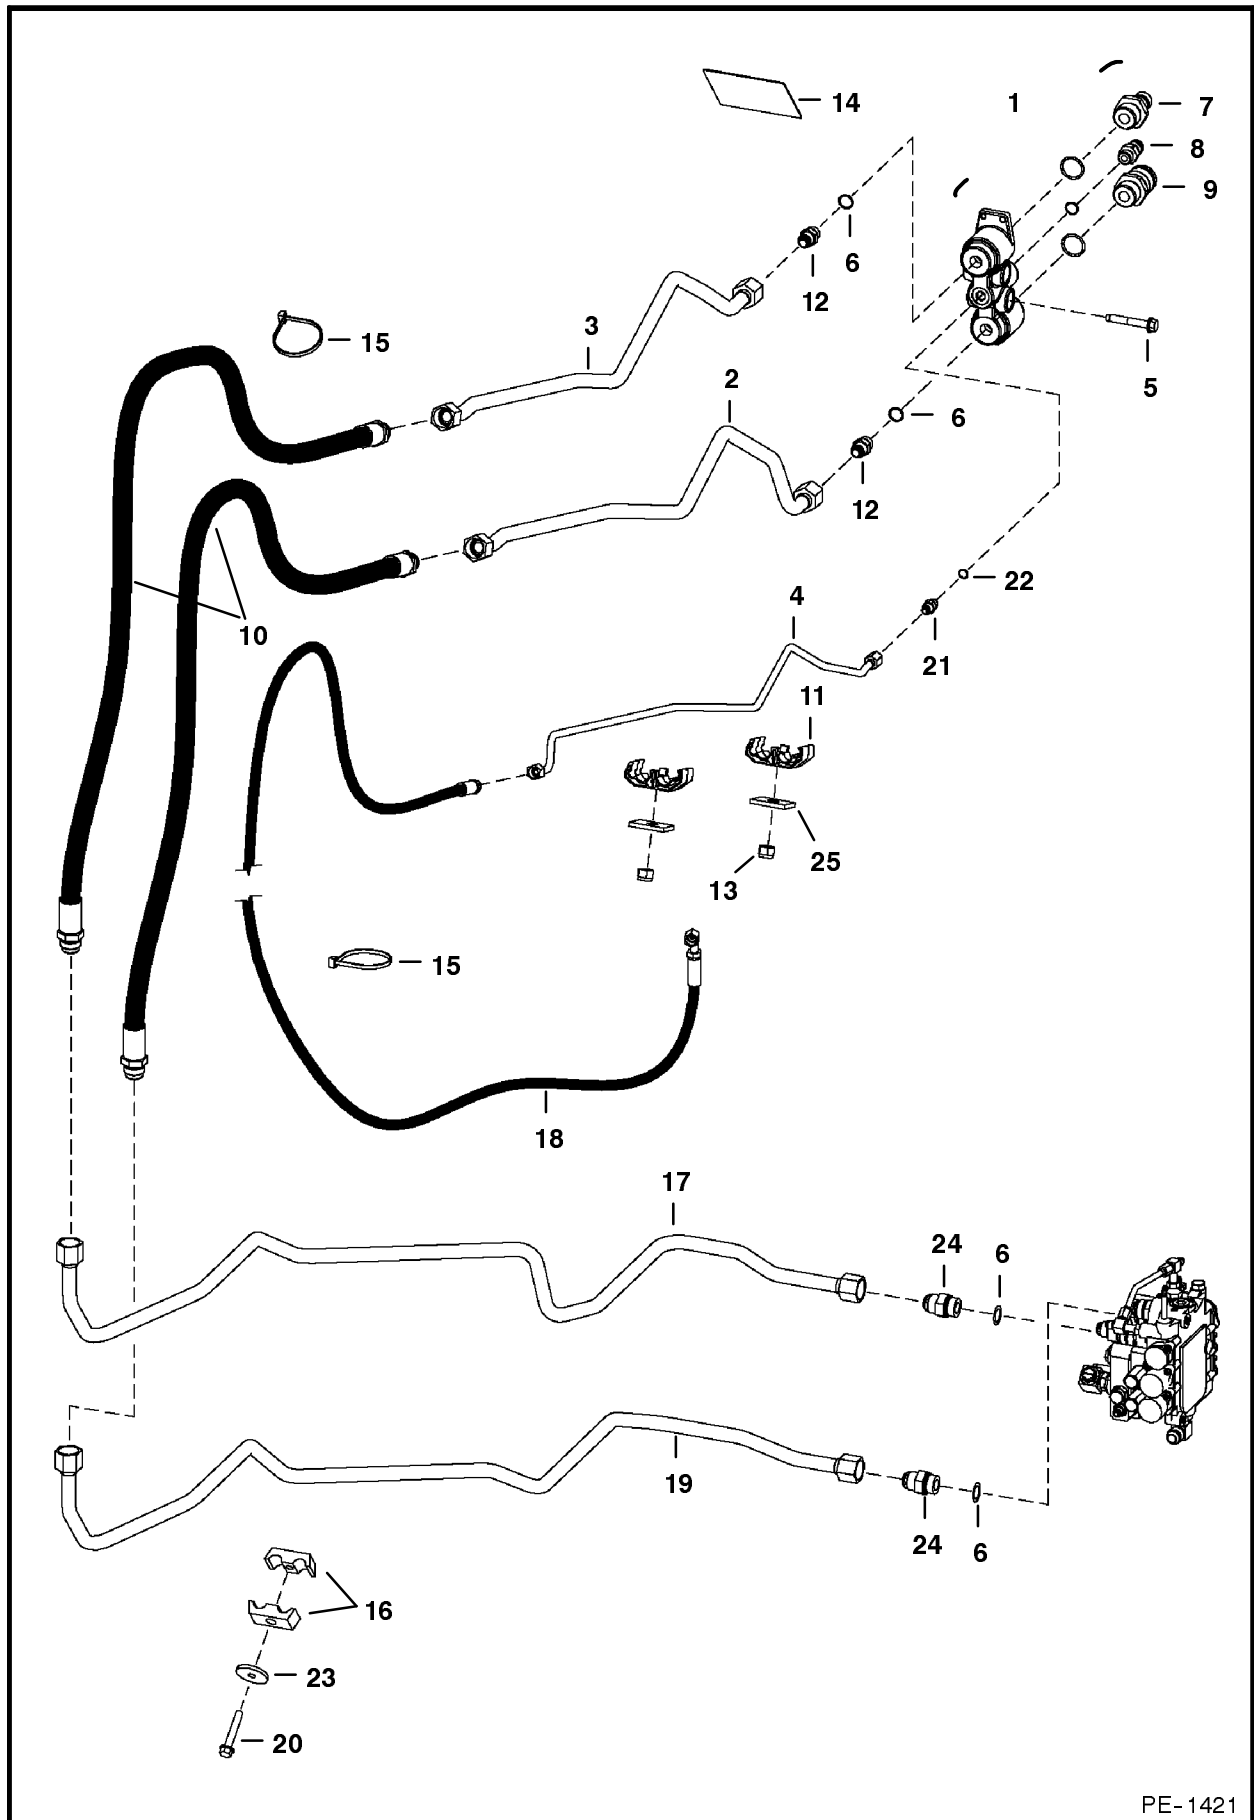


PE-1421

AUXILIARY HYDRAULICS (Cont'd)
(W/Pressure Relief Coupler Block)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6678076	BLOCK ASSY.	coupler - Ref. 6 - 9 & (2) of Ref. 12		1
2	6731230	TUBE			1
3	6731229	TUBE			1
4	6731231	TUBE			1
5	84G-3740	BOLT			2
6	79K-12	O-RING			x
7	6679837	KIT	coupler - male - FF		1
	6679841	SEAL	blue		1
8	6680020	SEAL KIT	O-rings & back-up rings		1
	6679838	KIT	coupler - male		1
	6679840	SEAL	blue		1
9	6679839	KIT	coupler - female - FF		1
	6680018	KIT	coupler - female - Use W/hydraulic breaker		1
10	6680020	SEAL KIT	O-rings & back-up rings		1
11	6727657	HOSE	W/cover		2
12	6717951	CLAMP			2
13	6679836	KIT	adapter - W/spring & Ref. 6		2
14	59D-8	NUT			2
15	6731757	DECAL			1
16	6624289	TIE			2
17	6592506	CLAMP			2
17	6733683	TUBE		5252 & Bel	1
				5253 & Bel	1
				5250 & Bel	1
*	6735854	TUBE		5251 & Bel	1
				5252 & Abv	1
				5253 & Abv	1
				5250 & Abv	1
				5251 & Abv	1
18	6734664	HOSE			1
19	6731228	TUBE		5252 & Bel	1
				5253 & Bel	1
				5250 & Bel	1
*	6735855	TUBE		5251 & Bel	1
				5252 & Abv	1
				5253 & Abv	1
				5250 & Abv	1
				5251 & Abv	1
20	84G-3736	BOLT			1
21	15KB-606	ADAPTER	W/Ref. 22		1
22	79K-6	O-RING			x
23	872229	WASHER			1
24	15KB-1212	ADAPTER	W/Ref. 6		2
25	6553709	WASHER			2

TILT CYLINDER

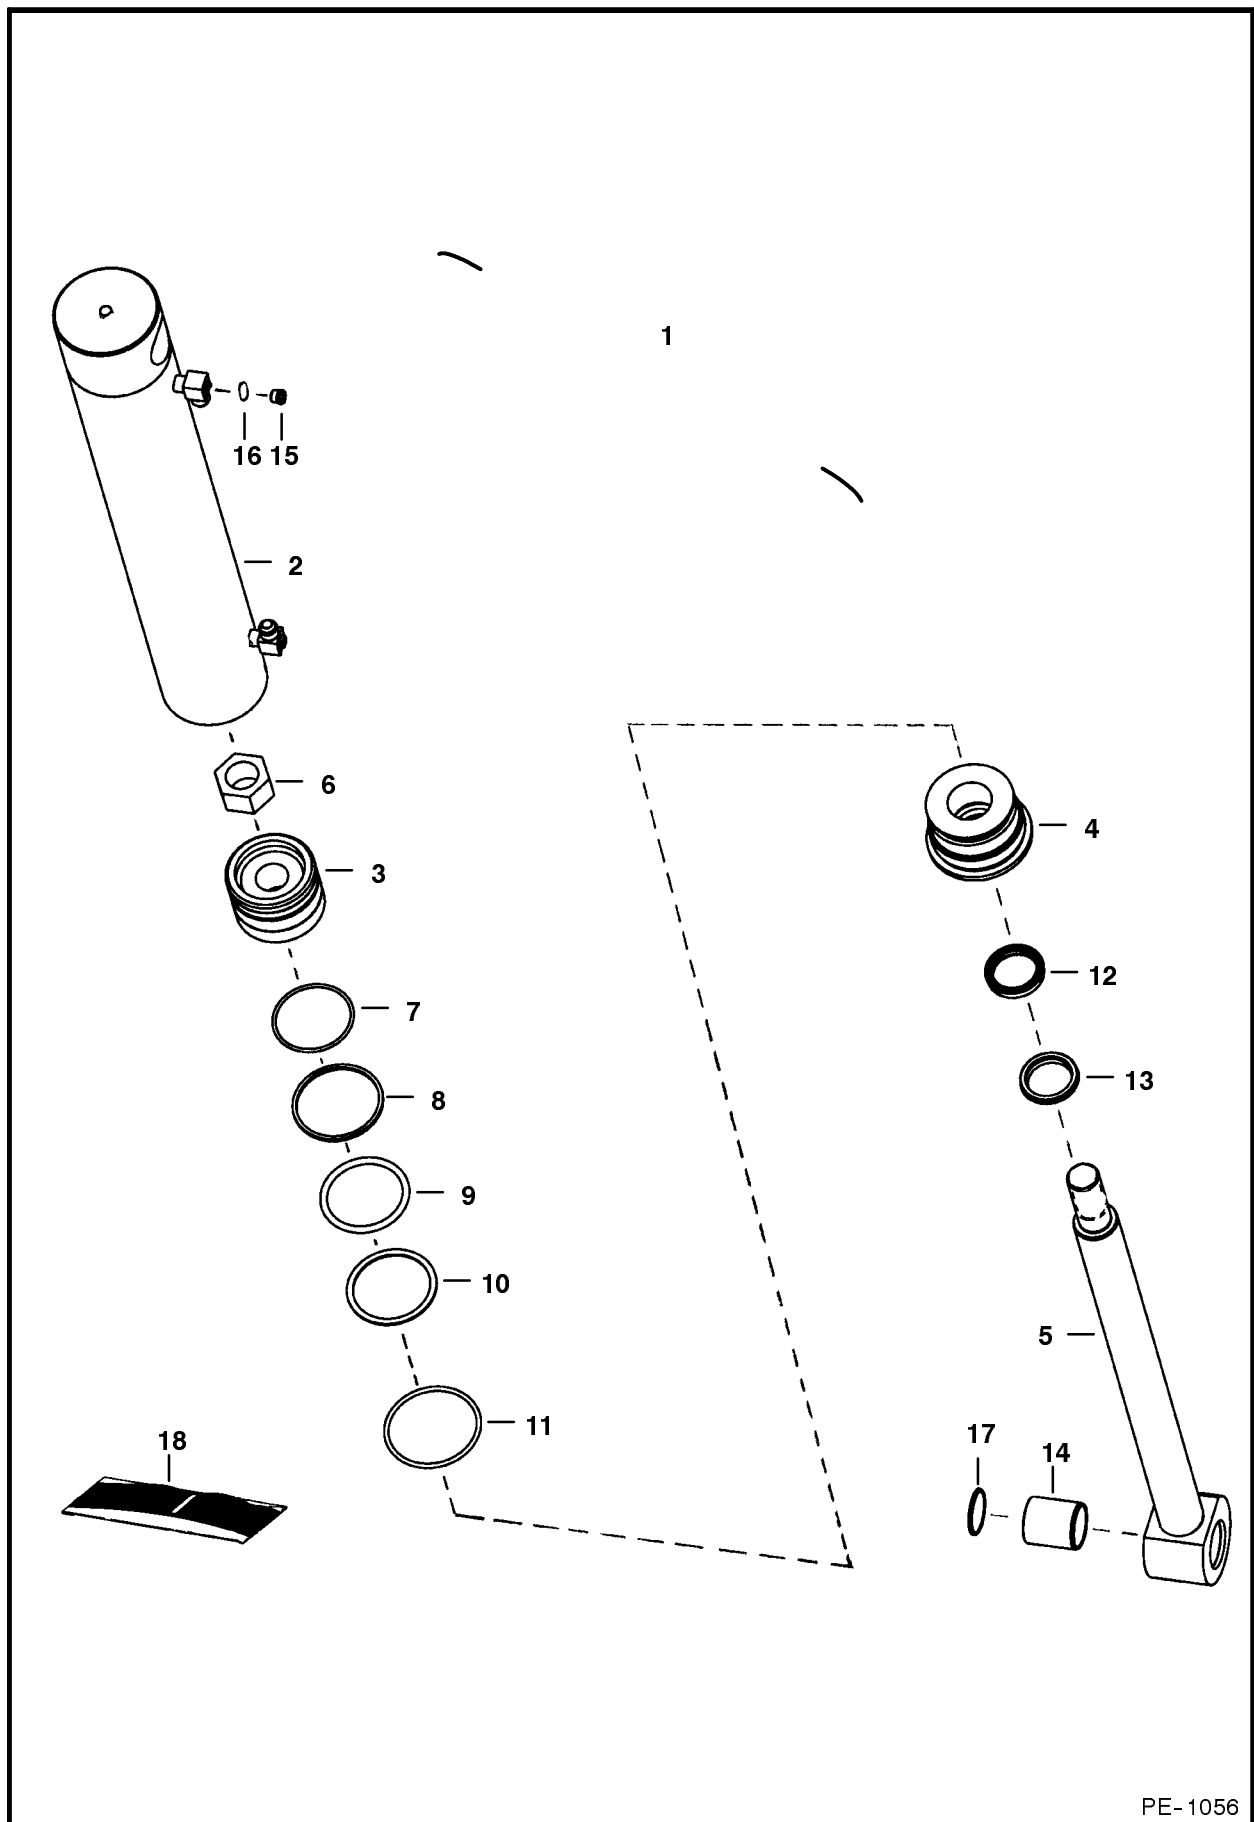


PE-1056

TILT CYLINDER (Cont'd)

[illegible]

LIFT CYLINDER

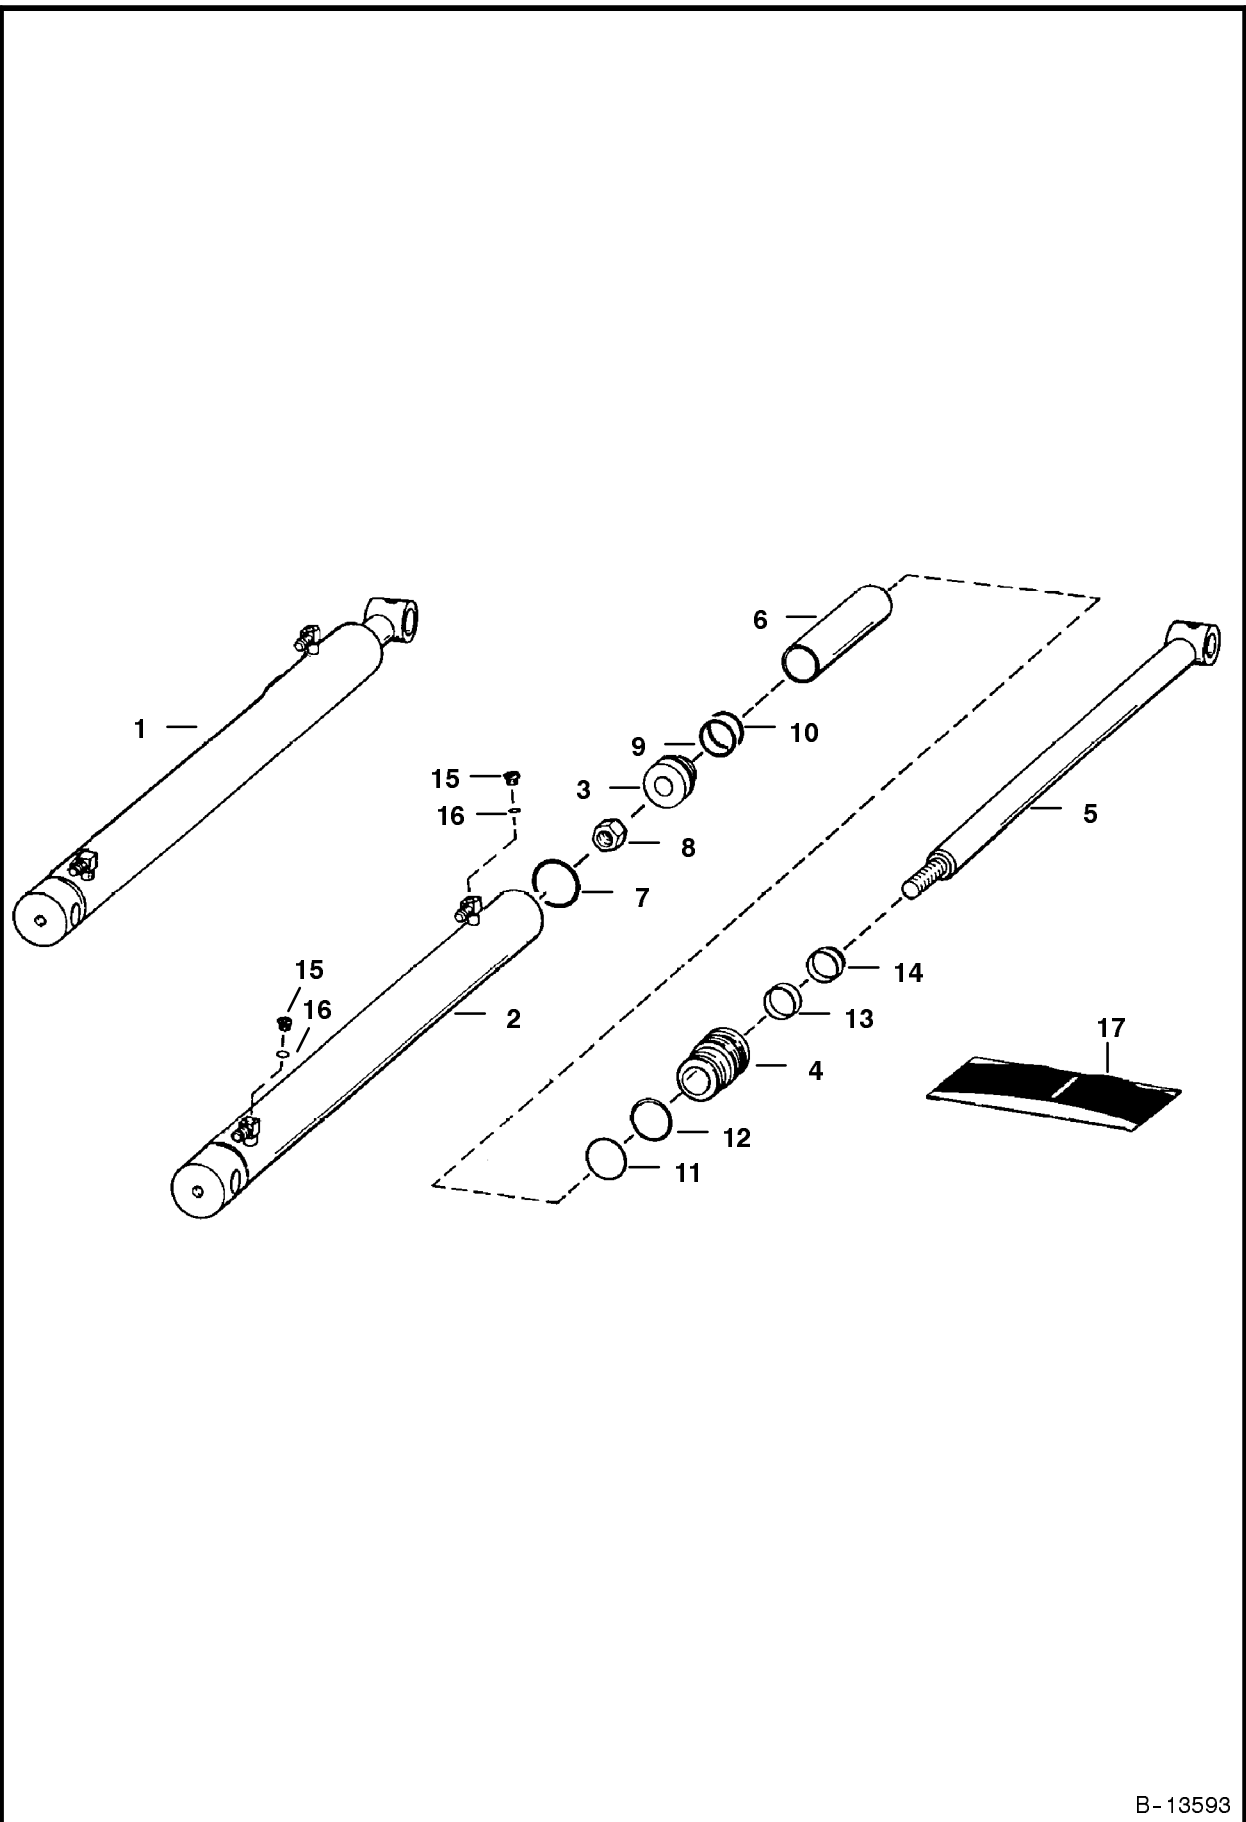


B-13593

LIFT CYLINDER (Cont'd)

[illegible]

CONTROL PEDALS

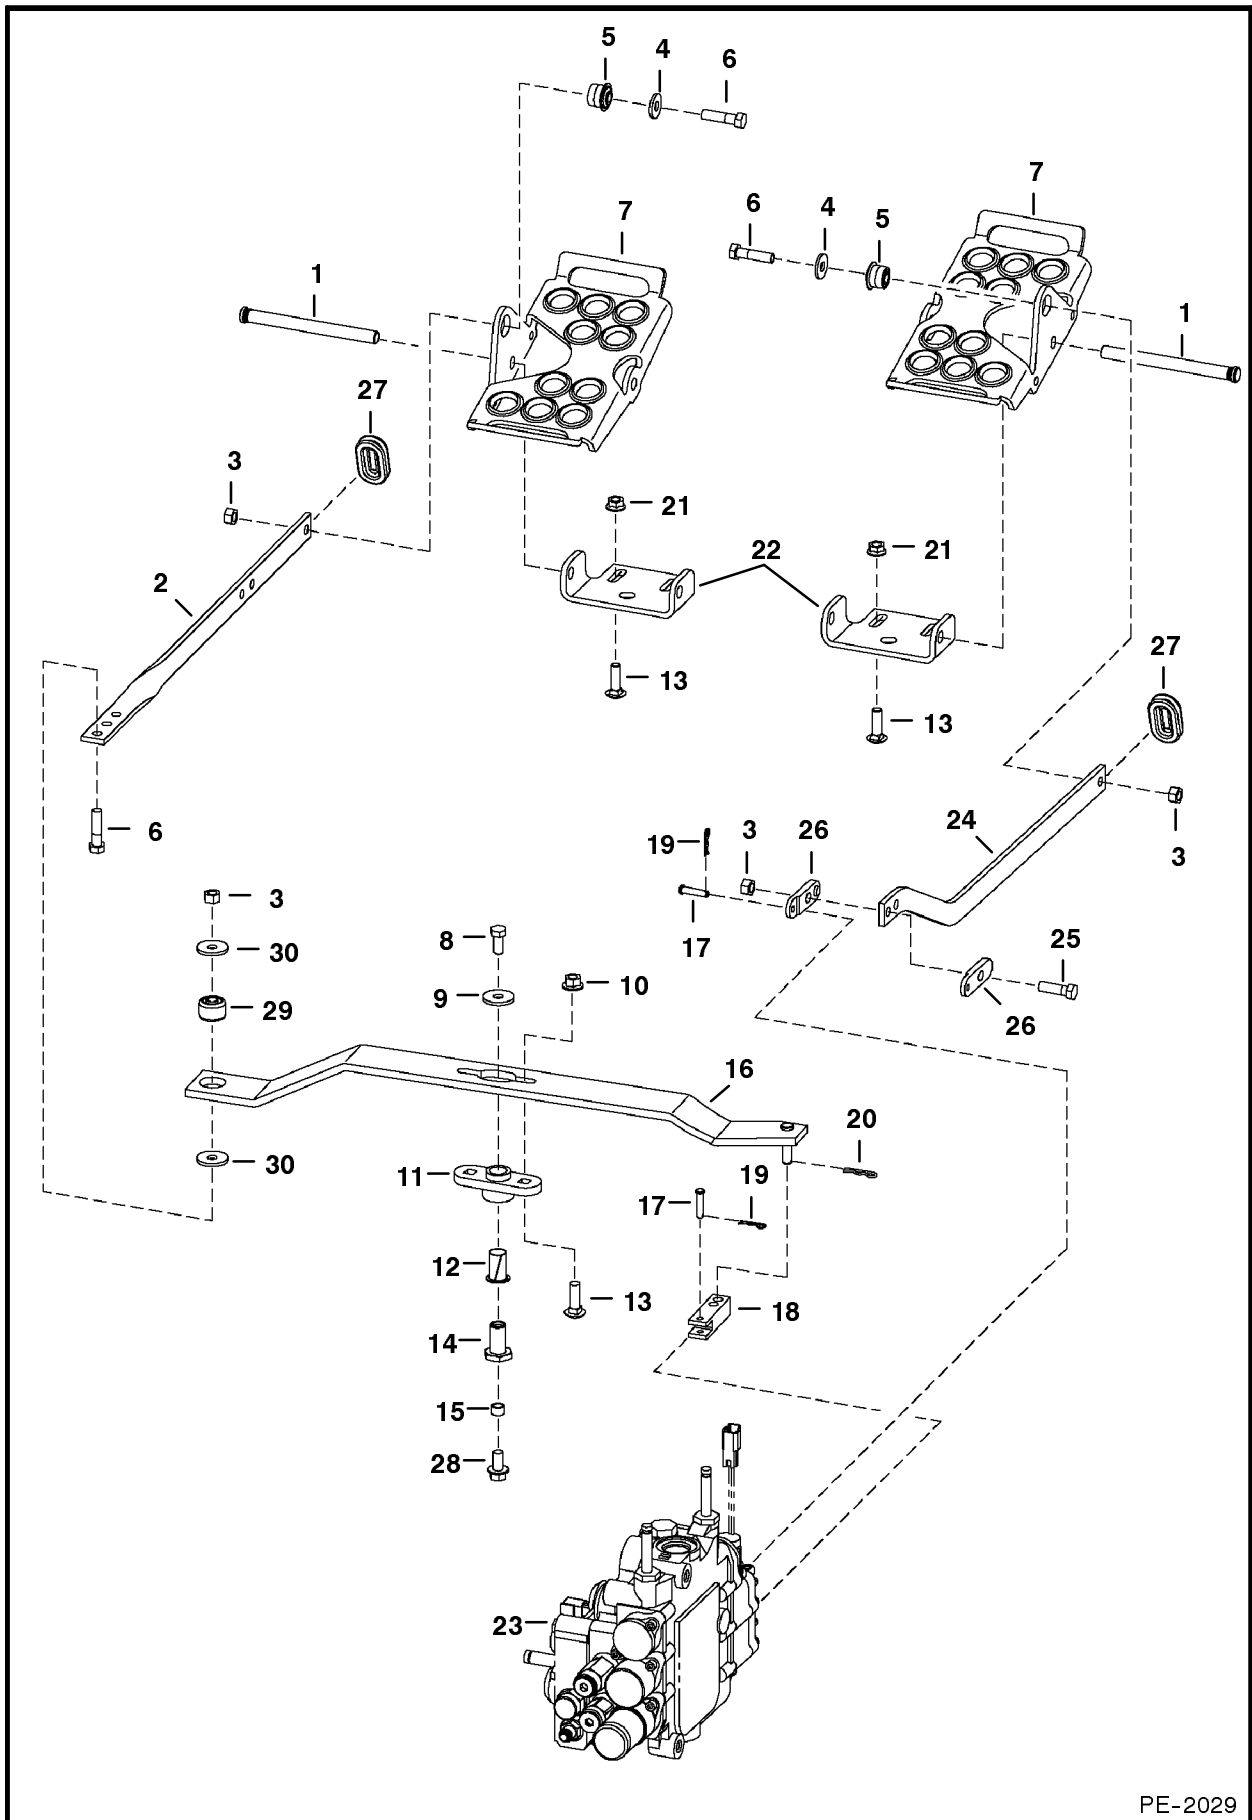


PE-2029

CONTROL PEDALS (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6564657	PIN			2
2	6576302	BAR			1
3	95D-6	NUT			5
4	6563914	WASHER			2
5	6665701	BUSHING			2
6	17C-624	BOLT			3
7	6726680	PEDAL			2
8	6665839	BOLT			1
9	619021	WASHER			1
10	83D-6	NUT			2
11	6708043	BUSHING	flange		1
12	6512026	BUSHING			1
13	37C-620	BOLT			6
14	6706104	RETAINING NUT			1
15	6544654	BUSHING	spacer		1
16	6733940	LEVER			1
17	6564654	PIN			2
18	6706105	YOKE			1
19	6513495	COTTER PIN			2
20	1306637	PIN			1
21	57D-6	NUT			4
22	6726679	MOUNT			2
23		VALVE	See Page 79		1
24	6717820	BAR			1
25	17C-620	BOLT			1
26	6708009	LINK	2.69" (68,3 mm) long		2
27	6577961	GROMMET			2
28	35C-612	BOLT			1
29	6685060	BUSHING	torsion		1
30	6737388	WASHER			1

HYDRAULIC CONTROL VALVE (BICS Combo Valve)

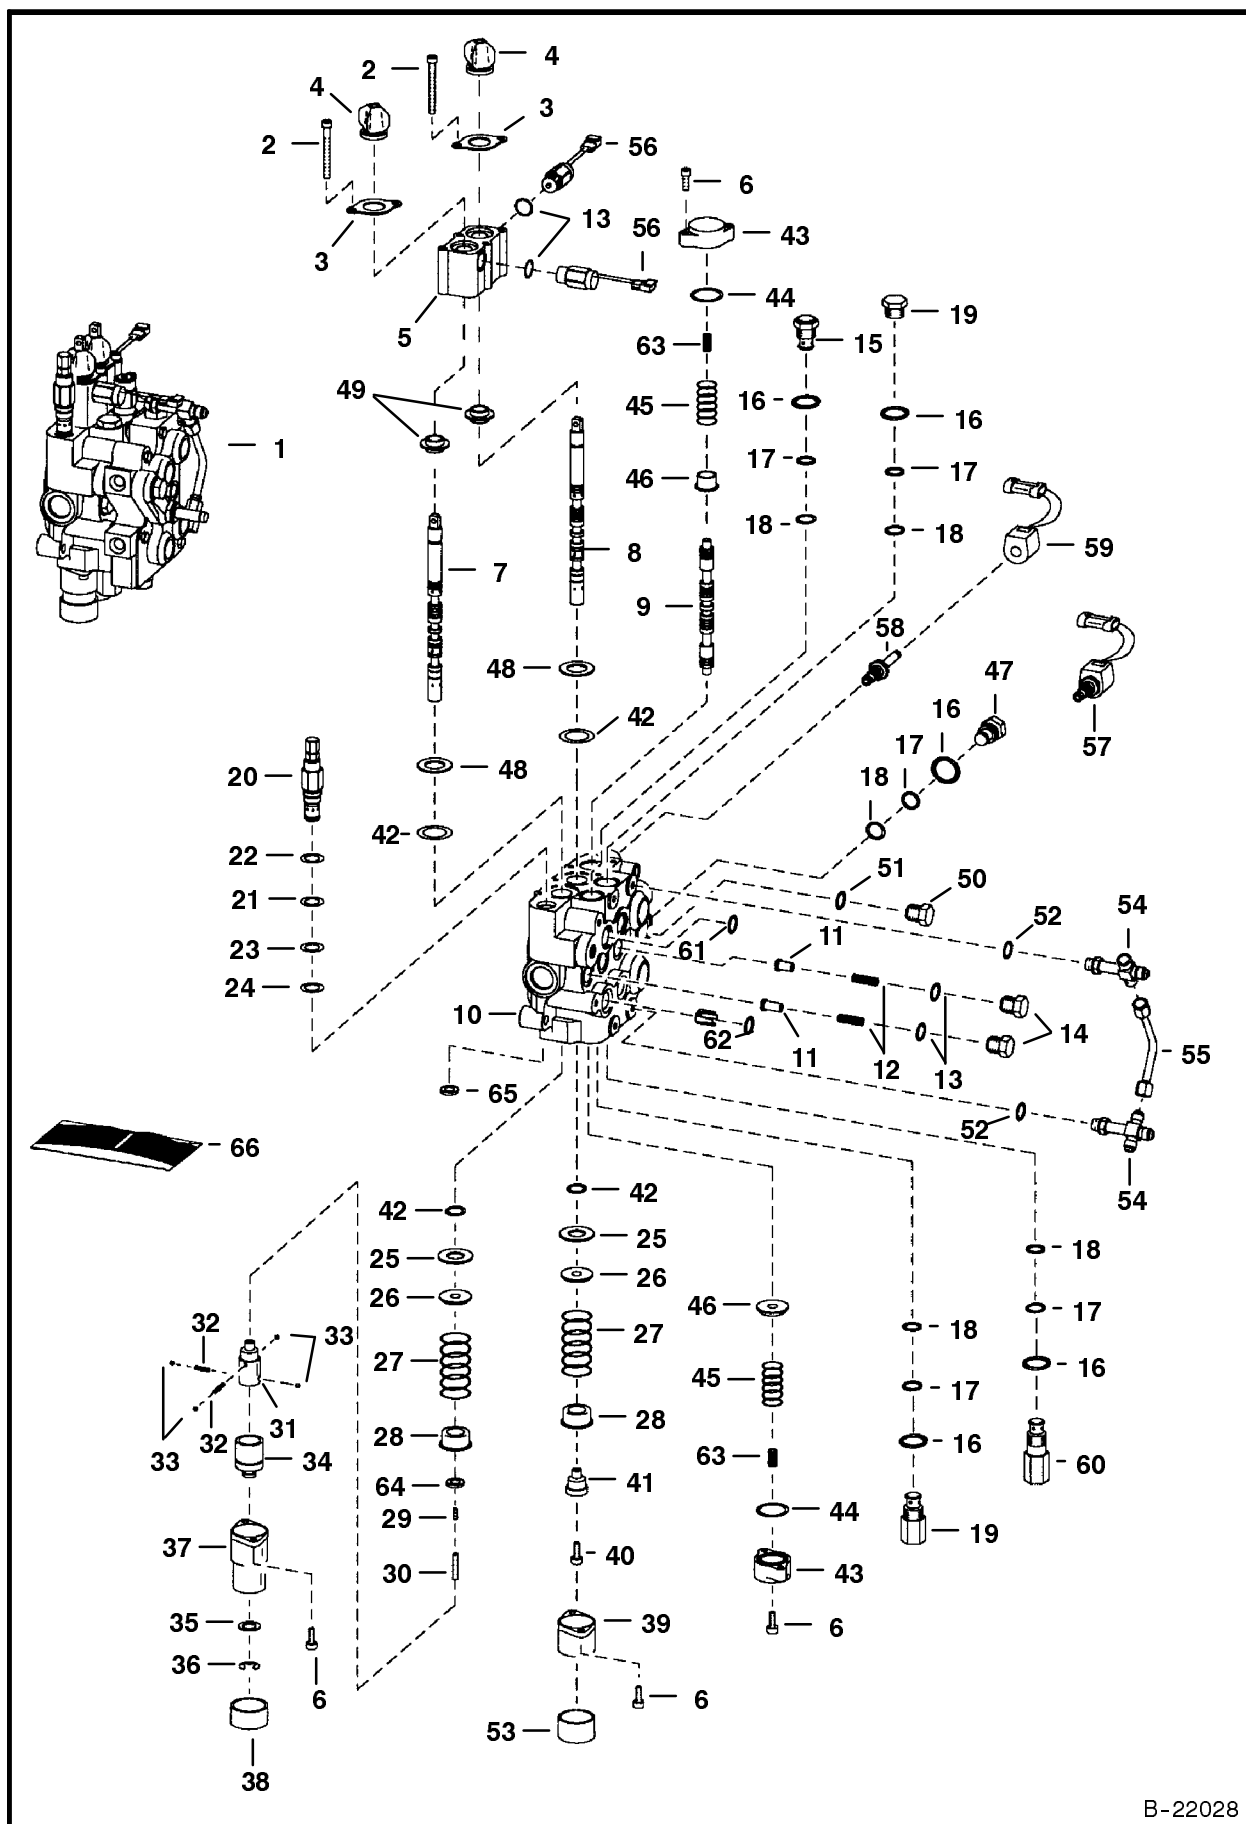


B-22028

HYDRAULIC CONTROL VALVE (Cont'd)

(BICS Valve) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1	6814925	VALVE	W/Fittings minus 6730142 Tee & 15KB-1212 Adapter		1
	6628571	VALVE	BICS control - See Page 95		1
2	29G-444	BOLT			4
3	6589564	RETAINER			2
4	6587763	BOOT			2
5	6812031	BLOCK			1
6	29G-416	BOLT			8
7	6674808	SPOOL	lift - # 1 or Red		1
	6674809	SPOOL	lift - # 2 or Green		1
	6674810	SPOOL	lift - # 3 or Black		1
8	6674814	SPOOL	tilt - # 1 or Red		1
	6674815	SPOOL	tilt - # 2 or Green		1
	6674816	SPOOL	tilt - # 3 or Black		1
9	6588074	SPOOL	auxiliary		3
10	NSS	BODY			1
11	6592115	SEAT	load check		3
12	6592117	SPRING			3
13	79K-8	O-RING			3
14	6592116	NUT	load check		3
15	6667549	VALVE	anti-cavity check -W/Ref. 16-18		1
16	79K-10	O-RING			5
17	80K-14	WASHER	back-up		5
18	58K-14	O-RING			5
19	6678574	VALVE	port relief - W/Ref. 16-18		2
20	6685017	VALVE	main relief - W/Ref. 21-24 - pressure to be set in field		1
21	58K-17	O-RING			1
22	6665569	WASHER	back-up		1
23	25K-20016	O-RING			1
24	6665570	RING	glide		1
25	6595663	BUSHING			2
26	6587523	WASHER			2
27	6587580	SPRING			2
28	6592100	COLLAR			2
29	6596807	PLUG			1
30	6586918	SCREW			1
31	6587575	ADAPTER			1
32	6592107	SPRING			2
33	6592105	BALL			4
34	6531270	SLEEVE			1
35	6592098	WASHER			1
36	799119	SNAP RING			1
37	6589226	BONNET	.625" flange		1
38	6660644	CAP			1
39	6587633	BONNET			1
40	30G-416	BOLT			1
41	6592109	ADAPTER			1
42	6683274	SEAL			4
43	6588781	END CAP			2
44	58K-124	O-RING			2

HYDRAULIC CONTROL VALVE (Cont'd) (BICS Combo Valve)

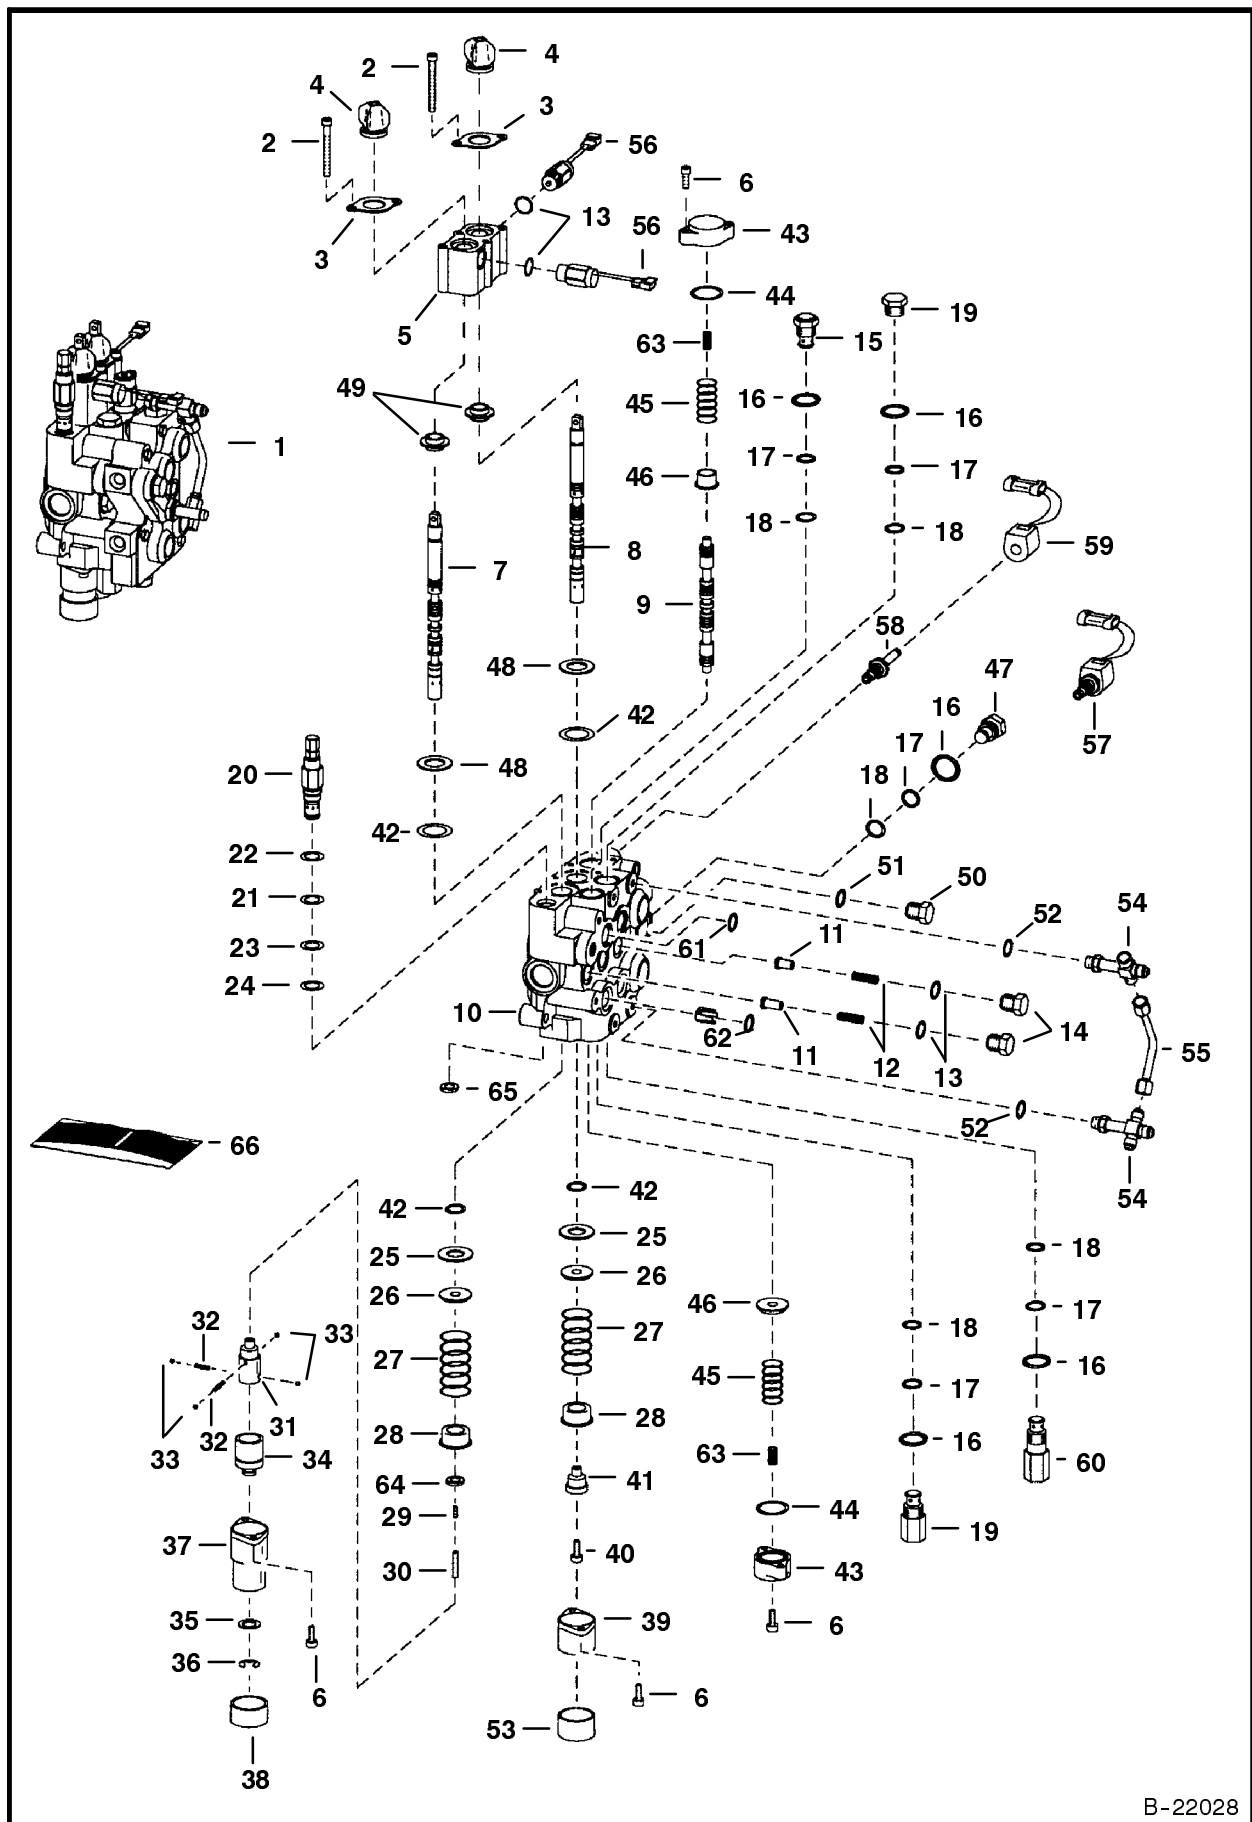


B-22028

(BICS Valve) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

* HYDRAULIC CONTROL VALVE

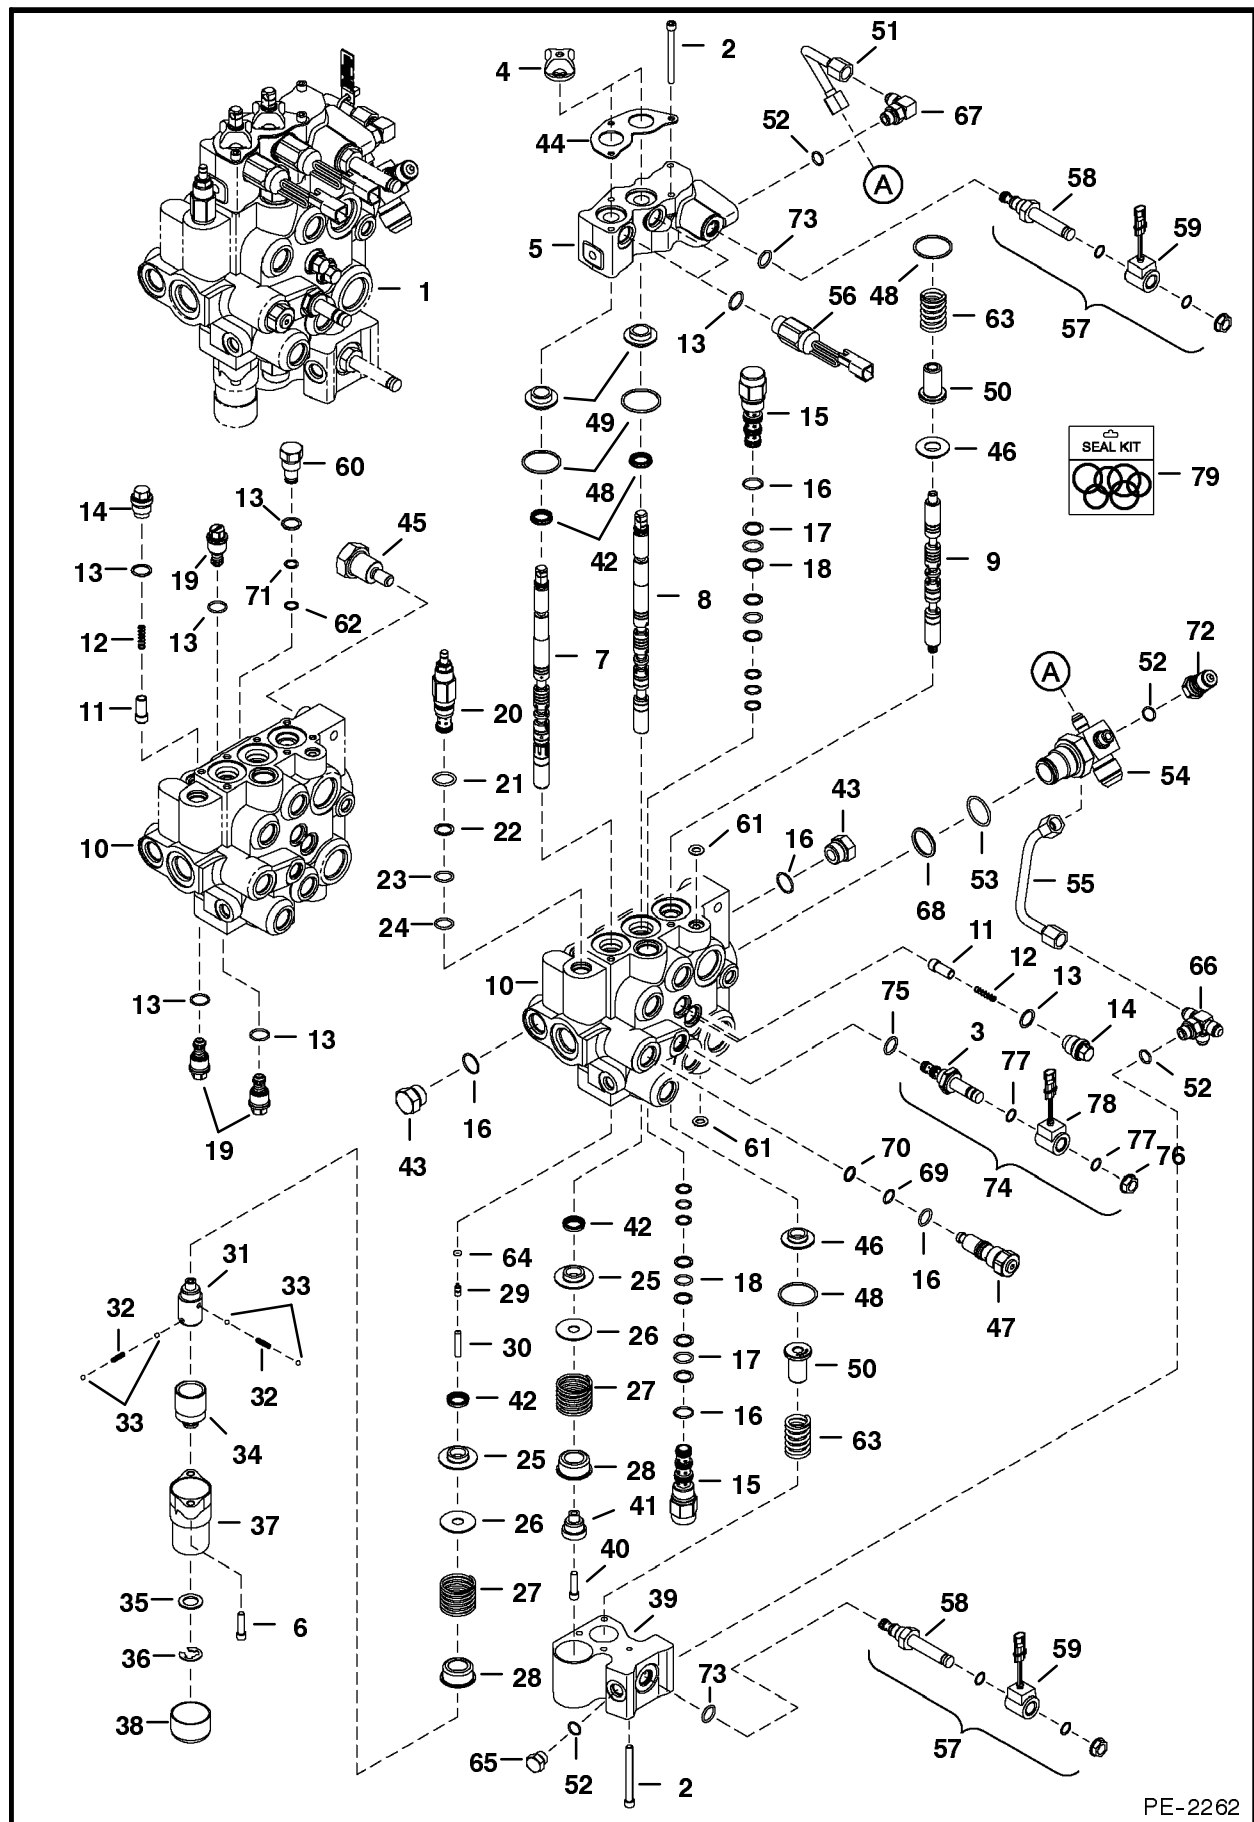


PE-2262

*** HYDRAULIC CONTROL VALVE (Cont'd)**

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Part Number	Description	Remarks	Serial Number	Qty.
1*	6815060	VALVE	W/Fittings		1
2*	29G-444	BOLT			7
3*	6667687	STEM			1
4*	6587763	BOOT			2
5*	NSS	BODY			1
6*	29G-416	BOLT			2
7*	6815151	SPOOL	lift - # 1 or Red		1
8*	6815152	SPOOL	tilt - # 1 or Red		1
9*	6814323	SPOOL	auxiliary		3
10*	NSS	BODY			1
11*	6815016	SEAT	load check		3
12*	6592117	SPRING			3
13*	79K-8	O-RING			3
14*	6817707	NUT	load check - W/Ref. 13		3
15*	6668765	VALVE	anti-cavity check -W/Ref. 16-18		2
16*	79K-10	O-RING			5
17*	80K-14	WASHER	back-up		5
18*	58K-14	O-RING			5
19*	6684645	VALVE	port relief - W/Ref. 13		3
20*	6685017	VALVE	main relief - W/Ref. 21-24 - pressure to be set in field		1
21*	58K-17	O-RING			1
22*	6665569	WASHER	back-up		1
23*	25K-20016	O-RING			1
24*	6665570	RING	glide		1
25*	6595663	BUSHING			2
26*	6587523	WASHER			2
27*	6587580	SPRING			2
28*	6592100	COLLAR			2
29*	6596807	PLUG			1
30*	6586918	SCREW			1
31*	6587575	ADAPTER			1
32*	6592107	SPRING			2
33*	6592105	BALL			4
34*	6531270	SLEEVE			1
35*	6592098	WASHER			1
36*	799119	SNAP RING			1
37*	6589226	BONNET	.625" flange		1
38*	6660644	CAP			1
39*	6814279	BLOCK			1
40*	30G-416	BOLT			1
41*	6592109	ADAPTER			1
42*	6683274	SEAL			4
43*	24K-7	PLUG	W/Ref. 16		2
44*	6813153	PLATE			2
45*	6813778	PAD			2
46*	6804920	BUSHING			2
47*	6685157	VALVE	W/Ref. 16, 69 & 70		1
48*	58K-127	O-RING			2
49*	6805102	BUSHING			2
50*	6814694	RETAINER	spring		2

* HYDRAULIC CONTROL VALVE (Cont'd)

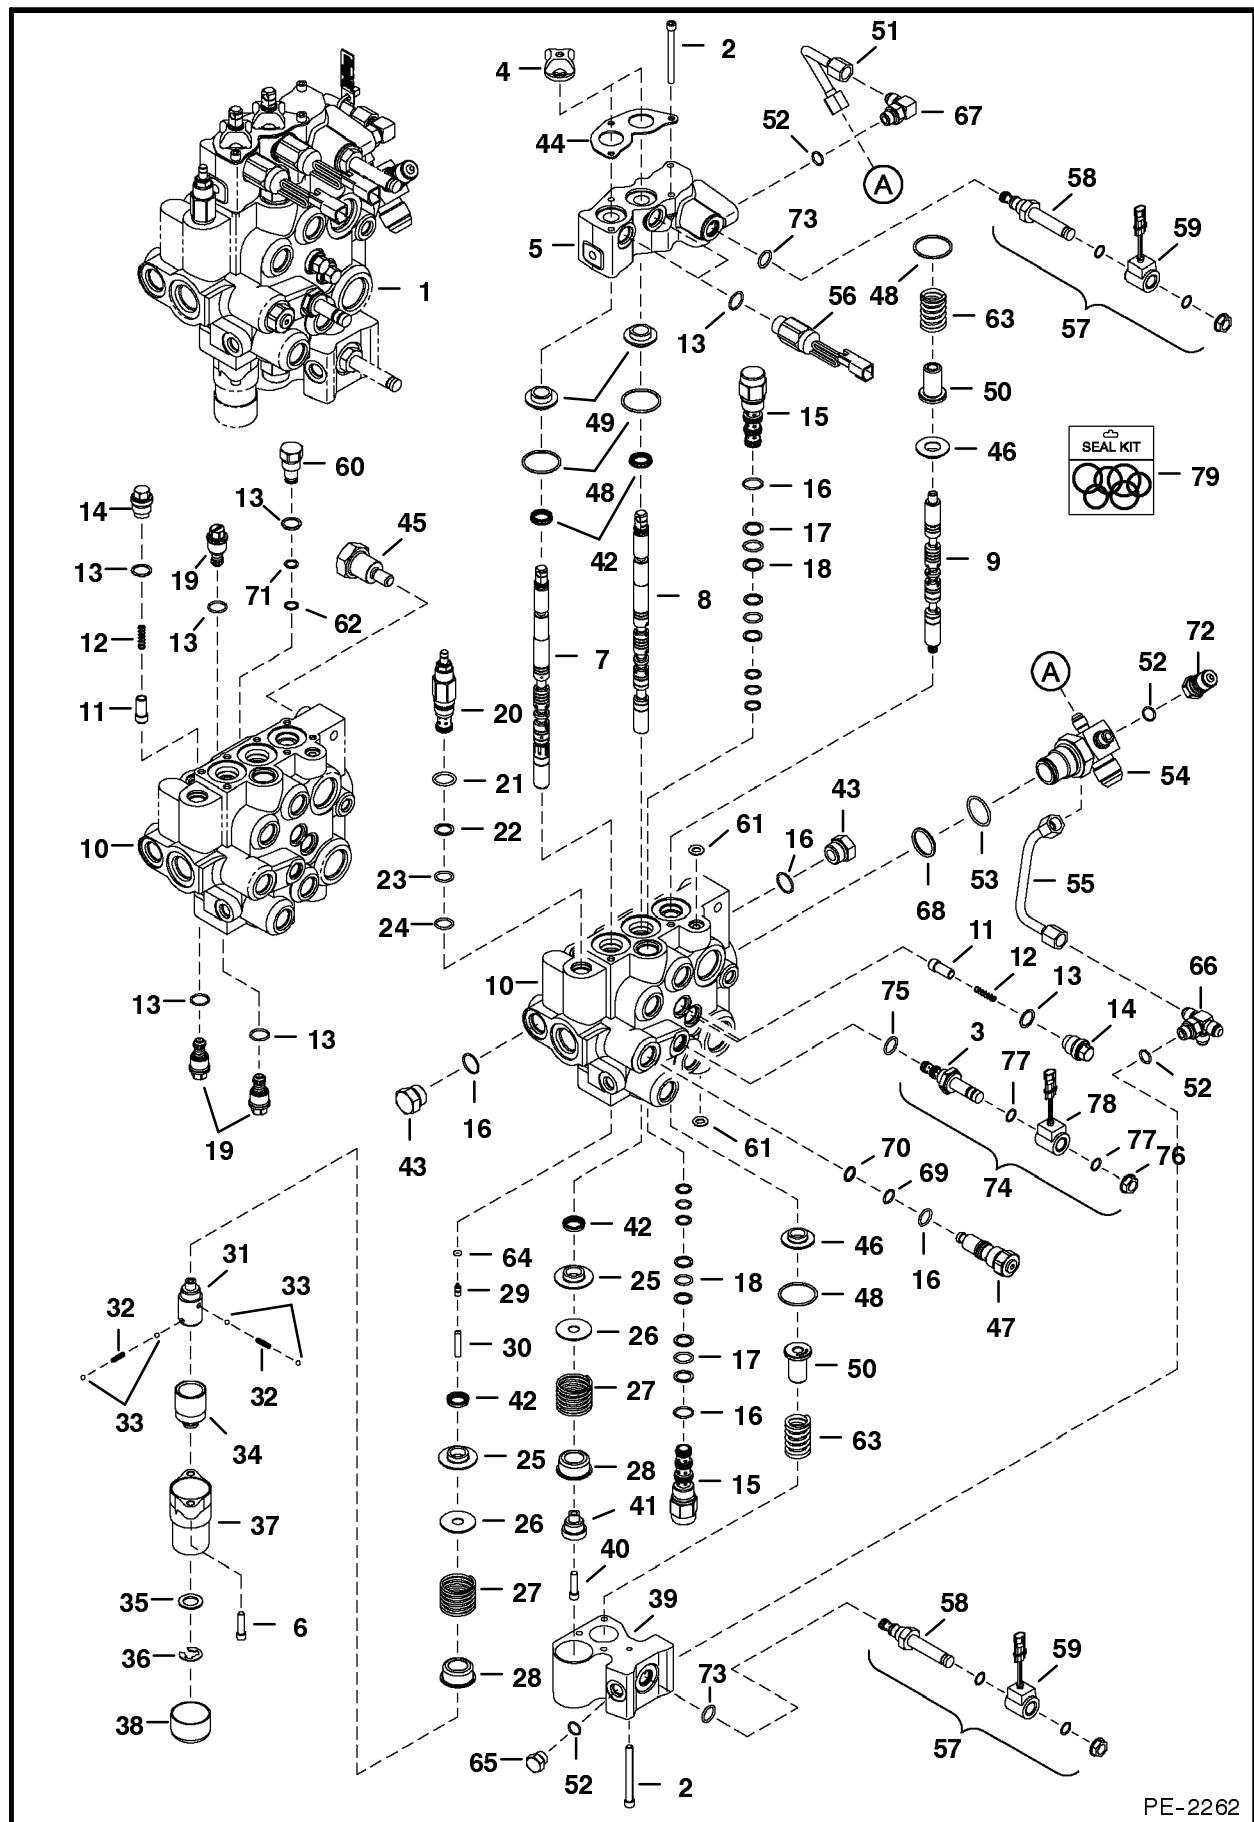


PE-2262

*** HYDRAULIC CONTROL VALVE (Cont'd)**

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Part Number	Description	Remarks	Serial Number	Qty.
51*	6815621	TUBE			1
52*	79K-6	O-RING			x
53*	79K-16	O-RING			x
54*	6814433	CROSS	W/Ref. 52, 53 & 68		1
55*	6815308	TUBE			1
56*	6677383	SOLENOID	spool lock - 5" (127 mm) wire		2
57*	6678893	SOLENOID	W/Ref. 58 & 59		2
*	6685603	SEAL KIT			x
58*	6681932	STEM	W/Ref. 73		2
59*	6678891	COIL			2
60*	6816549	PLUG	W/Ref. 13, 62 & 71		1
61*	55K-204	O-RING			1
62*	80K-13	WASHER	back-up		4
63*	6810950	SPRING			2
64*	54K-20002	O-RING			1
65*	24K-5	PLUG	W/Ref. 52		1
66*	7102019	TEE	W/Ref. 52		1
67*	17KB-606	ELBOW	W/Ref. 52		1
68*	58K-22	O-RING			1
69*	25K-20020	O-RING			x
70*	80K-16	WASHER	back-up		x
71*	58K-13	O-RING			1
72*	6684125	COUPLER			1
73*	79K-7	O-RING			2
74*	6675559	SOLENOID	W/Ref. 3 & 75 - 78		2
75*	6669732	SEAL KIT			1
76*	6668820	NUT			1
77*	54K-20028	O-RING			4
78*	6671025	COIL			2
79*		SEAL KIT	two spool - Ref. 2, 4, 29, 42, 48		
*			& 64		x
*		SEAL KIT	main relief - Ref. 21-24		x
*		SEAL KIT	Ref. 13 & 16-18		x
*		SEAL KIT	complete - Ref. 2, 4, 6, 13, 16-18, 21-24, 42, 44, 48, 61 & 62		x

HYDRAULIC CONTROL VALVE (Advanced Control System) (W/BICS Combo Valve)

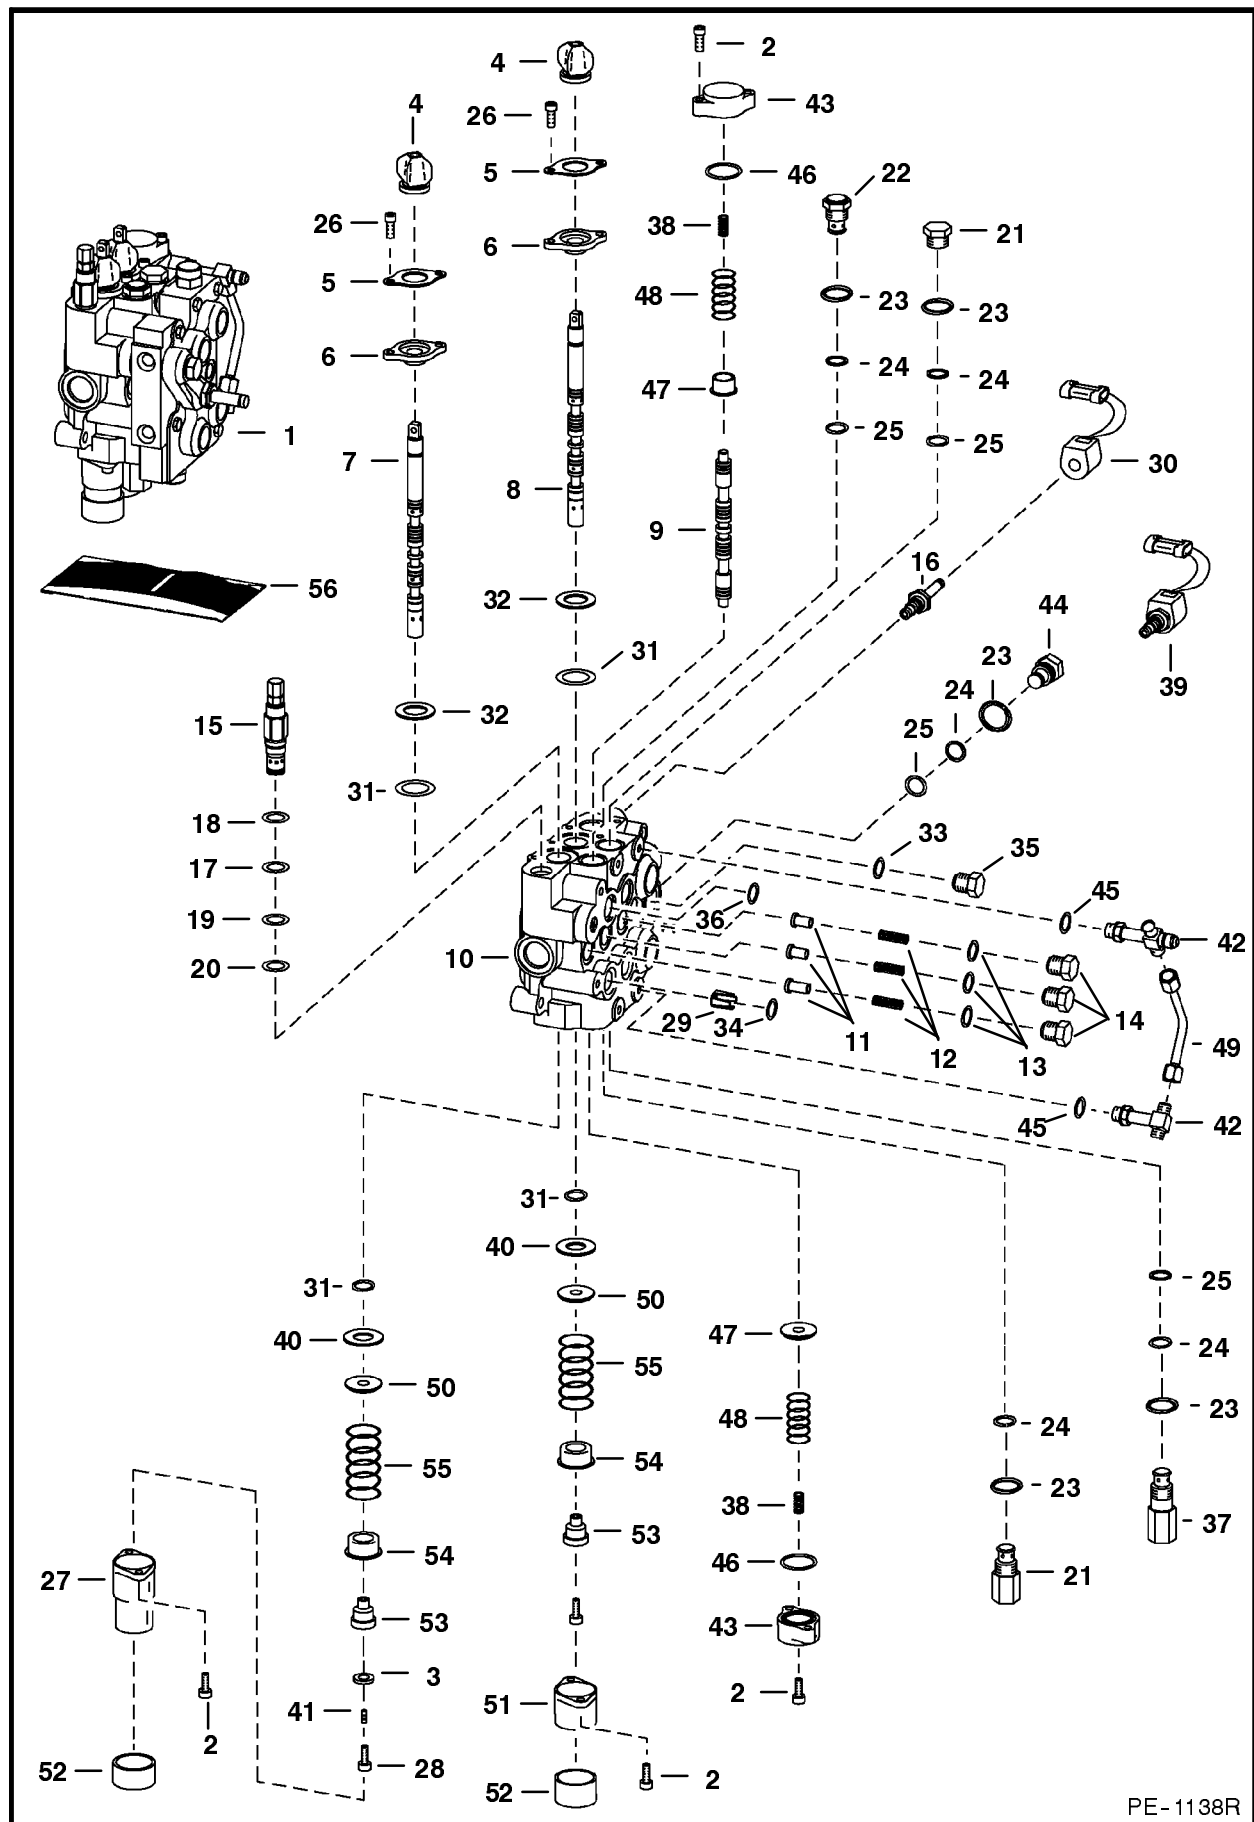


PE-1138R

HYDRAULIC CONTROL VALVE (Cont'd)

(ACS W/BICS) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)						
Ref. Part	No.	Number	Description	Remarks	Serial Number	Qty.
1		6815003	VALVE	BICS control - See Page 95		1
		NSS	BODY			1
2		29G-416	BOLT			8
3		54K-20002	O-RING			1
4		6587763	BOOT			2
5		6589564	RETAINER			2
6		6589565	RETAINER	seal		2
7		6677660	SPOOL	lift - # 1 or Red		1
		6677661	SPOOL	lift - # 2 or Green		1
8		6677662	SPOOL	tilt - # 1 or Red		1
		6677663	SPOOL	tilt - # 2 or Green		1
9		6588074	SPOOL	auxiliary		3
10		NSS	BODY	load check		1
11		6592115	SEAT			2
12		6592117	SPRING			3
13		79K-8	O-RING	load check main relief - W/Ref. 17-20 - pressure to be set in field		3
14		6592116	NUT			3
15		6685017	VALVE			
16		6681932	STEM			1
		79K-7	O-RING			2
17		58K-17	O-RING			1
18		6665569	WASHER	back-up		1
19		25K-20016	O-RING			1
20		6665570	RING			1
21		6678574	VALVE	glide port relief - 3400-3600 PSI - W/Ref. 23-25		2
22		6667549	VALVE	anti-cavity check -W/Ref. 23-25		1
23		79K-10	O-RING	back-up		2
24		80K-14	WASHER		5	
25		58K-14	O-RING		5	
26		29G-412	BOLT			4
27		6803092	BONNET			1
28		30G-416	BOLT			.185
29		6800124	RESTRICTOR	1		
30		6678891	COIL	2		
31		6683274	SEAL			4
32		58K-127	O-RING			2
33		75K-12	O-RING			1
34		55K-212	O-RING	W/Ref. 33		4
35		90K-8	PLUG			1
36		55K-204	O-RING			1
37		6678552	VALVE	port relief - 3400-3600 PSI - W/Ref. 23-25		1
38		6806007	SPRING	white		2
39		6678893	SOLENOID	W/Ref. 16 & 30		2
		6685603	SEAL KIT			x
40		6595663	BUSHING			2
41		6801167	PLUG			plastic
42		6817553	CROSS	W/Ref. 45		2
43		6588781	END CAP			2

HYDRAULIC CONTROL VALVE (Cont'd) **(Advanced Control System) (W/BICS Combo Valve)**

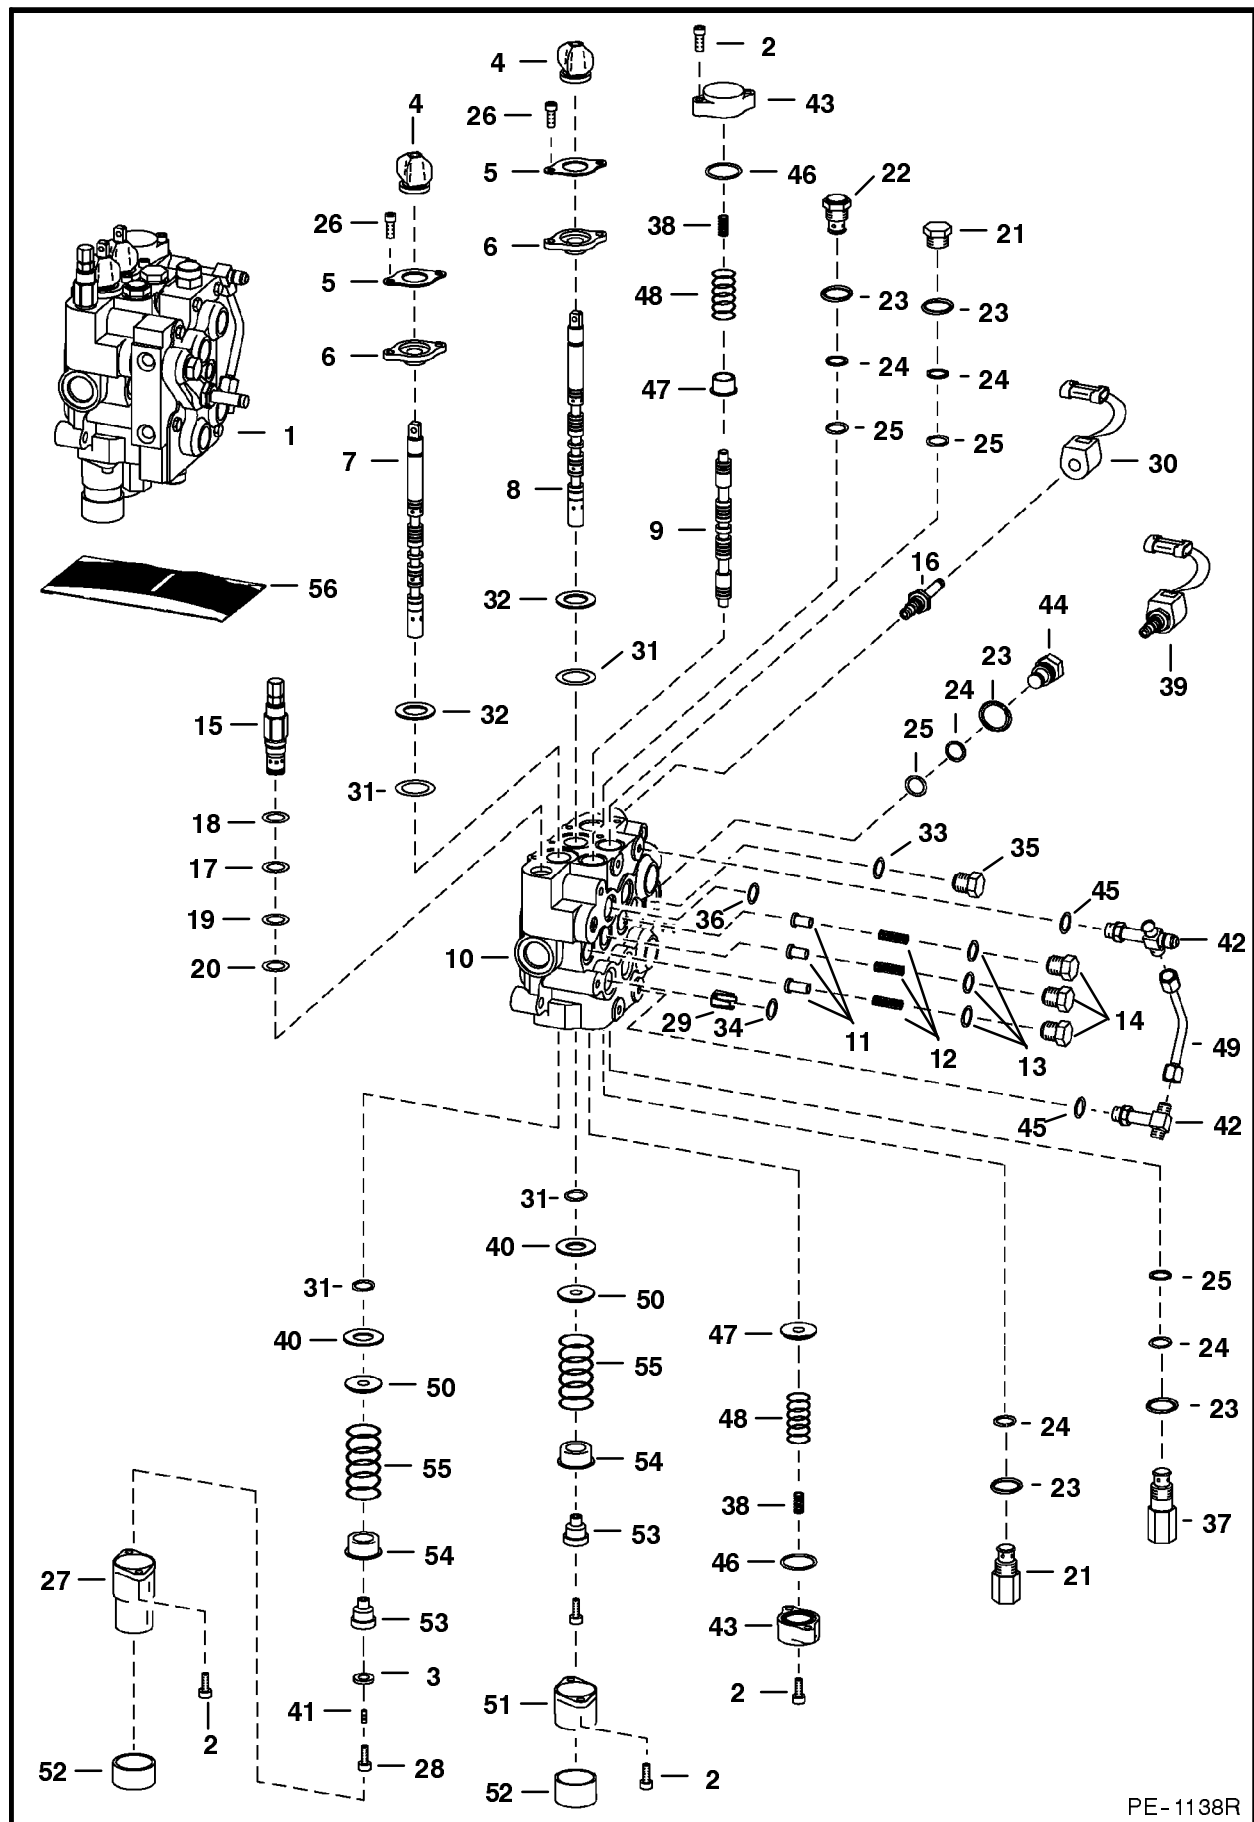


PE-1138R

(ACS W/BICS) (S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

*** HYDRAULIC CONTROL VALVE
(ACS)**

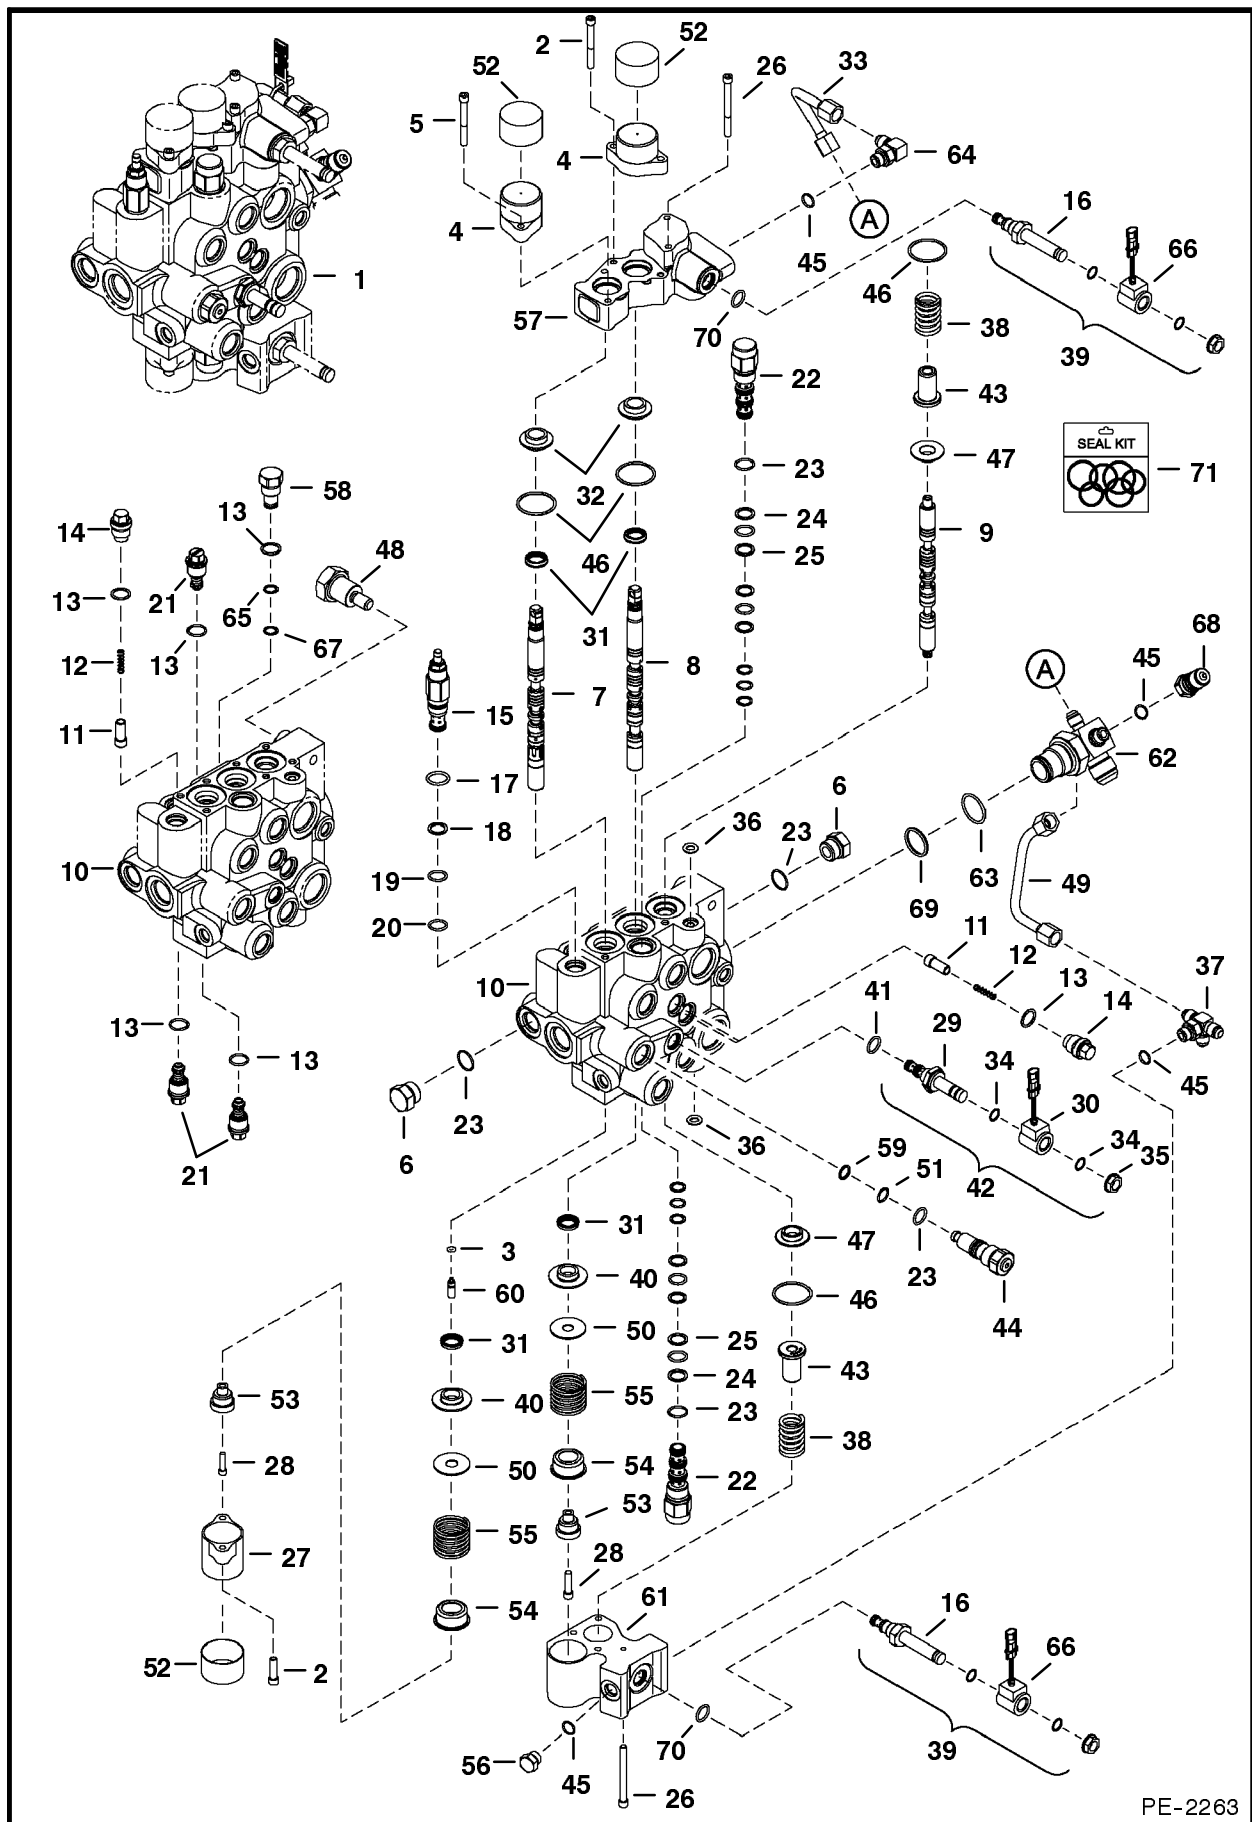


PE-2263

*** HYDRAULIC CONTROL VALVE (Cont'd)**

(ACS) (S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*	6816564	VALVE			1
2*	29G-416	BOLT			4
3*	54K-20002	O-RING			1
4*	7101345	BONNET			2
5*	69G-436	BOLT			2
6*	24K-7	PLUG	W/Ref. 23		2
7*	6815061	SPOOL	lift - # 1 or Red		1
8*	6815062	SPOOL	tilt - # 1 or Red		1
9*	6814323	SPOOL	auxiliary		3
10*	NSS	BODY			1
11*	6815016	SEAT	load check		3
12*	6592117	SPRING			3
13*	79K-8	O-RING			3
14*	6817707	NUT	load check		3
15*	6685017	VALVE	main relief - W/Ref. 17-20 - pressure to be set in field W/Ref. 70		1
16*	6681932	STEM			2
17*	58K-17	O-RING			1
18*	6665569	WASHER	back-up		1
19*	25K-20016	O-RING			1
20*	6665570	RING	glide		1
21*	6684645	VALVE	port relief - 3400-3600 PSI - W/Ref. 13		3
22*	6668765	VALVE	anti-cavity check -W/Ref. 23-25		1
23*	79K-10	O-RING			2
24*	80K-14	WASHER	back-up		5
25*	58K-14	O-RING			5
26*	29G-444	BOLT			4
27*	6803092	BONNET			1
28*	30G-416	BOLT			2
29*	6667687	STEM			1
30*	6671025	COIL			2
31*	6683274	SEAL			4
32*	6805102	BUSHING			2
33*	6815621	TUBE			1
34*	54K-20028	O-RING			4
35*	6668820	NUT			1
36*	55K-204	O-RING			2
37*	7102019	TEE	W/Ref. 45		1
38*	6810950	SPRING			2
39*	6678893	SOLENOID	W/Ref. 16 & 66		2
*	6685603	SEAL KIT			x
40*	6595663	BUSHING			2
41*	6669732	SEAL KIT			1
42*	6675559	SOLENOID	W/Ref. 29, 30, 34, 35 & 41		2
43*	6814694	RETAINER	spring		2
44*	6685157	VALVE	W/Ref. 23, 51 & 59		1
45*	79K-6	O-RING			x
46*	58K-12	O-RING			4
47*	6804920	BUSHING			2
48*	6813778	PAD	extension		2

*** HYDRAULIC CONTROL VALVE (Cont'd)**
(ACS)

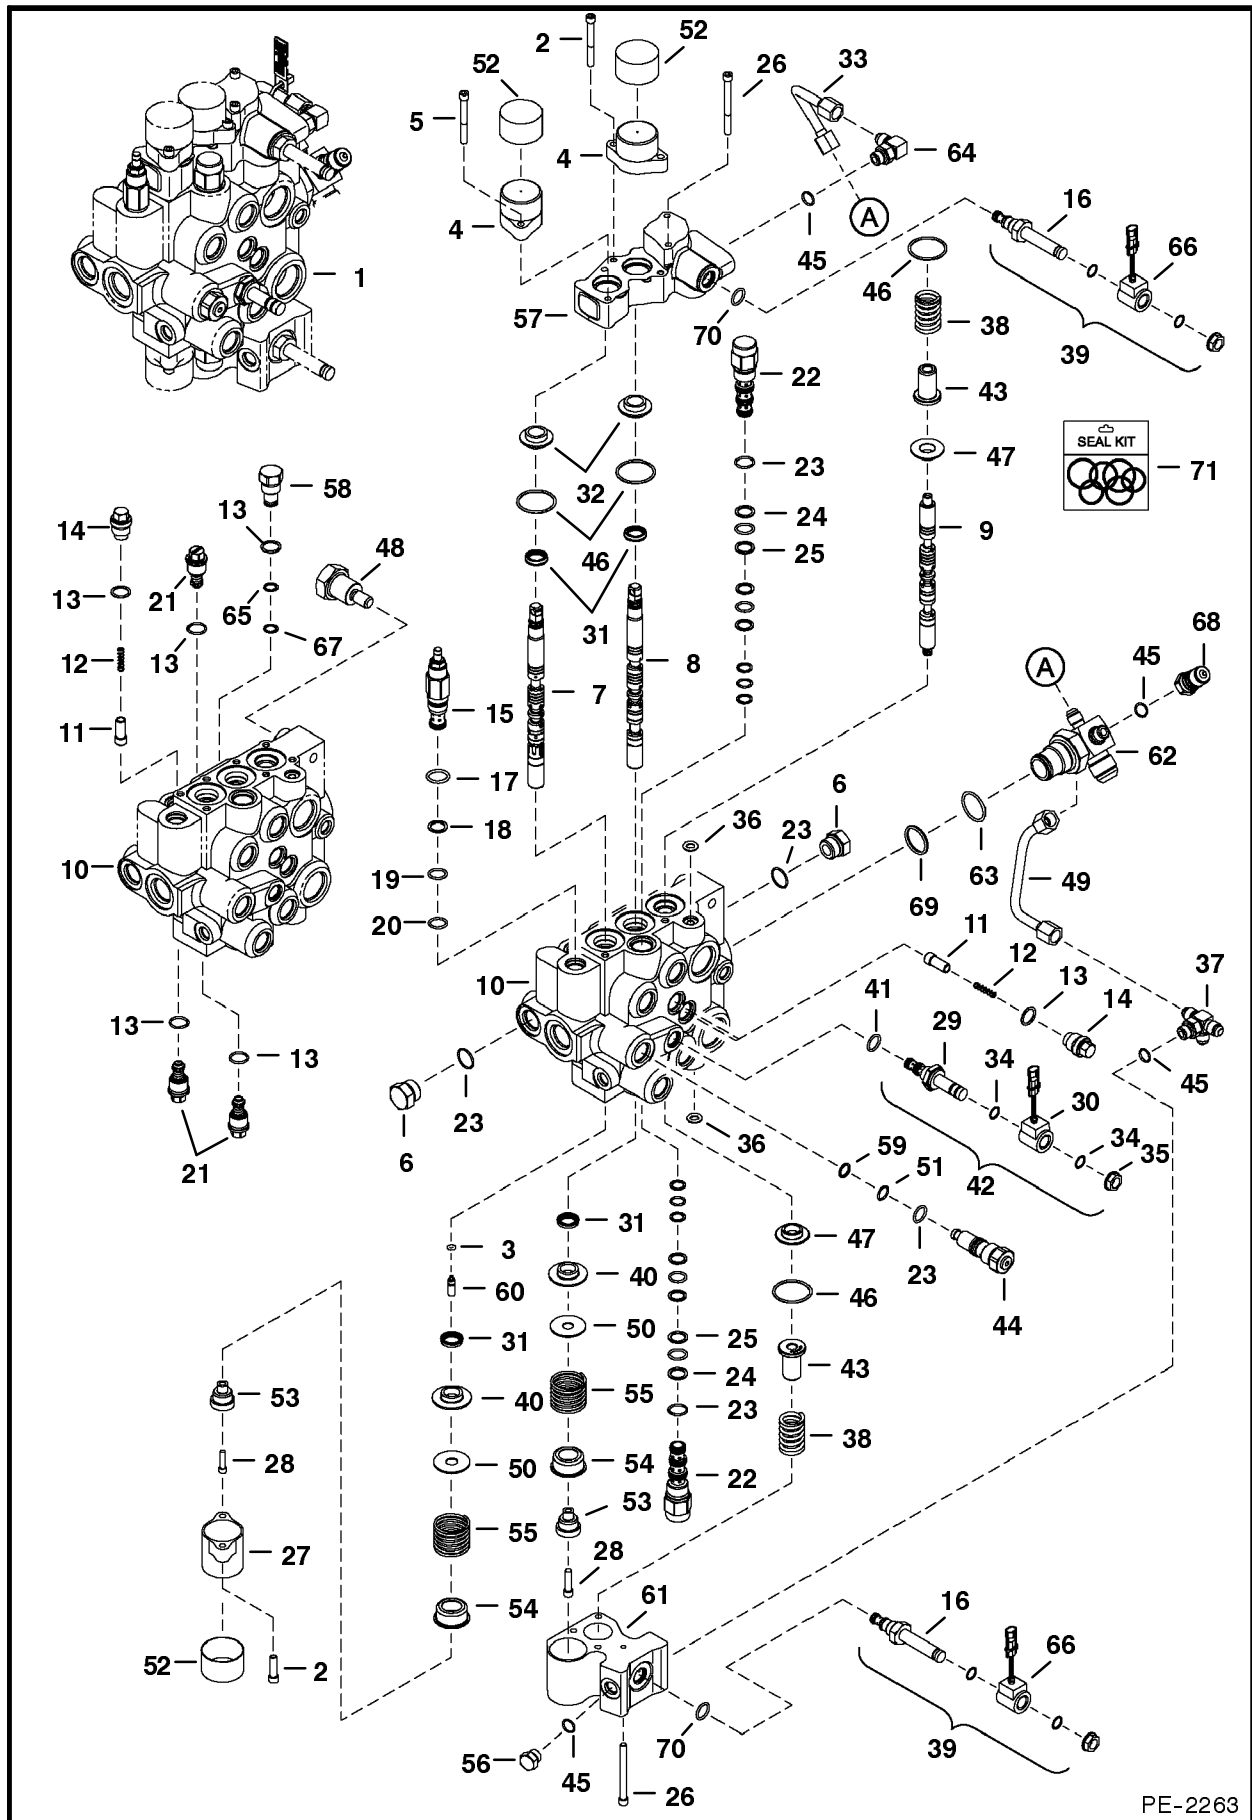


PE-2263

(ACS) (S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

[illegible]

BICS CONTROL VALVE

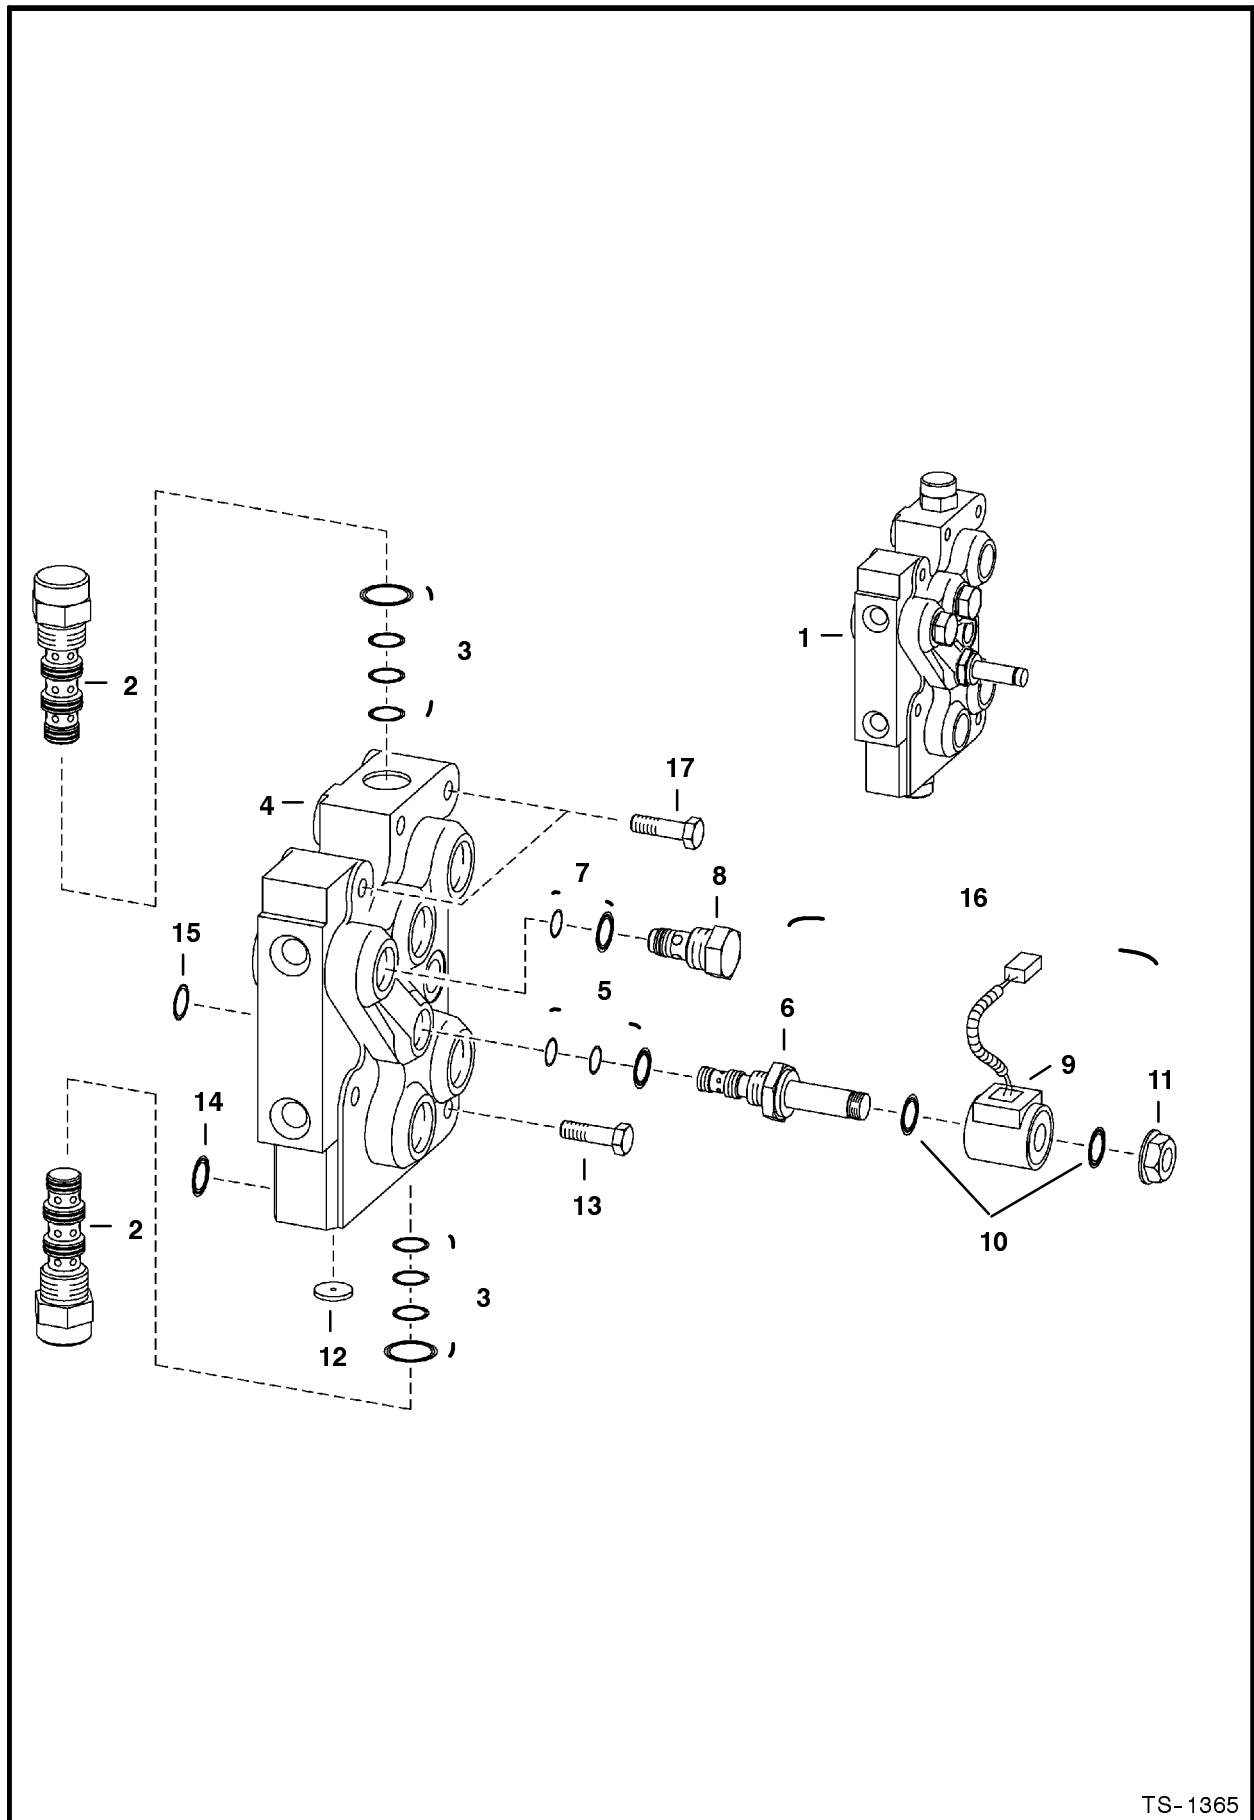


TS-1365

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

MANUAL LIFT RELEASE VALVE

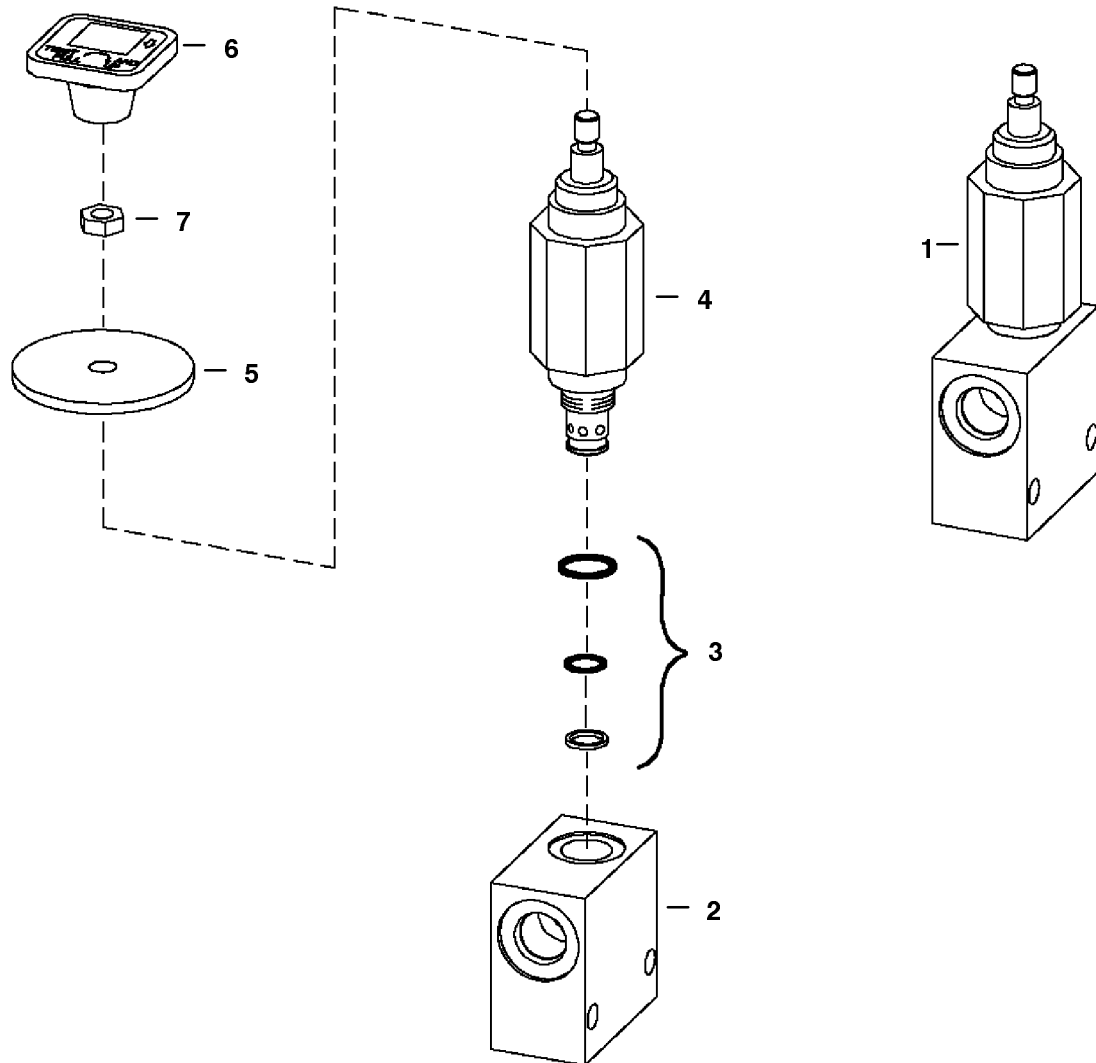


PE-1547

MANUAL LIFT RELEASE VALVE (Cont'd)

[illegible]

HIGH FLOW HYDRAULICS

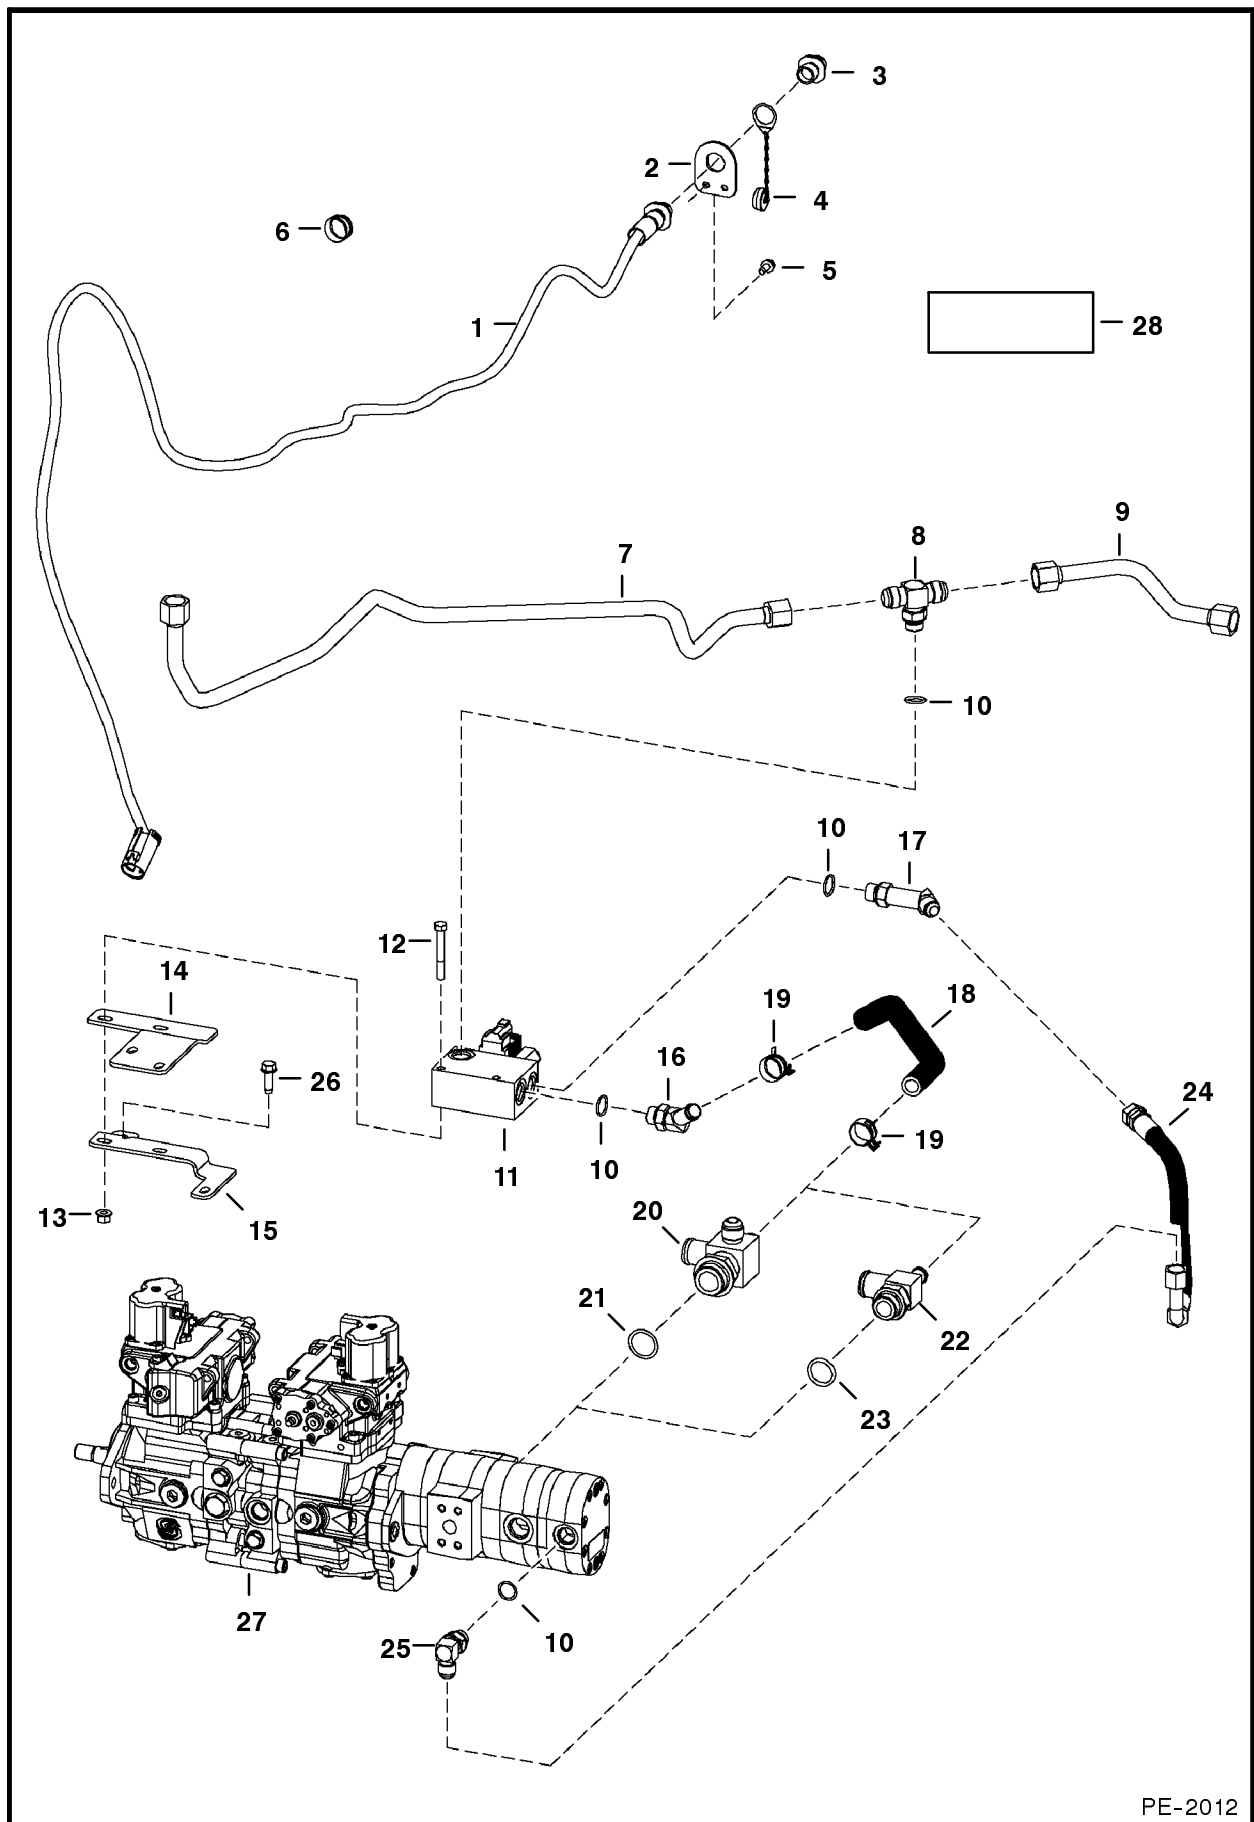


PE-2012

HIGH FLOW HYDRAULICS (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6718426	HARNESS			1
	6667533	COVER			1
	6674799	ADAPTER	heat shrink		1
2	6718750	MOUNT			1
3	6674802	CONNECTOR	7-pin		1
	6669549	SOCKET	small		4
	6677136	SOCKET	large - 12 ga.		3
4	6675026	CAP			1
5	84G-3112	BOLT			2
6	6624289	TIE			7
7	6736685	TUBE			1
8	19KB-1210	TEE	W/Ref. 10		1
9	6736205	TUBE			1
10	79K-10	O-RING			x
11	6683819	VALVE	See Page 101		1
12	17C-644	BOLT		& Bel	2
*	37C-648	BOLT		& Abv	2
13	83D-6	NUT		& Bel	2
*	61D-6	NUT		& Abv	2
14	6736206	BRACKET	Models T180 & T190		1
15	6736207	BRACKET	Models A205, S150, S160, S175		
			& S185	& Bel	1
*	6736810	BRACKET	Models A205, S150, S160, S175 & S185 - flat top transmission	& Abv	1
16	6736586	ELBOW	W/Ref. 10		1
17	6718080	ELBOW	W/Ref. 10		1
18	6736210	HOSE			1
19	5HM-27	CLAMP	constant tension		2
20	6714904	TEE	W/Ref. 21 - W/Manual Controls - Models S160, S175, S185, T180, & T190		
21	79K-16	O-RING			1
22	6733447	TEE	W/Ref. 23 - W/Joystick Controls - Models A205, S150, S160, S175, S185, T180 & T190		x
					1
23	79K-20	O-RING			2
24	6736647	HOSE			1
25	17KB-1010	ELBOW	W/Ref. 10		1
26	84G-3720	BOLT		& Bel	1
27	6685033	PUMP	W/Manual Controls - Models S160, S175, S185, T180, & T190 - See Page 123		1
28	6727913	DECAL			1

HIGH FLOW HYDRAULICS

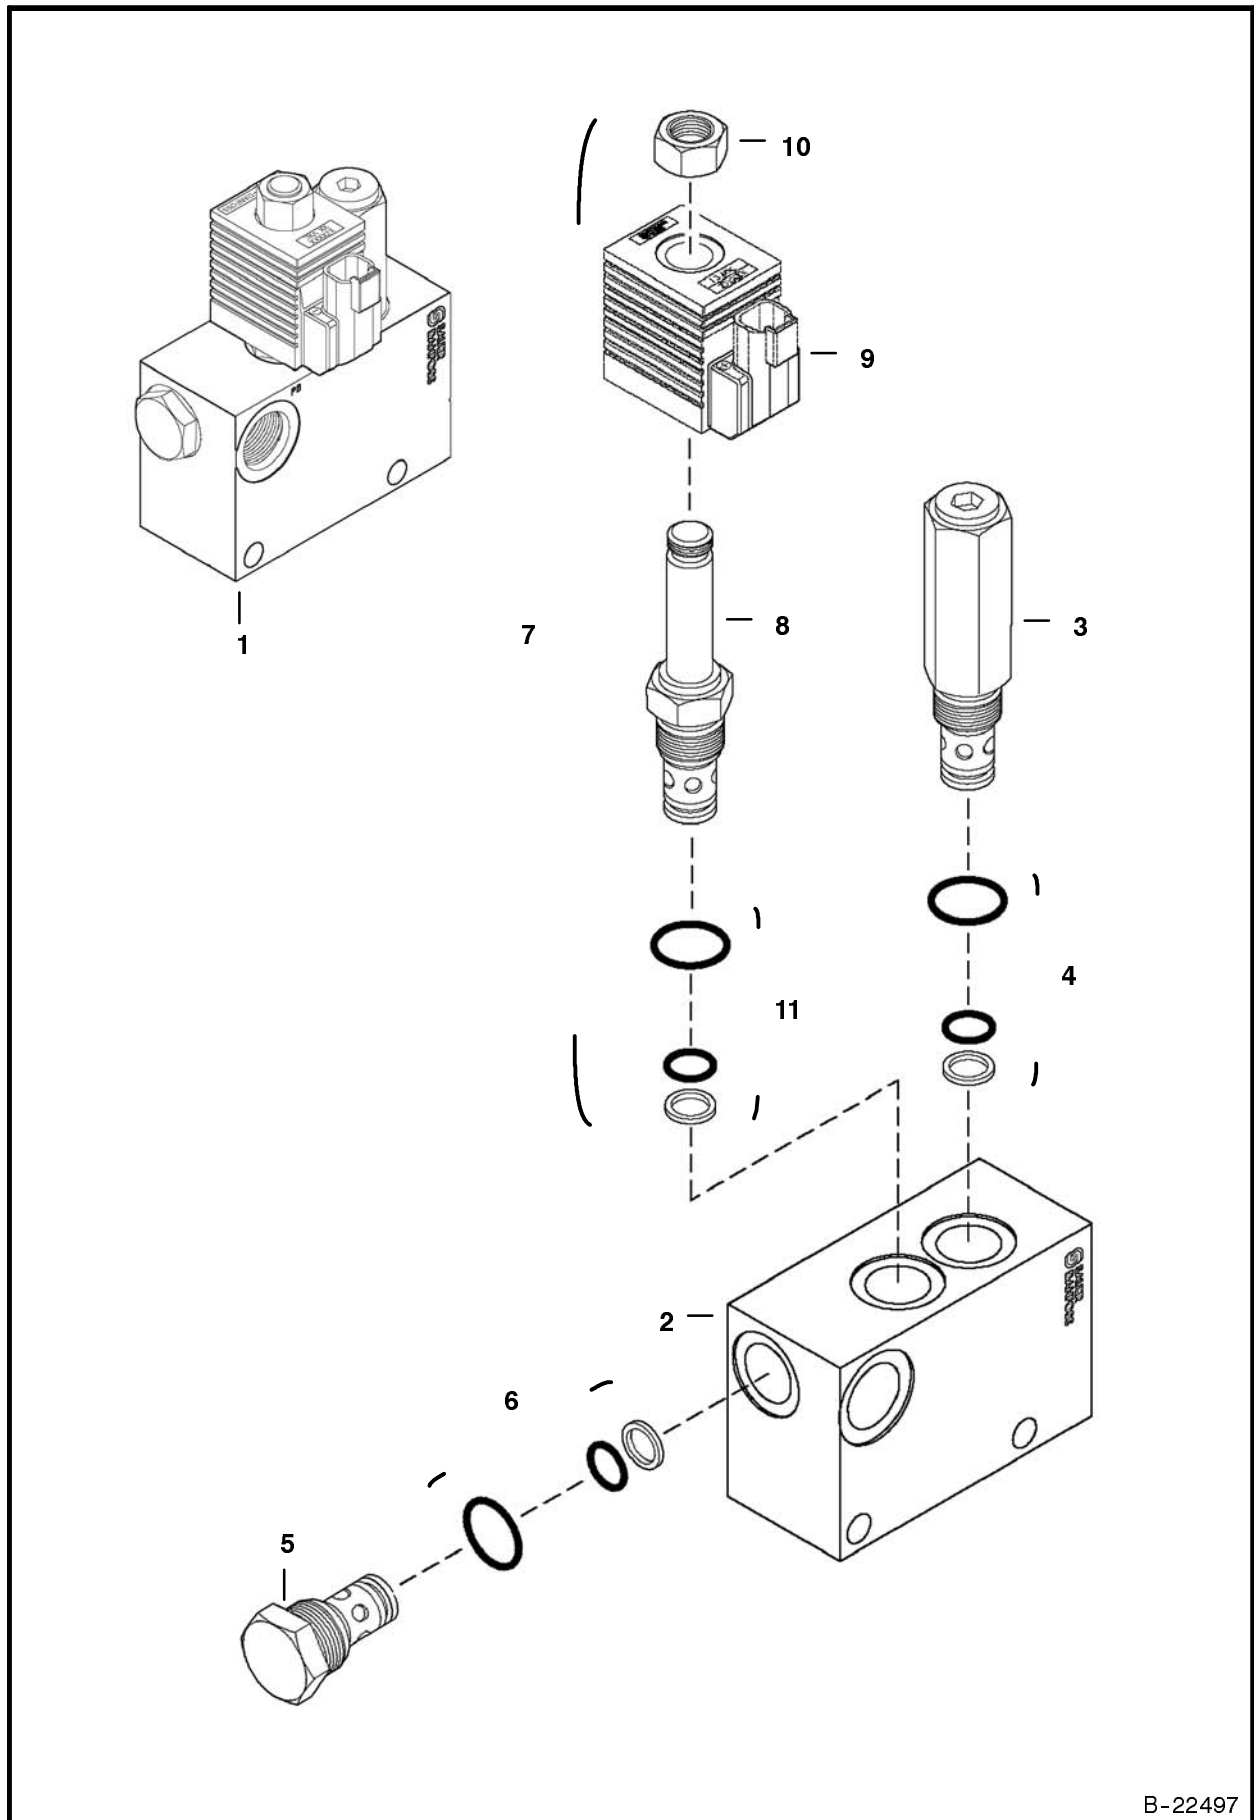


B-22497

HIGH FLOW HYDRAULICS (Cont'd)

[illegible]

HIGH FLOW HYDRAULICS
(Double Gear Pump - Cast Iron)

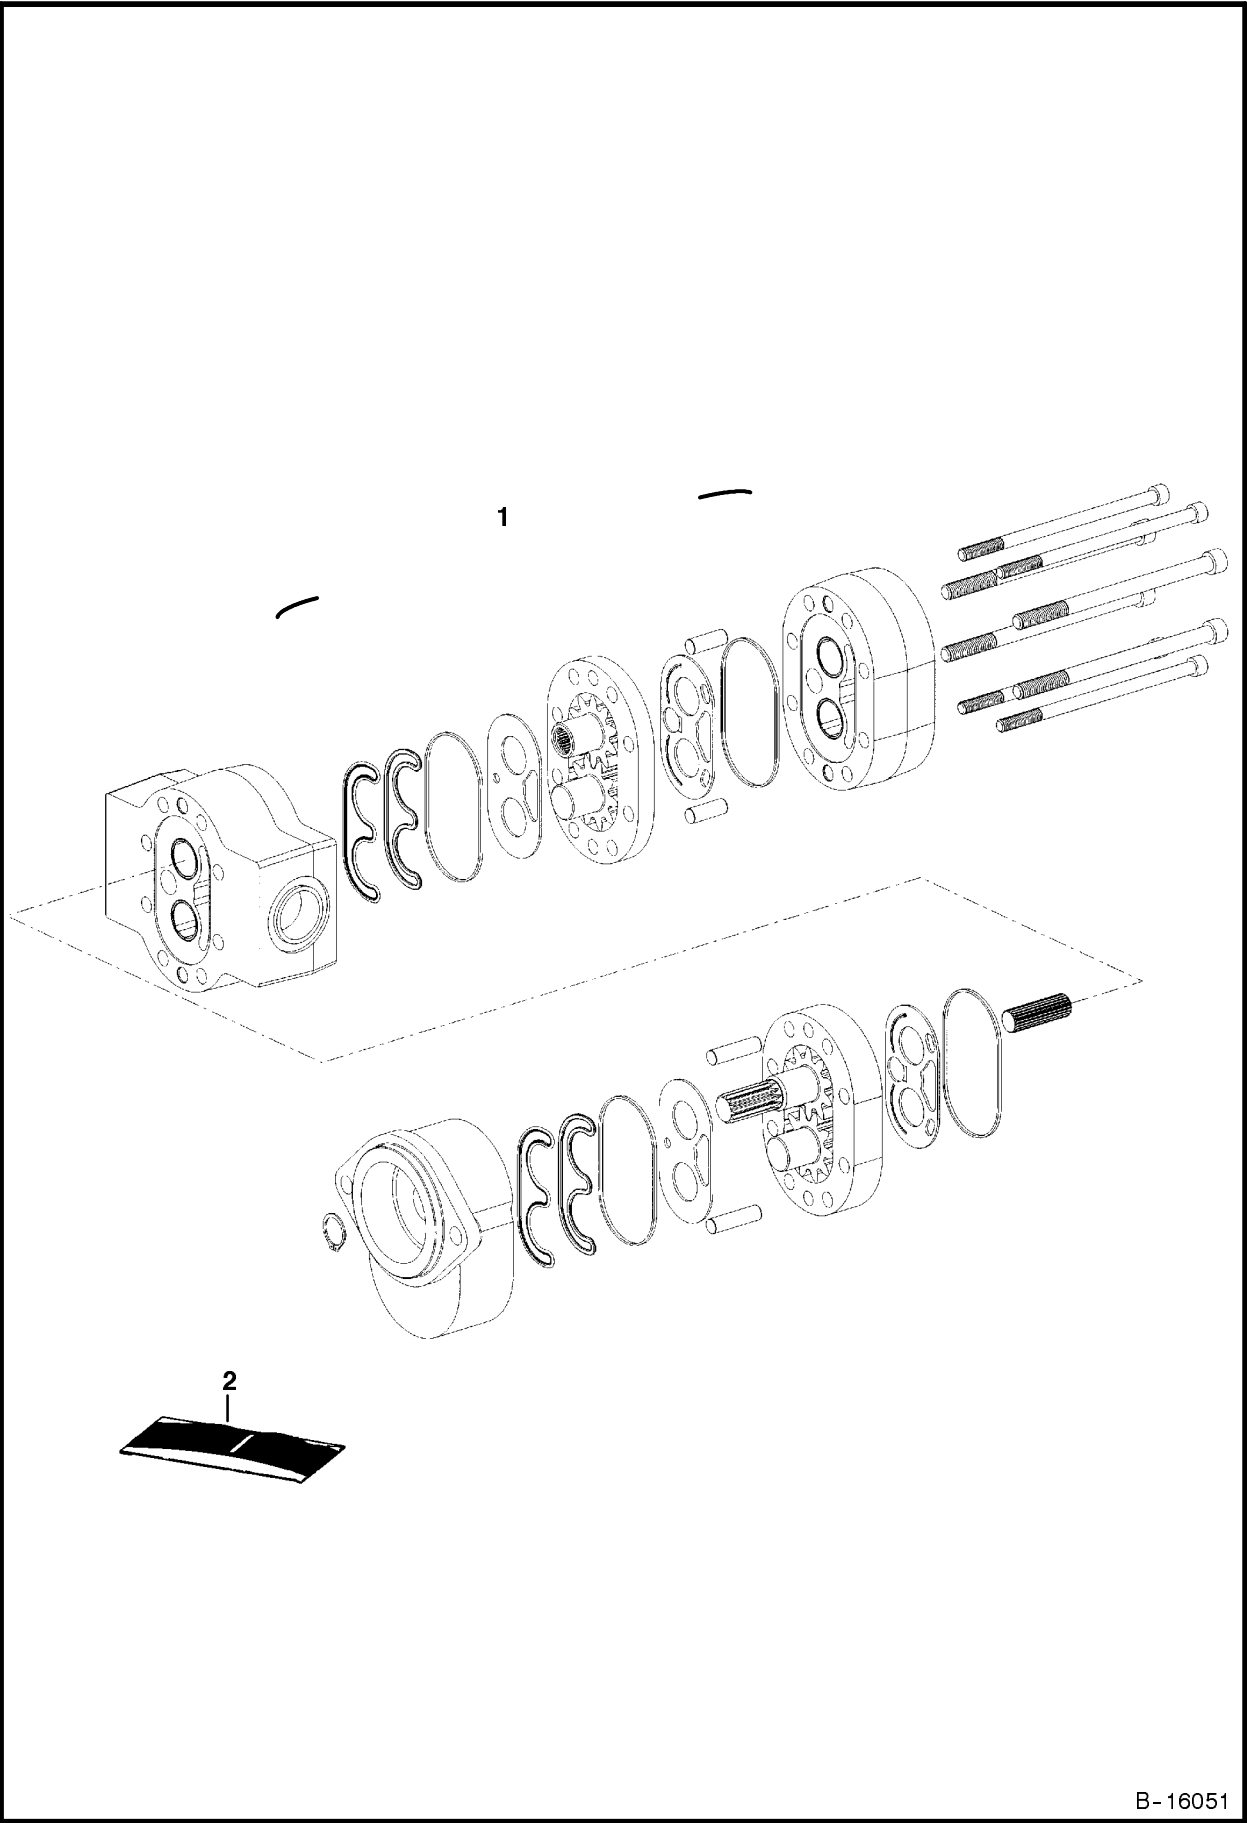

B-16051


HIGH FLOW HYDRAULICS (Cont'd)

(Double Gear Pump - Cast Iron)

[illegible]

HYDROSTATIC CIRCUITRY

NOTE: Mega seal hoses are not compatible W/O-Ring face seal fittings.

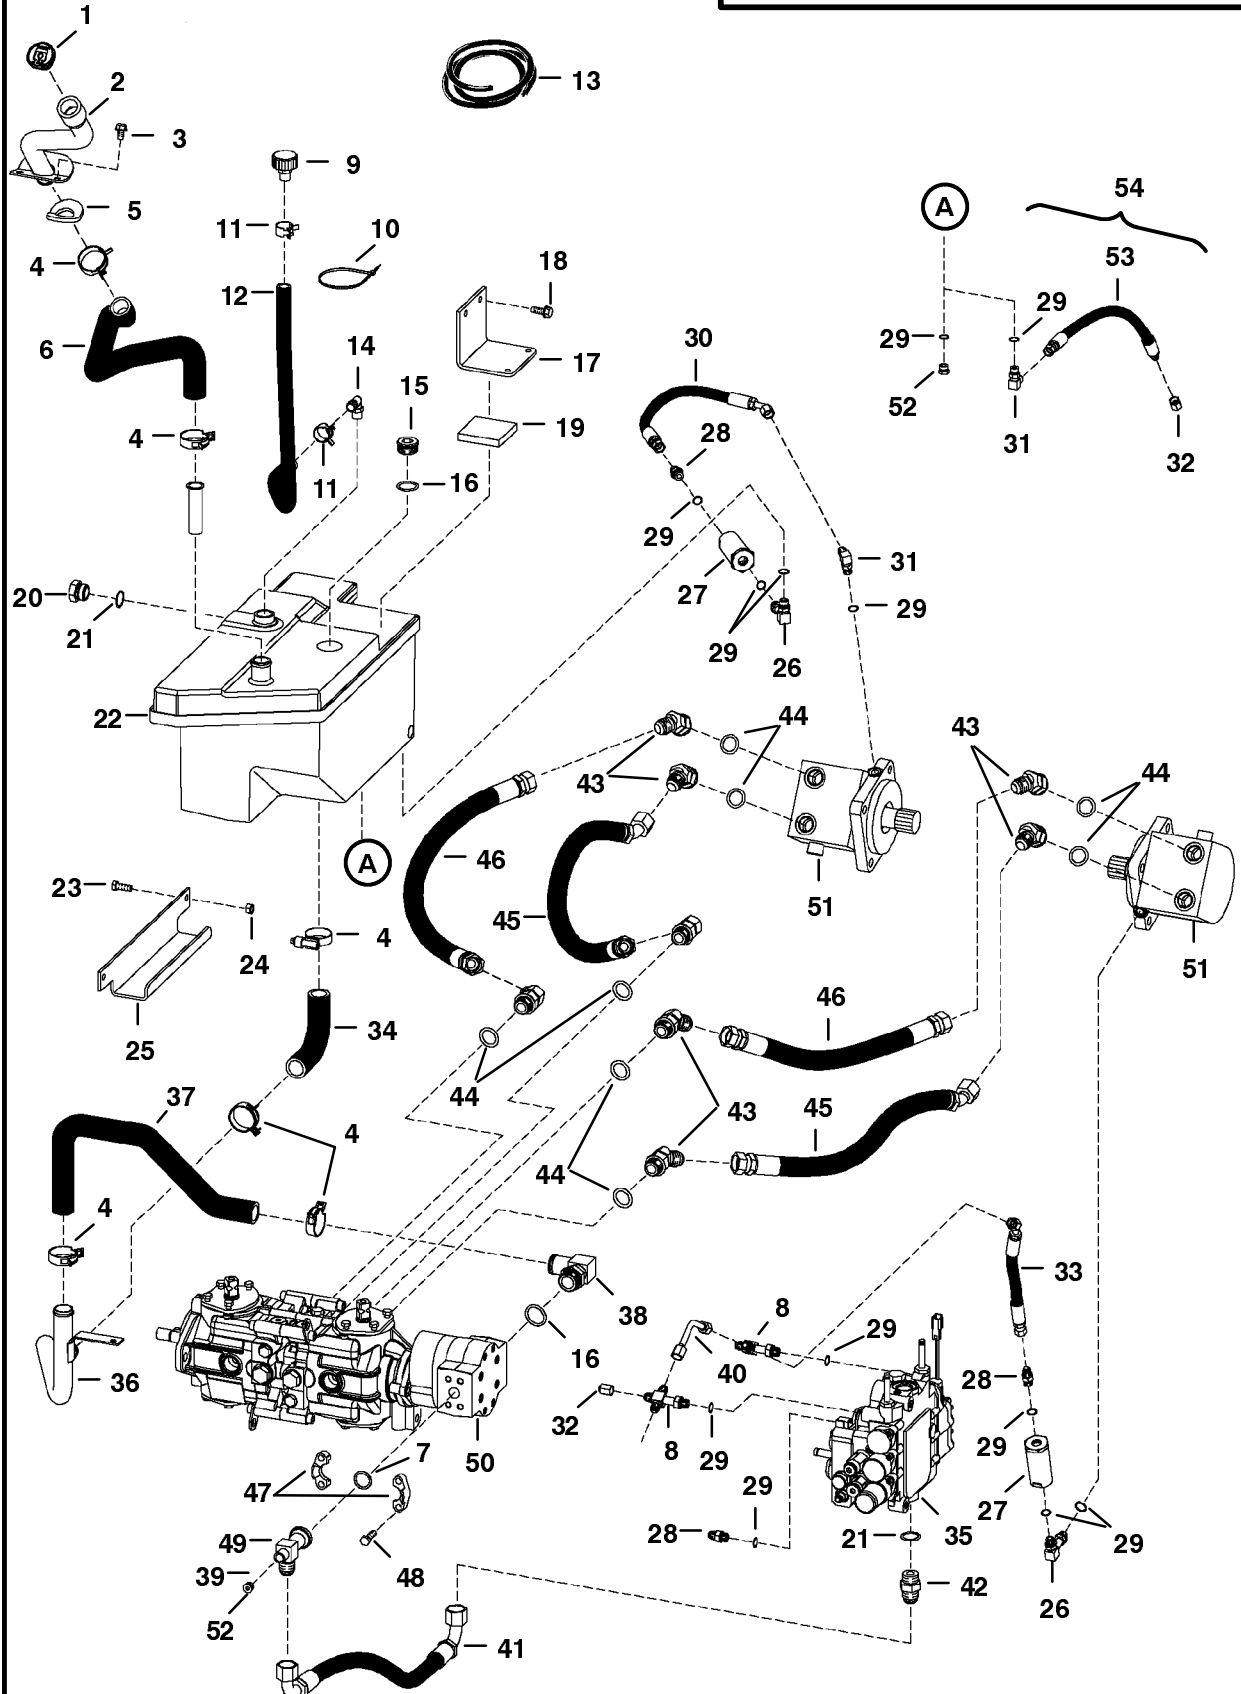

PE-1364R


HYDROSTATIC CIRCUITRY (Cont'd)

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1	6717827	CAP			1
2	6717830	TUBE			1
3	84G-3710	BOLT			2
4	5HM-42	CLAMP			6
5	6718772	GASKET			1
6	6718020	HOSE			1
7	58K-214	O-RING			1
8*	6817553	CROSS	W/Ref. 29 - See Page 79 - Was 6805241 [A]		2
9*	6684923	CAP	breather - Was 6648944 [B]		1
10	6610510	TIE			2
11	5HM-24	CLAMP			2
12	NAP	HOSE	21.5"(546,1 mm) long - Order Ref. 13		1
13	6578172	HOSE	bulk - Sold Per Foot		x
14	6727637	ELBOW	barbed		1
15	47K-10	PLUG	W/Ref. 16		1
16	79K-16	O-RING			1
17	6726254	BRACKET			1
18	84G-3716	BOLT			2
19	6726255	PAD	bumper		1
20	6665915	SIGHT GAUGE	W/Ref. 21		1
	6734563	WASHER KIT			1
	6734561	WASHER			1
	25K-30118	O-RING			1
21	79K-12	O-RING			1
22	6728673	TANK			1
23	17C-616	BOLT			2
24	61D-6	NUT			2
25	6726162	BRACKET			1
26	6715190	ELBOW	W/Ref. 29		2
27	6661022	FILTER			2
28	15KB-606	ADAPTER	W/Ref. 29		1
29	79K-6	O-RING			x
30	6704631	HOSE			1
31	17KB-606	ELBOW	W/Ref. 29		1
32	36K-5	CAP			2
33*	NAP	HOSE	9.5" (241,3 mm)(long - W/short elbow - Was 6735839 [A]		1
*	7100142	HOSE	10" (254 mm) long - W/long elbow		1
34	6733652	HOSE			1
35		VALVE	See Page 79		1
36	6733653	TUBE			1
37	6717908	HOSE			1
38	6715191	ELBOW	W/Ref. 16		1
39	95K-6	O-RING			1
40	6577690	TUBE	See Page 79		1
41	6726251	HOSE			1
42	15KB-1212	ADAPTER	W/Ref. 44		1
43	6737453	ELBOW	W/Ref. 44		8

HYDROSTATIC CIRCUITRY (Cont'd)

NOTE: Mega seal hoses are not compatible W/O-Ring face seal fittings.

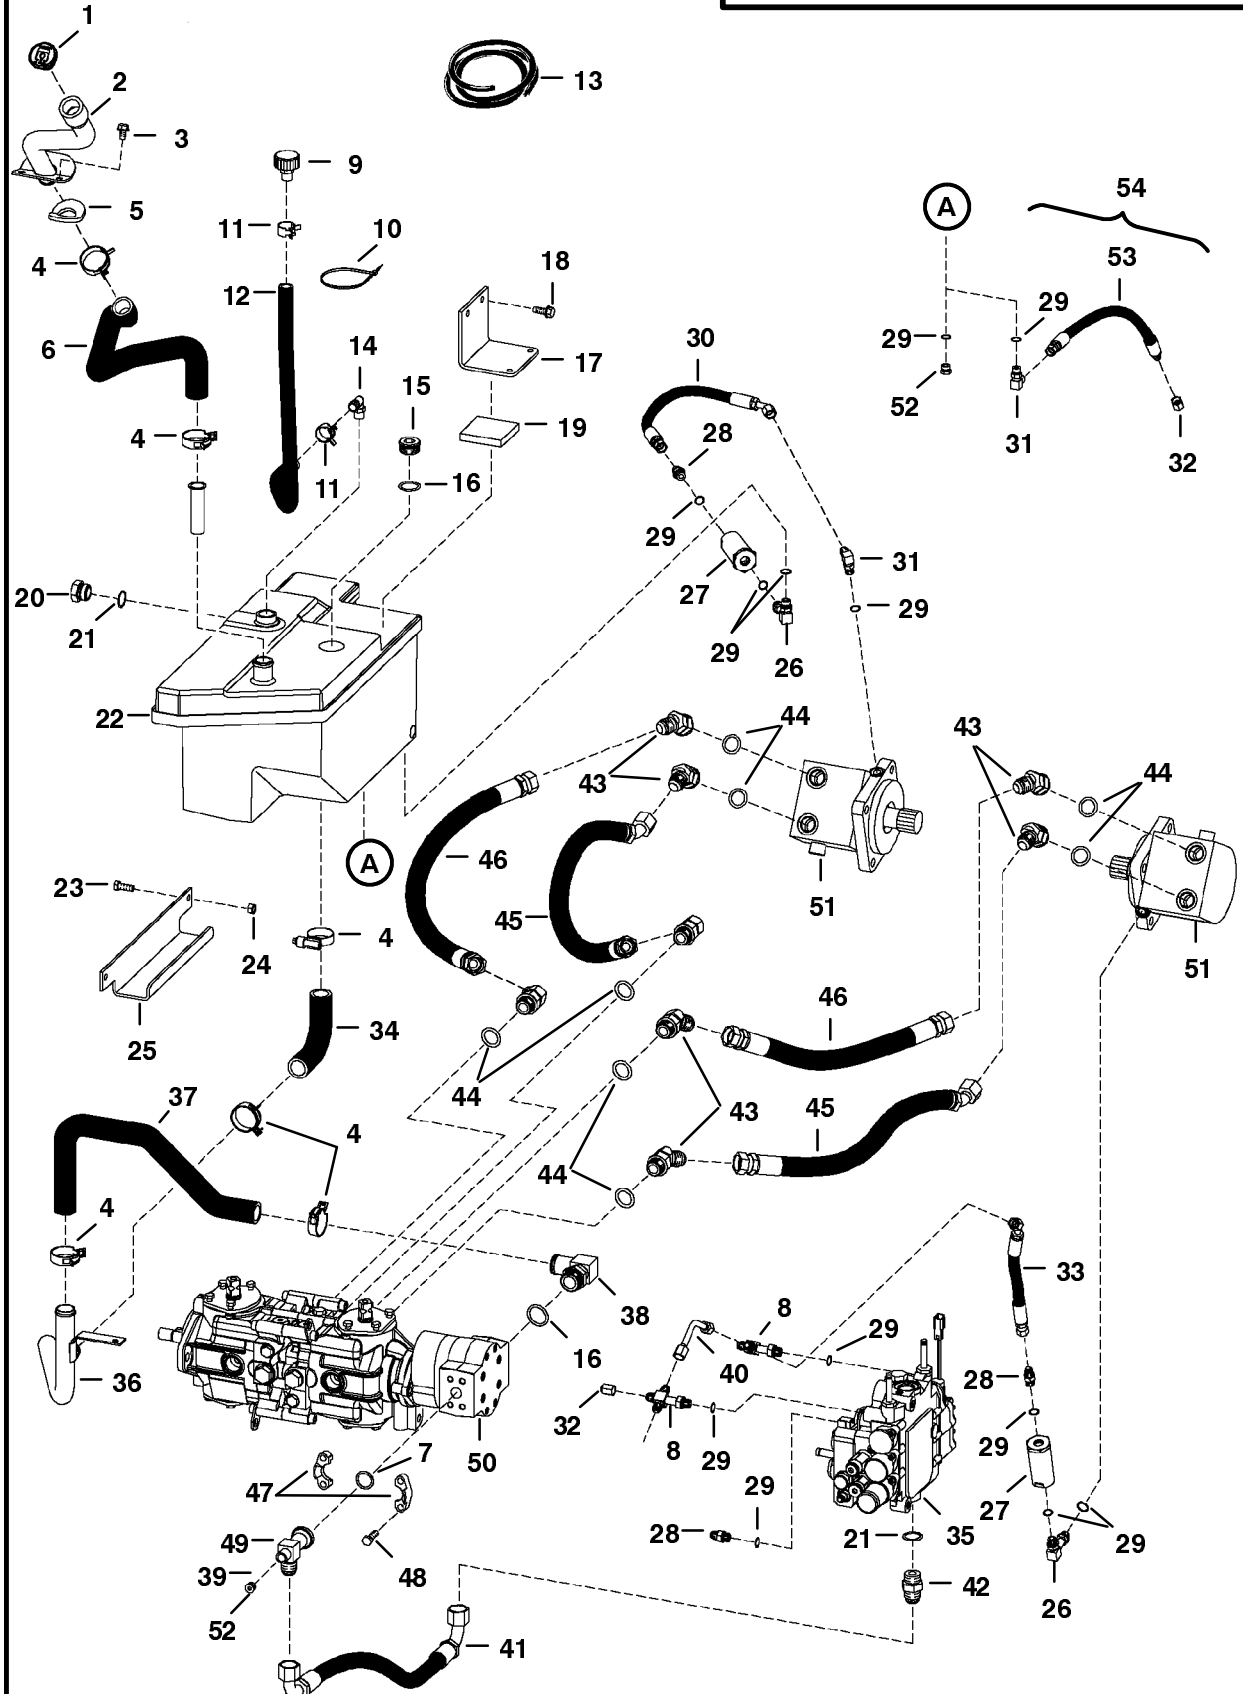


PE-1364R

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

* HYDROSTATIC CIRCUITRY

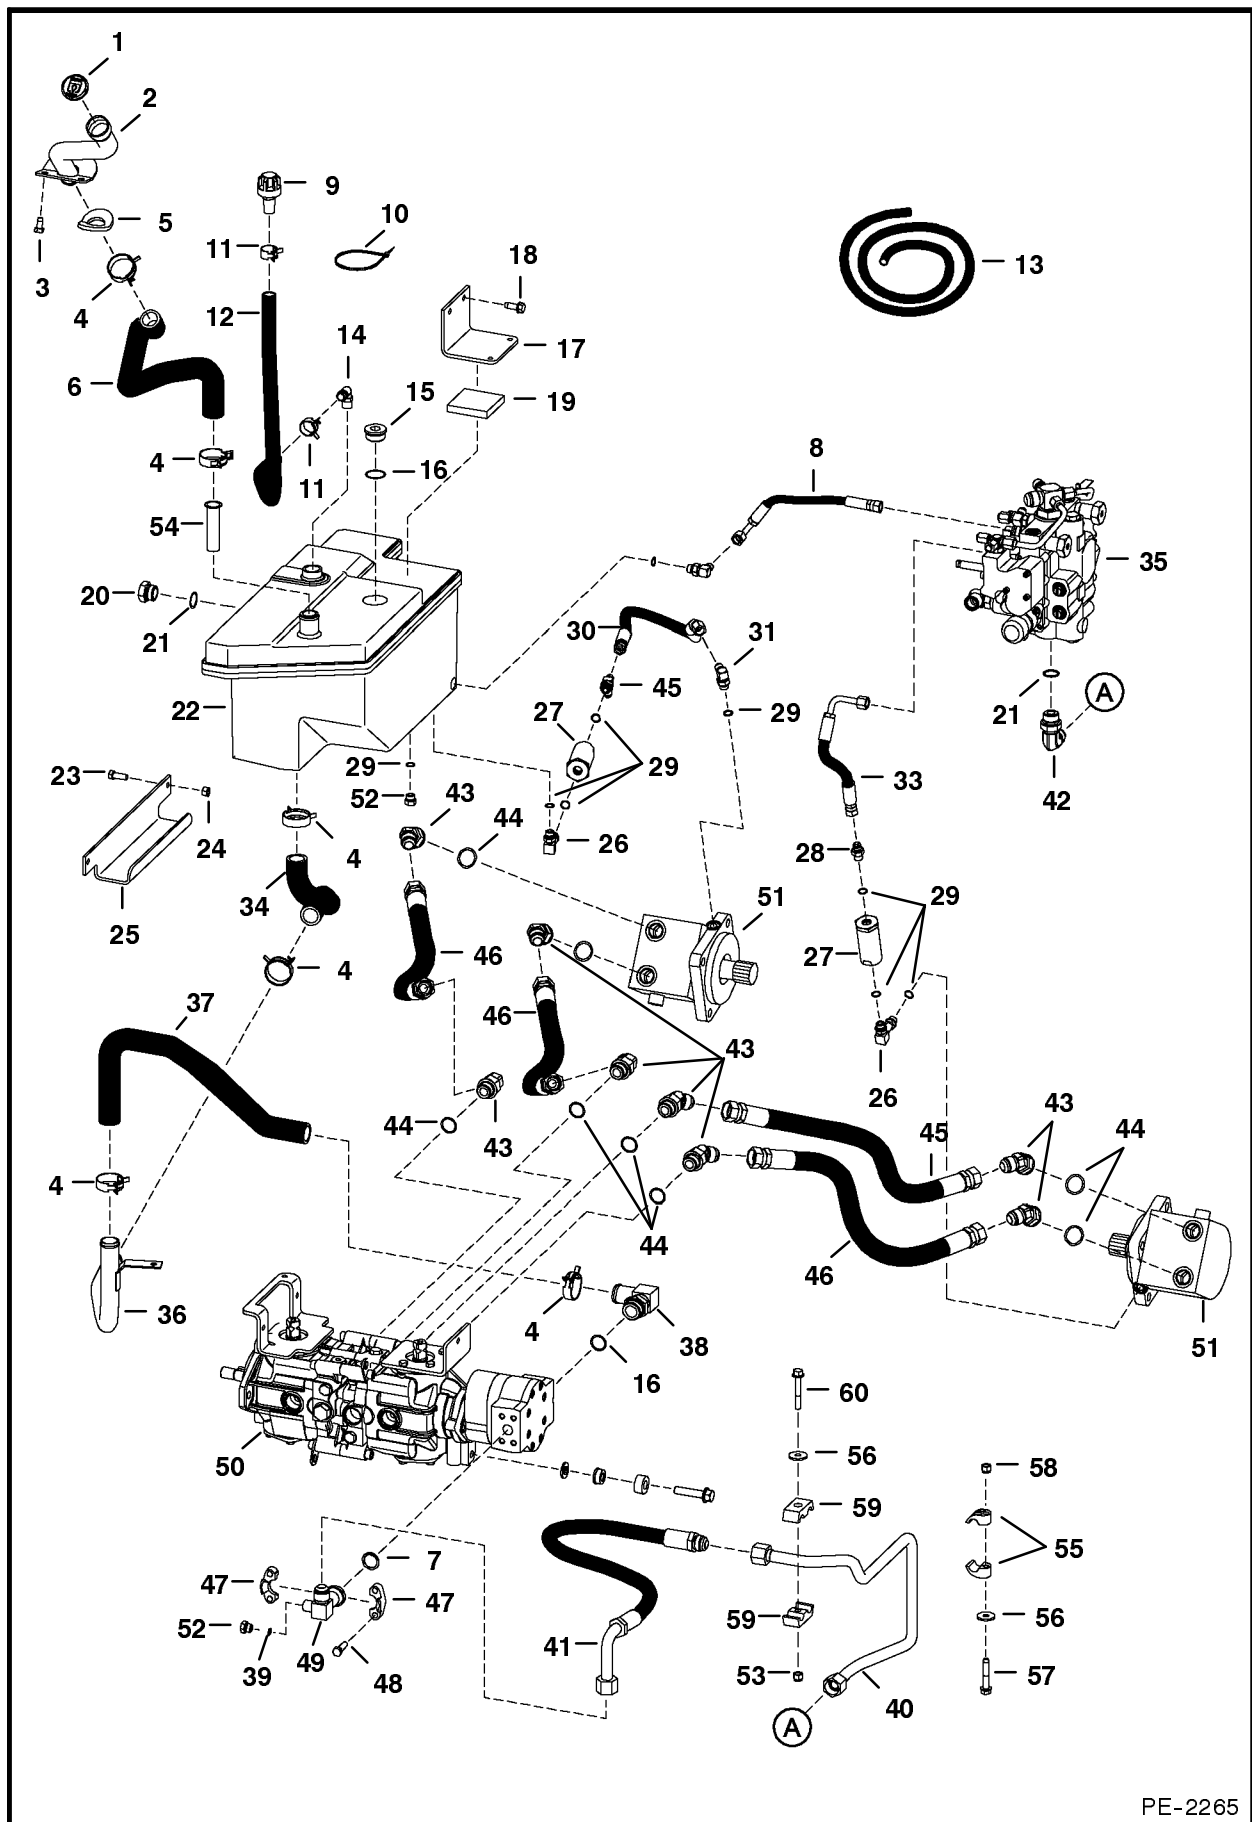


PE-2265

*** HYDROSTATIC CIRCUITRY (Cont'd)**

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*	6717827	CAP			1
2*	6717830	TUBE			1
3*	84G-3710	BOLT			2
4*	5HM-42	CLAMP			6
5*	6718772	GASKET			1
6*	6718020	HOSE			1
7*	55K-214	O-RING			1
8*	6734194	HOSE			1
9*	6684923	CAP	breather		1
10*	6610510	TIE			2
11*	5HM-24	CLAMP			2
12*	NAP	HOSE	21.5"(546,1 mm) long -		
13*	6578172	HOSE	Order Ref. 13 bulk - Sold Per Foot		1
14*	6727637	ELBOW	barbed		x
15*	47K-10	PLUG	W/Ref. 16		1
16*	79K-16	O-RING			1
17*	6726254	BRACKET			1
18*	84G-3716	BOLT			2
19*	6726255	PAD	bumper		1
20*	6665915	SIGHT GAUGE	W/Ref. 21		1
*	6734563	WASHER KIT			1
*	6734561	WASHER			1
*	25K-30118	O-RING			1
21*	79K-12	O-RING			1
22*	6728673	TANK			1
23*	17C-616	BOLT			2
24*	61D-6	NUT			2
25*	6726162	BRACKET			1
26*	6715190	ELBOW	W/Ref. 29		2
27*	6661022	FILTER			2
28*	15KB-606	ADAPTER	W/Ref. 29		1
29*	79K-6	O-RING			x
30*	6704631	HOSE			1
31*	17KB-606	ELBOW	W/Ref. 29		1
32*	36K-5	CAP			2
33*	7100142	HOSE			1
34*	6733652	HOSE			1
35*		VALVE	See Page 83		1
36*	6735922	TUBE			1
37*	6729052	HOSE			1
38*	6715191	ELBOW	W/Ref. 16		1
39*	95K-6	O-RING			1
40*	6736773	TUBE			1
41*	6733197	HOSE			1
42*	7101797	ADAPTER	W/Ref. 44		1
43*	6737453	ELBOW	W/Ref. 44		8
44*	79K-12	O-RING			9
45*	21KB-606	TEE	W/Ref. 29		1
46*	6736200	HOSE	mega seal - SEE NOTE		4
47*	19J-12	CLAMP			2

* HYDROSTATIC CIRCUITRY (Cont'd)

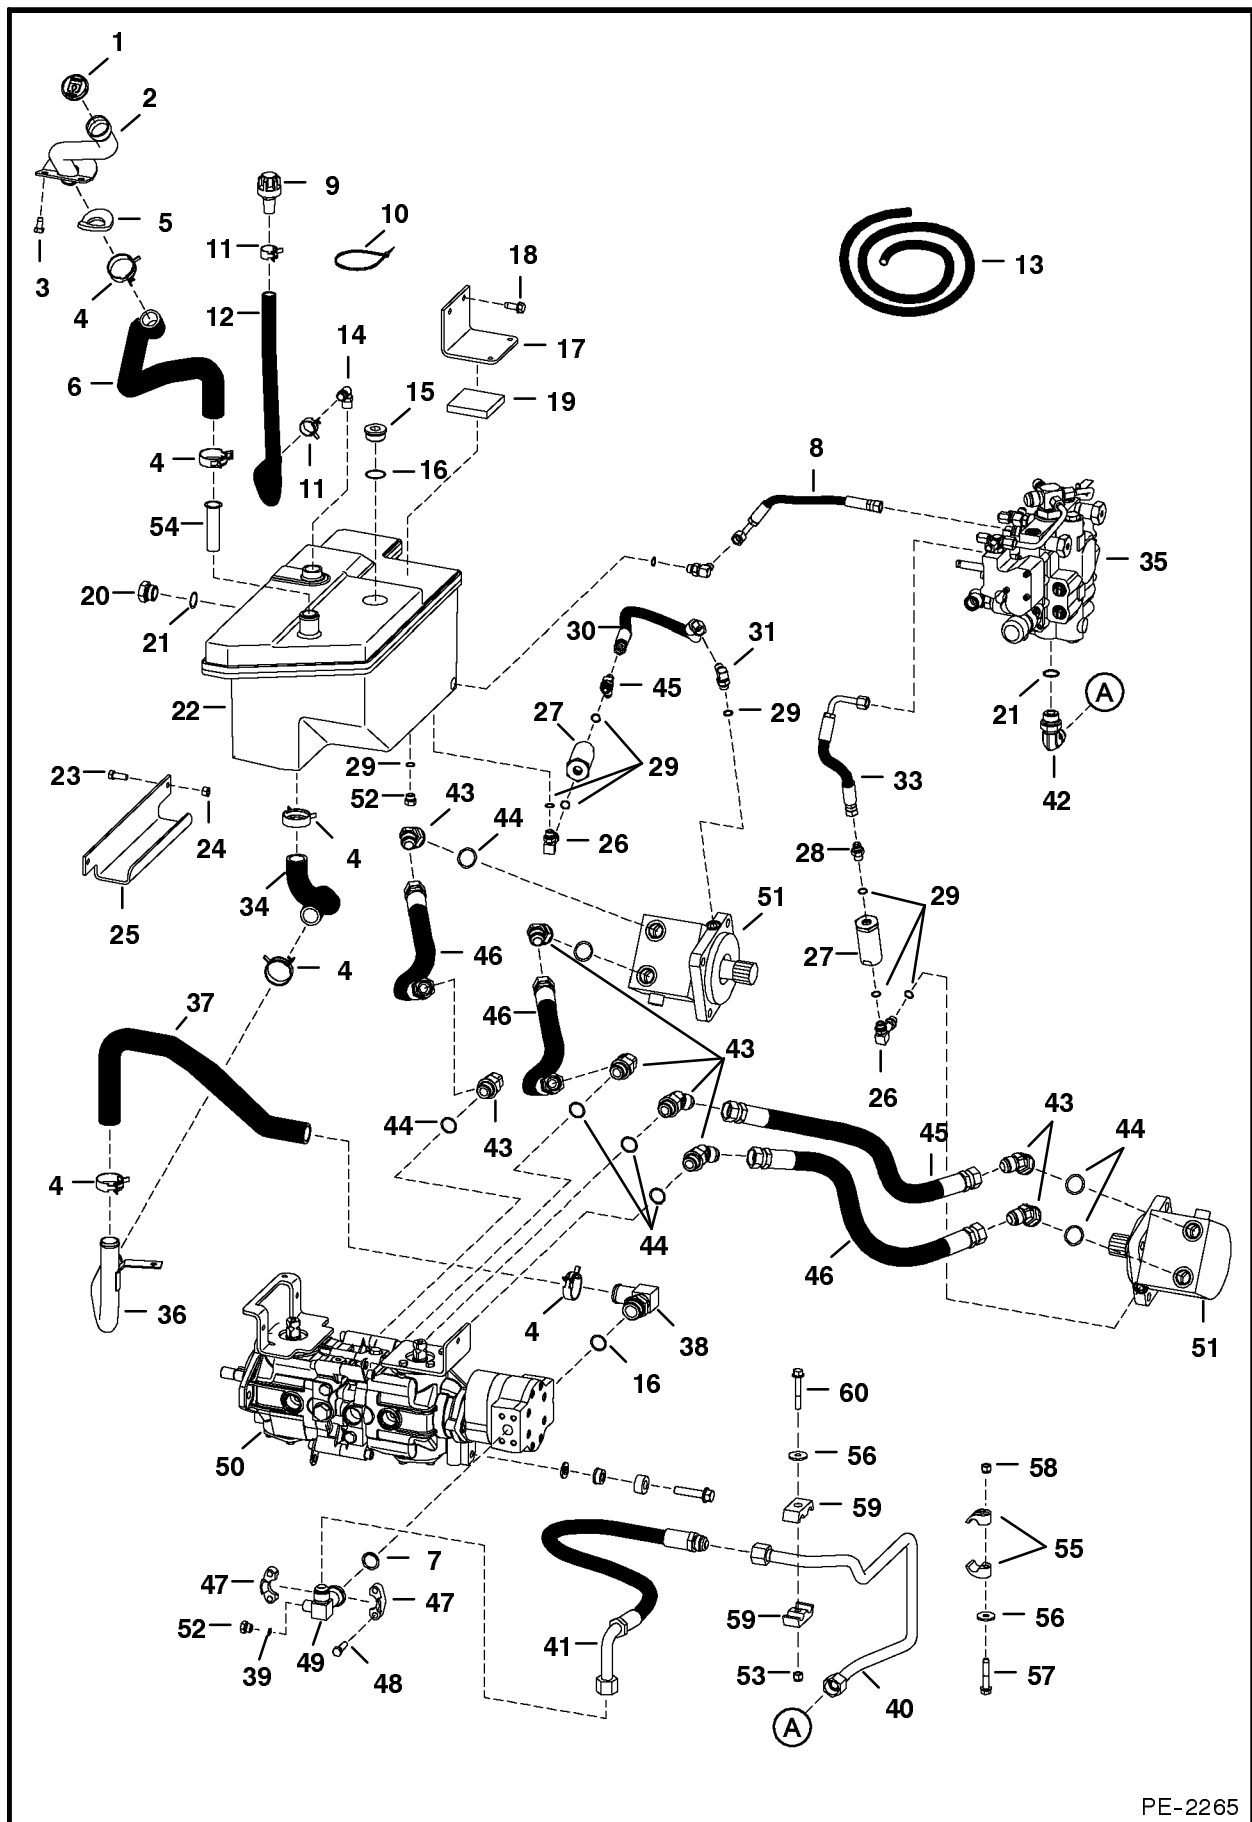


PE-2265

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

[illegible]

HYDROSTATIC CIRCUITRY

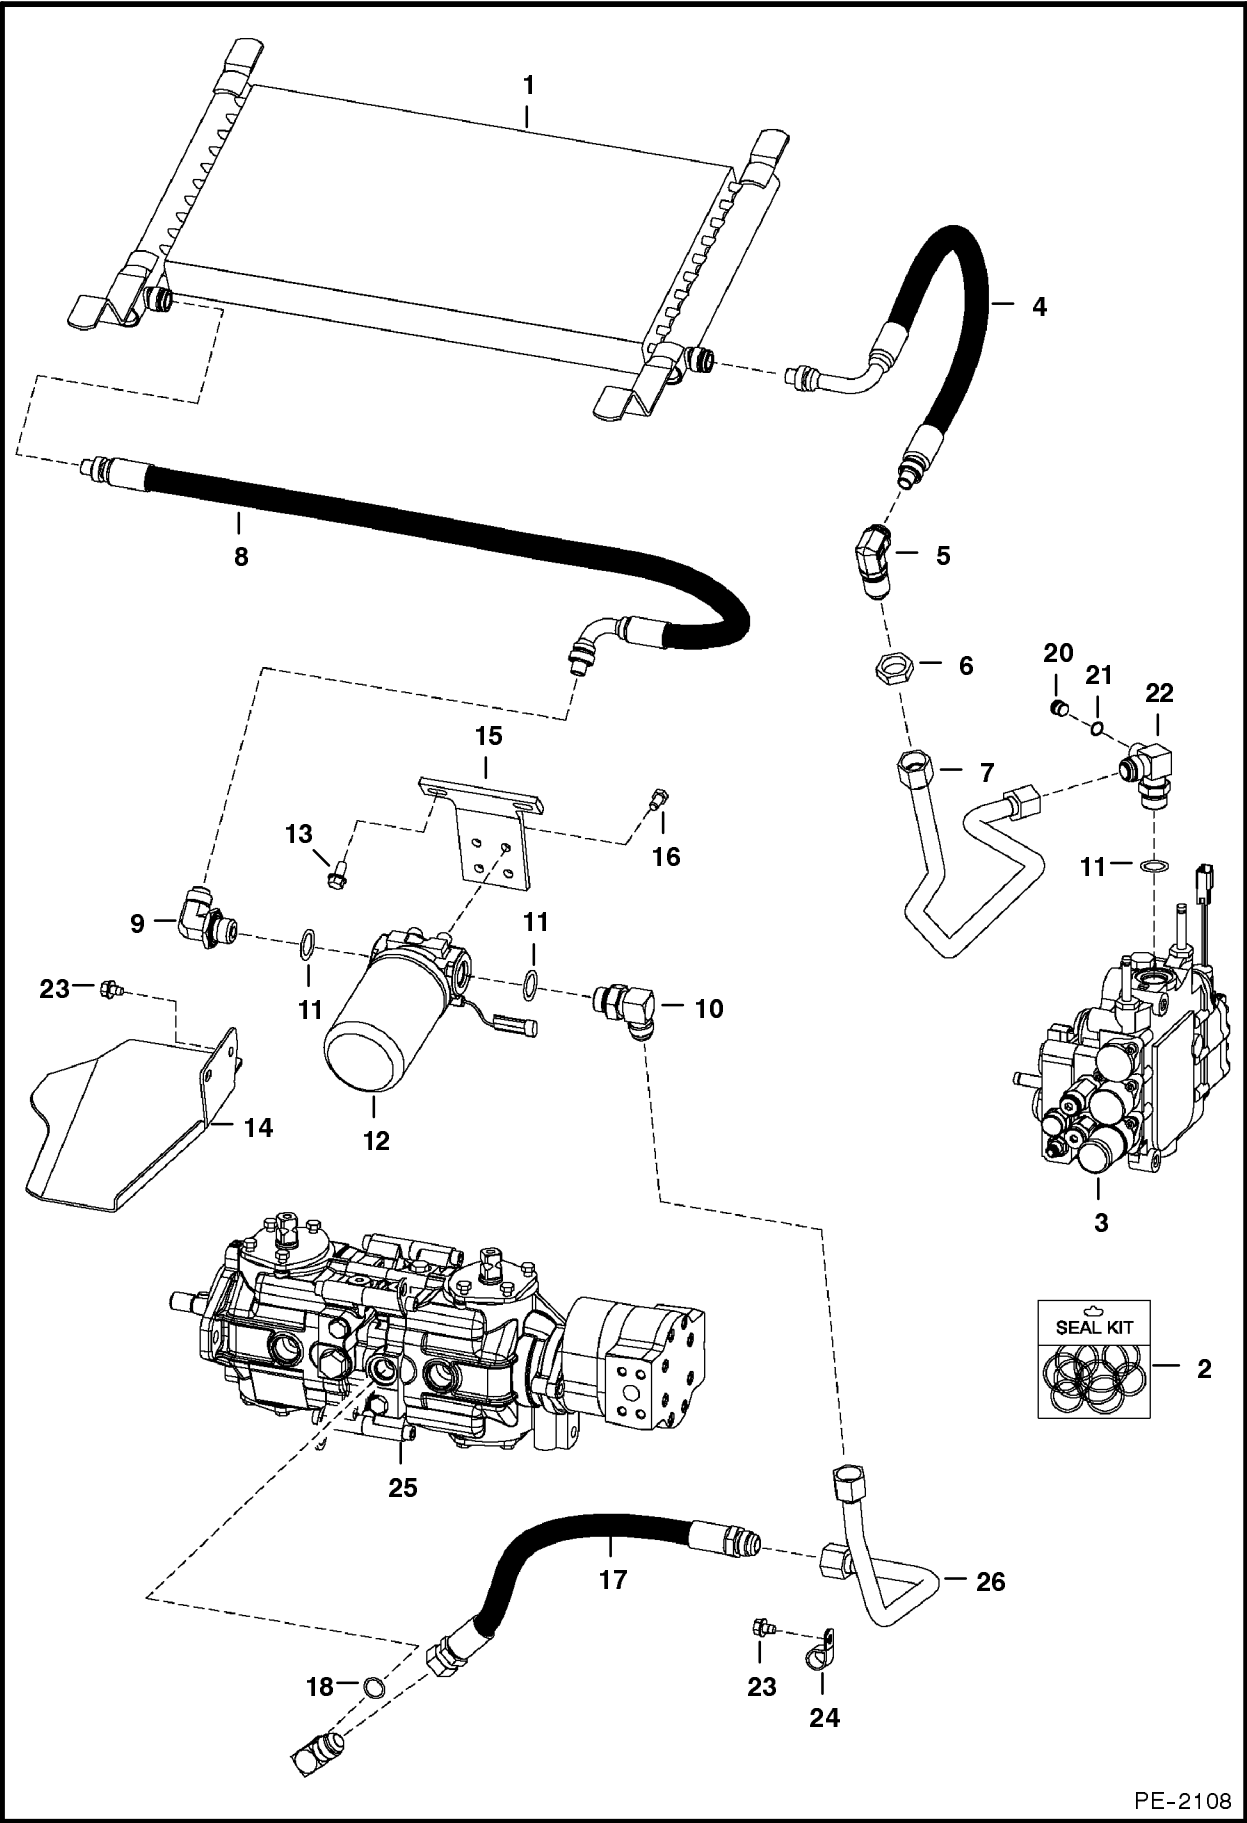


PE-2108

HYDROSTATIC CIRCUITRY (Cont'd)

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1	6734743	OIL COOLER			1
2	6674798	REPAIR KIT	For Ref. 1, 5 or 8 - includes internal retaining ring (1), O-ring (1) & back-up ring (1)		2
3		VALVE	See Page 79		1
4	6673828	HOSE			1
5	6670831	ELBOW			1
6	86F-8	NUT			1
7	6727640	TUBE			1
8	6681944	HOSE			1
9	6681945	ELBOW			1
10	17KB-1010	ELBOW	W/Ref. 11		1
11	79K-12	O-RING			x
12		FILTER ASSY	See Page 135		1
	6661248	ELEMENT			1
13	84G-3712	BOLT			2
14	6729083	MOUNT			1
15	6729082	MOUNT			1
16	17C-610	BOLT			4
17	6727643	HOSE			1
18	17KB-1210	ELBOW	W/Ref. 19		1
19	79K-10	O-RING			x
20	90K-5	PLUG	W/Ref. 21		1
21	75K-6	O-RING			1
22	6715653	TEE	W/Ref. 11		1
23	84G-3708	BOLT			3
24	30H-44	CLAMP			1
25		PUMP	See Page 123		1
26	6727647	TUBE			1

*** HYDROSTATIC CIRCUITRY**

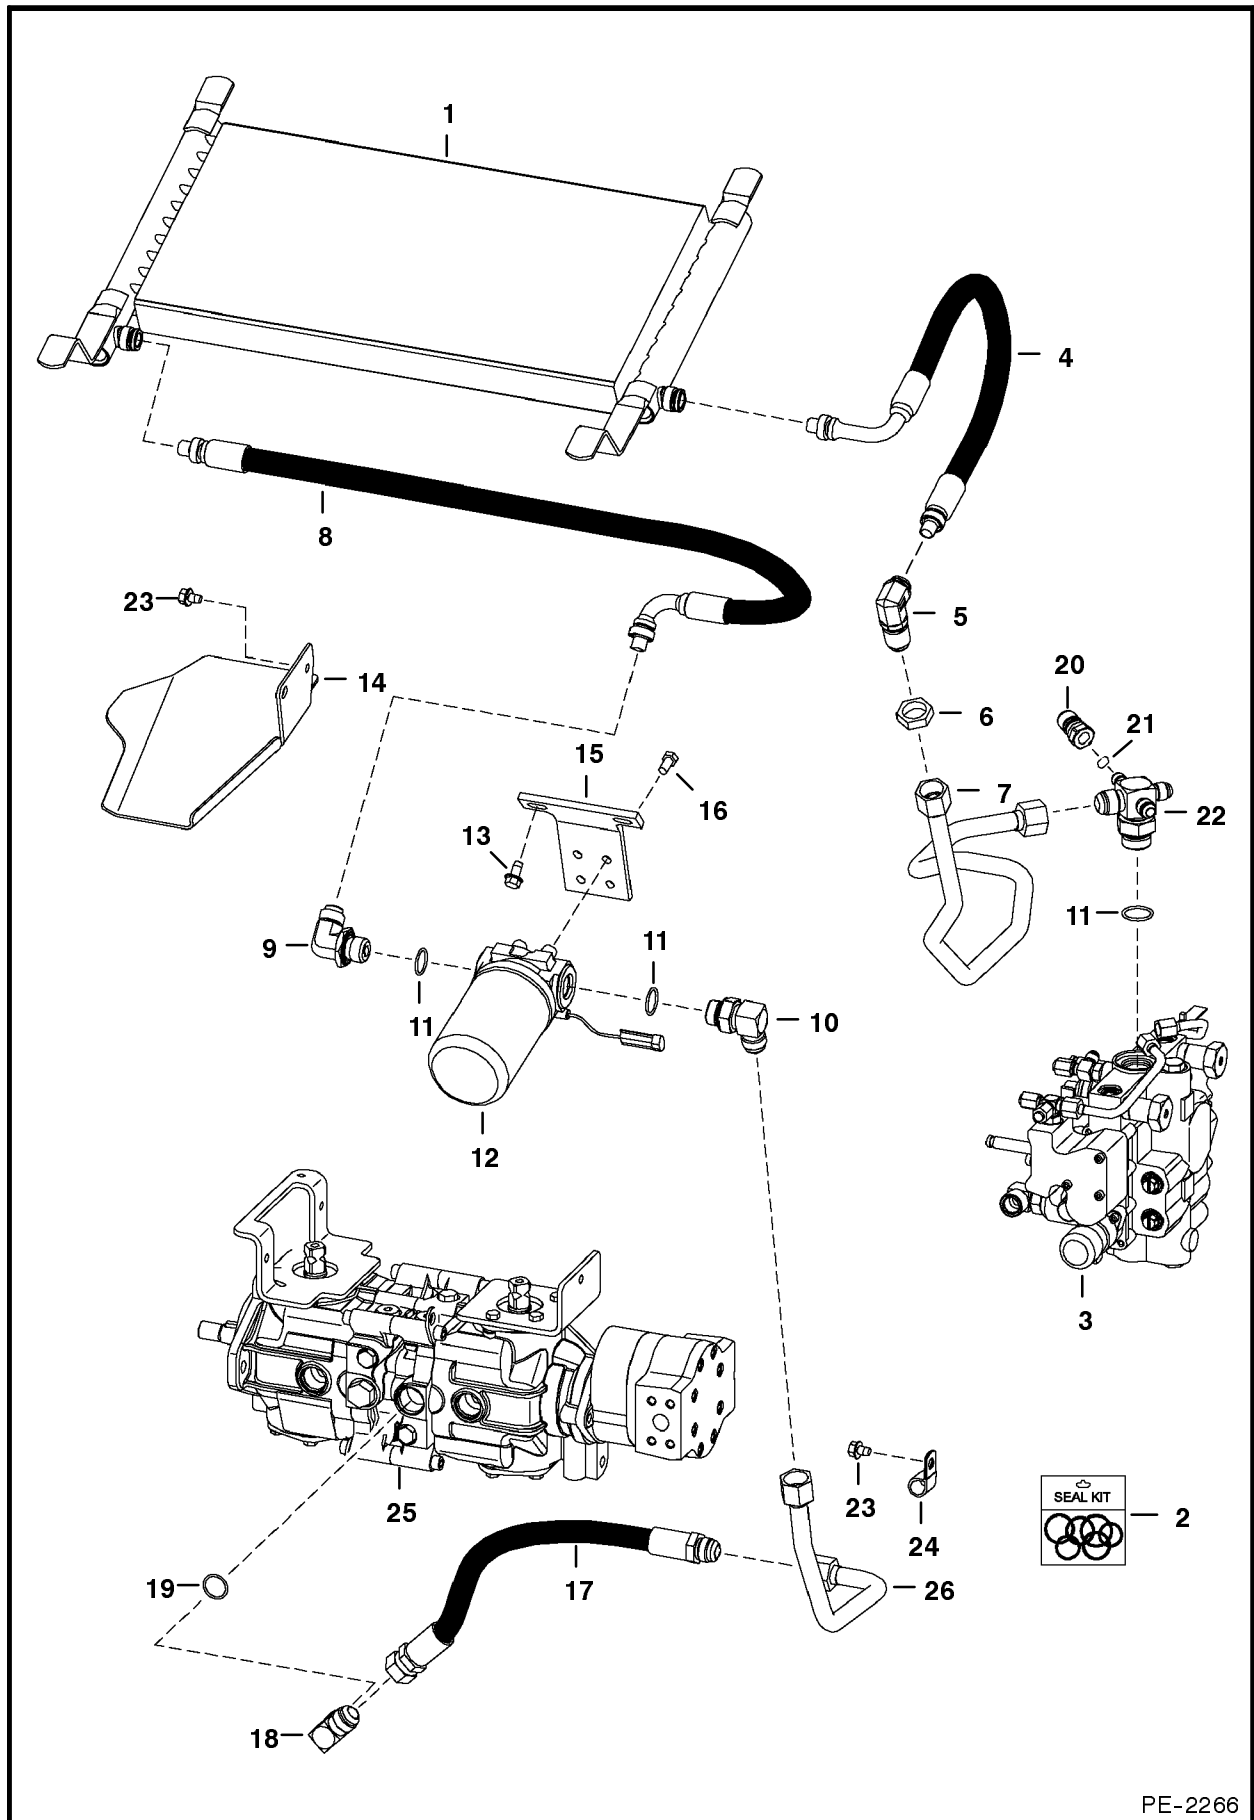


PE-2266

*** HYDROSTATIC CIRCUITRY (Cont'd)**

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*	6734743	OIL COOLER			1
2*	6674798	REPAIR KIT	For Ref. 1, 5 or 8 - includes internal retaining ring (1), O-ring (1) & back-up ring (1) See Page 83		2
3*		VALVE			1
4*	6673828	HOSE			1
5*	6670831	ELBOW			1
6*	86F-8	NUT			1
7*	6734190	TUBE			1
8*	6681944	HOSE			1
9*	6681945	ELBOW			1
10*	17KB-1212	ELBOW	W/Ref. 11		1
11*	79K-12	O-RING			x
12*		FILTER ASSY	See Page 135		1
*	6661248	ELEMENT			1
13*	84G-3712	BOLT			2
14*	6729083	MOUNT			1
15*	6729082	MOUNT			1
16*	17C-610	BOLT			4
17*	6735651	HOSE			1
18*	17KB-1210	ELBOW	W/Ref. 19		1
19*	79K-10	O-RING			x
20*	90K-5	PLUG	W/Ref. 21		1
21*	75K-6	O-RING			1
22*	6814433	CROSS	W/Ref. 11		1
23*	84G-3708	BOLT			3
24*	30H-44	CLAMP			1
25*		PUMP	See Page 123		1
26*	6727647	TUBE			1

HAND CONTROLS

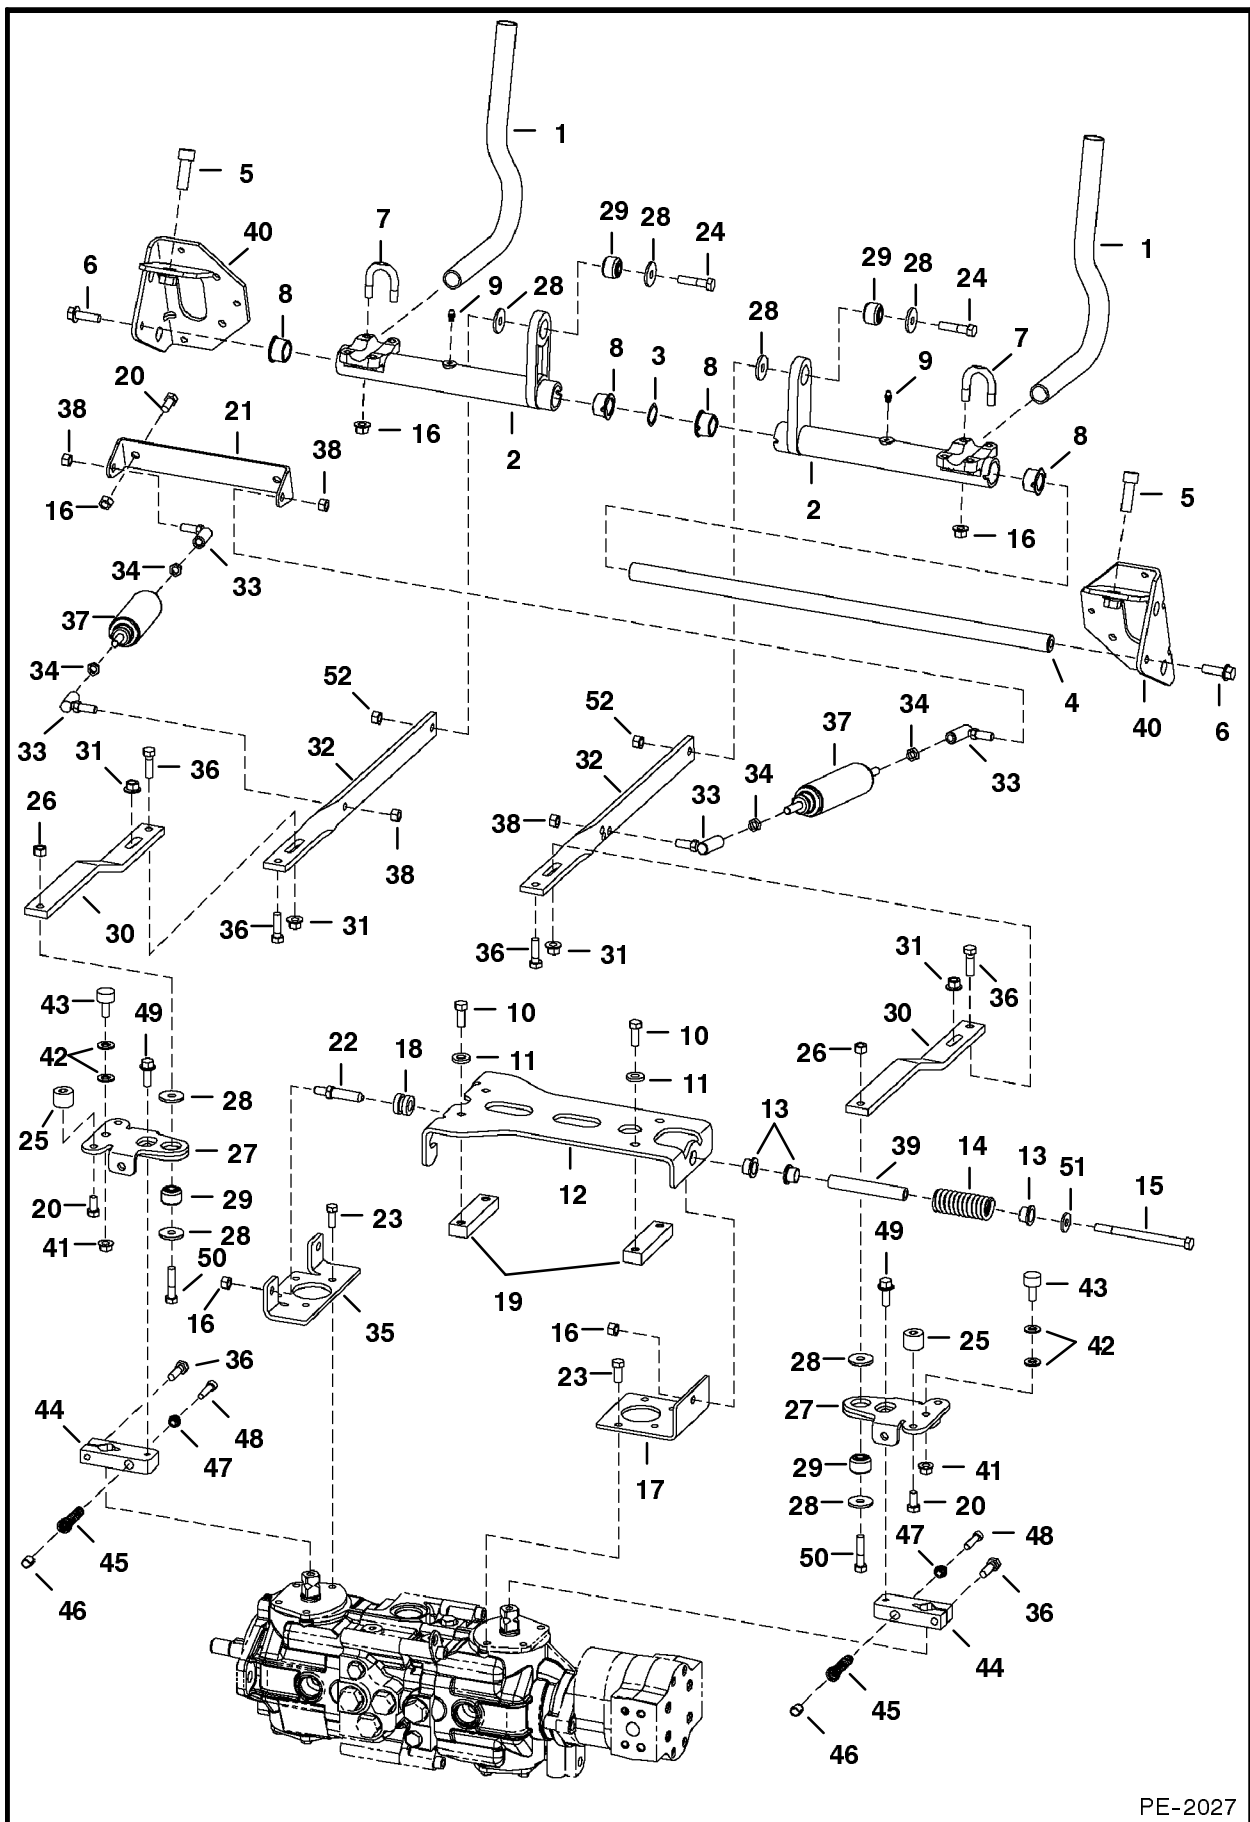


PE-2027

HAND CONTROLS (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6702543	LEVER			2
2	7101047	BELLCRANK	W/notch for bushing tab		2
3	6599741	WASHER	wave		1
4	6716545	ROD			1
5	73G-824	BOLT			2
6	45C-620	BOLT			2
7	6732997	U-BOLT			4
8	6703879	BUSHING	W/tab		4
	6673710	BEARING	needle - AHC		2
9	10H-35	GREASE ZERK			2
10	17C-616	BOLT			4
11	6557831	WASHER			4
12	6734298	MOUNT			1
13	6715163	BUSHING			3
14	6701535	SPRING			1
15	17C-680	BOLT			1
16	91D-6	NUT			18
17	6734742	BRACKET			1
18	6706098	GUIDE			2
19	6702716	BLOCK			2
20	17C-612	BOLT			2
21	6706106	MOUNT			1
22	6577058	PIN			2
23	1CM-820	BOLT			8
24	17C-628	BOLT			4
25	6711643	CAM			4
26	63D-6	NUT			2
27	6734429	LEVER			2
28	6737388	WASHER			8
29	6685060	BUSHING			4
30	6735253	LINK			2
31	83D-6	NUT			4
32	7100265	LINK			2
33	6599744	BALL JOINT			4
34	8D-6	NUT			4
35	6736764	BRACKET			1
36	17C-620	BOLT			6
37	6649551	SHOCK			2
38	62D-6	NUT			2
39	6715164	SLEEVE			1
40	6733022	BRACKET	R.H.		1
	6733024	BRACKET	L.H.		1
41	98D-6	NUT	AHC - See Page 145		4
42	25E-17	WASHER	AHC - See Page 145		8
*	7100699	WASHER	AHC - See Page 145 - .24" thick		8
43	6673789	BEARING	roller - AHC - See Page 145		4
44	6734299	BRACKET	centering		2
45	6734433	SPRING			2
46	4JM-1214	ROLL PIN			2
47	6737378	INSERT	threaded		2
48	74G-520	BOLT			2

HAND CONTROLS (Cont'd)

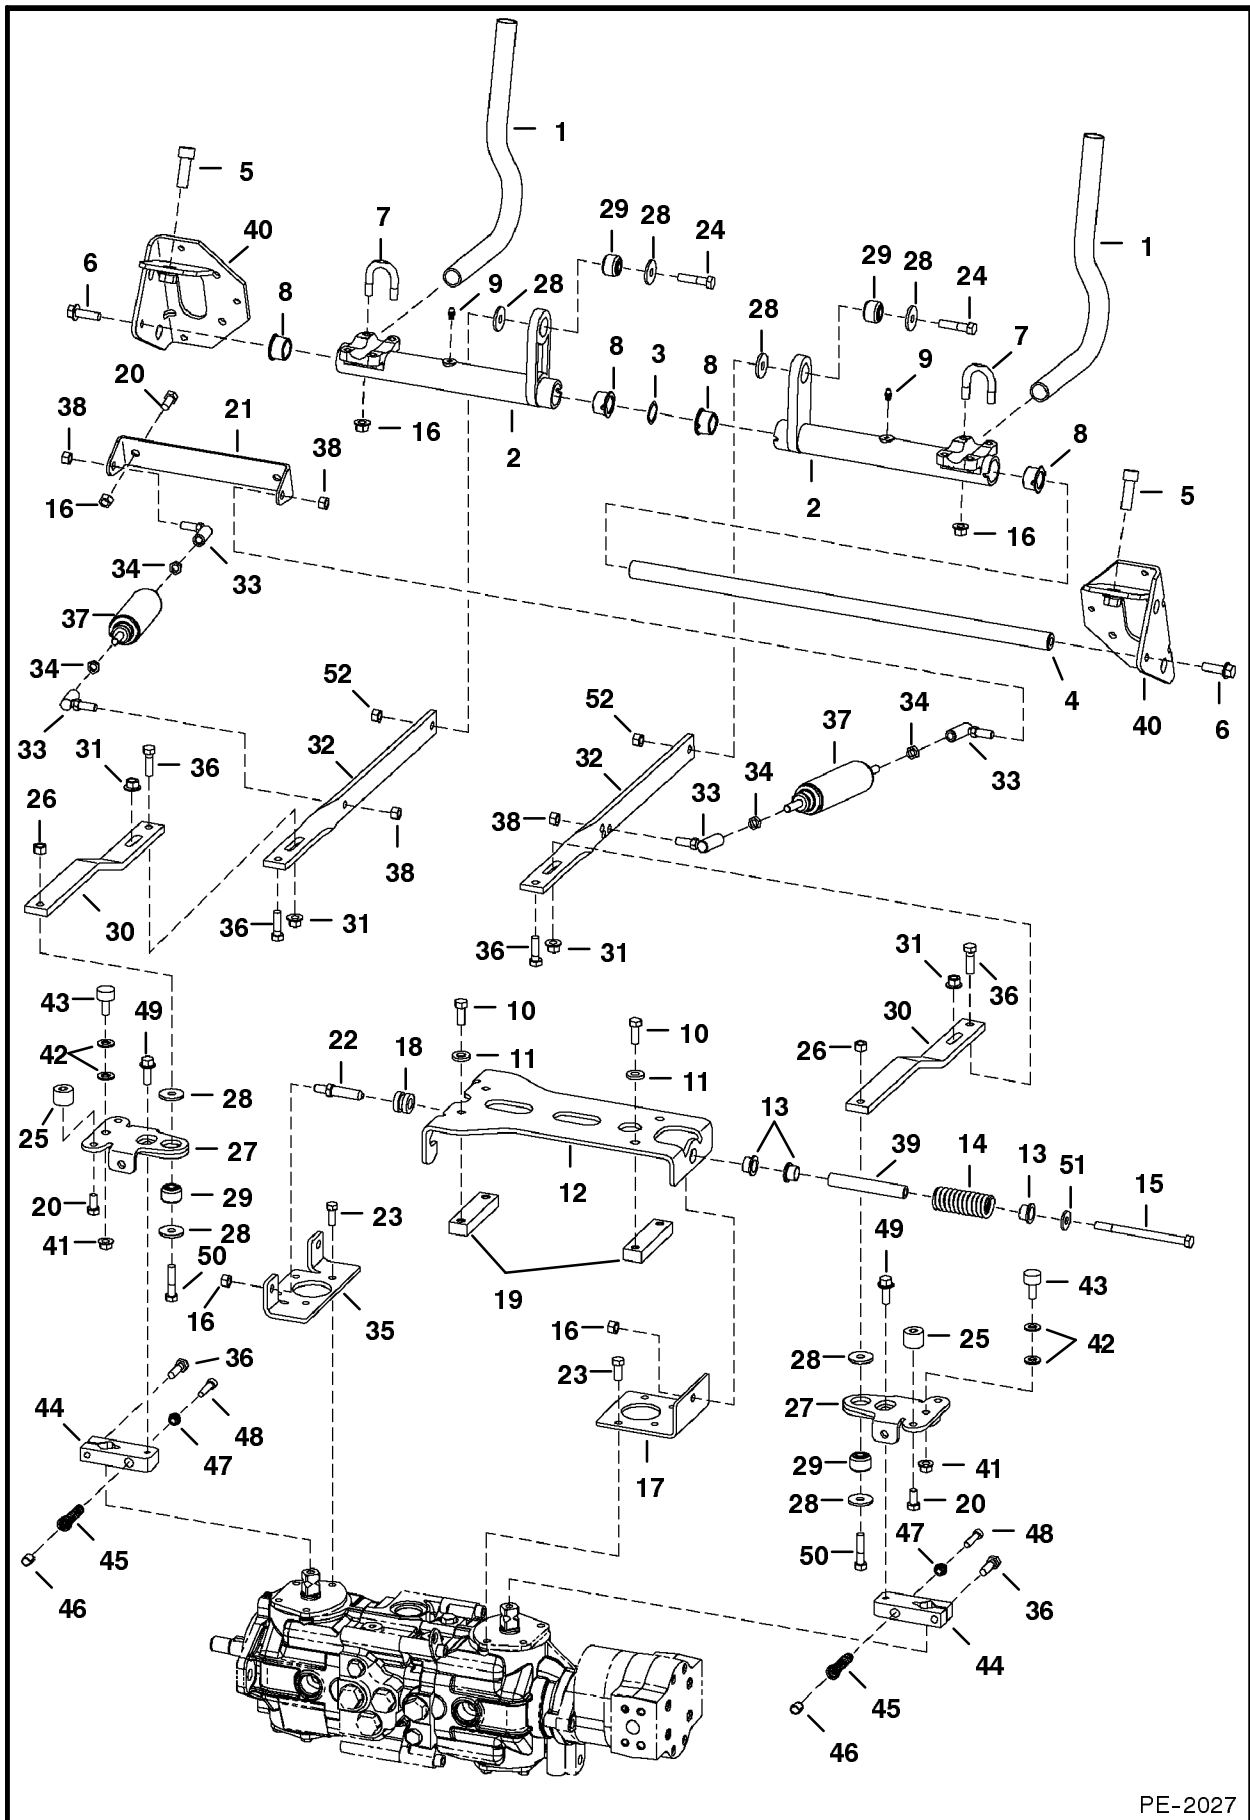


PE-2027

HAND CONTROLS (Cont'd)

[illegible]

HYDROSTATIC MOTOR

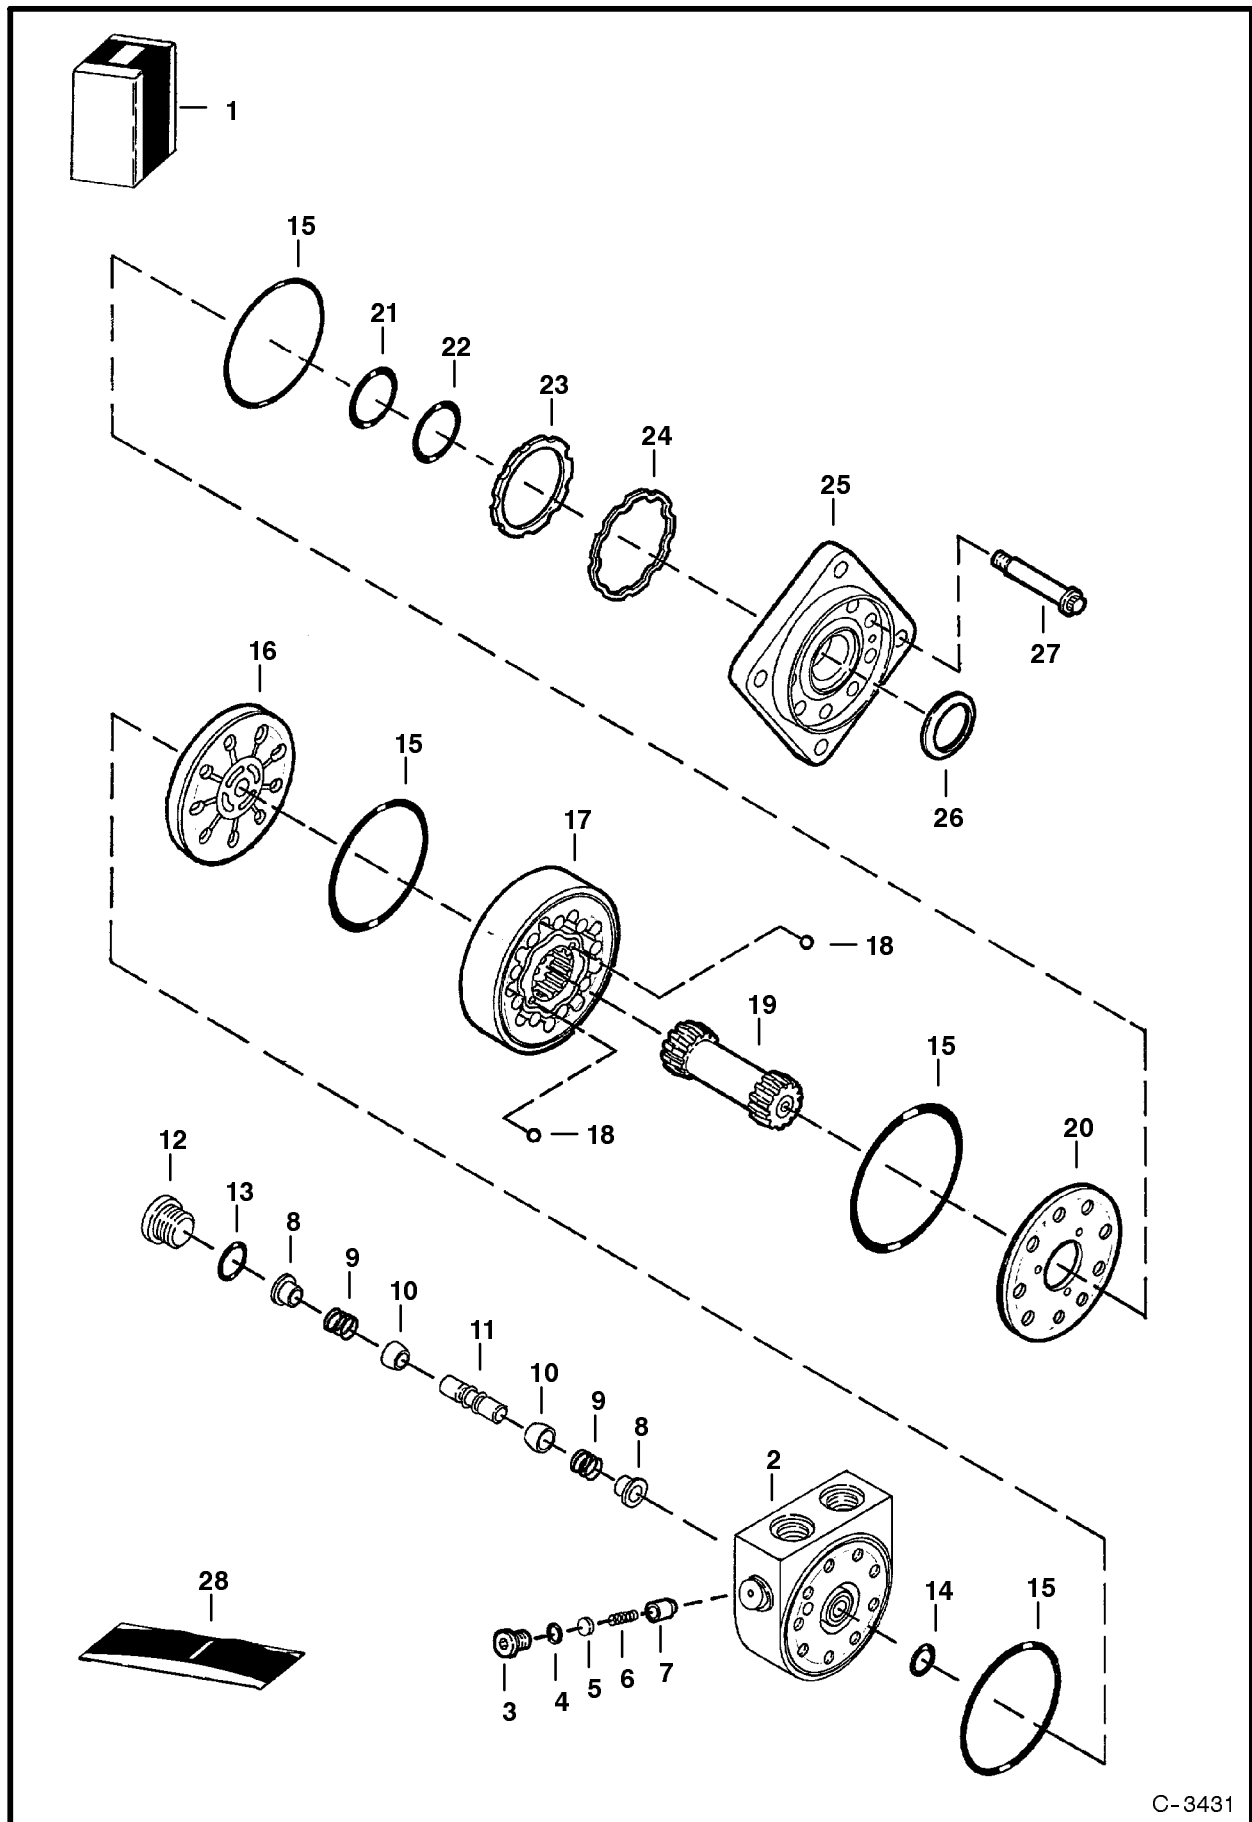


C-3431

HYDROSTATIC MOTOR (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6671617	MOTOR	Ref. 2-27		1
2	6669442	HOUSING	W/Ref. 3-7		1
3	6668079	PLUG	W/Ref. 4		1
4	79K-5	O-RING			1
5	6668080	SHIM			x
6	6669444	SPRING			1
7	6668082	POPPET			1
8	6561218	SHUTTLE			2
9	6513533	SPRING			2
10	6513532	POPPET			2
11	6668088	PISTON	shuttle		1
12	6668089	PLUG	W/Ref. 13		1
13	79K-6	O-RING			1
14	6669452	O-RING			1
15	6669446	O-RING			4
16	6669447	PLATE	valve		1
17	6672126	GEROLER			1
18	6651542	BALL			2
19	6669469	SHAFT			1
20	6669448	PLATE	balance		1
21	6669450	RING	backup		1
22	6669449	O-RING			1
23	6669453	SEAL			1
24	6669454	RING	backup		1
25	6669451	FLANGE	mounting		1
26	6664815	SEAL			1
27	6669470	BOLT			9
28	6669455	SEAL KIT	W/Ref. 4, 13, 14, 21-24 & 26		1

HYDROSTATIC PUMP

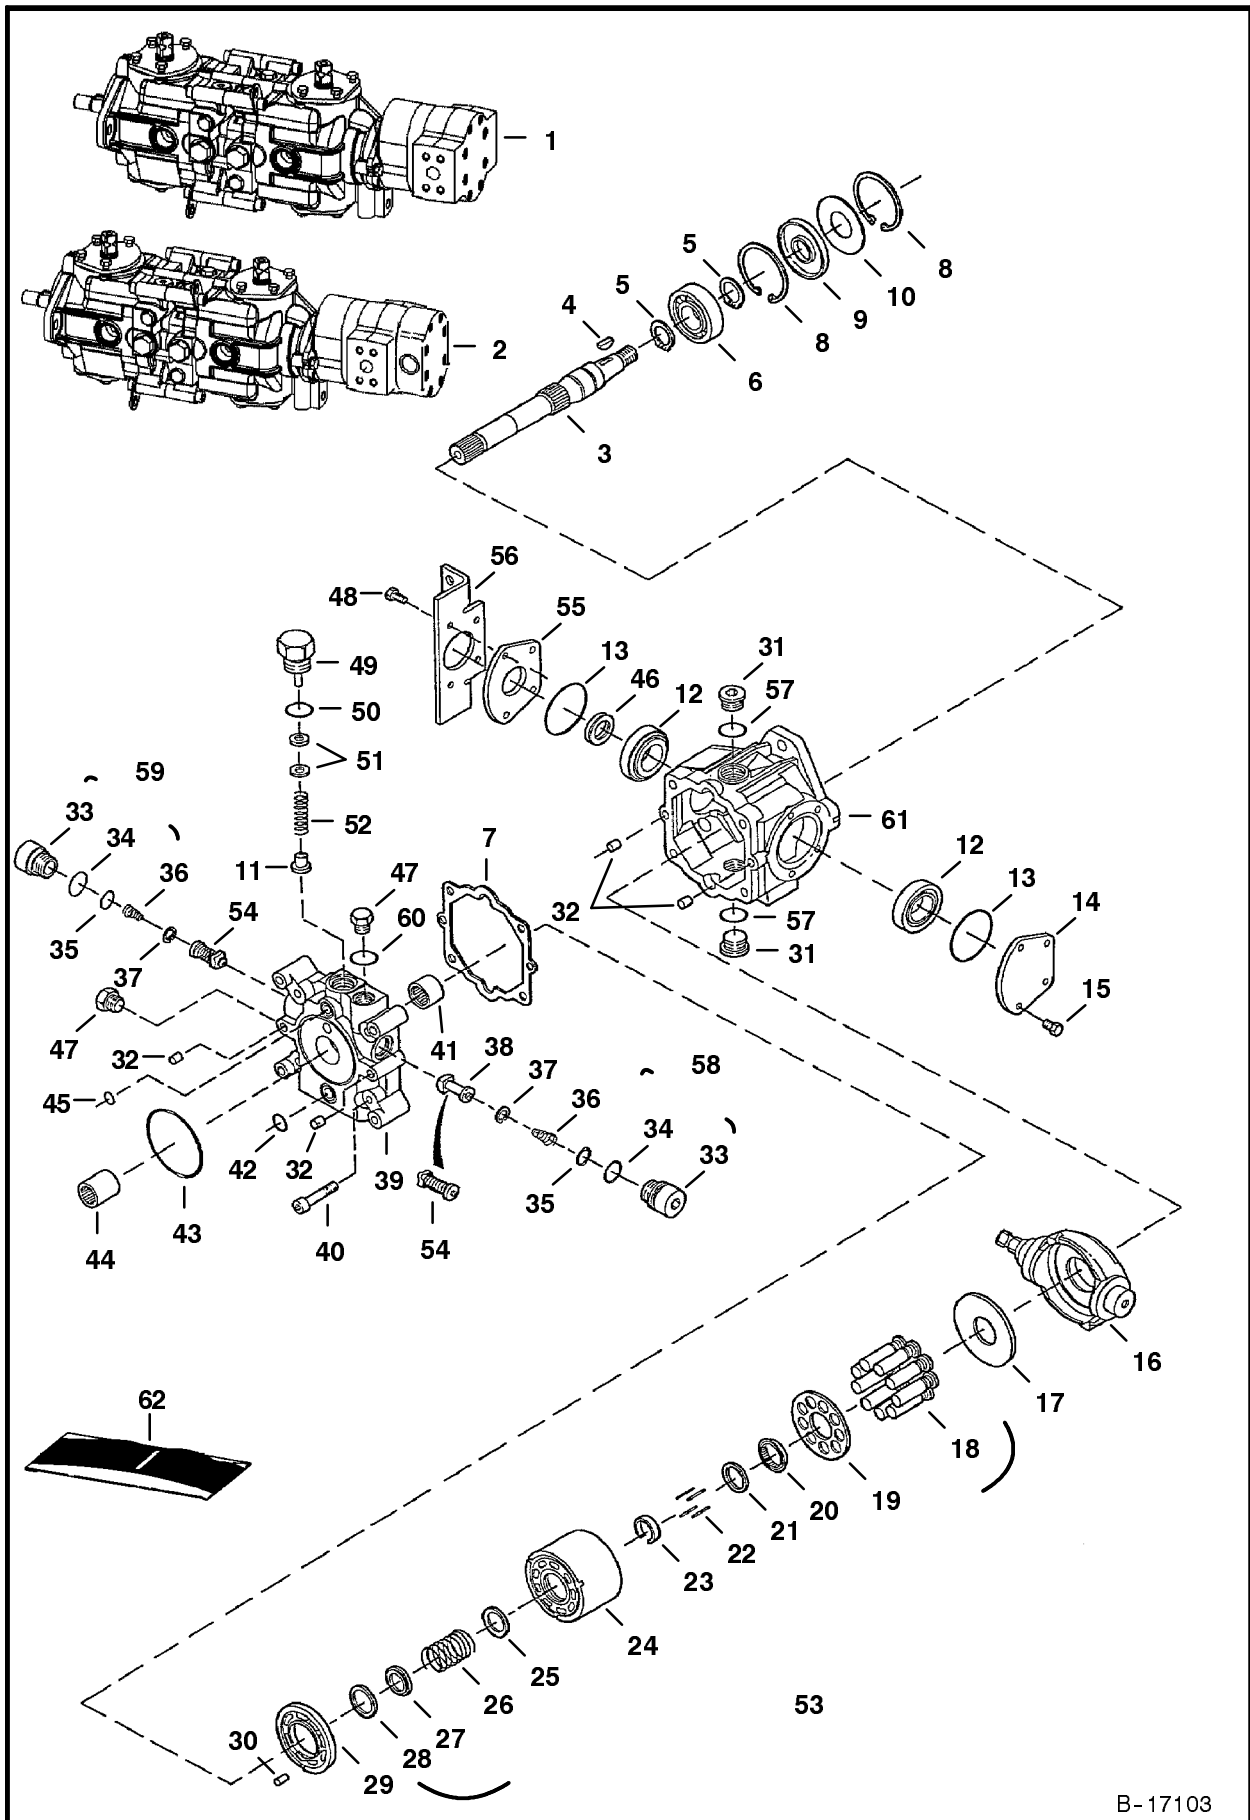


B-17103

HYDROSTATIC PUMP (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685032	PUMP	Model 4445160 - W/cast iron gear pump		1
2	6685033	PUMP	Model 4445161 - W/double cast iron gear pump for High Flow Hydraulics		1
3	6682260	SHAFT			1
4	6682261	KEY			1
5	658128	SNAP RING			2
6	654299	BEARING			1
7	6650634	GASKET			1
8	669863	SNAP RING			2
9	6645090	SEAL			1
10	6669409	WASHER			1
11	6650652	POPPET	charge relief		1
12	6669411	BEARING			2
13	6660814	O-RING			2
14	6657068	COVER			2
15	6650668	BOLT			4
16	6671513	SWASH PLATE	W/threaded shaft hole		1
17	6650627	WEAR PLATE			1
18	NAP	PISTON ASSY	Order Ref. 53		1
19	NAP	RETAINER	Order Ref. 53		1
20	NAP	RETAINER	guide - Order Ref. 53		1
21	6666338	WASHER			1
22	6650629	PIN			4
23	6650630	RETAINER			1
24	NAP	BLOCK	Order Ref. 53		1
25	NAP	WASHER	Order Ref. 53		1
26	NAP	SPRING	Order Ref. 53		1
27	NAP	WASHER	Order Ref. 53		1
28	NAP	WASHER	Order Ref. 53		1
29	6675340	VALVE PLATE			1
30	6650636	PIN			1
31	47K-8	PLUG	W/Ref. 57		2
32	6675342	PIN			4
33	NAP	PLUG	Order Ref. 58 or 59		2
34	6657028	O-RING			2
35	79K-8	O-RING			2
36	NAP	SPRING	Order Ref. 58 or 59		2
37	NAP	RETAINER	Order Ref. 58 or 59		2
38	NAP	CHECK VALVE	poppet - Order Ref. 58		1
39	6669406	END PLATE			1
40	6650637	BOLT			4
41	6650635	BEARING			1
42	6650647	O-RING			1
43	6645081	O-RING			1
44	6650675	COUPLER			1
45	6650646	O-RING			1
46	6673881	SEAL			1
47	6645086	PLUG	W/Ref. 60		2
48	6671518	BOLT			4

HYDROSTATIC PUMP (Cont'd)

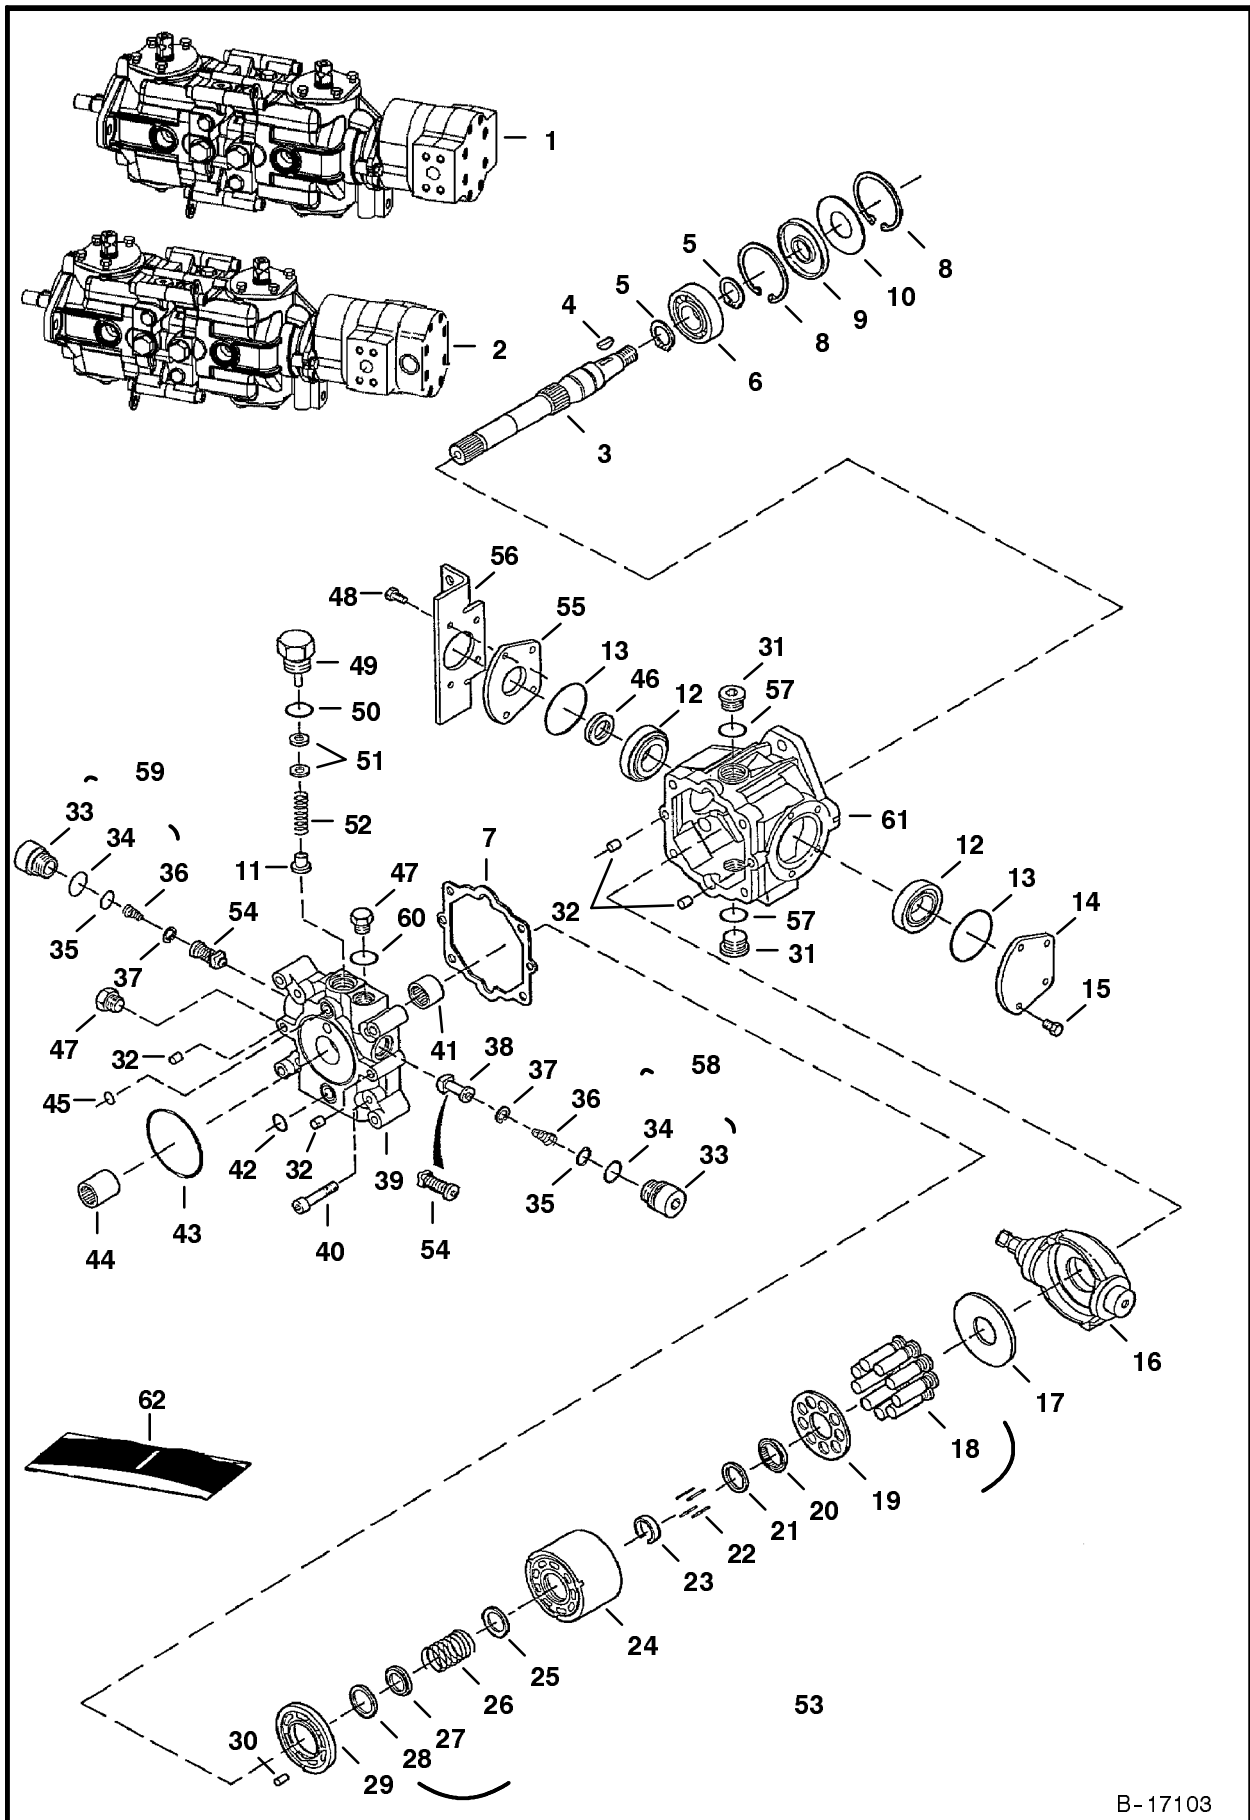


B-17103

HYDROSTATIC PUMP (Cont'd)

[illegible]

HYDROSTATIC PUMP

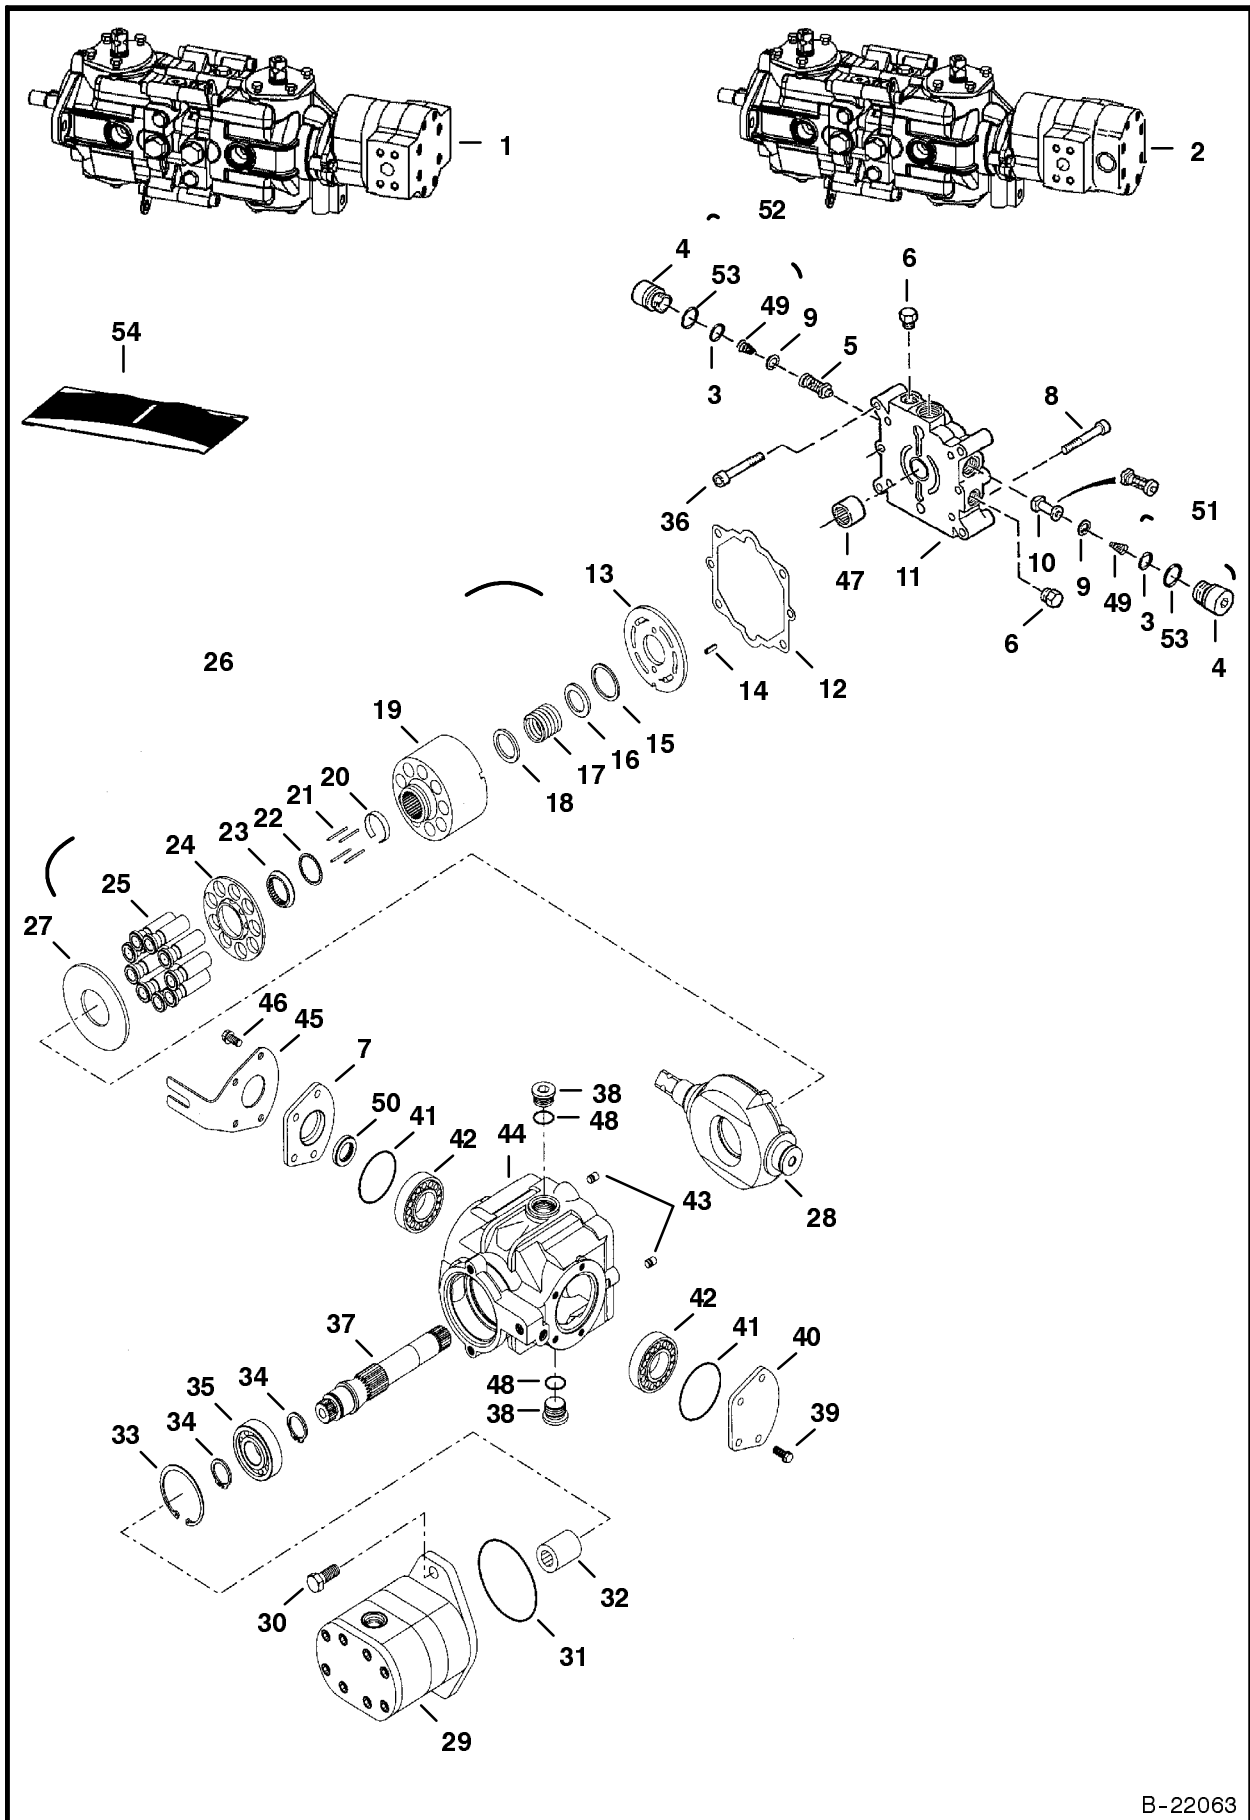


B-22063

HYDROSTATIC PUMP (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685032	PUMP	Model 4445160 - W/cast iron gear pump		1
2	6685033	PUMP	Model 4445161 - W/double cast iron gear pump for High Flow Hydraulics		1
3	79K-8	O-RING			2
4	NAP	PLUG	Order Ref. 51 or 52		2
5	NAP	RELIEF VALVE	5000 PSI (345 bar)- Order Ref. 52		1
6	6645086	PLUG			4
7	6657067	COVER	W/Ref. 50		1
8	6650637	BOLT			2
9	NAP	RETAINER	Order Ref. 51 or 52		4
10	NAP	CHECK VALVE	poppet - Order Ref. 51		1
11	6669405	END CAP			1
12	6650634	GASKET			1
13	6675339	VALVE PLATE			1
14	6650636	PIN			2
15	NAP	RETAINER	Order Ref. 26		1
16	NAP	WASHER	Order Ref. 26		1
17	NAP	SPRING	Order Ref. 26		1
18	NAP	WASHER	Order Ref. 26		1
19	NAP	BLOCK	Order Ref. 26		1
20	6650630	RETAINER			1
21	6650629	PIN			4
22	6666338	WASHER			1
23	NAP	RETAINER	Order Ref. 26		1
24	NAP	RETAINER	Order Ref. 26		1
25	NAP	PISTON ASSY	Order Ref. 26		1
26	6671512	BLOCK ASSY			1
27	6650627	PLATE			1
28	6671513	SWASH PLATE	W/threaded shaft		1
29		GEAR PUMP	single - cast iron - See Page 131		1
		GEAR PUMP	double cast iron - See Page 103		1
30	6666339	BOLT			2
31	6645080	O-RING	For Ref. 1		1
	6660339	GASKET	For Ref. 2		1
32	6671509	COUPLER			1
33	669863	SNAP RING			1
34	658128	SNAP RING			2
35	654299	BEARING			1
36	6652018	BOLT			4
37	6669407	SHAFT			1
38	47K-8	PLUG	W/Ref. 48		1
39	6650668	BOLT			4
40	6657068	COVER			1
41	6660814	O-RING			2
42	6669411	BEARING			2
43	6675342	PIN			2
44	6669403	HOUSING			1
45	6734742	BRACKET			1
46	6650668	BOLT			4

HYDROSTATIC PUMP (Cont'd)

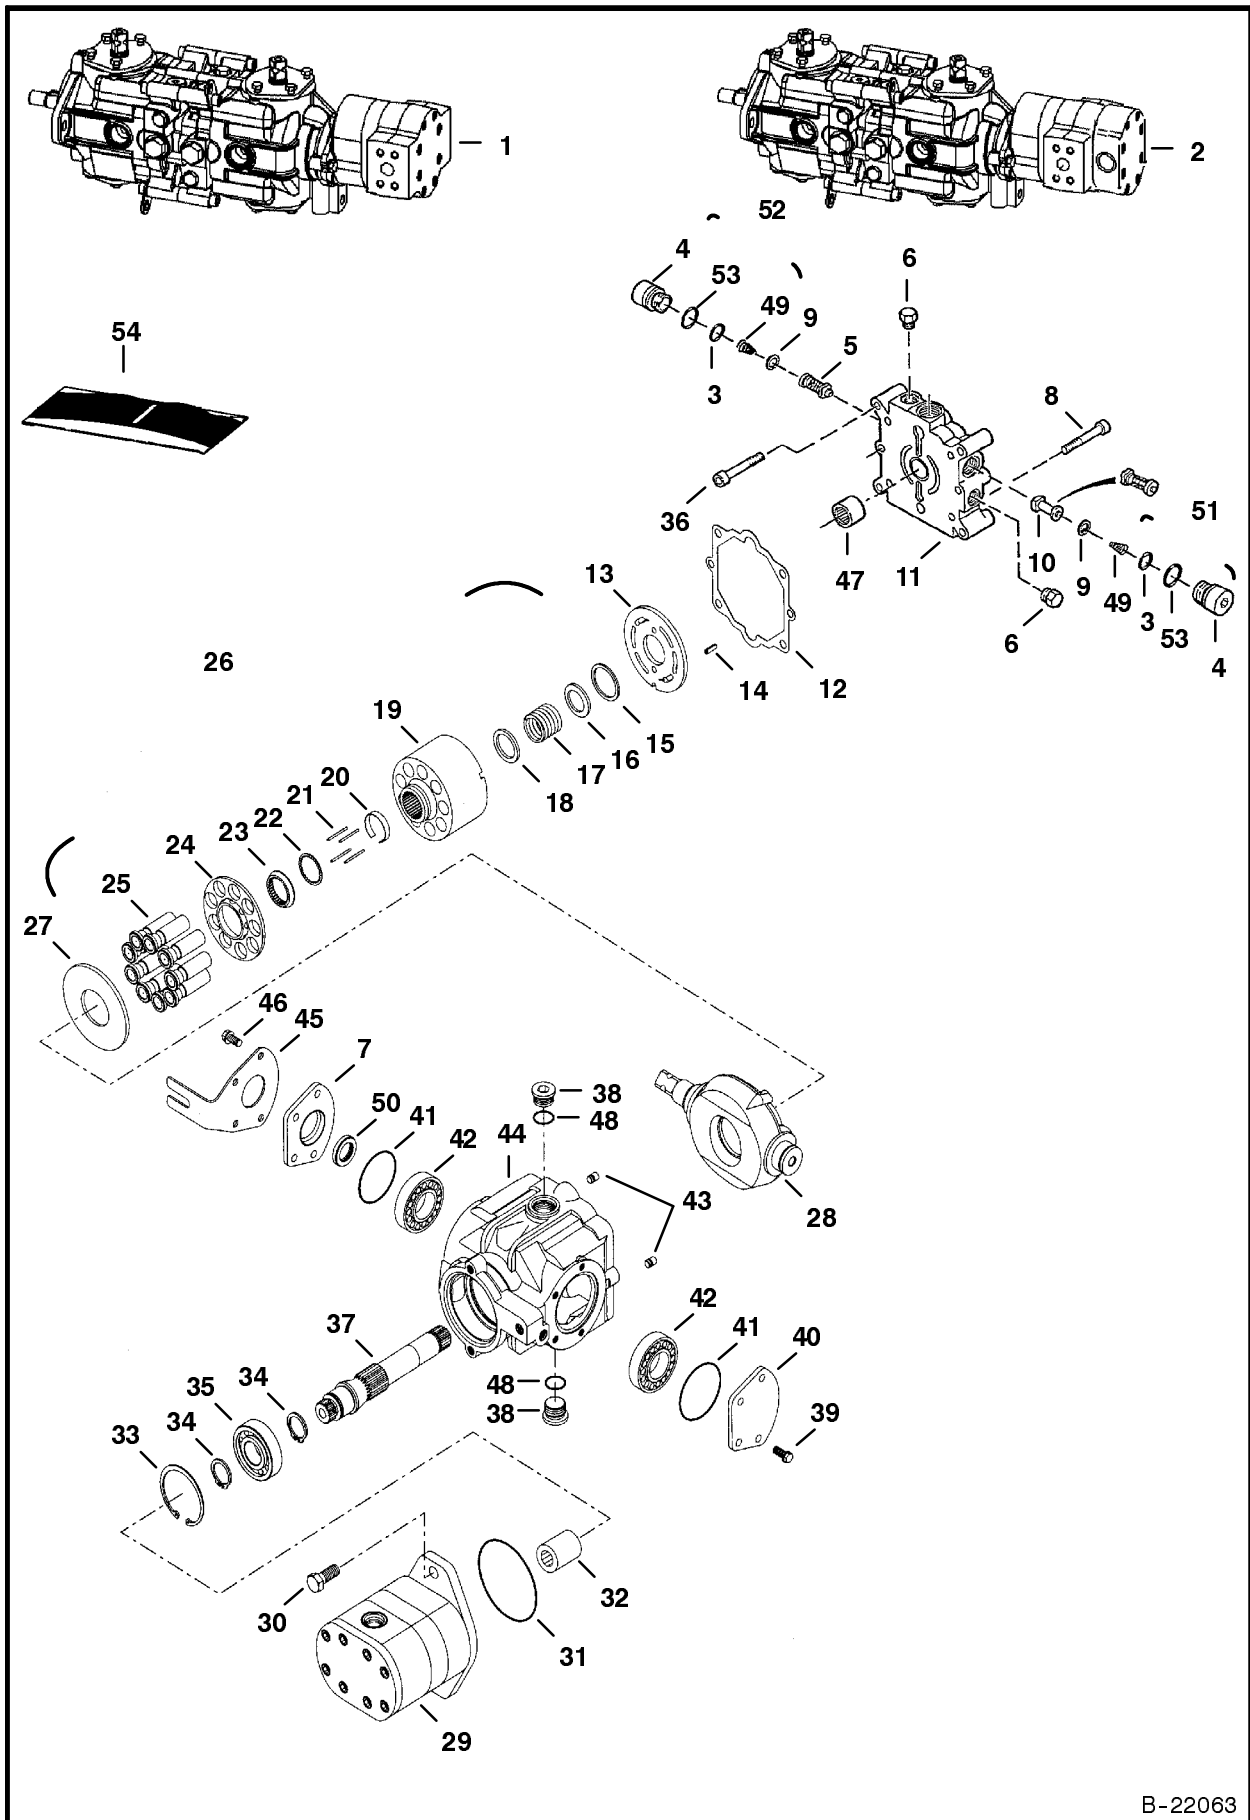

B-22063

HYDROSTATIC PUMP (Cont'd)


[illegible]

This technical drawing shows an exploded view of a mechanical assembly. The components are arranged in a linear sequence from left to right. On the far left is a circular flange with a central hub. This is followed by a series of smaller circular and ring-like components. The central part of the assembly features a large, complex circular component with internal teeth or a gear-like structure, labeled with the number '1'. To the right of this central component is another large, rectangular block with a circular opening on its side, labeled with the number '2'. Further to the right are several long, thin rods or pins. The diagram uses perspective to show the three-dimensional nature of the parts.

GEAR PUMP (Cont'd)

[illegible]

HYDROSTATIC OIL FILTER
(In-Line)

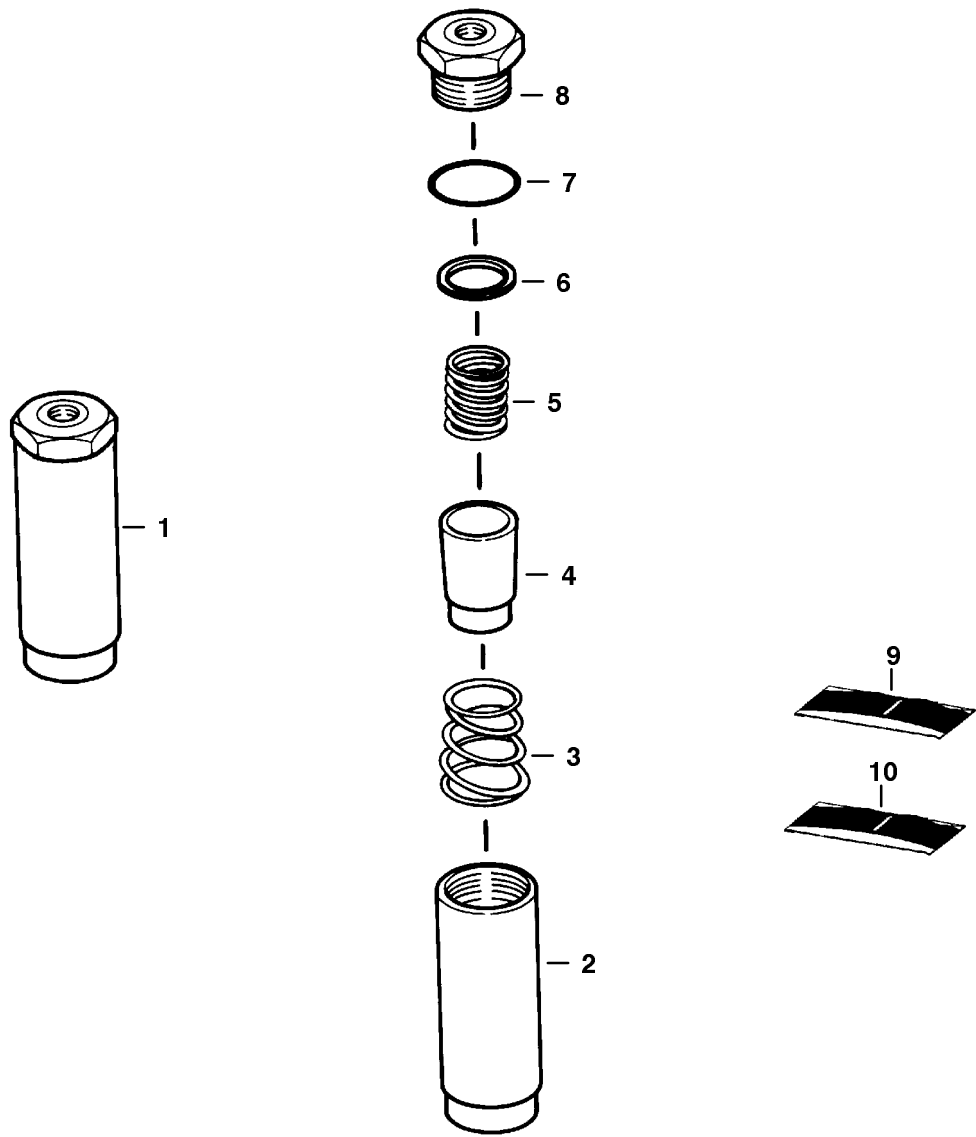


B-13527

HYDROSTATIC OIL FILTER (Cont'd)

(In-Line)

[illegible]

HYDROSTATIC OIL FILTER

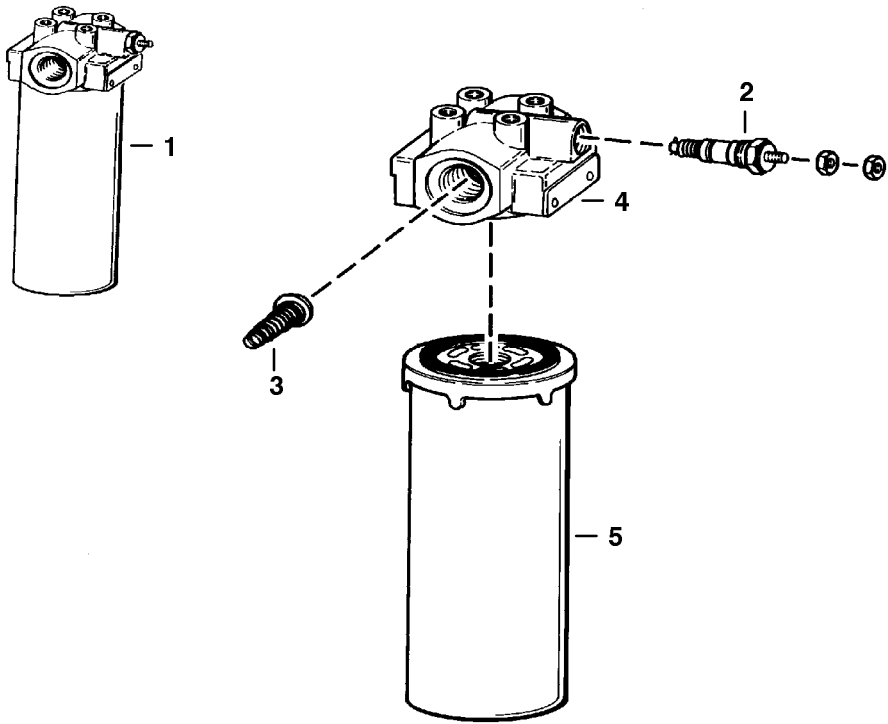


B-16487

HYDROSTATIC OIL FILTER (Cont'd)

[illegible]

CAB ELECTRICAL CIRCUITRY

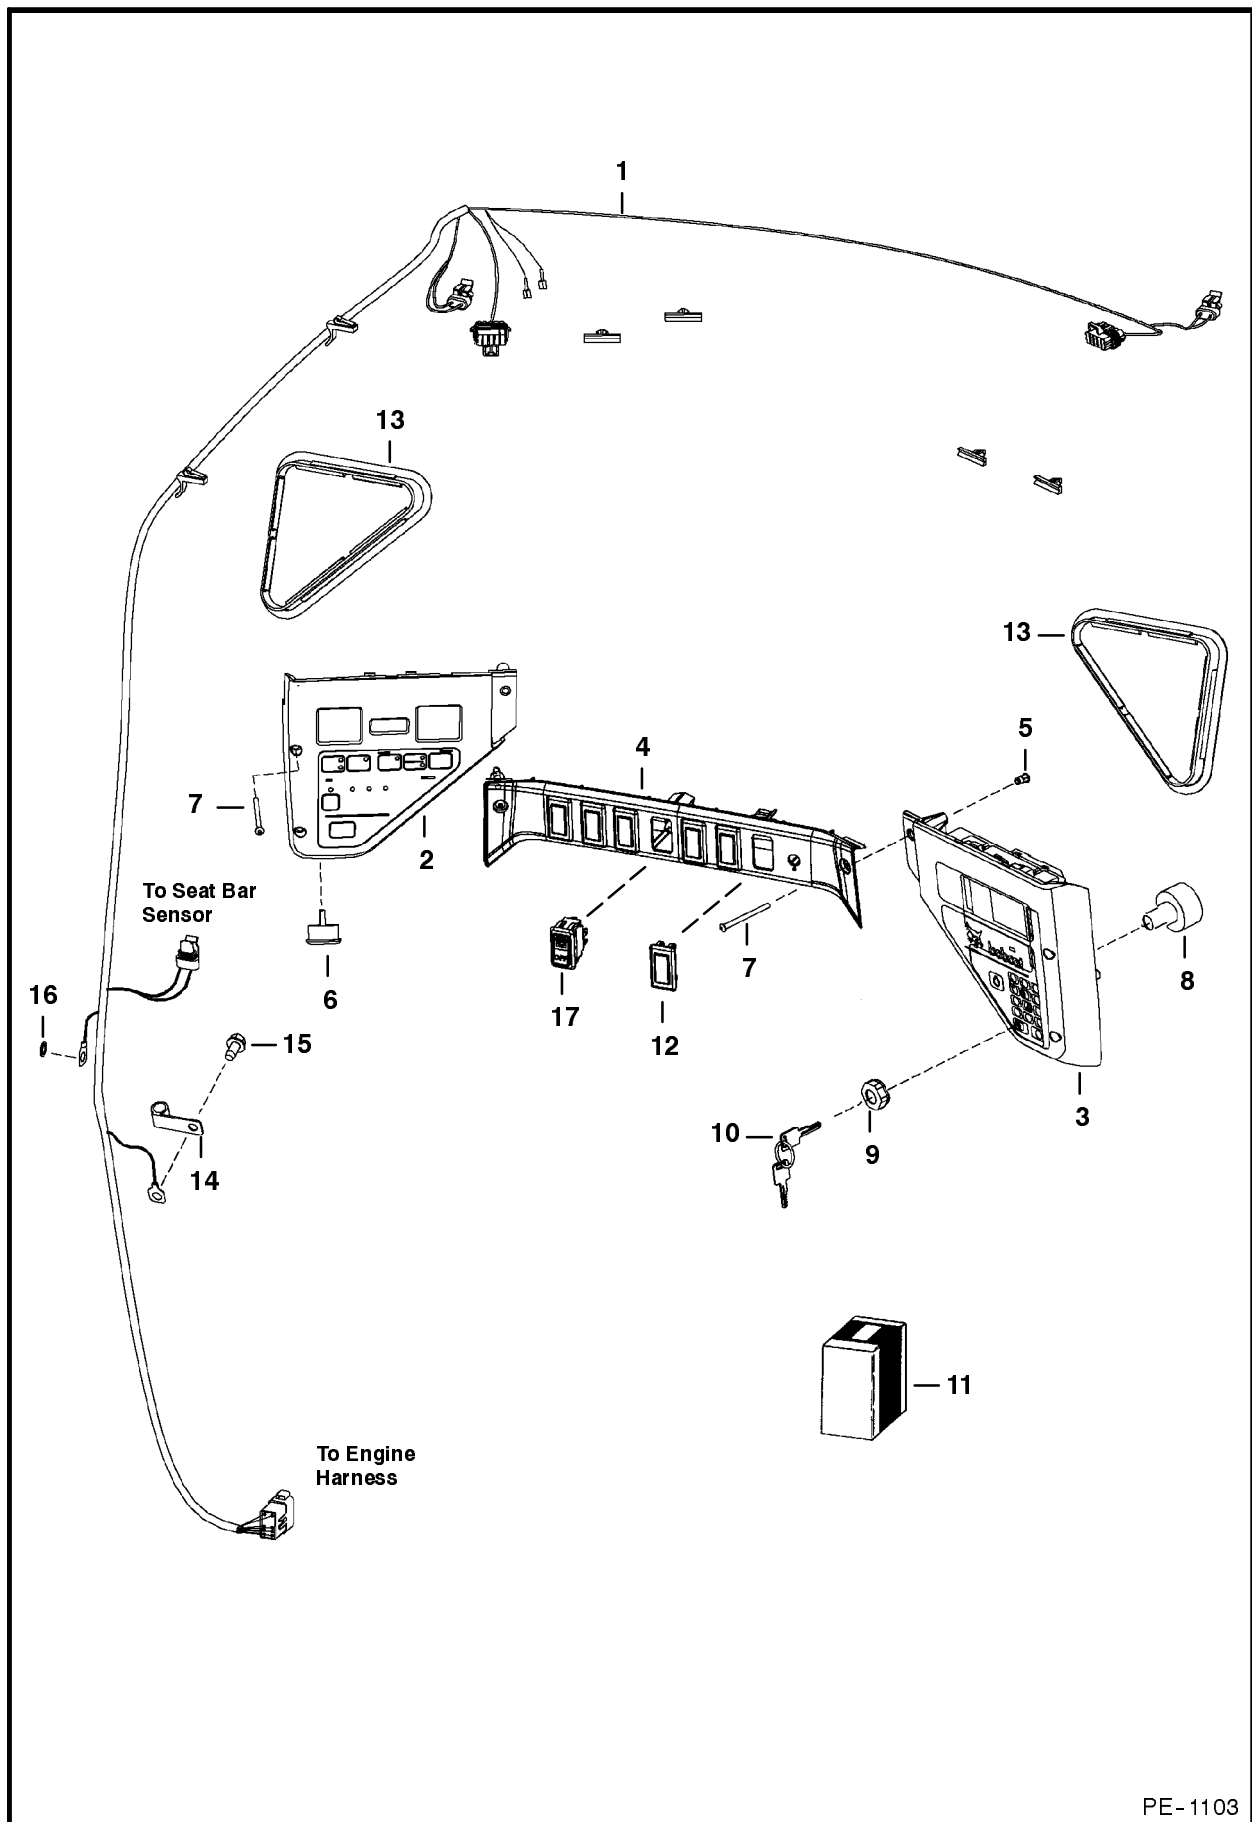


PE-1103

CAB ELECTRICAL CIRCUITRY (Cont'd)
(Front & Rear Lights located See Page 381)

[illegible]

ENGINE ELECTRICAL CIRCUITRY

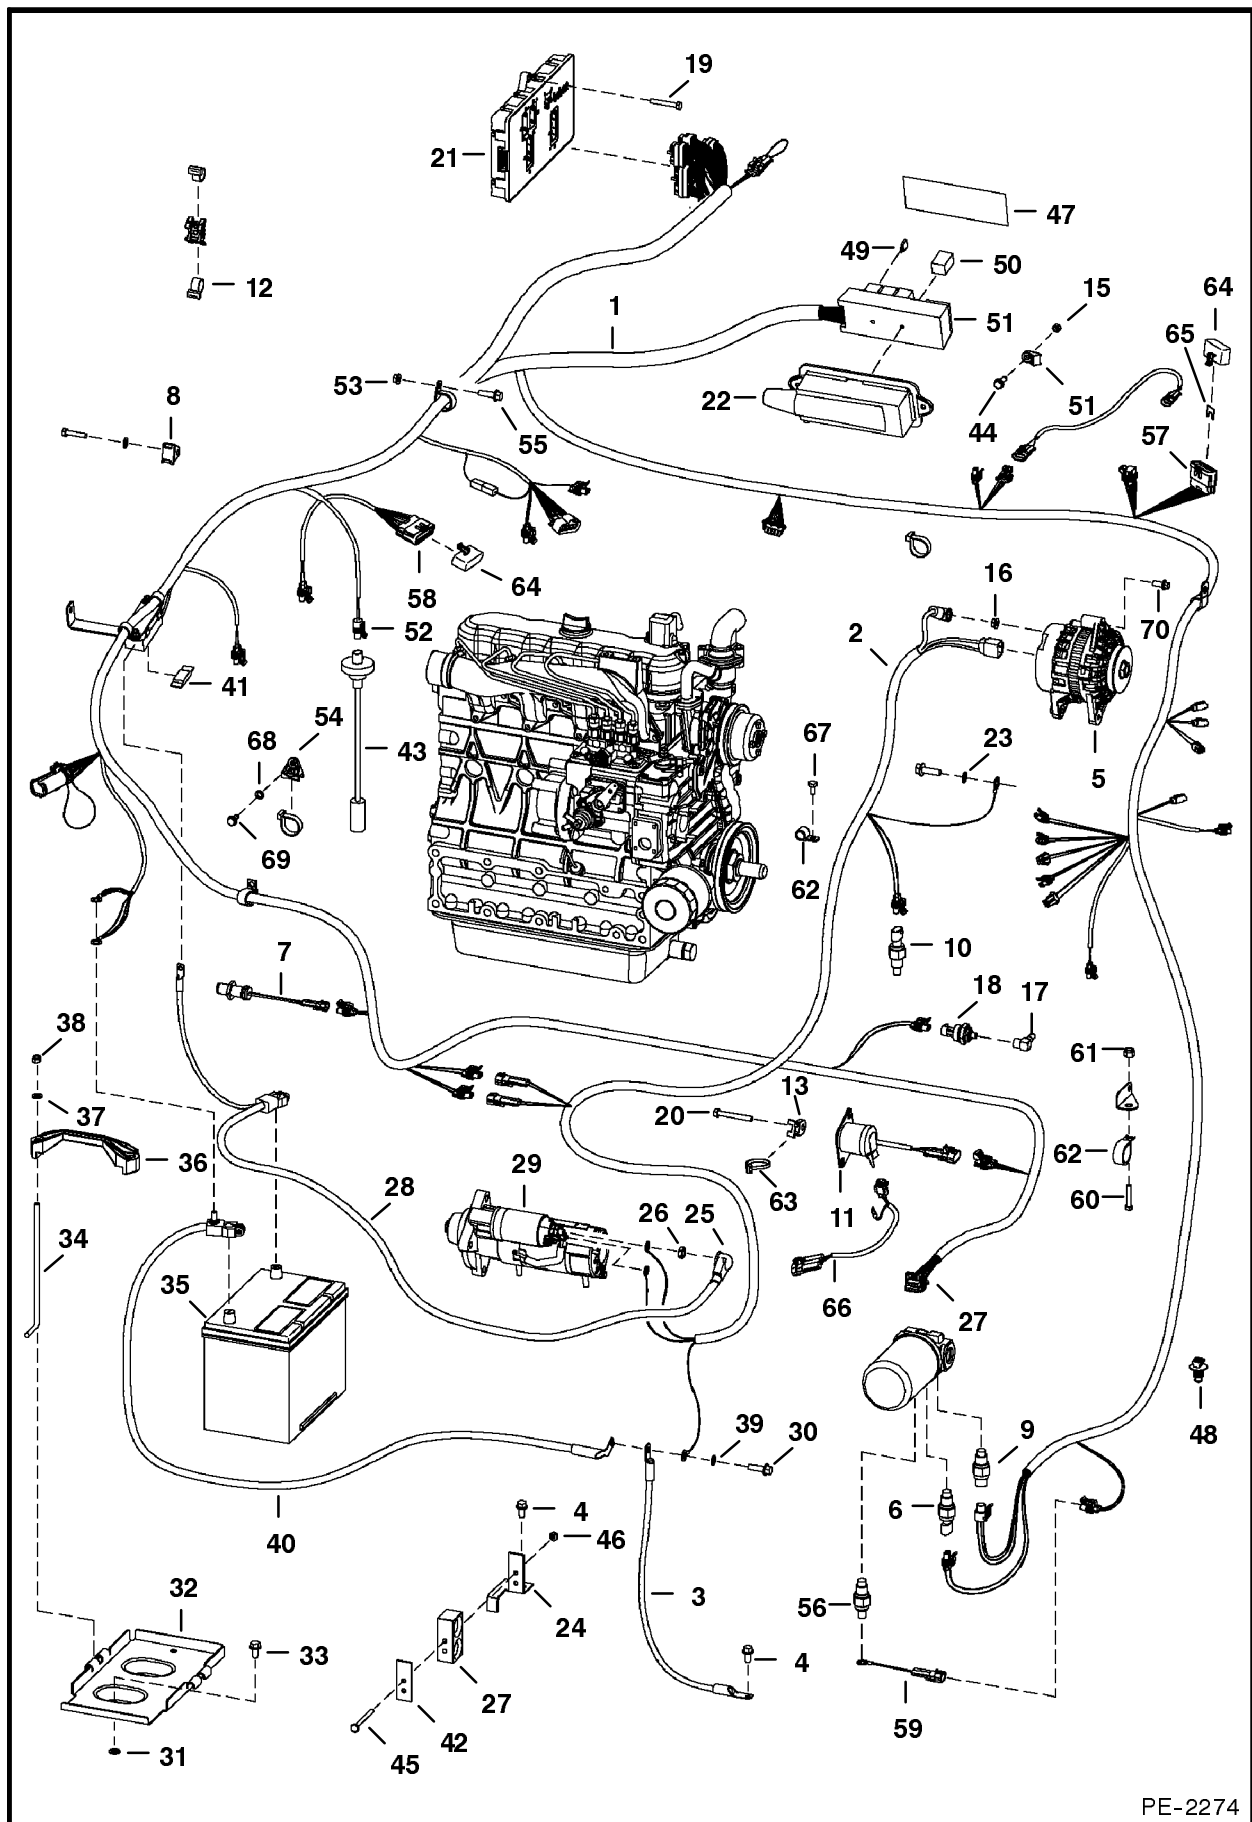


PE-2274

ENGINE ELECTRICAL CIRCUITRY (Cont'd)
(Front & Rear Lights located See Page 381)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	7101181	HARNESS	loader - 2-connector for controller		1
2	7101311	HARNESS	starter/alt.		1
3	6565170	CABLE	neg.		1
4	84G-3712	BOLT			4
5		ALTERNATOR	See Page 155		1
6	6727869	SENDER	hyd. temp.		1
7	6684037	SENSOR	rpm		1
8	6678668	STRAP			1
9	6674316	SWITCH	hyd. chg. press. - 3-pin molded connector		1
10*	6718414	SWITCH	eng. temp. - Was 6718415 [B]		1
11	6684826	SOLENOID	fuel shut off		1
12	6678669	STRAP			1
13	6679034	MOUNT			2
14	6678667	MOUNT			4
15	83D-4	NUT			1
16	43DM-8	NUT			1
17	6707040	ELBOW			1
18	6674315	SWITCH	eng. oil press.		1
19	43C-616	BOLT			3
20*	1CM-870	BOLT			2
21*	6682422	CONTROLLER	Bobcat - Was 6678674 [A]		1
22	6718659	HOUSING	fuse - boot		1
23	6E-5	WASHER			1
24	6727508	BRACKET			1
25	6560172	COVER			1
26	4DM-10	NUT			1
27	6715197	CLAMP			1
28	6731256	CABLE	pos.		1
29		STARTER	See Page 157		1
30	35C-620	BOLT			3
31	616783	WASHER			2
32	6718260	BATTERY PAN			1
33	84G-3716	BOLT			2
34	6576280	BOLT			2
35	6674687	BATTERY			1
		BATTERY CAP			2
36	6569203	CLAMP			1
37	25E-15	WASHER			2
38	59D-5	NUT			2
39	6E-6	WASHER			1
40	6729008	CABLE	ground		1
41	6675155	FUSE	100 amp		1
	6675154	HOLDER	high amp fuse		1
42	6715132	RETAINER			1
43	6680436	SENSOR	fuel - W/gasket		1
	6717579	GASKET			1
44	17C-412	BOLT			1
45	17C-540	BOLT			2
46	95D-5	NUT			1

ENGINE ELECTRICAL CIRCUITRY (Cont'd)

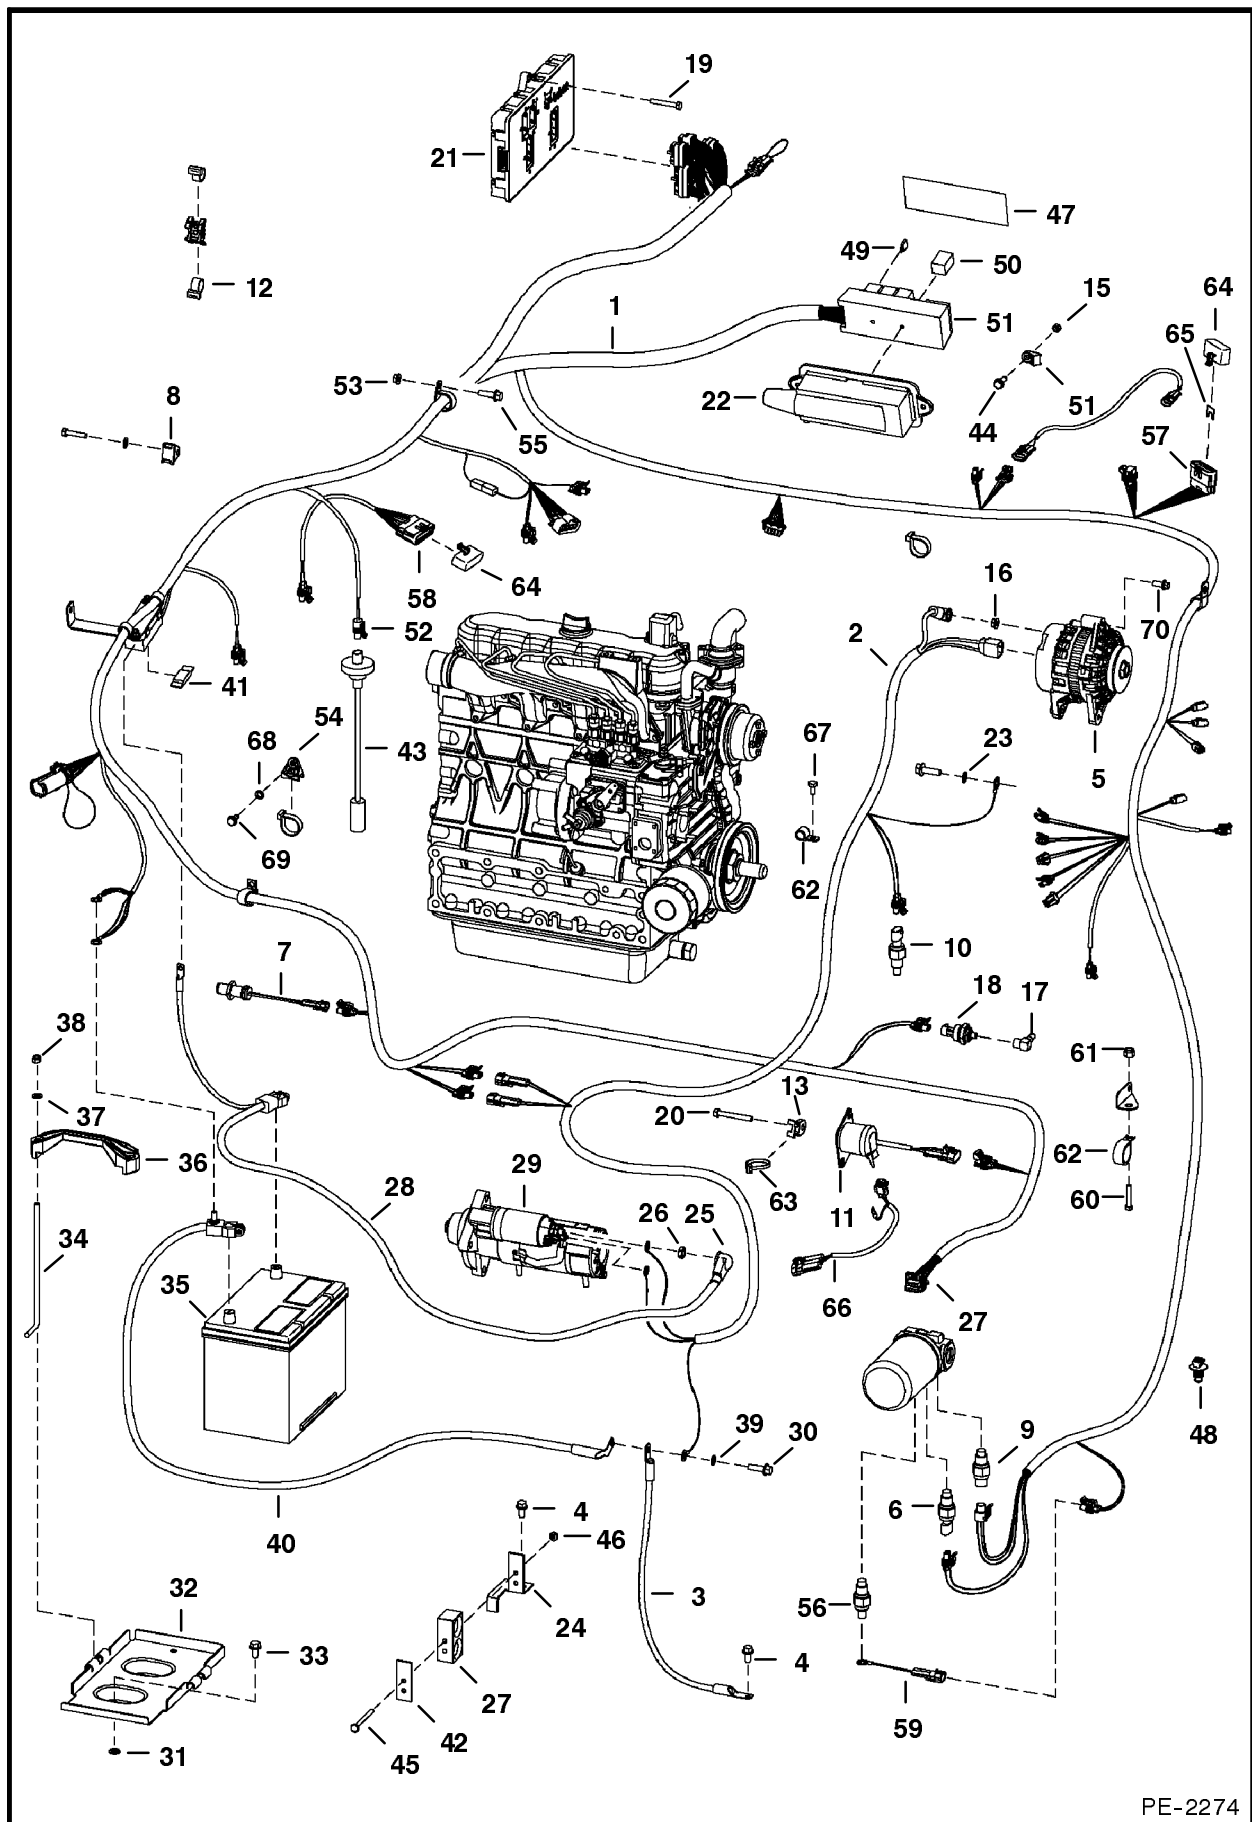


PE-2274

ENGINE ELECTRICAL CIRCUITRY (Cont'd)

(Front & Rear Lights located See Page 381)

[illegible]

CONTROLS ELECTRICAL

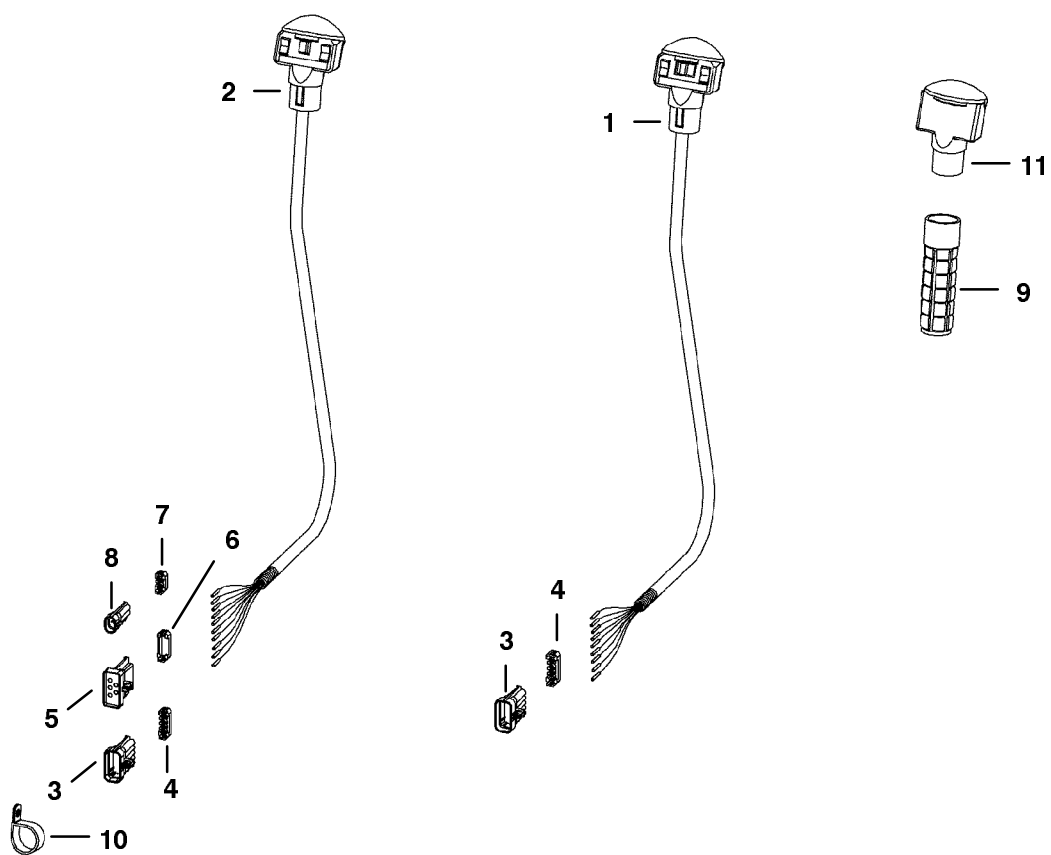


PE-1041

CONTROLS ELECTRICAL (Cont'd)

[illegible]

CONTROLS ELECTRICAL (AHC) (ACS)

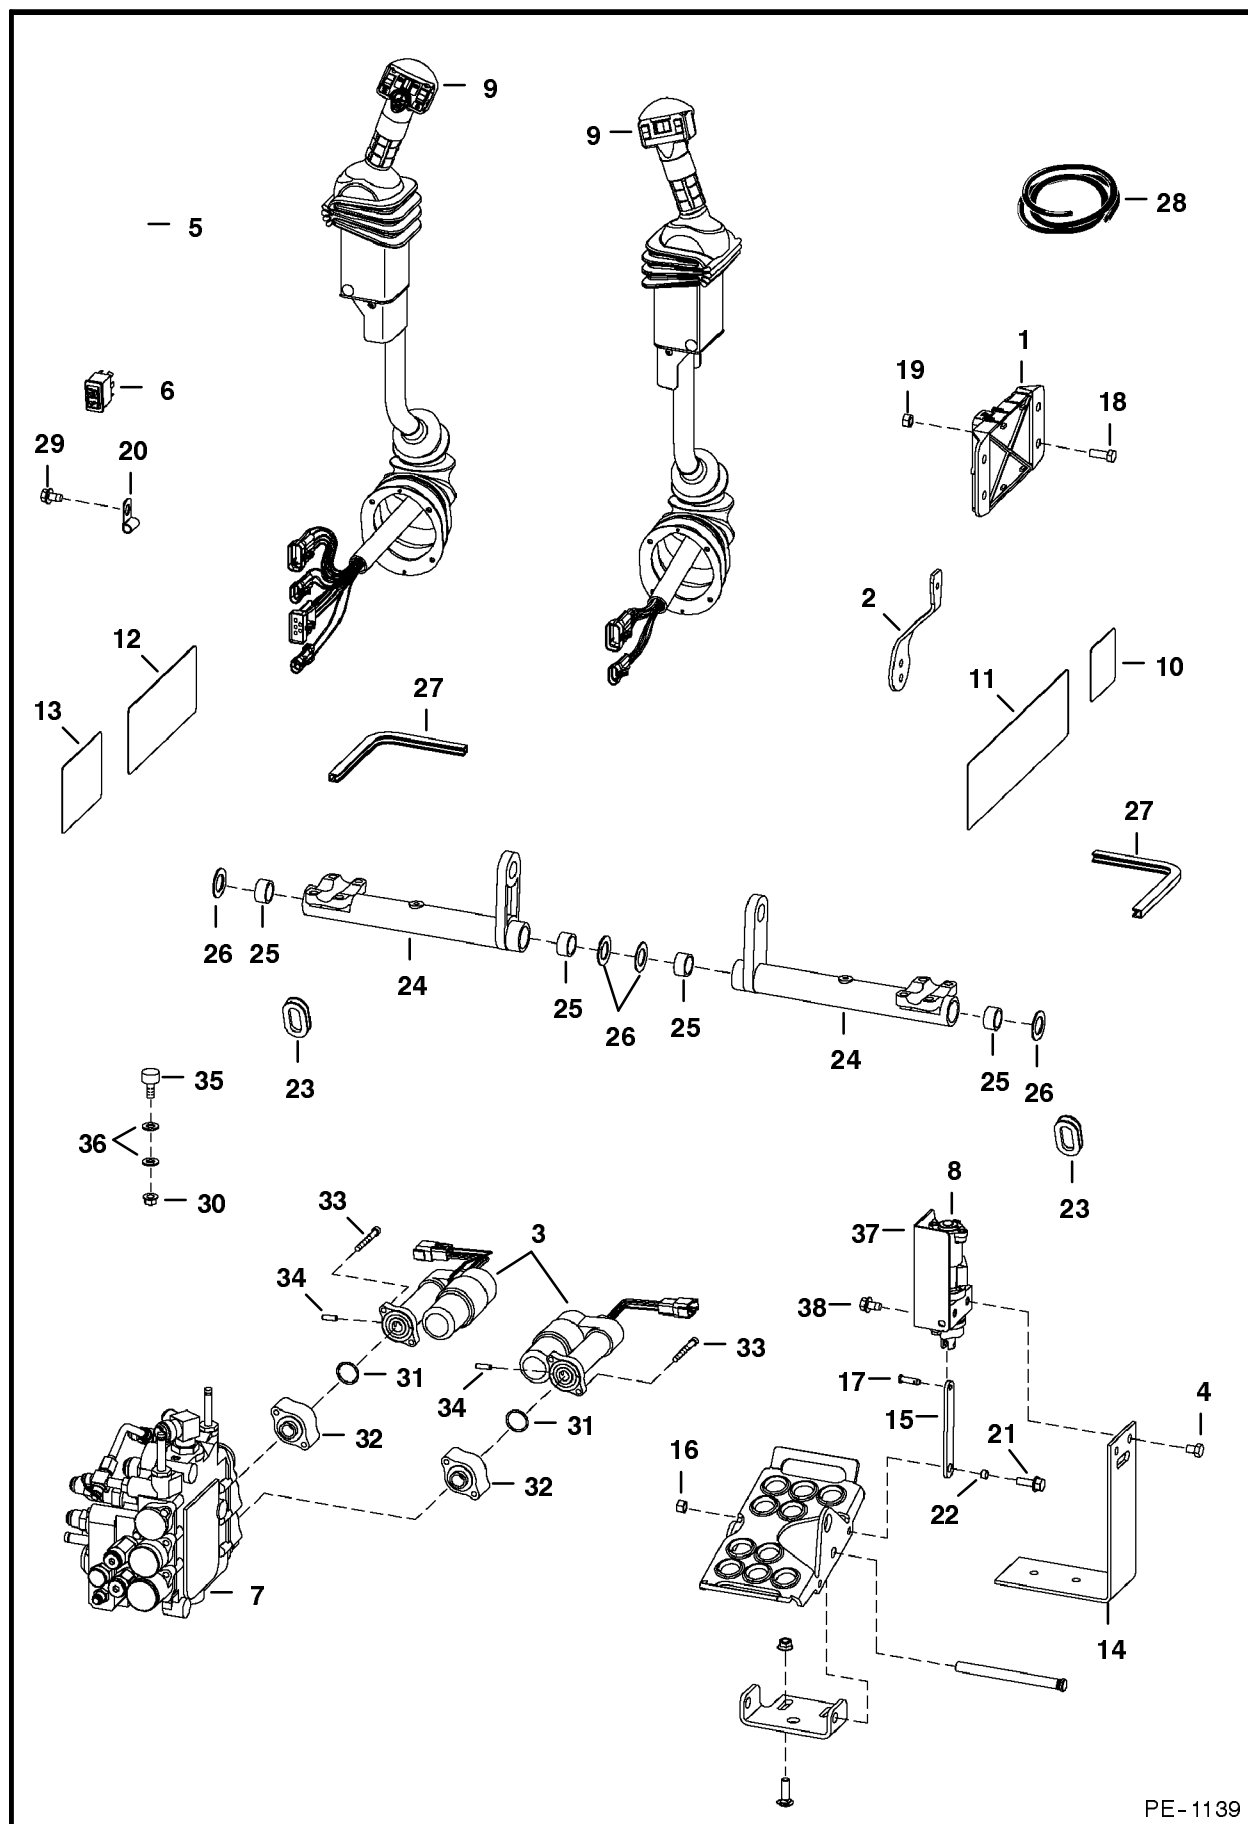


PE-1139

CONTROLS ELECTRICAL (Cont'd)
(AHC) (ACS)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6680410	CONTROLLER			1
2	6717393	LEVER	throttle		1
3*	NAP	ACTUATOR	Order 7103129 Actuator & Ref. 32		
			(7101705 Adapter) -		2
			Was 6678775 [A]		2
*	7103129	ACTUATOR	W/Ref. 31 (6686220 O-ring)		
4	17C-608	BOLT			4
5	6733292	HARNESS			1
6	6676537	SWITCH			1
7		VALVE	See Page 87		1
8*	6684912	SENSOR	foot pedal - R.H. - See Page 153 - Was 6680420 [A]		1
	6676029	SOLENOID			1
*	6684911	SENSOR	foot pedal - L.H. - See Page 153 - Was 6680421 [A]		1
	6676029	SOLENOID			1
9*	6684915	LEVER	tilt - R.H. - See Page 149 - Was 6680424 [B]		1
*	6684916	LEVER	lift - L.H. - See Page 149 - Was 6680423 [B]		1
10	6718706	DECAL			1
11	6728539	DECAL			1
*	6734646	DECAL	joystick controls		1
12	6727926	DECAL			1
13	6727941	DECAL			1
14	6726573	BRACKET			2
15	6726681	LINK			2
16	95D-5	NUT			2
17	6727496	PIN			2
18	17C-616	BOLT			2
19	95D-6	NUT			6
20	30H-62	CLAMP			2
21	17C-514	BOLT			2
22	6729467	SPACER			2
23	6714726	PLUG			2
24	6716977	BELLCRANK			2
25	6673710	BEARING			4
26	6716916	WASHER	plastic		4
27	NAP	MOULDING	10.5"(266,7 mm) long - Order Ref. 28 bulk - Sold Per Foot		1
28	6654139	MOULDING			x
29	84G-3710	BOLT			2
30	98D-6	NUT	See Page 117		2
31	58K-120	O-RING			2
*	6686220	O-RING			2
32	6725128	ADAPTER	Use W/Ref. 3 (NAP/6678775 Actuator)		2
*	7101705	ADAPTER	Use W/Ref. 3 (7103129 Actuator)		2
33	69G-436	BOLT			4
34	6718506	PIN			2
35	6673789	BEARING	See Page 117		4

CONTROLS ELECTRICAL (Cont'd) (AHC) (ACS)

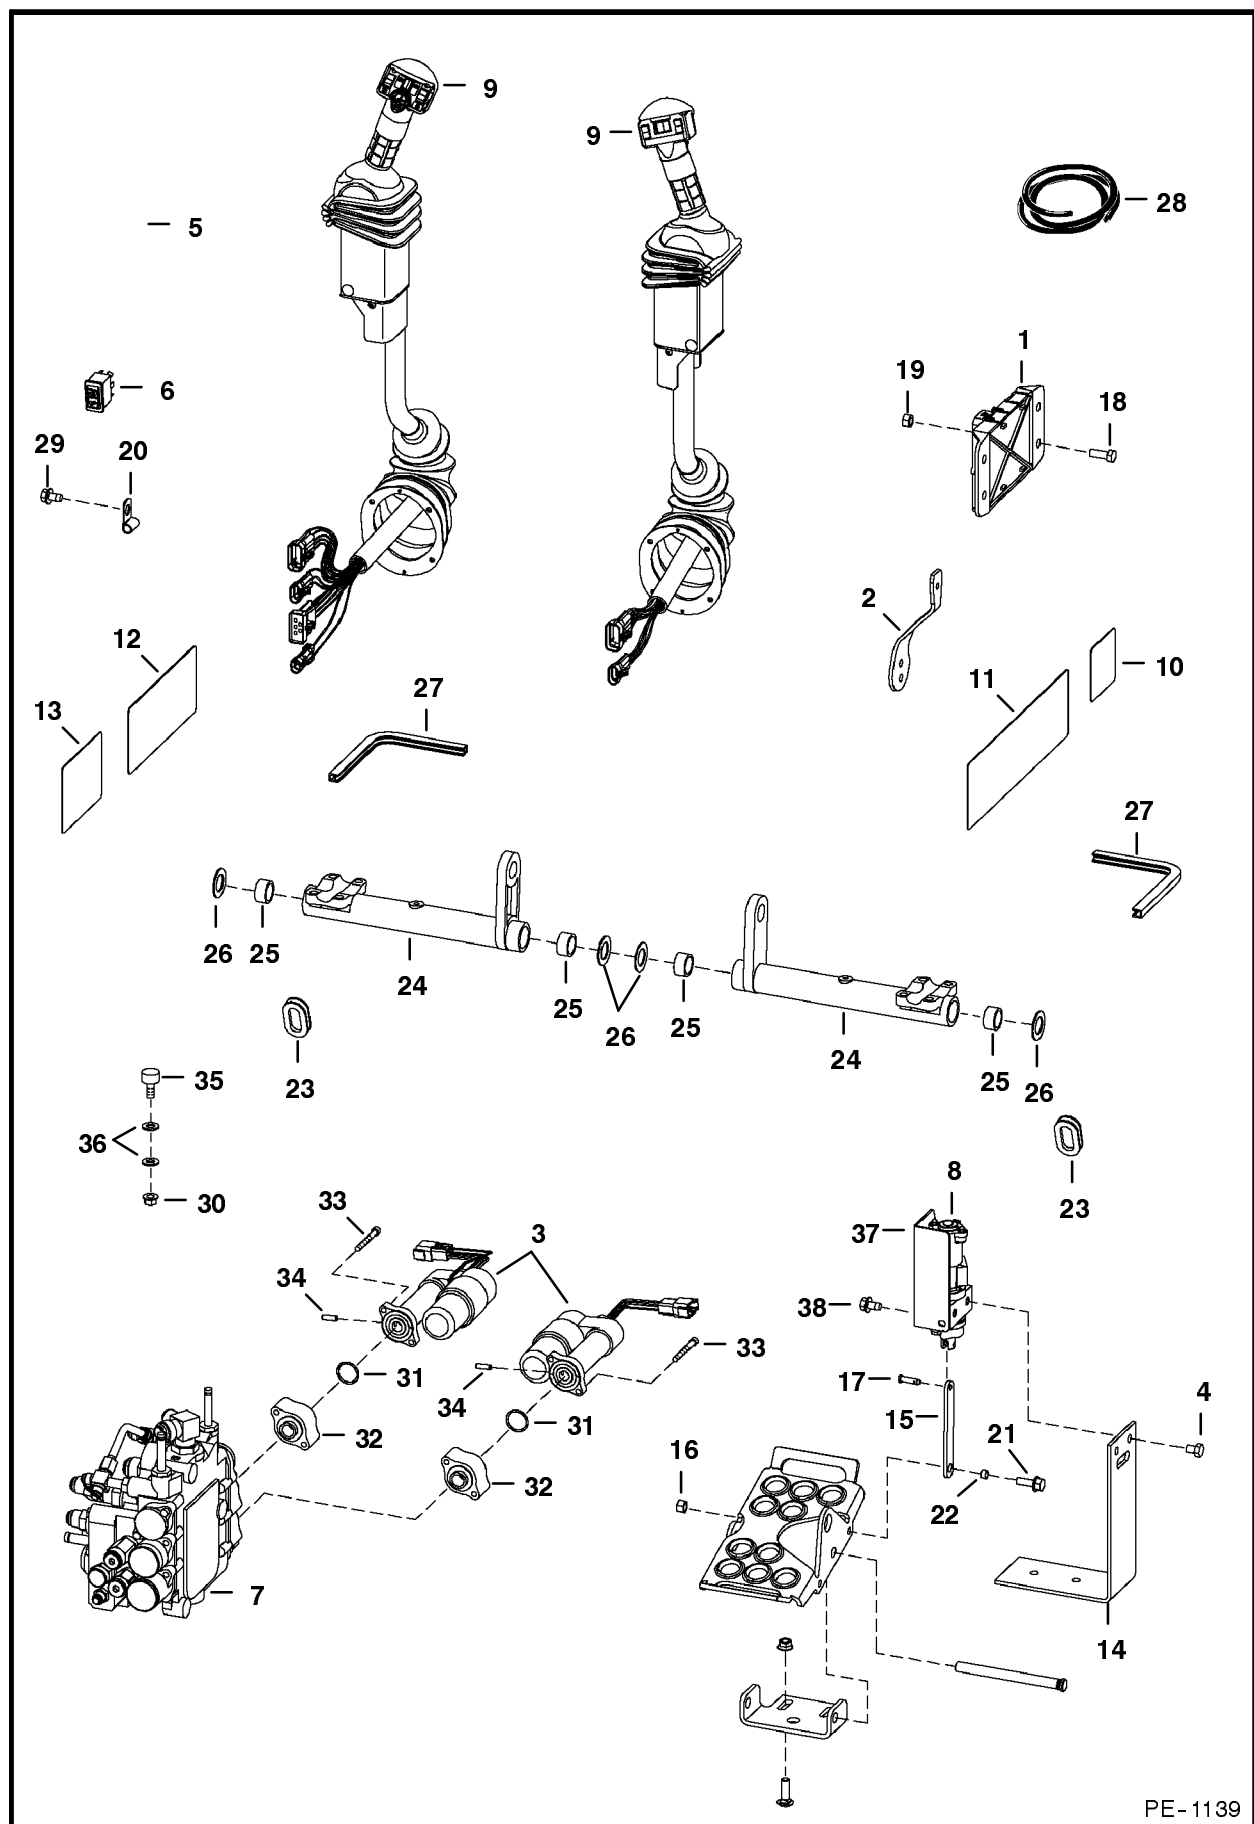


PE-1139

CONTROLS ELECTRICAL (Cont'd)

[illegible]

CONTROLS ELECTRICAL **(AHC) (ACS) (Handle Assembly)**

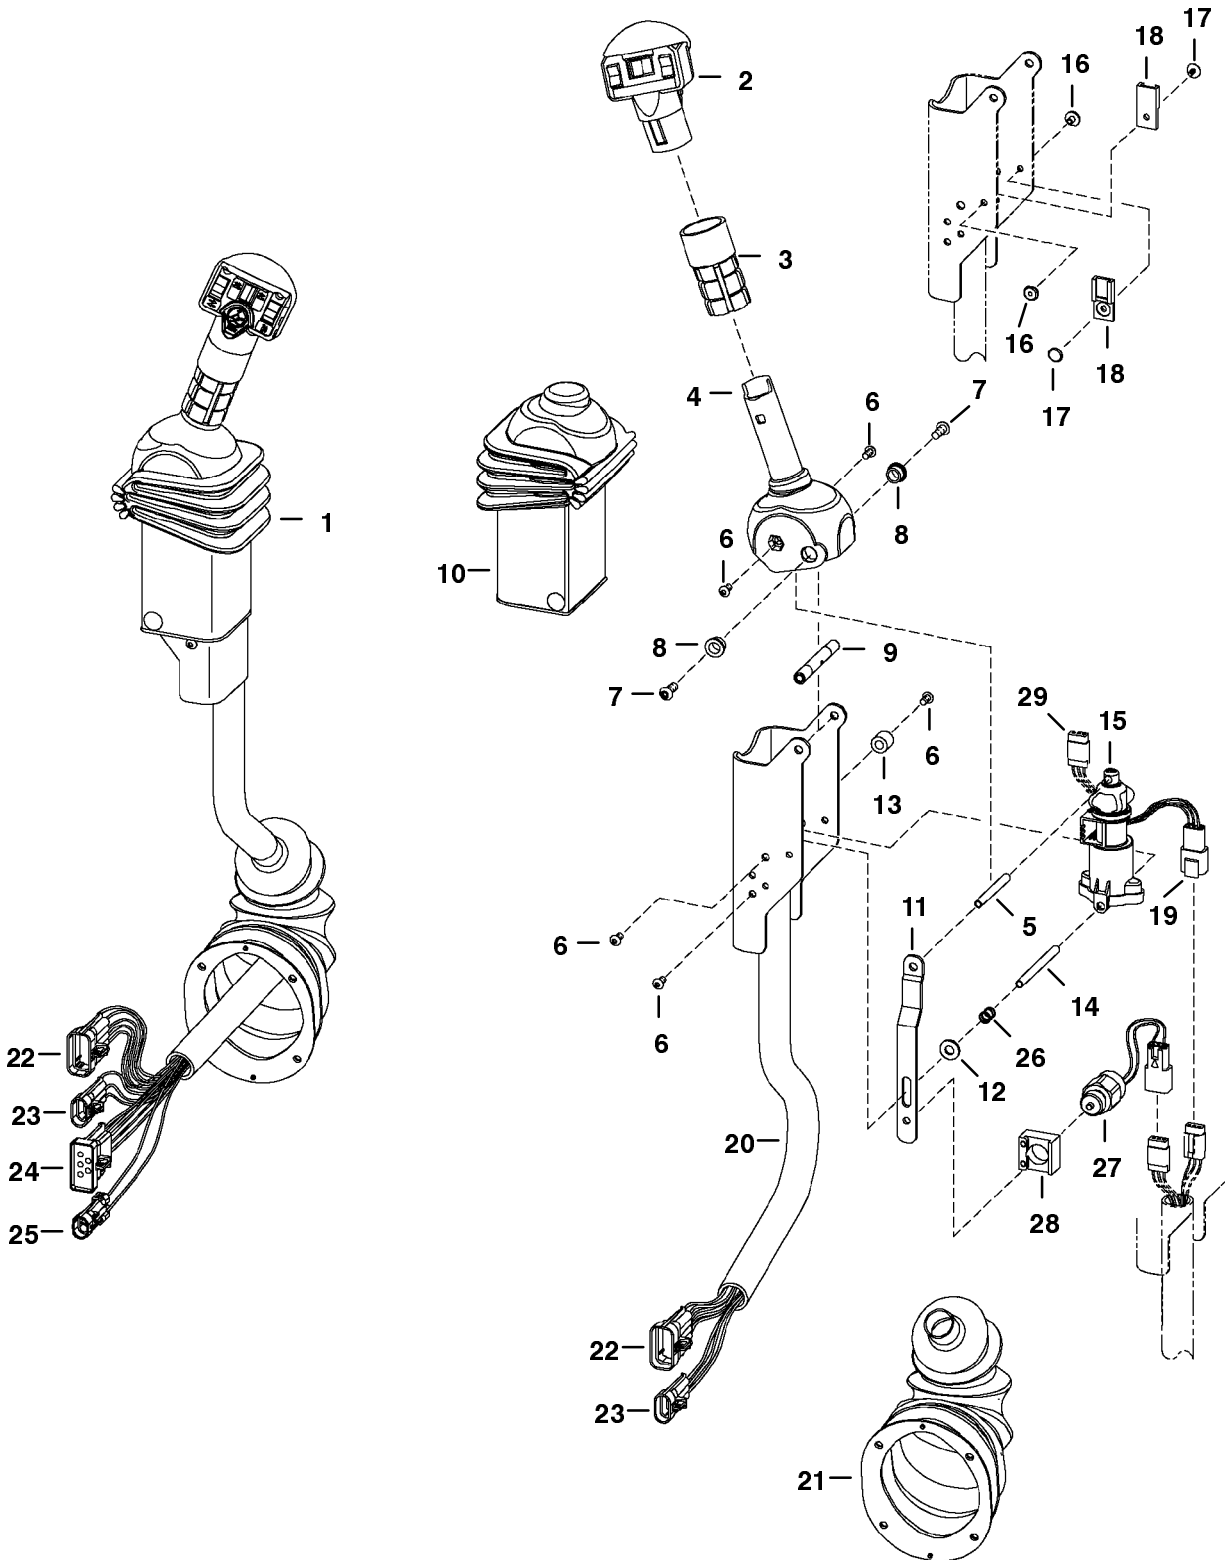


PE-1365

CONTROLS ELECTRICAL (Cont'd)
(AHC) (ACS) (Handle Assembly)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6684915	LEVER	tilt - R.H.		1
	6684916	LEVER	lift - L.H.		1
2	6680462	HANDLE	tilt - R.H.		1
	6680417	HANDLE	lift - L.H.		1
3	NAP	GRIP	Order 6702621 Grip & cut to 2.8" long		2
4	6729594	HANDLE	R.H.		1
	6729595	HANDLE	L.H.		1
5	6680469	SPACER	threaded		1
6	6727065	BOLT			6
7	25GT-410	BOLT			8
8	6702990	BUSHING			4
9	6713043	SPACER			4
10	6680471	COVER			2
11	6680477	STRAP	stop		1
12	25E-13	WASHER			1
13	6719835	SLEEVE			4
14	6719834	SPACER	threaded		2
15	6684910	SENSOR			2
	6670706	CONNECTOR			1
	6670715	PIN			3
	6670710	LOCK			1
16	6665322	RIVET	female		2
17	6665321	RIVET	male		2
18	6665000	CLIP			2
19	6670707	CONNECTOR			1
	6670715	PIN			3
	6670711	LOCK			1
20	6680481	CHANNEL	R.H.		1
	6680480	CHANNEL	L.H.		1
21	6532127	BOOT			2
22	6640692	CONNECTOR	10-pin		1
	6640690	PIN			8
	6640694	LOCK			1
	6641176	SEAL			8
	6646582	PLUG	cavity		1
23	6640699	CONNECTOR	3-pin		2
	6640690	PIN			3
	6641176	SEAL			3
	6640700	LOCK			3
24	6667144	CONNECTOR	5-pin		2
	6640690	PIN			3
	6641176	SEAL			3
	6646582	PLUG	cavity		1
	6641180	LOCK			1
25	6641179	CONNECTOR	2-pin		1
	6640690	PIN			2
	6641176	SEAL			2
	6641180	LOCK			1
26	6680470	SPRING			1
27	6676029	SOLENOID			1


CONTROLS ELECTRICAL (Cont'd) (AHC) (ACS) (Handle Assembly)

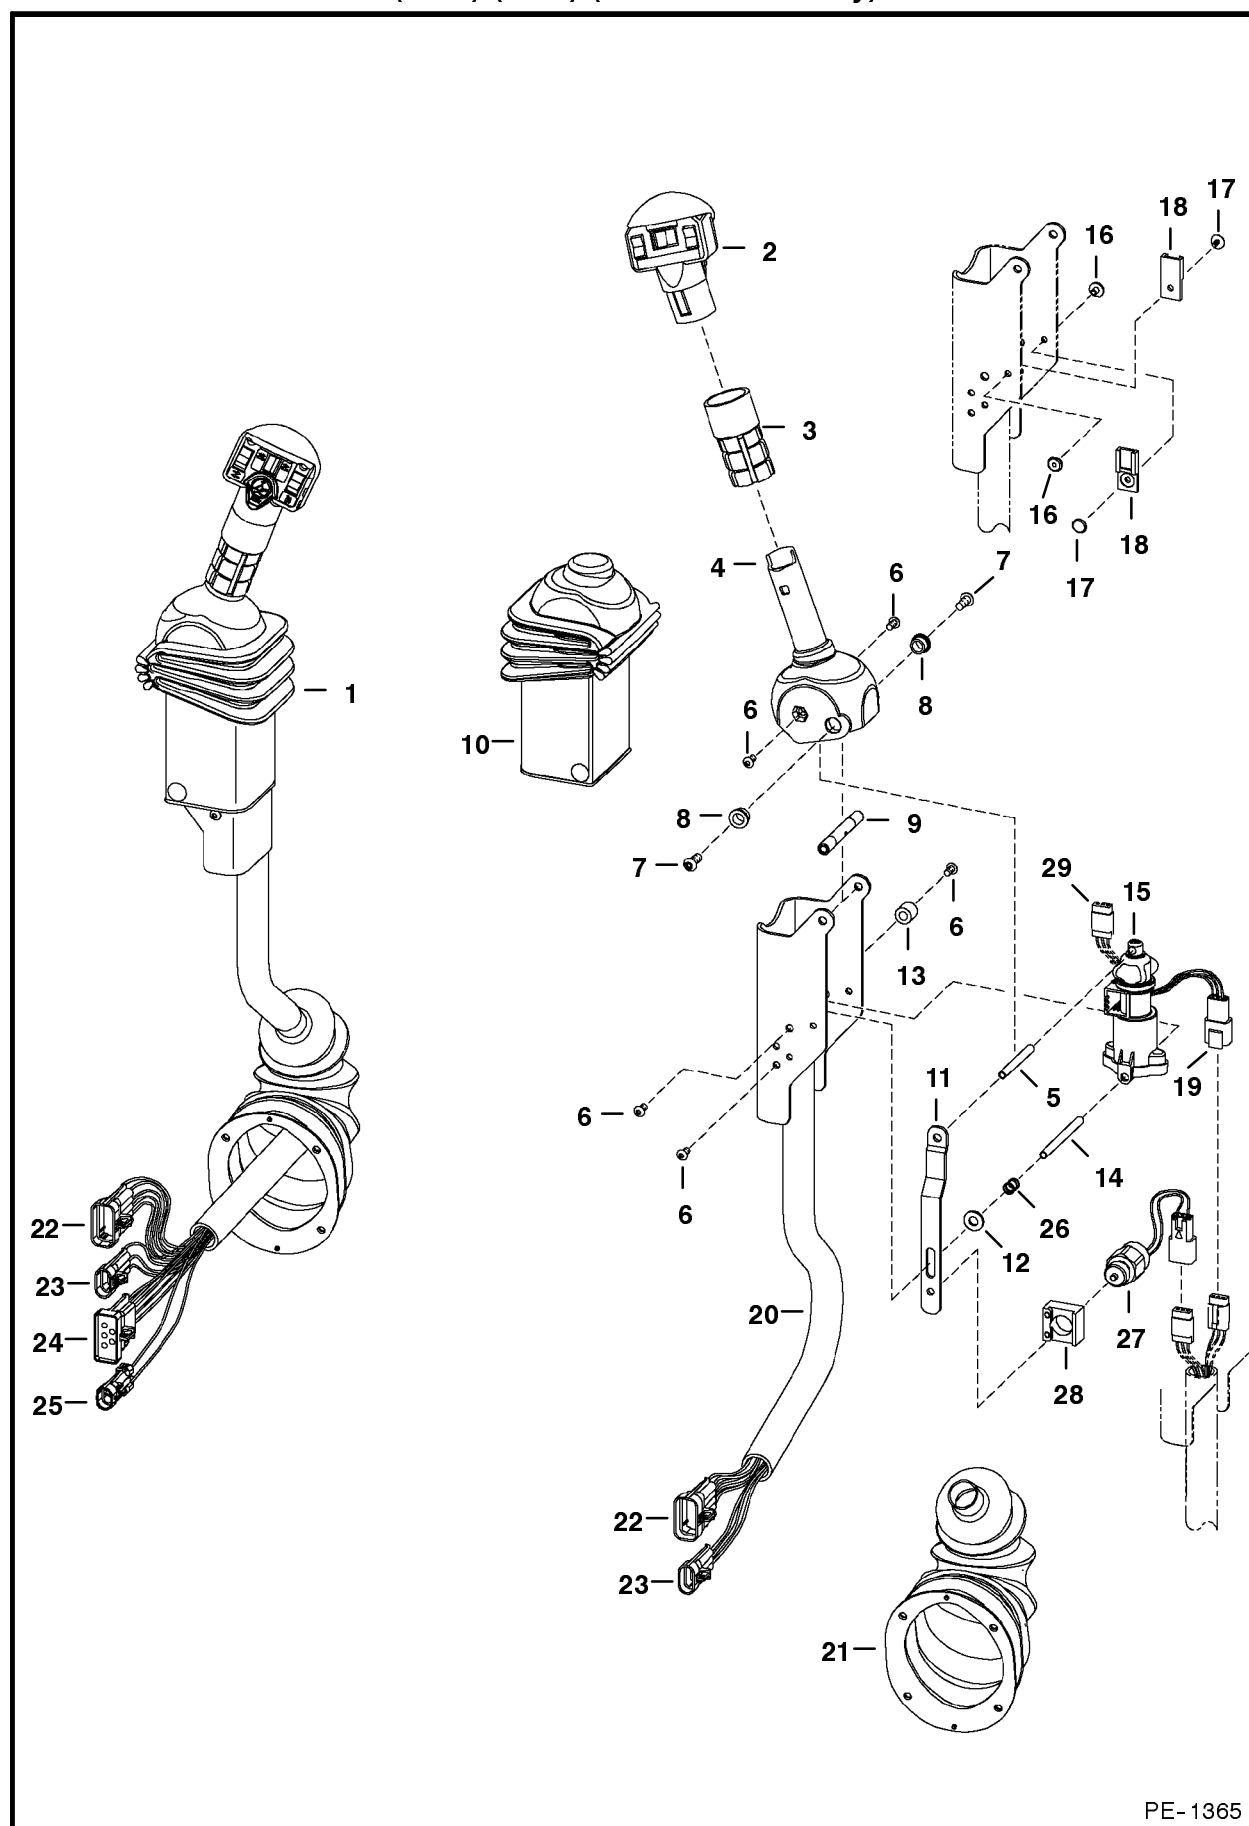

PE-1365

[illegible]


**CONTROLS ELECTRICAL
(ACS) (Foot Pedal Assemblies)**

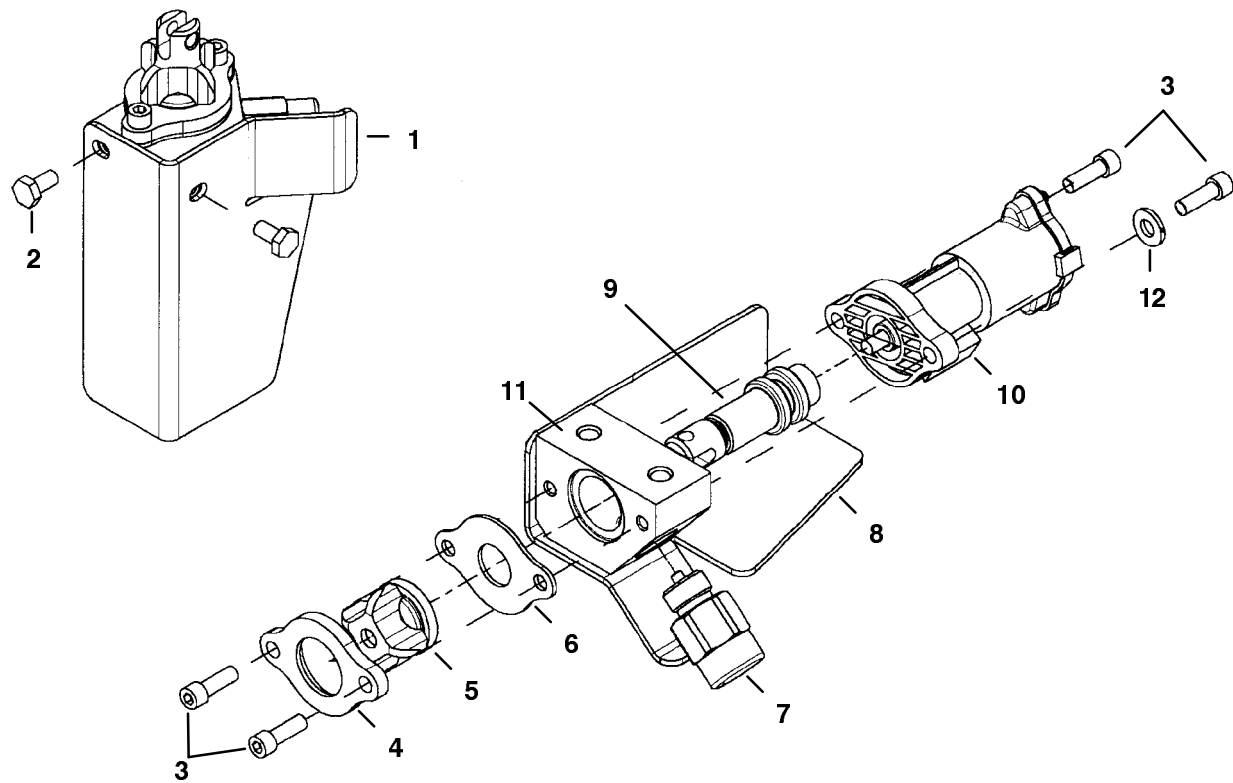

PE-1553

[illegible]

ALTERNATOR

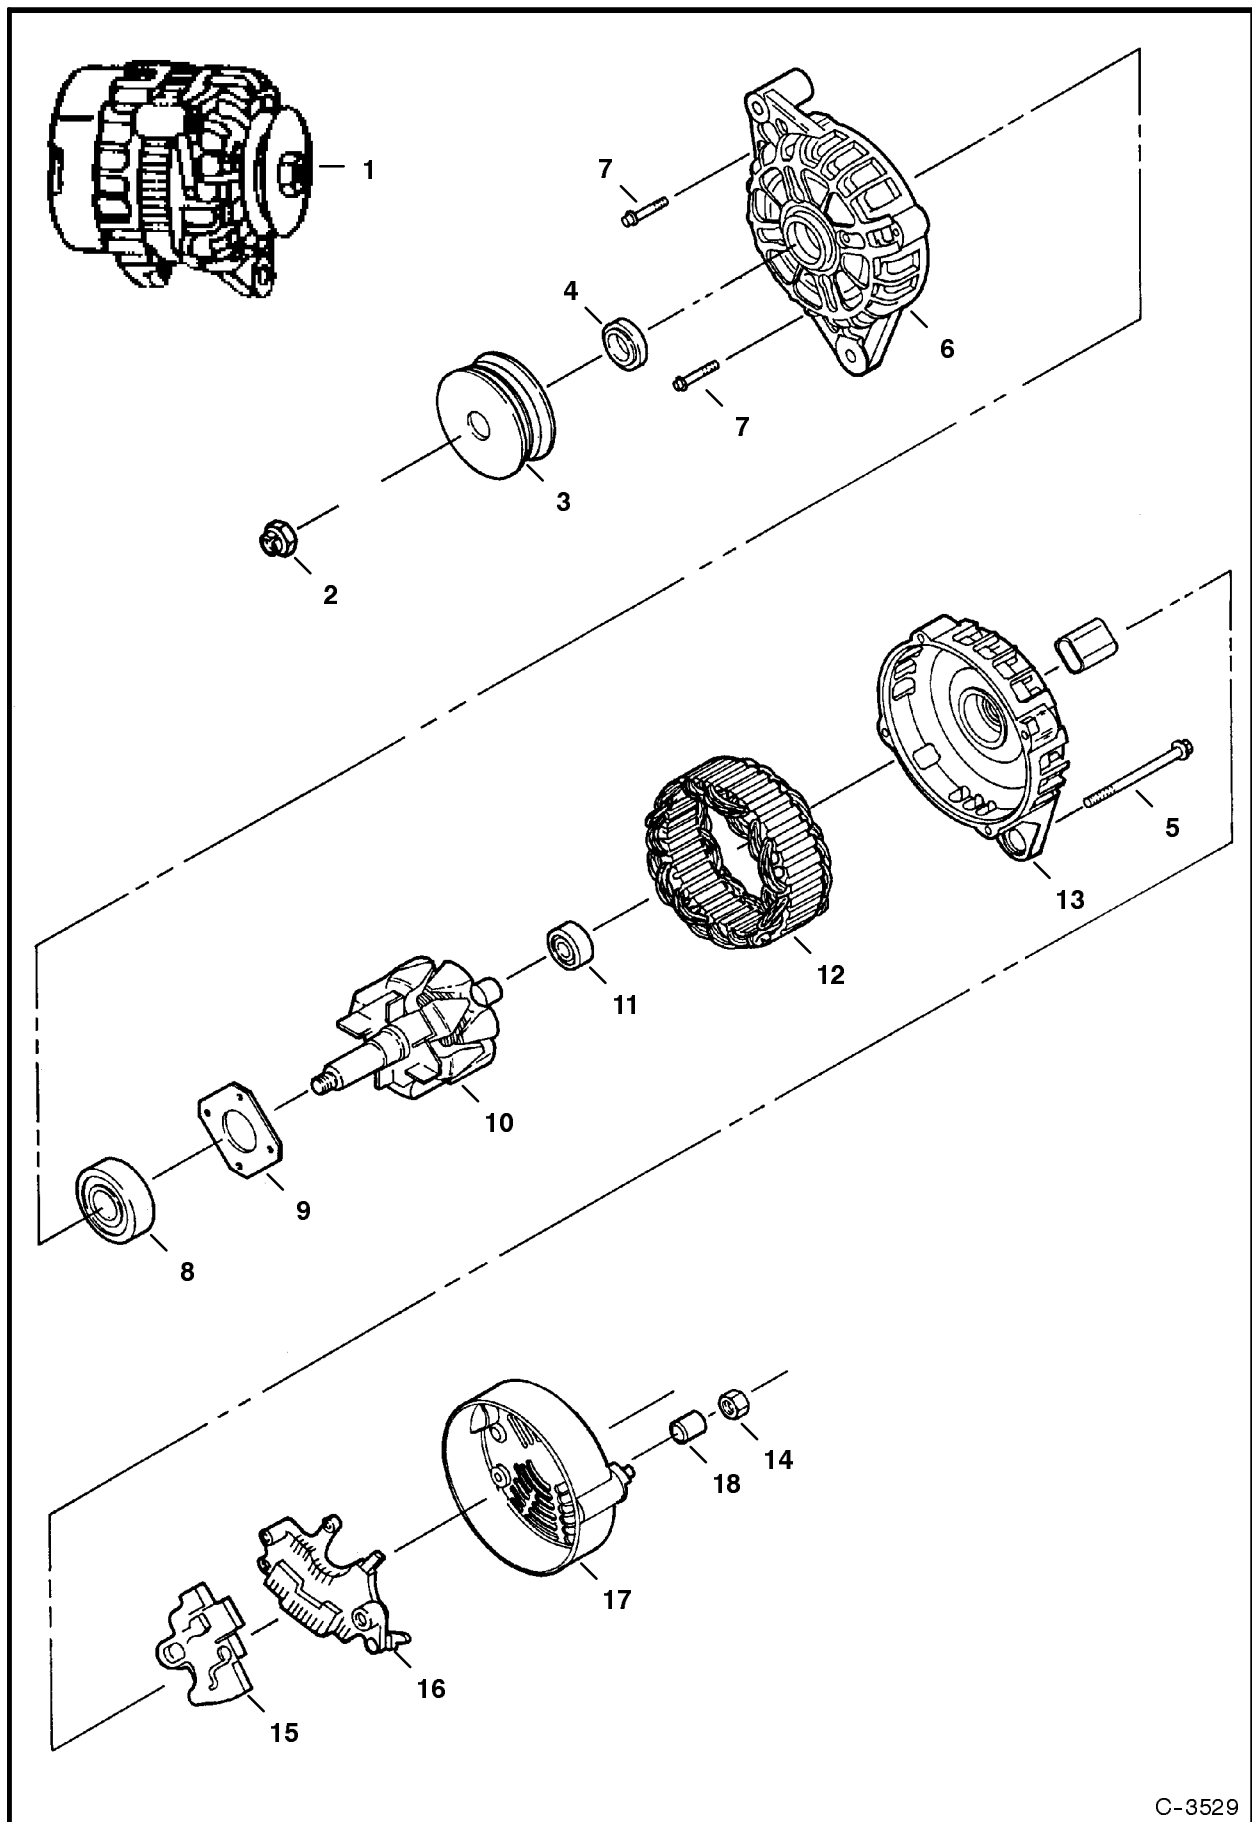


C-3529

ALTERNATOR (Cont'd)

[illegible]

STARTER (Valeo)

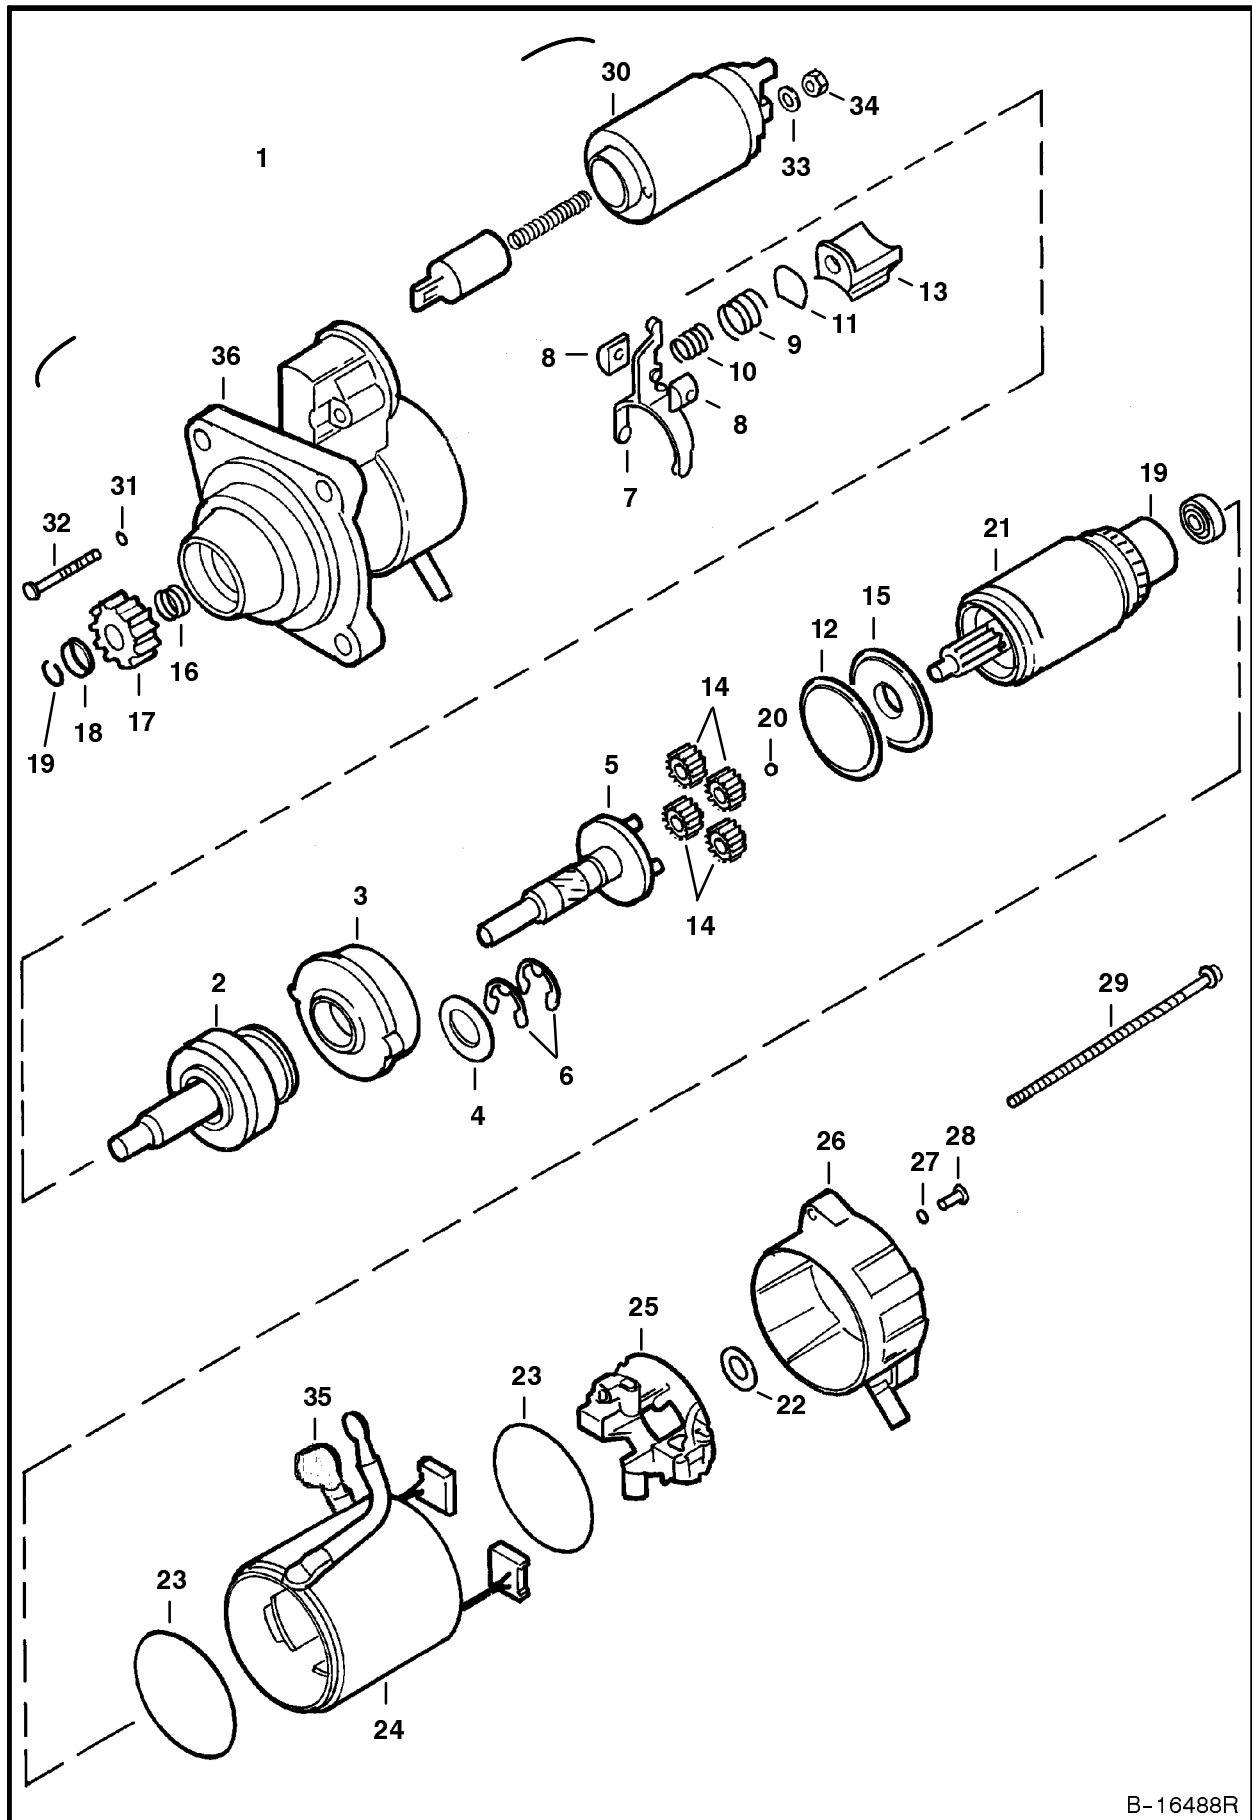

B-16488R

**STARTER
(Valeo)**


Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685190	STARTER	O.R.C. assy.		1
2	6680375	SHAFT			1
3	6680367	GEAR			1
4	6680378	WASHER			1
5	6680365	SHAFT			1
6	6680368	STOP RING			2
7	NSS	LEVER			1
8	NSS	HOLDER			2
9	NSS	SPRING			1
10	NSS	SPRING			1
11	NSS	PLATE			1
12	6680369	SEAL			1
13	6680371	LEVER			1
14	6680366	GEAR			4
15	6680372	BRACKET			1
16	6680361	SPRING			1
17	6680390	GEAR			1
18	6680360	STOP			1
19	6680359	STOP RING			1
20	6680362	BALL			1
21	6680374	ARMATURE			1
22	6680363	WASHER			1
23	6680380	SEAL			2
24	6680373	YOKE			1
25	6680377	HOLDER			1
26	6680389	BRACKET			1
27	6680358	RING	rubber		2
28	6680384	BOLT			2
29	6680356	BOLT			2
30	6680376	SWITCH			1
31	6680379	SEAL			2
32	6680383	BOLT			2
33	6EM-80	WASHER			1
34	4DM-8	NUT			1
35	6680355	BOOT			1
36	6680388	BRACKET	W/Ref. 7-11		1

Exploded view diagram of a mechanical assembly, likely a pump or motor, showing various components and their assembly sequence. The diagram includes a main housing (1), a motor unit (28), a fan (18), a pump head (23), and various internal components like impellers (50, 51, 52, 53), bearings (26), and seals (49). The assembly is shown in a disassembled state with dashed lines indicating the assembly path. The diagram is labeled with numbers 1 through 54, corresponding to the parts list.

COOLING SYSTEM (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6734100	RADIATOR			1
2	6577382	SPACER			2
3	NAP	FOAM STRIP	34.5"(876,3mm) long -		
4	6579613	STOP	Order Ref. 52		2
5	NAP	HOSE	16.5" (419,1 mm) long -		2
6	6624289	TIE	Order Ref. 53		1
7	6626631	CLAMP			1
8	6657376	ELBOW			1
9	6675734	TIE			2
10	6678666	MOUNT			2
11	6679991	SEAL	washer		1
12	6680970	BREATHER			1
13	6684033	NUT			4
14	6701097	WASHER			1
15	6702977	HOUSING			1
16	6703471	BRACKET			1
17	6706517	SCREW	plastic louvers		6
18	6715142	FAN			1
19	6715143	SET SCREW	bond W/Ref. 49		2
20	7100034	PULLEY	5.5"(139,7 mm) O.D.		1
21	6716571	LOUVER	L.H. - plastic		1
22	6716573	LOUVER	R.H. - plastic		1
23	6717478	INLET			1
24	6718730	BELT	fan - 42"(1066,8 mm) long		1
25*	7102200	SHIELD	belt - Was 6719851 [A]		1
26	6726433	SPACER			2
27	6732318	SPACER			2
28	6732375	TANK	expansion		1
29	6732457	WASHER	step		4
30	6732870	MOUNT			1
31	6733429	CAP			1
32	6733804	GRILL			1
33	6733886	BOLT			2
34	NAP	HOSE	36"(914,4 mm) long - Order		
35	6734104	HOUSING ASSY.	Ref. 50		1
36	6734236	ADAPTER	See Page 175 W/Ref. 54		1
37	NAP	HOSE	8.25"(209,6 mm) long - Order Ref. 53		1
38	NAP	MOULDING	16.8"(426,7 mm) long - Order		
39	6735204	SCREEN	Ref. 51		2
40	17C-616	BOLT	inlet		1
41	17C-6116	BOLT			6
42	35C-508	BOLT			4
43	5HM-14	CLAMP			2
44	5HM-24	CLAMP			2
45	61D-6	NUT			6
46	7J-2108	KEY			1

COOLING SYSTEM (Cont'd)

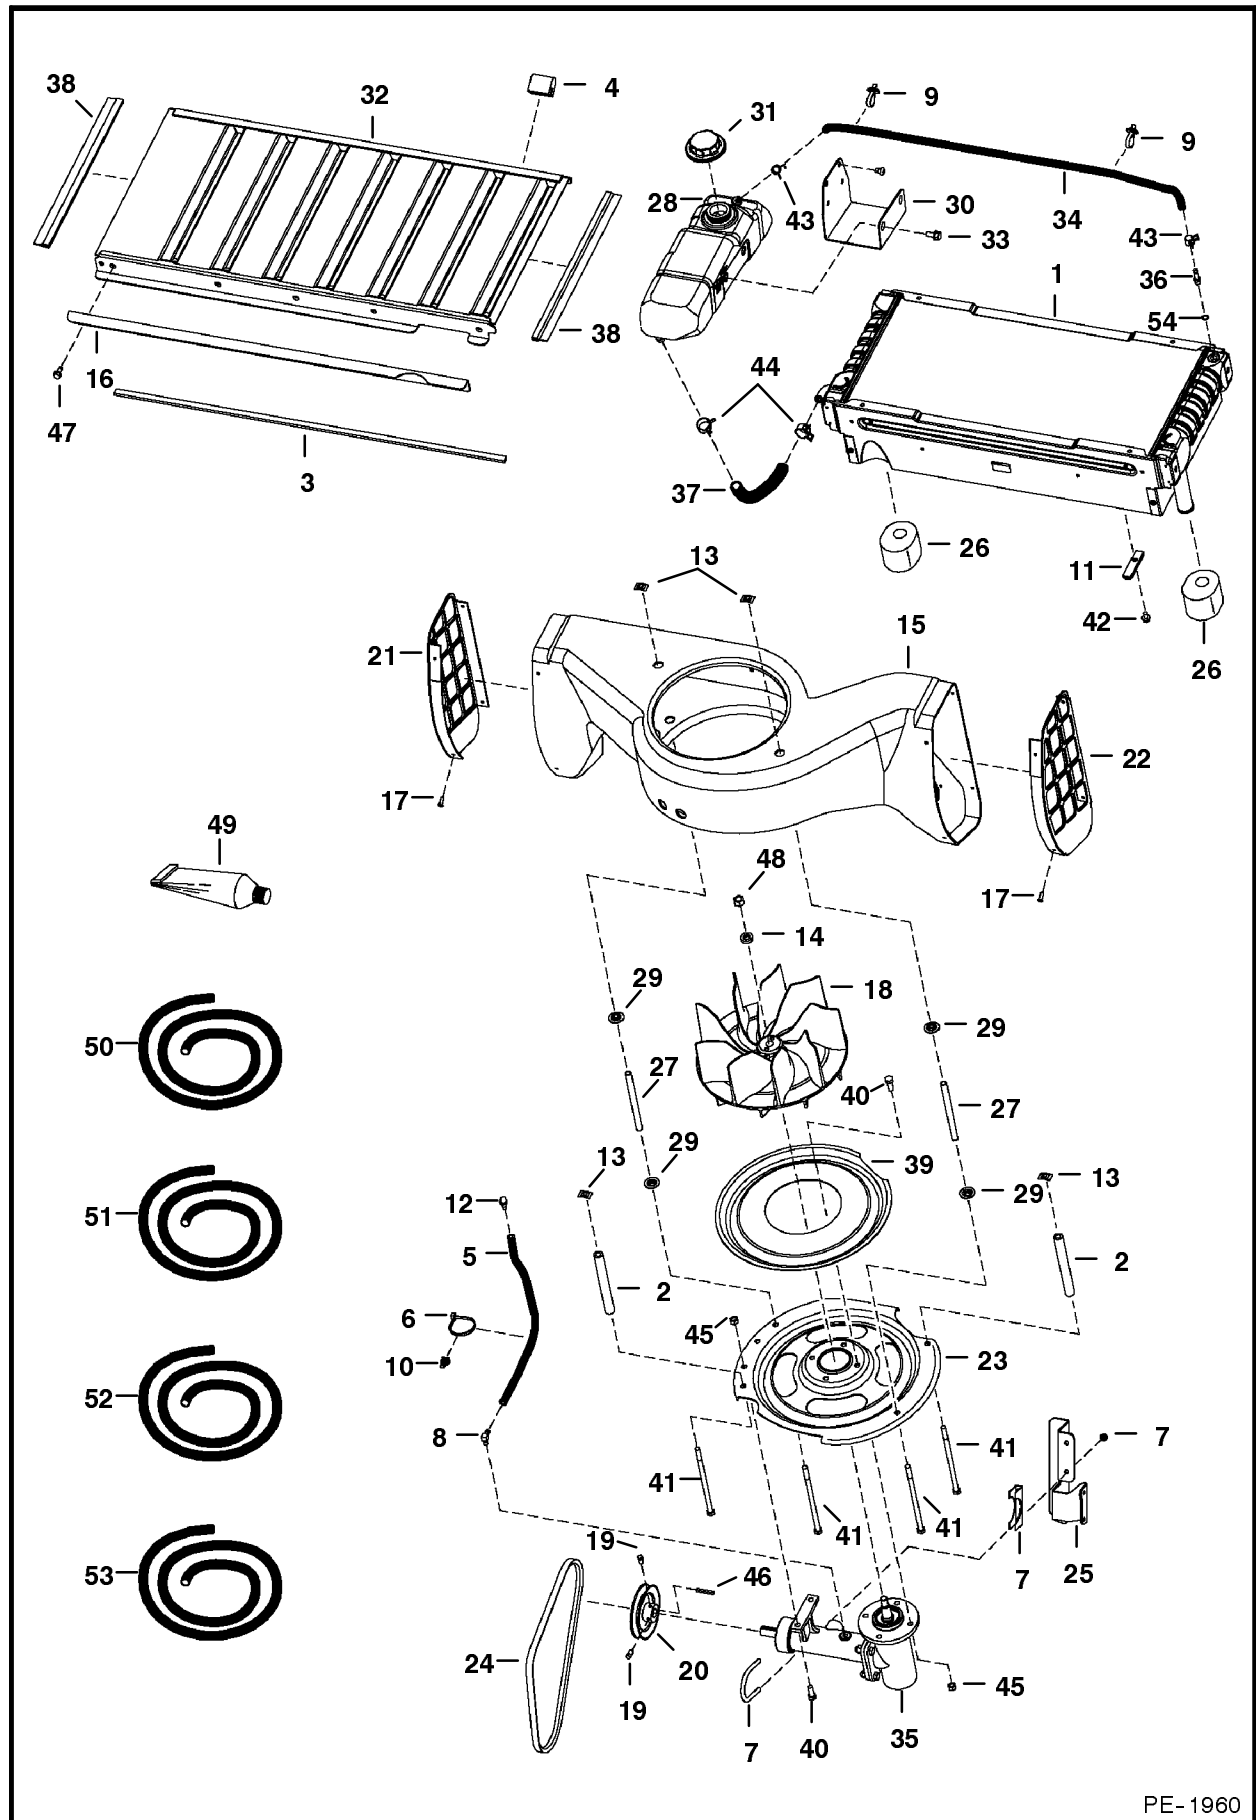

PE-1960

COOLING SYSTEM (Cont'd)


[illegible]

This technical diagram illustrates the assembly of a mechanical system, likely a pump or engine component. The central element is a complex engine or pump unit (16). Various hoses and pipes are connected to it: a large curved hose (12) on the left, a long straight pipe (1) with a bracket (14) on the right, and a smaller curved hose (17) at the bottom right. A large cylindrical component (10) is positioned at the bottom left, connected to a smaller pipe (21) and a hose (15). Numerous fasteners, including bolts (18, 22, 23, 24), nuts (9, 11), washers (8), and O-rings (4), are shown in their respective assembly positions. Other components include a rectangular block (5), a corrugated hose (6), and several flanges and connectors (1, 2, 3, 7, 13, 19, 20, 25). Dashed lines indicate the alignment and assembly sequence for each part.

ENGINE & ATTACHING PARTS (Cont'd)
(S/N 5252 11001 & Above, 5253 11001 & Above)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6730999	TUBE ASSY			1
	40K-6	PLUG			1
2	6717592	HOSE			1
3	6717591	HOSE			1
4	5HM-42	CLAMP			6
5	6726433	SPACER			2
6	6706393	SHIELD	5"(127 mm) long		1
*	6706394	SHIELD	8"(203,2 mm) long		1
7	6664004	CLAMP			1
*	6664004	CLAMP	Use W/Ref. 6 (6706394 Shield)		2
8	42H-32	CLAMP			1
9	84G-3712	BOLT			1
10		AIR CLEANER	See Page 265		1
11	84G-3708	BOLT			2
12*	NAP	HOSE	W/Ref. 6 (6706393 Shield) & 7 -		
			Was 6714889 [A]		1
*	7100573	HOSE	W/Ref. 6 (6706394 Shield) & (2) of Ref. 7		1
13	42HL-300	CLAMP			2
14	17C-612	BOLT			1
15	6735349	HOSE			1
16	6683202	ENGINE	See Page 177		1
17	7100024	HOSE			1
18	35C-612	BOLT			2
19*	7100840	MUFFLER	Was 6671667 [A]		1
20*	7101708	CLAMP	Was 6677363 [A]		1
21	6701151	PIPE			1
22	6661062	PLUG	brass 3/8" (9,5 mm)		1
23	61D-6	NUT			2
24	6701123	BOLT			4
25	6727752	GASKET			1

ENGINE & ATTACHING PARTS

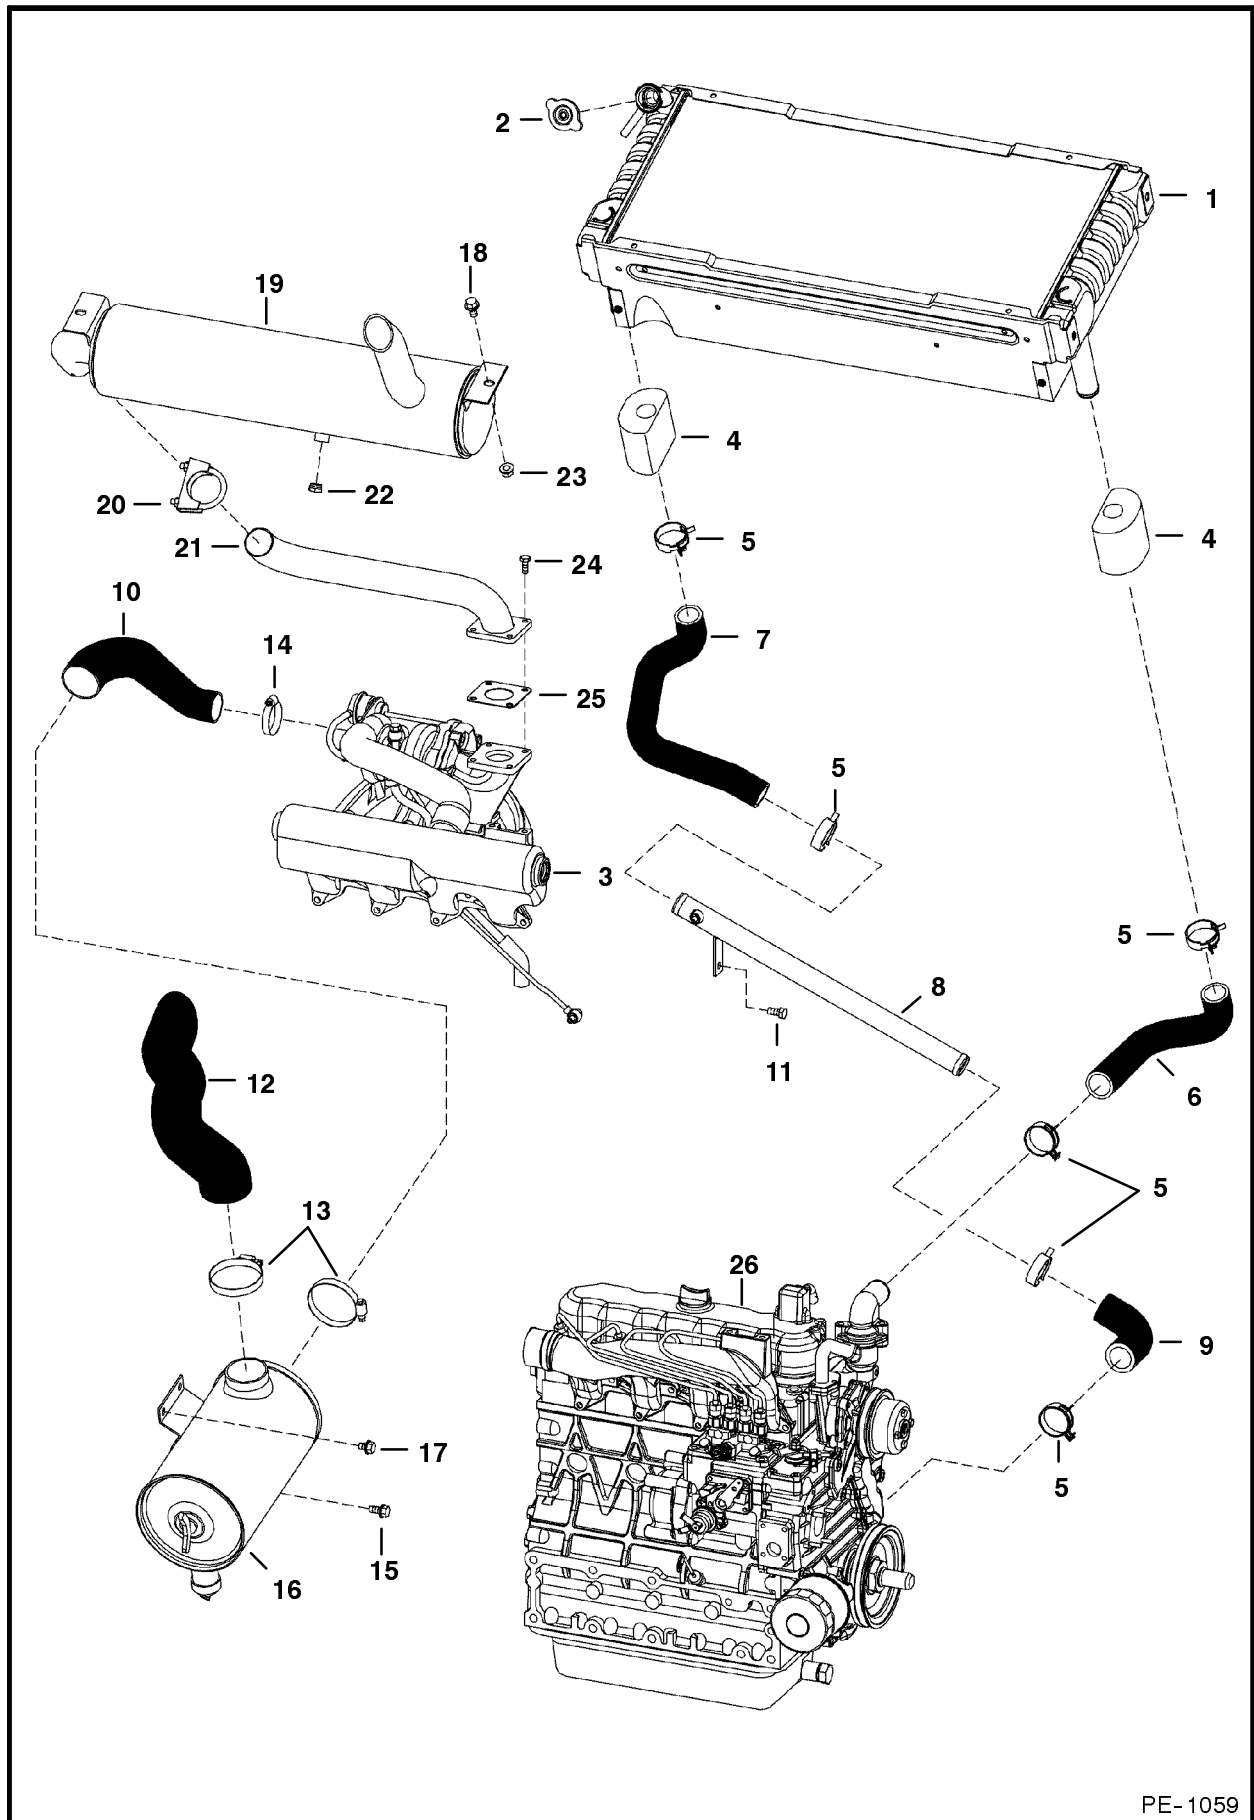


PE-1059

ENGINE & ATTACHING PARTS (Cont'd)

(S/N 5250 11001 & Abv, 5251 11001 & Abv)

[illegible]

ENGINE & ATTACHING PARTS (Belt Drive System)

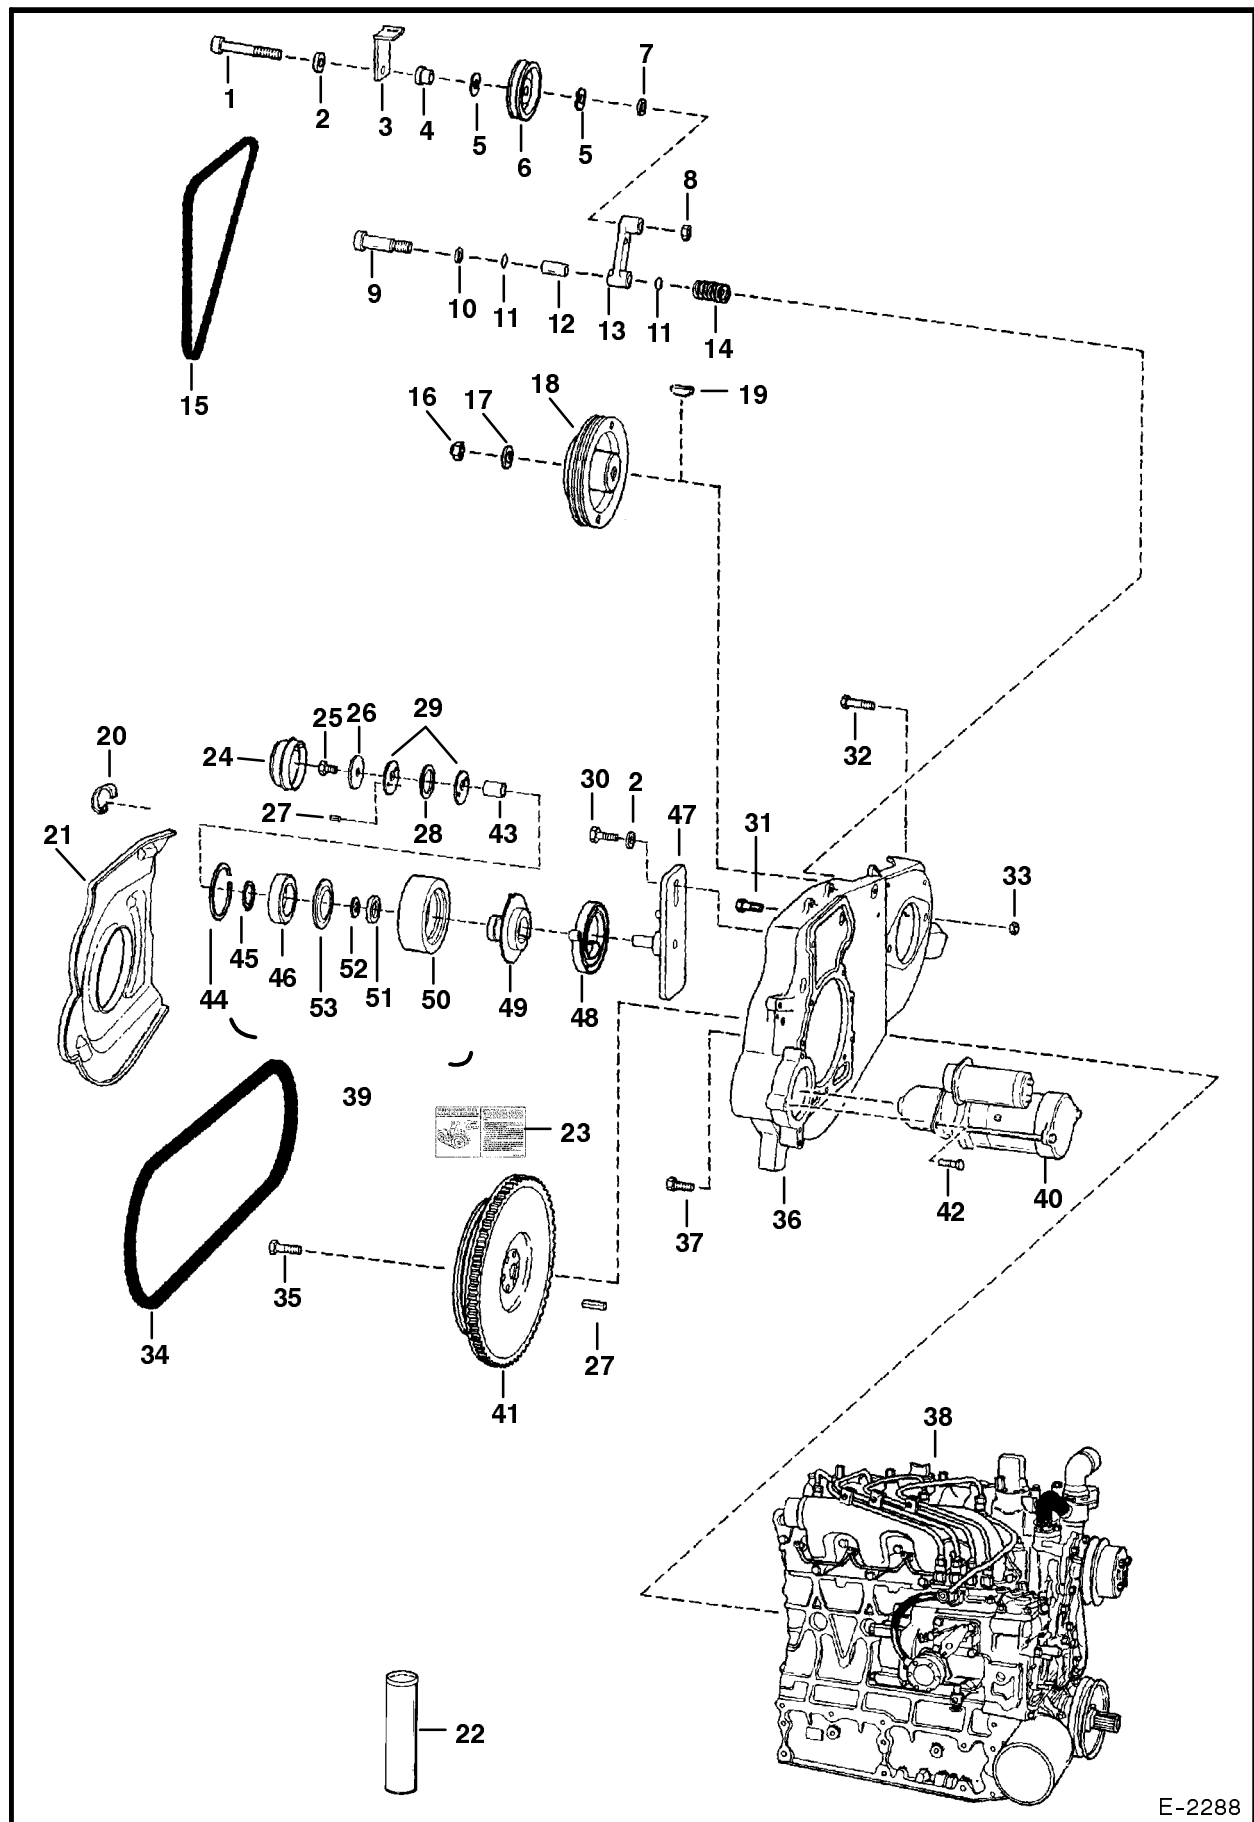


E-2288

ENGINE & ATTACHING PARTS (Cont'd)
(Belt Drive System)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	73G-656	BOLT			1
2	6704484	WASHER	thrust		3
3	6702474	RETAINER	fan drive idler belt		1
4	6704443	BUSHING	spacer		1
5	6660995	RING	grease		2
6	6662997	PULLEY	fan drive idler		1
7	6704444	WASHER			1
8	61D-6	NUT			1
9	38C-820	BOLT	shoulder		1
10	6655781	BEARING			1
11	6704820	O-RING			2
12	6670682	BEARING	nylon		1
13	6725212	IDLER ARM	W/Ref. 12		1
14	6700115	SPRING			1
15		BELT	fan drive - See Page 159		1
16	92D-12	NUT			1
17	6576033	WASHER			1
18	6726539	PULLEY	to hyd. pump - 3 groove - 7.95" (202 mm) dia.		1
19	6J-807	KEY			1
20	6703022	CLIP			3
21	6726937	SHIELD			1
22	6599719	GREASE	Use W/Ref. 39		x
23	6709030	DECAL	belt tension spring loaded idler		1
24	6708770	CAP	dust		1
25	17C-610	BOLT			1
26	6705232	WASHER			1
27	6713370	PIN			2
28	6710585	WASHER	wave spring		1
29	6705231	WASHER			2
30	17C-620	BOLT			1
31	6719828	BOLT			2
32	17C-828	BOLT	hyd. pump mount		2
33	85D-8	NUT			2
34	6736775	BELT	pump drive		1
35	6598275	BOLT			6
36	6728062	MOUNT			1
37	6719825	BOLT			7
38		ENGINE	See Page 177 & See Page 217		1
39	6735884	IDLER ASSY.	spring loaded - Ref. 24 - 29 & 43 - 53 - Also Order Ref. 23		1
40		STARTER	See Page 157		1
41	6736807	FLYWHEEL ASSY	W/Ring Gear		1
	6510470	RING GEAR			1
42	35C-620	BOLT			3
43	6682442	BEARING	bronze sleeve		1
44	6658847	SNAP RING			1
45	6658536	SNAP RING			1
46	6668114	BEARING	ball		1
47	6735883	BRACKET			1
48	6705491	SPRING	torsion		1

ENGINE & ATTACHING PARTS (Cont'd) (Belt Drive System)

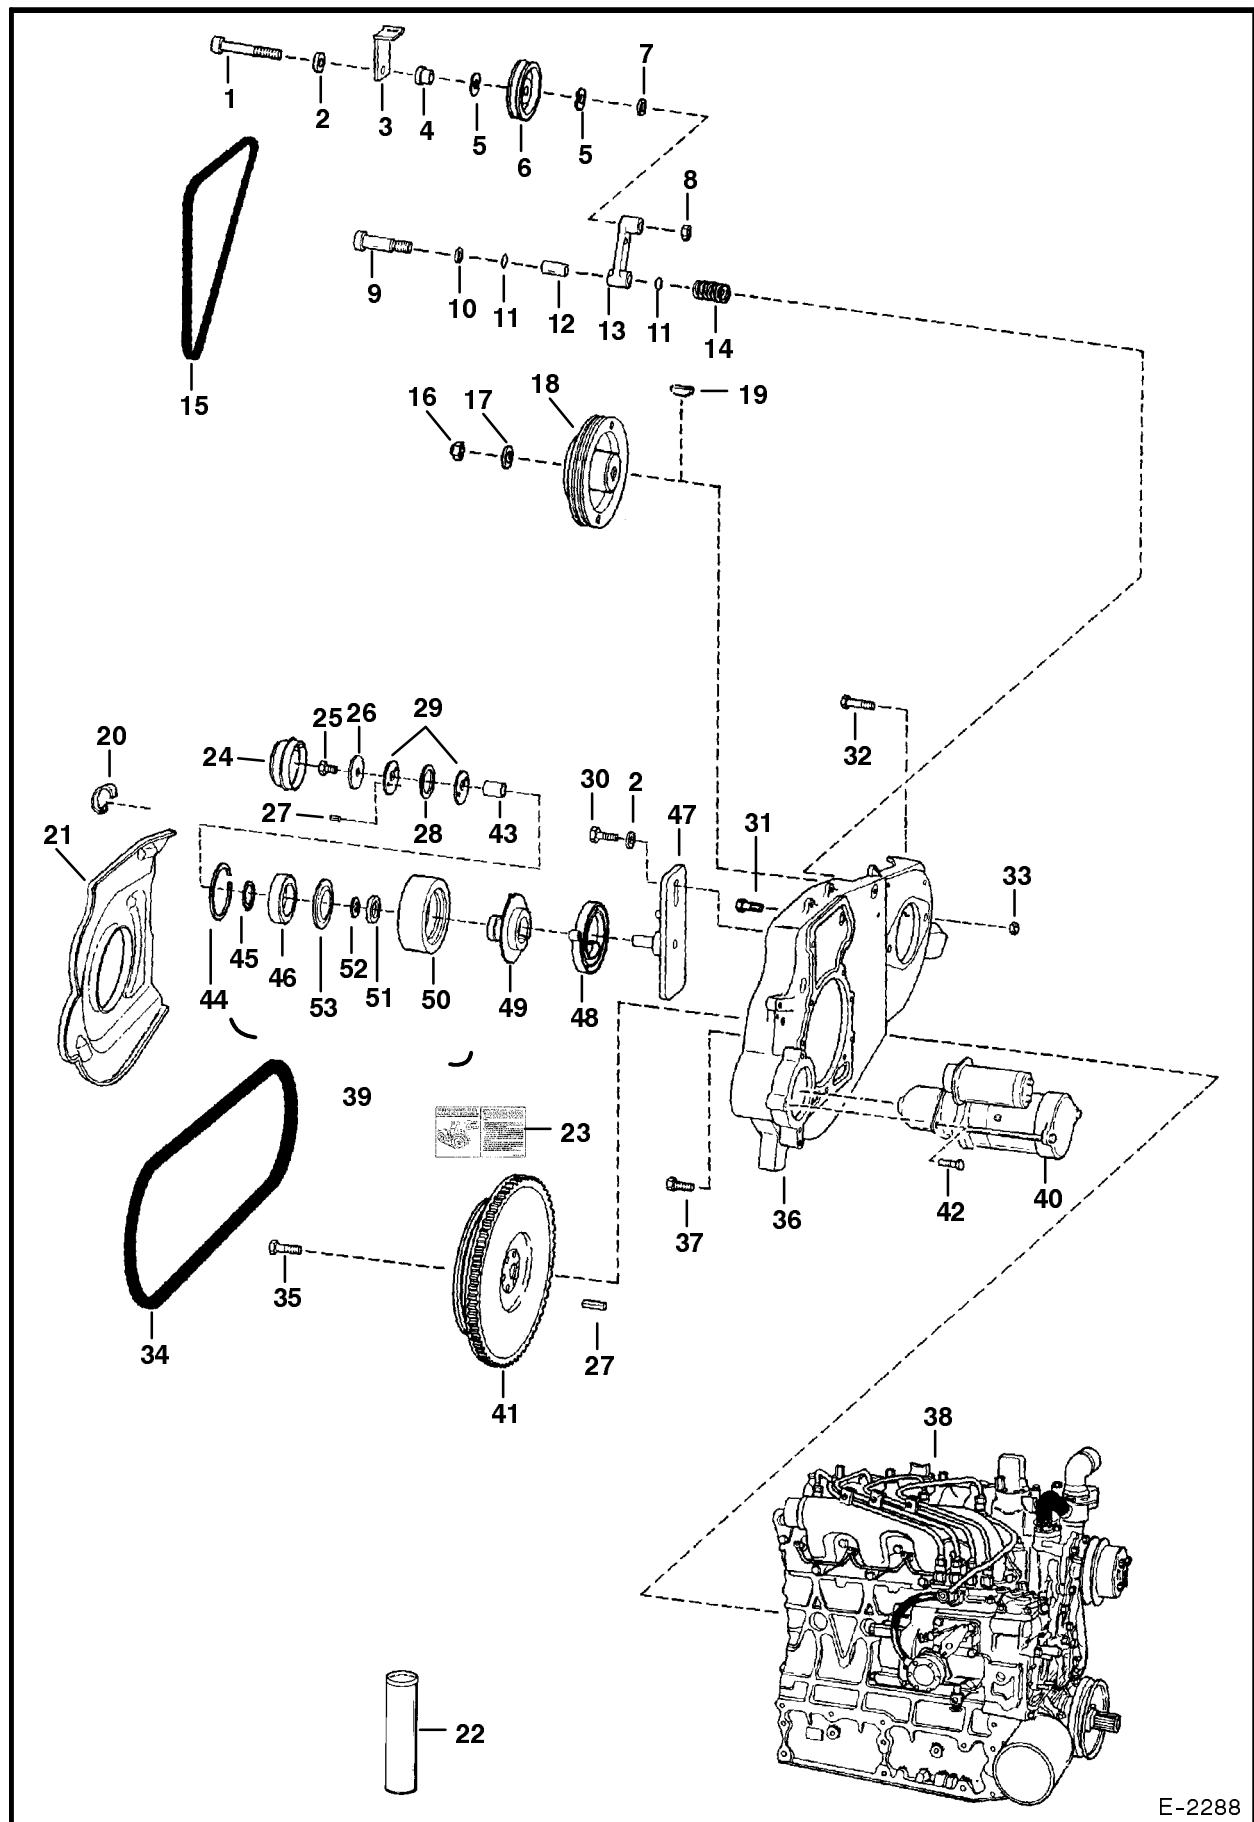


E-2288

ENGINE & ATTACHING PARTS (Cont'd)

[illegible]

ENGINE & ATTACHING PARTS (Engine Mounts)

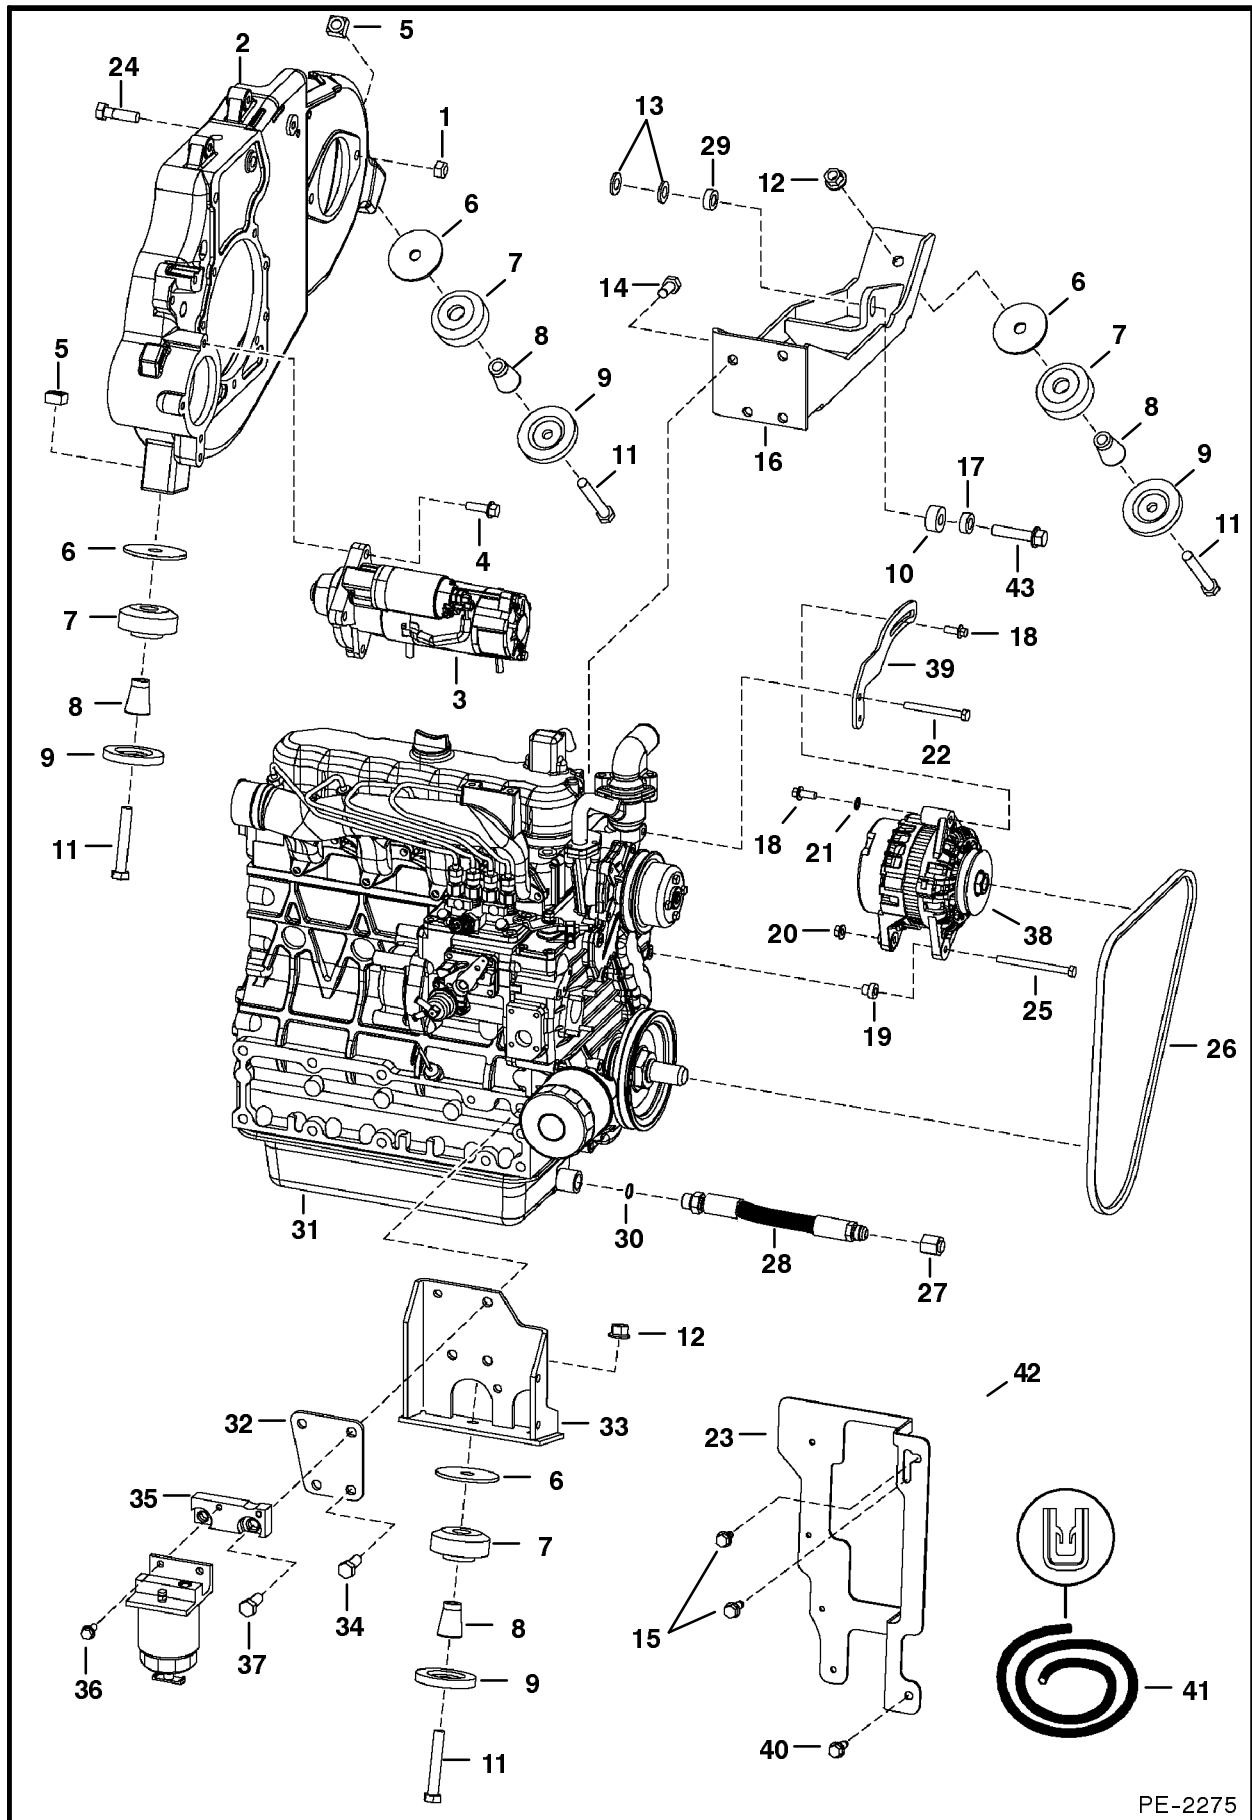


PE-2275

ENGINE & ATTACHING PARTS (Cont'd)
(Engine Mounts)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	85D-8	NUT			2
2		MOUNT	See Page 167		1
3		STARTER	See Page 157		1
4	35C-620	BOLT			3
5	6652918	NUT			2
6	6705106	WASHER			4
7	6661785	MOUNT			4
8	6706043	BUSHING			4
9	6661787	WASHER			4
10	6734432	SPACER			1
11	43C-852	BOLT			4
12	83D-8	NUT			2
13	25E-21	WASHER	use 2 max.		x
14	6719827	BOLT			4
15	84G-3712	BOLT			2
16	6712161	MOUNT	engine & hyd. pump for horizontal mount		1
17*	6728337	SENDER			1
18	29CM-820	BOLT			1
19	6817566	BUSHING			1
20	53DM-8	NUT			2
21	6E-5	WASHER			1
22*	1CM-880	BOLT	Was 1CM-890 [B]		1
23	6731060	SHIELD	bolts to upright		1
24	17C-828	BOLT	hyd. pump mount		2
25	1CM-8100	BOLT			2
26*	7100572	BELT	alternator - Was 6675837 [A]		1
27	36K-6	CAP			1
28	6563445	HOSE			1
29	6703140	WASHER			1
30	79K-8	O-RING			x
31		ENGINE	See Page 177 & See Page 217		1
32	6700535	SPACER			1
33	6703981	MOUNT			1
34	6719828	BOLT			2
35	6736817	MOUNT	fuel filter		1
36	6719826	BOLT			1
37	6719829	BOLT			1
38		ALTERNATOR	90 amp. - See Page 155		1
39*	6730867	BRACKET	Was 6727084 [B,D]		1
40	84G-3716	BOLT			2
41	6654139	MOULDING	bulk - Sold Per Foot		x
42	NAP	MOULDING	5.5"(139,7 mm) long - Order Ref. 41		1
43	6675221	BOLT	hyd. pump mount		1

THROTTLE

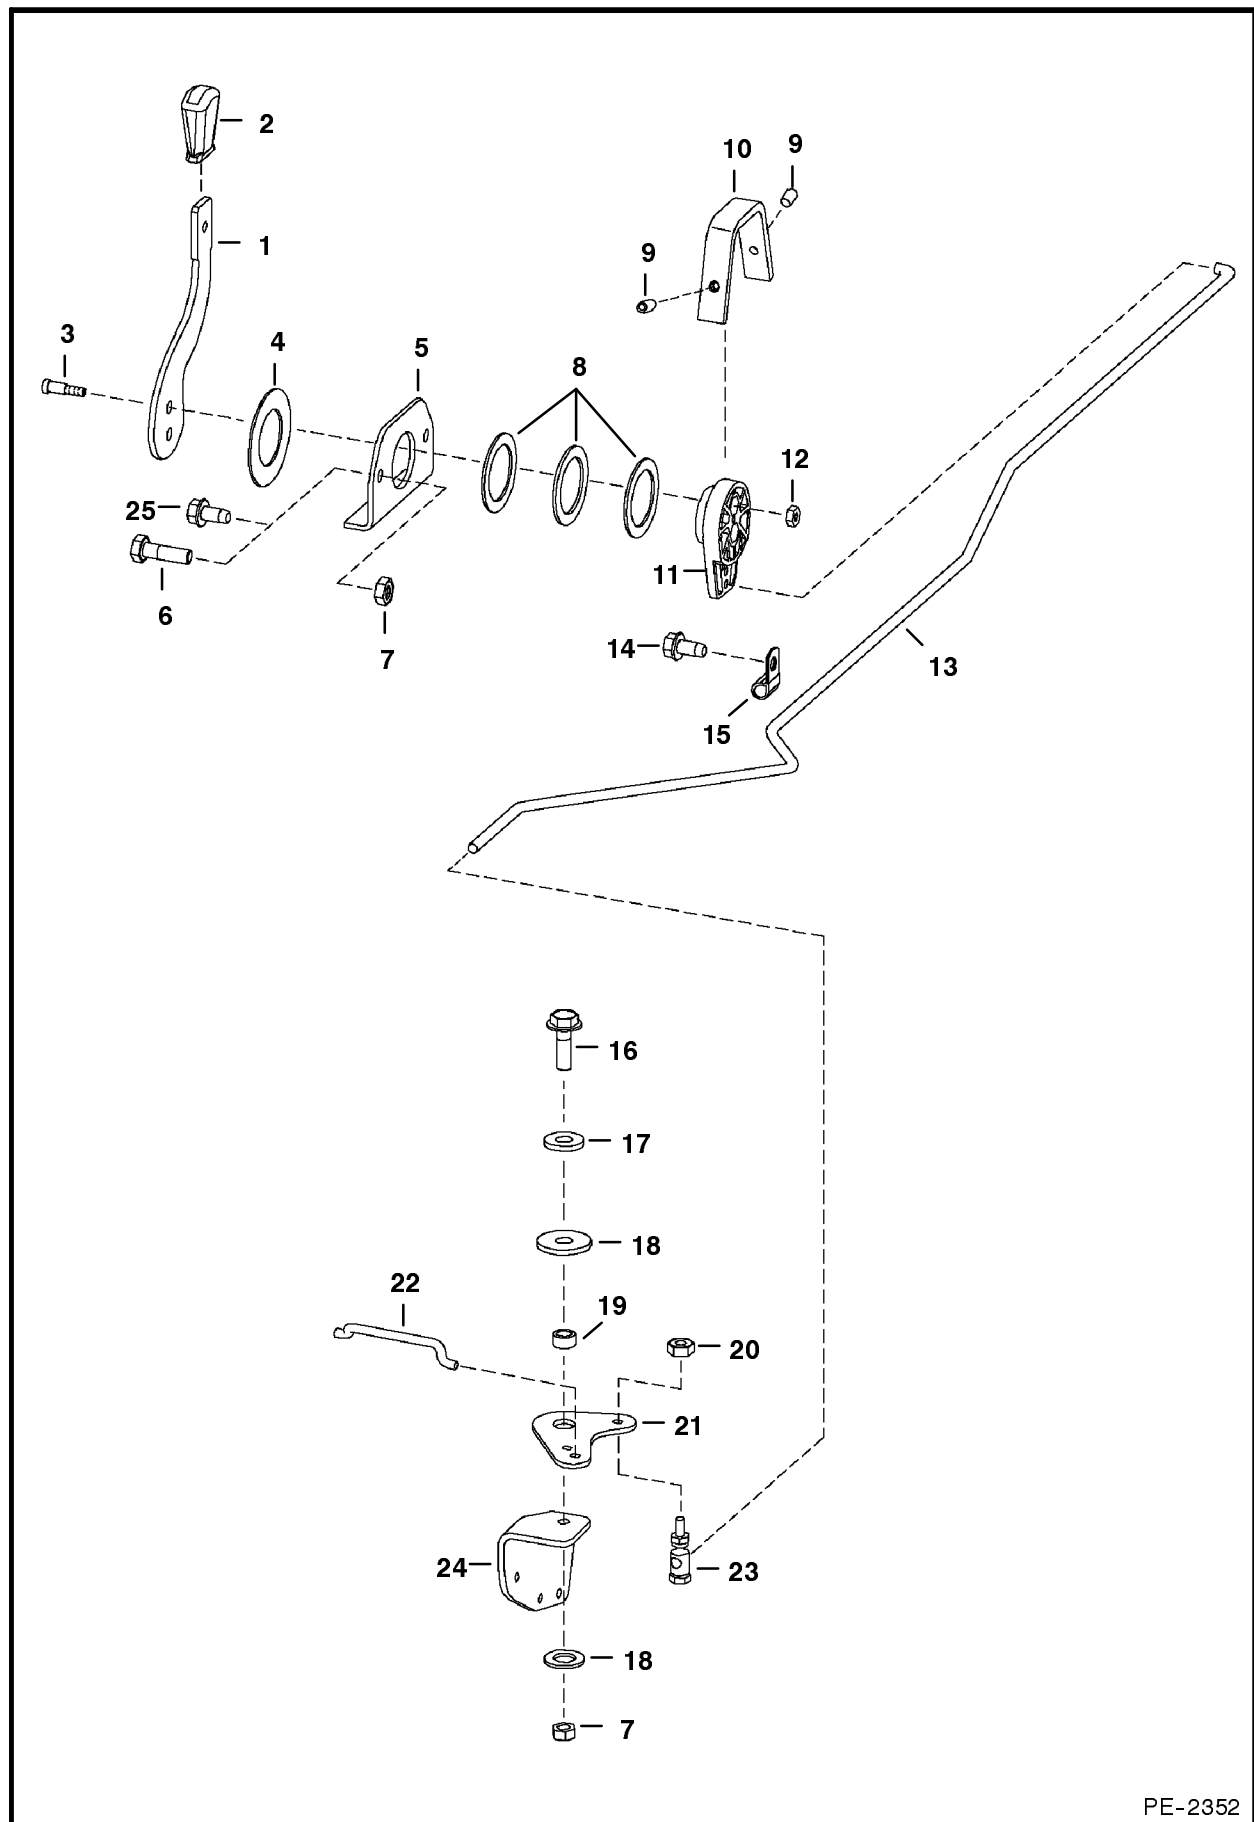


PE-2352

THROTTLE (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6705452	LEVER			1
2	6564452	GRIP			1
3	38C-610	BOLT	shoulder		2
4	6567962	WASHER			1
5	6576262	MOUNT			1
6	17C-626	BOLT			2
7	95D-6	NUT			3
8	6630945	WASHER			3
9	6706572	SET SCREW			2
10	6576261	COVER			1
11	6709022	LEVER			1
12	85D-5	NUT			2
13*	7102099	ROD	Was 6702397 [A]		1
*	7102277	ROD	SJC		1
14	84G-3712	BOLT			1
15	30H-23	CLAMP			1
16	84G-3716	BOLT			1
17	25E-18	WASHER			1
18	6700170	WASHER	plastic		2
19	6564343	BUSHING			1
20	59D-4	NUT			1
21	6578268	BELLCRANK			1
22	6736195	ROD			1
23	6557291	BALL JOINT			1
24	6735986	MOUNT			1
25*	84G-3724	BOLT			2

COOLING FAN DRIVE ASSY.

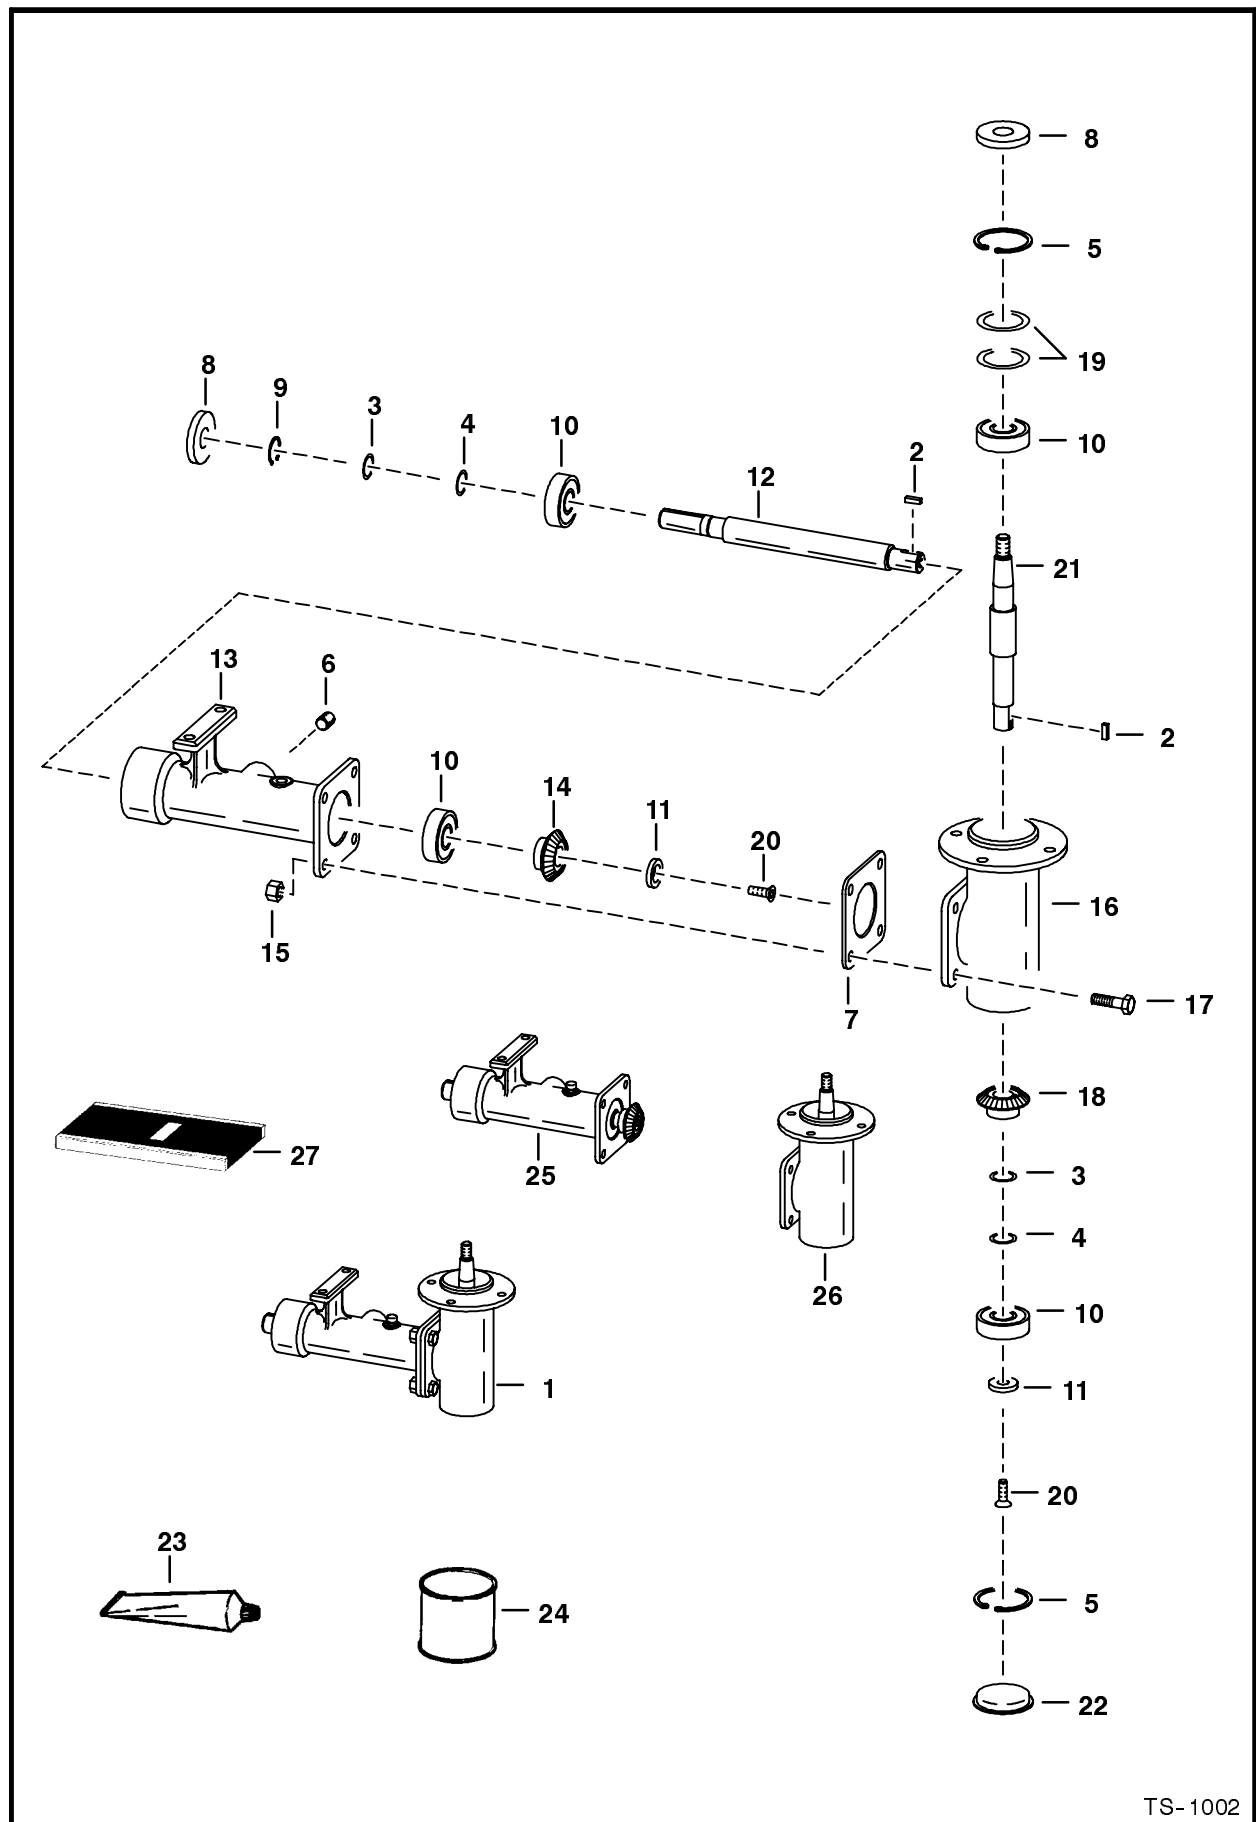


TS-1002

COOLING FAN DRIVE ASSY. (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6734104	HOUSING ASSY.	Ref. 2 - 22		1
2	7J-2010	KEY			2
3	6702165	SHIM	.002" (0,05 mm) thickness -		
4	6701159	SHIM	1" (25,4 mm) O.D. .005" (0,13 mm) thickness - 1" (25,4 mm) O.D.		x x
5	6653758	SNAP RING			2
6	16F-8	PLUG			1
7	6578284	SHIM	.003" (0,08 mm) thickness		x
8	6653702	SEAL			2
9	6653757	SNAP RING			1
10	6646627	BEARING			4
11	NAP	WASHER	countersink		2
12	6702137	SHAFT	keyed		1
13	6579641	HOUSING			1
14	6702103	GEAR	keyed		1
15	95D-6	NUT			4
16	NSS	HOUSING	Order 6702138 Housing or Ref. 26		1
17	17C-620	BOLT			4
18	6702102	GEAR	keyed		1
19	6702166	SHIM	.002" (0,05 mm) thickness -		
	6702144	SHIM	2" (50,8 mm) O.D. .005" (0,13 mm) thickness - 2" (50,8 mm) O.D.		x x
20	9G-512	SCREW			2
21	6702135	SHAFT	keyed		1
22	6700782	CAP	grease		1
23	6672486	SEALANT	polyurethane - Use W/Ref. 7 & 22		x
24	6634393	LUBRICANT	gear - 1 pint		x
25	6707078	HOUSING ASSY.	half		1
26	6707077	HOUSING ASSY.	half		1
27	6669384	SPEEDY SLEEVE	repair kit		1

ENGINE & GASKET KITS
(Kubota - V2203MDI)

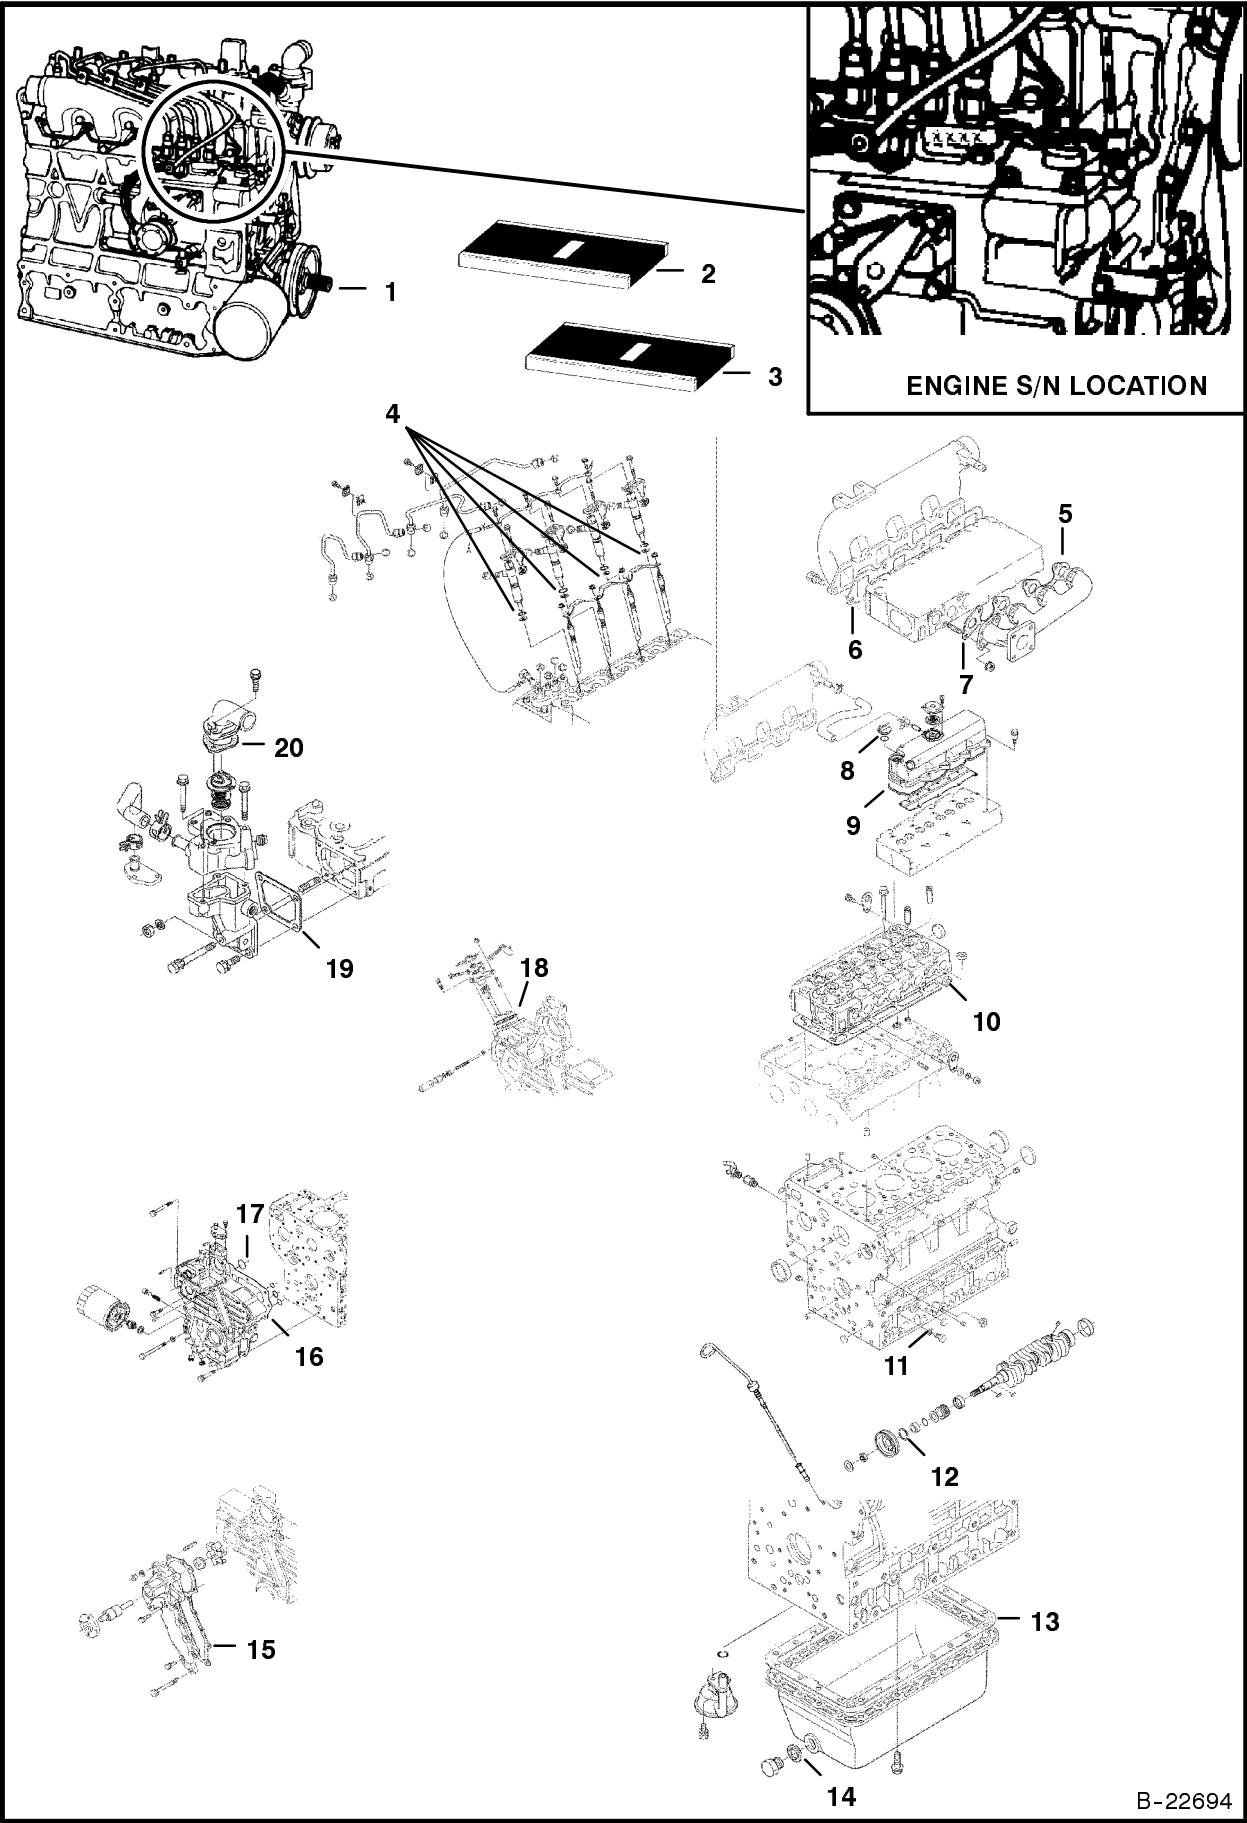


B-22694

ENGINE & GASKET KITS (Cont'd)

(Kubota - V2203MDI)

[illegible]


GEARCASE
(Kubota - V2203MDI)

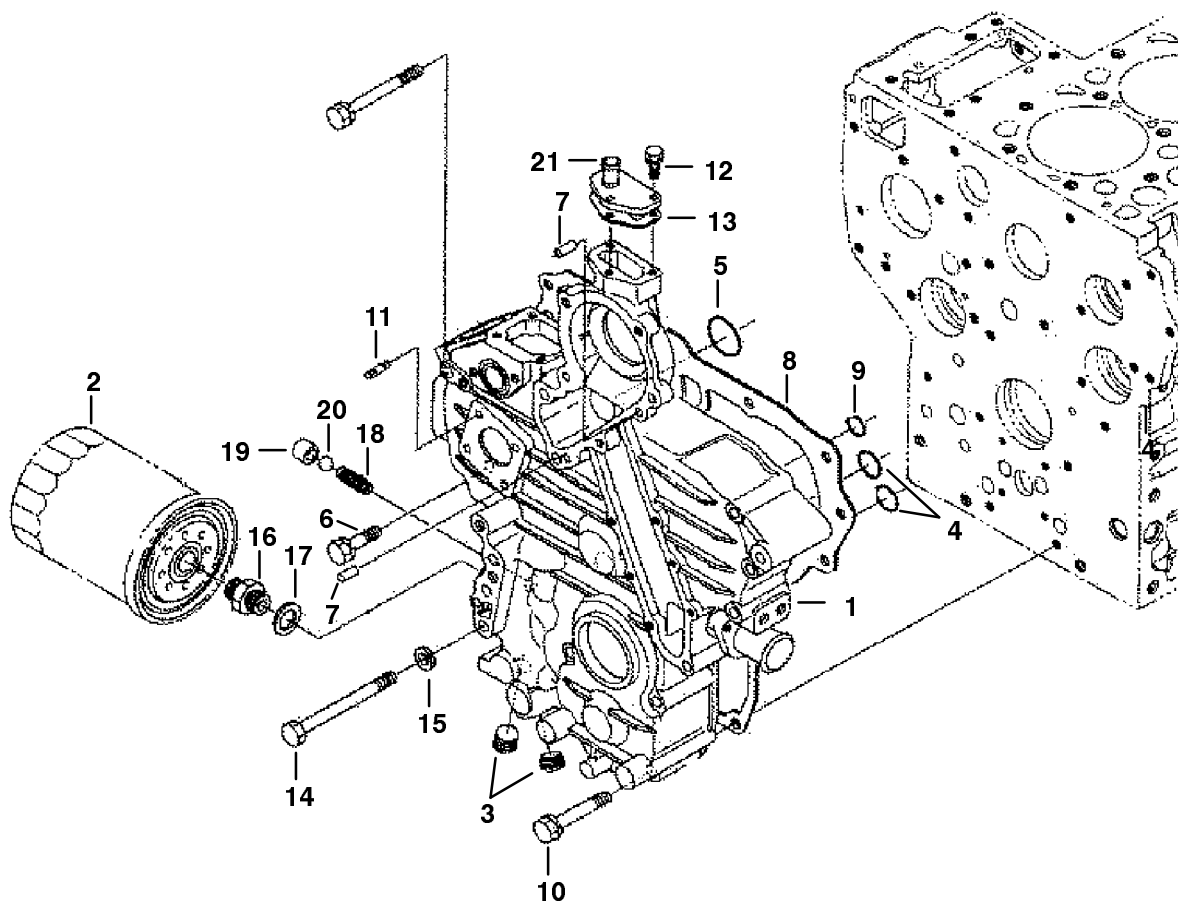

B-22675

[illegible]

CRANKCASE
(Kubota - V2203MDI)

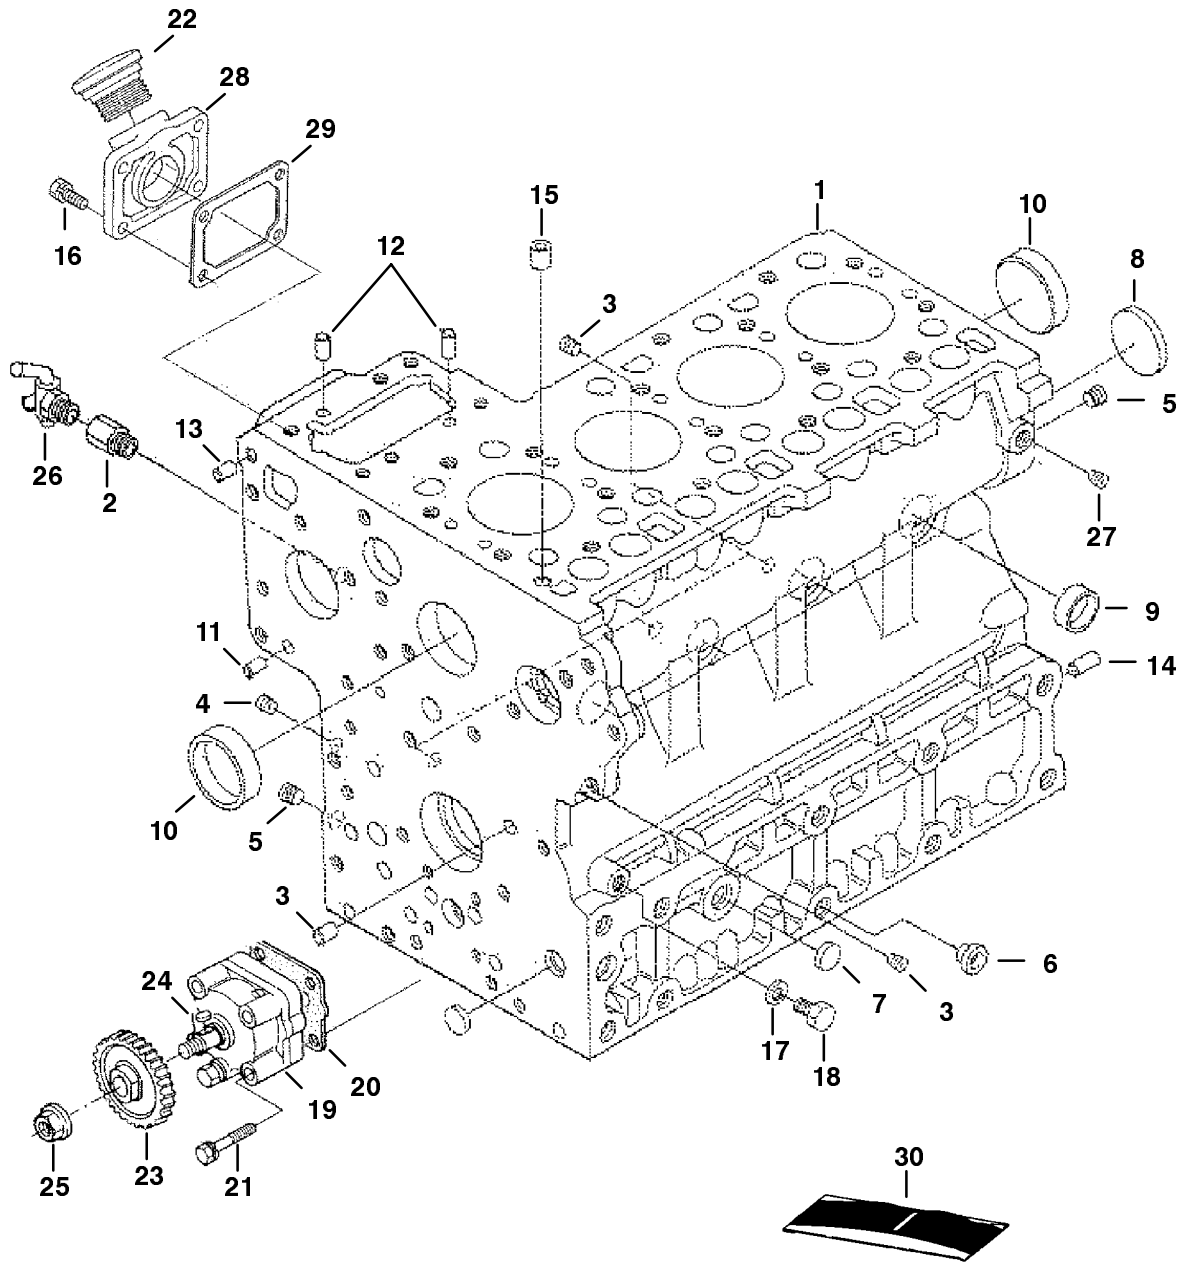


B-22676

CRANKCASE (Cont'd)
(Kubota - V2203MDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685522	CRANKCASE	assy. - W/Ref. 2 - 15		1
2	3974871	ADAPTER			1
3	6652574	PLUG			6
4	6685477	PLUG			12
5	6652575	PLUG			2
6	6598187	PLUG			2
7	6667418	PLUG	expansion		3
8	6657663	PLUG	expansion		1
9	3974389	CAP	sealing		6
10	6680639	CAP	sealing		2
11	3974393	PIN	straight		2
12	3974394	PIN	straight		3
13	3974395	PIN	straight		2
14	3974868	PIN	straight		1
15	3974037	PIN	pipe		1
16	6652580	BOLT			4
17	3974095	GASKET			1
18	6655884	PLUG			1
19	3975426	OIL PUMP			1
20	6666782	GASKET			1
21	6655195	BOLT			4
22	6685472	CAP	oil fill		1
23	3975441	GEAR			1
24	15JM-410	KEY			1
25	6653888	NUT			1
26	6672190	VALVE			1
27	16F-2	PLUG			1
28	6685478	FLANGE	oil fill		1
29	6684752	GASKET			1
30		GASKET KIT	Lower - Does not include		
			rear oil seal - See Page 217		1

**ROCKER ARM COVER
(Kubota - V2203MDI)**

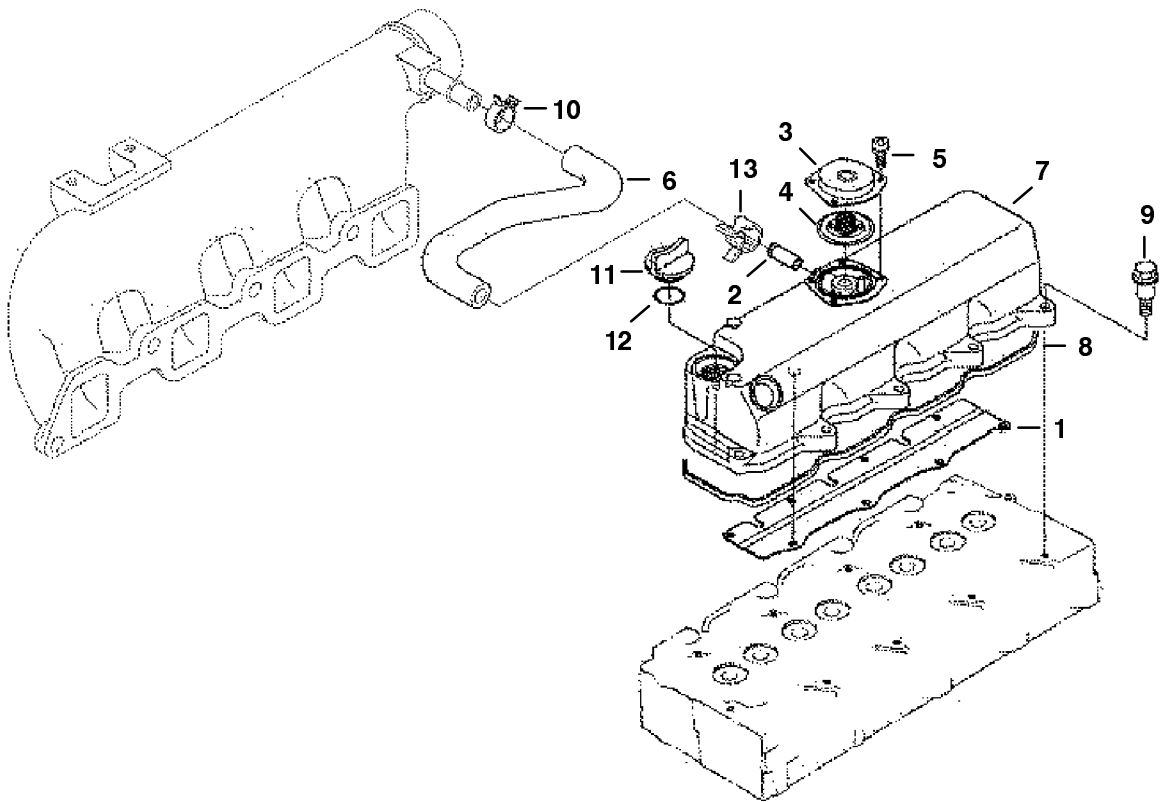


B-22674

ROCKER ARM COVER (Cont'd)

(Kubota - V2203MDI)

[illegible]

VALVE ROCKER ARM (Kubota - V2203MDI)

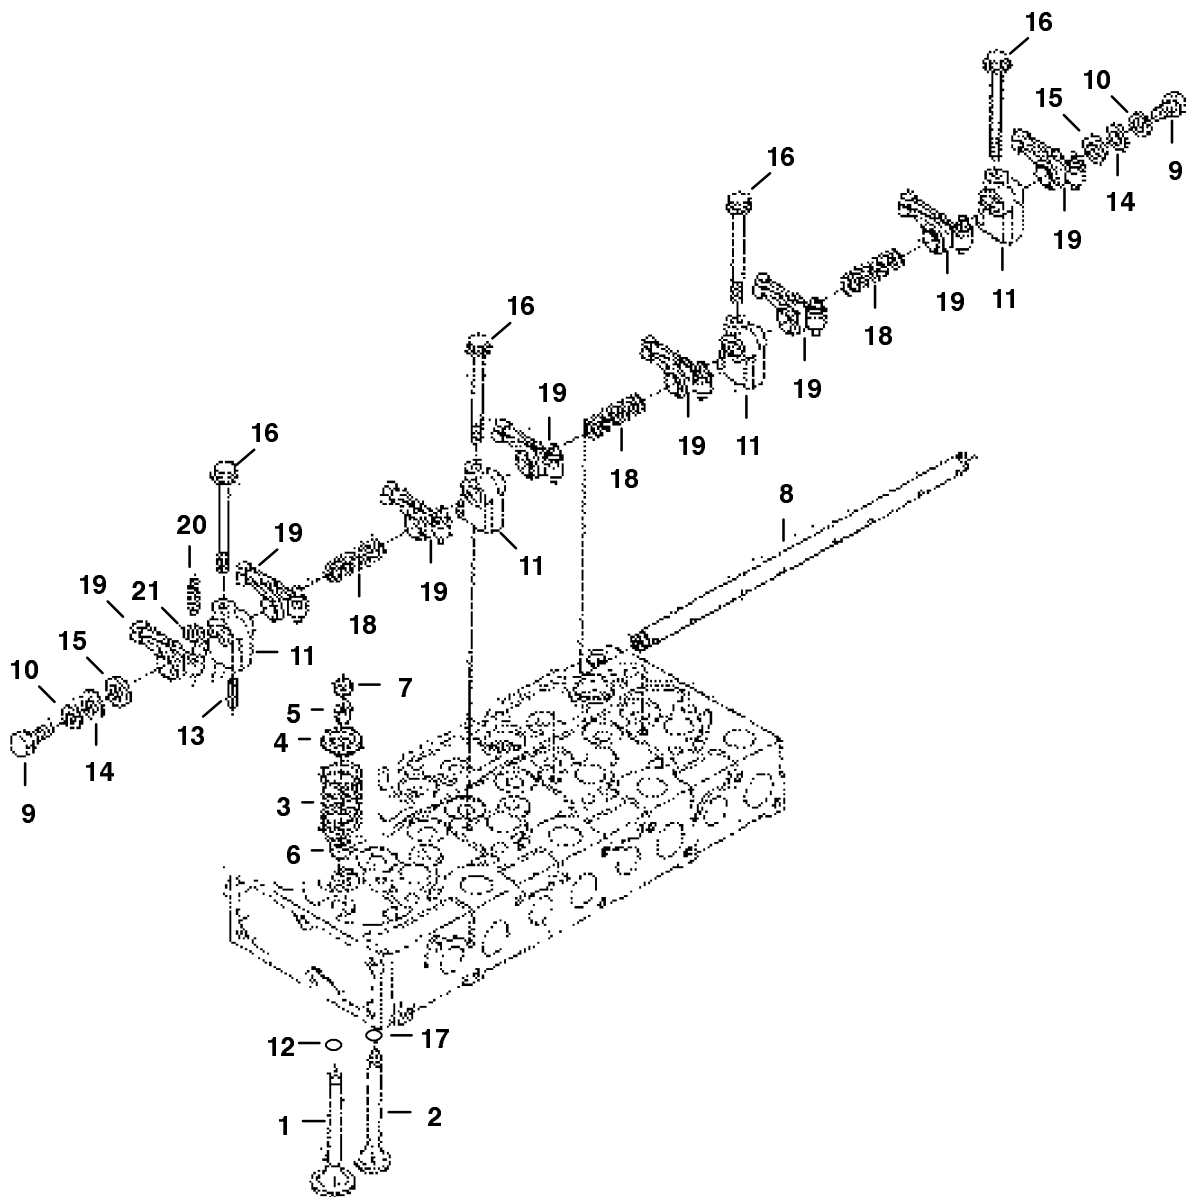


B-22692

VALVE ROCKER ARM (Cont'd)

(Kubota - V2203MDI)

[illegible]

CYLINDER HEAD (Kubota - V2203MDI)

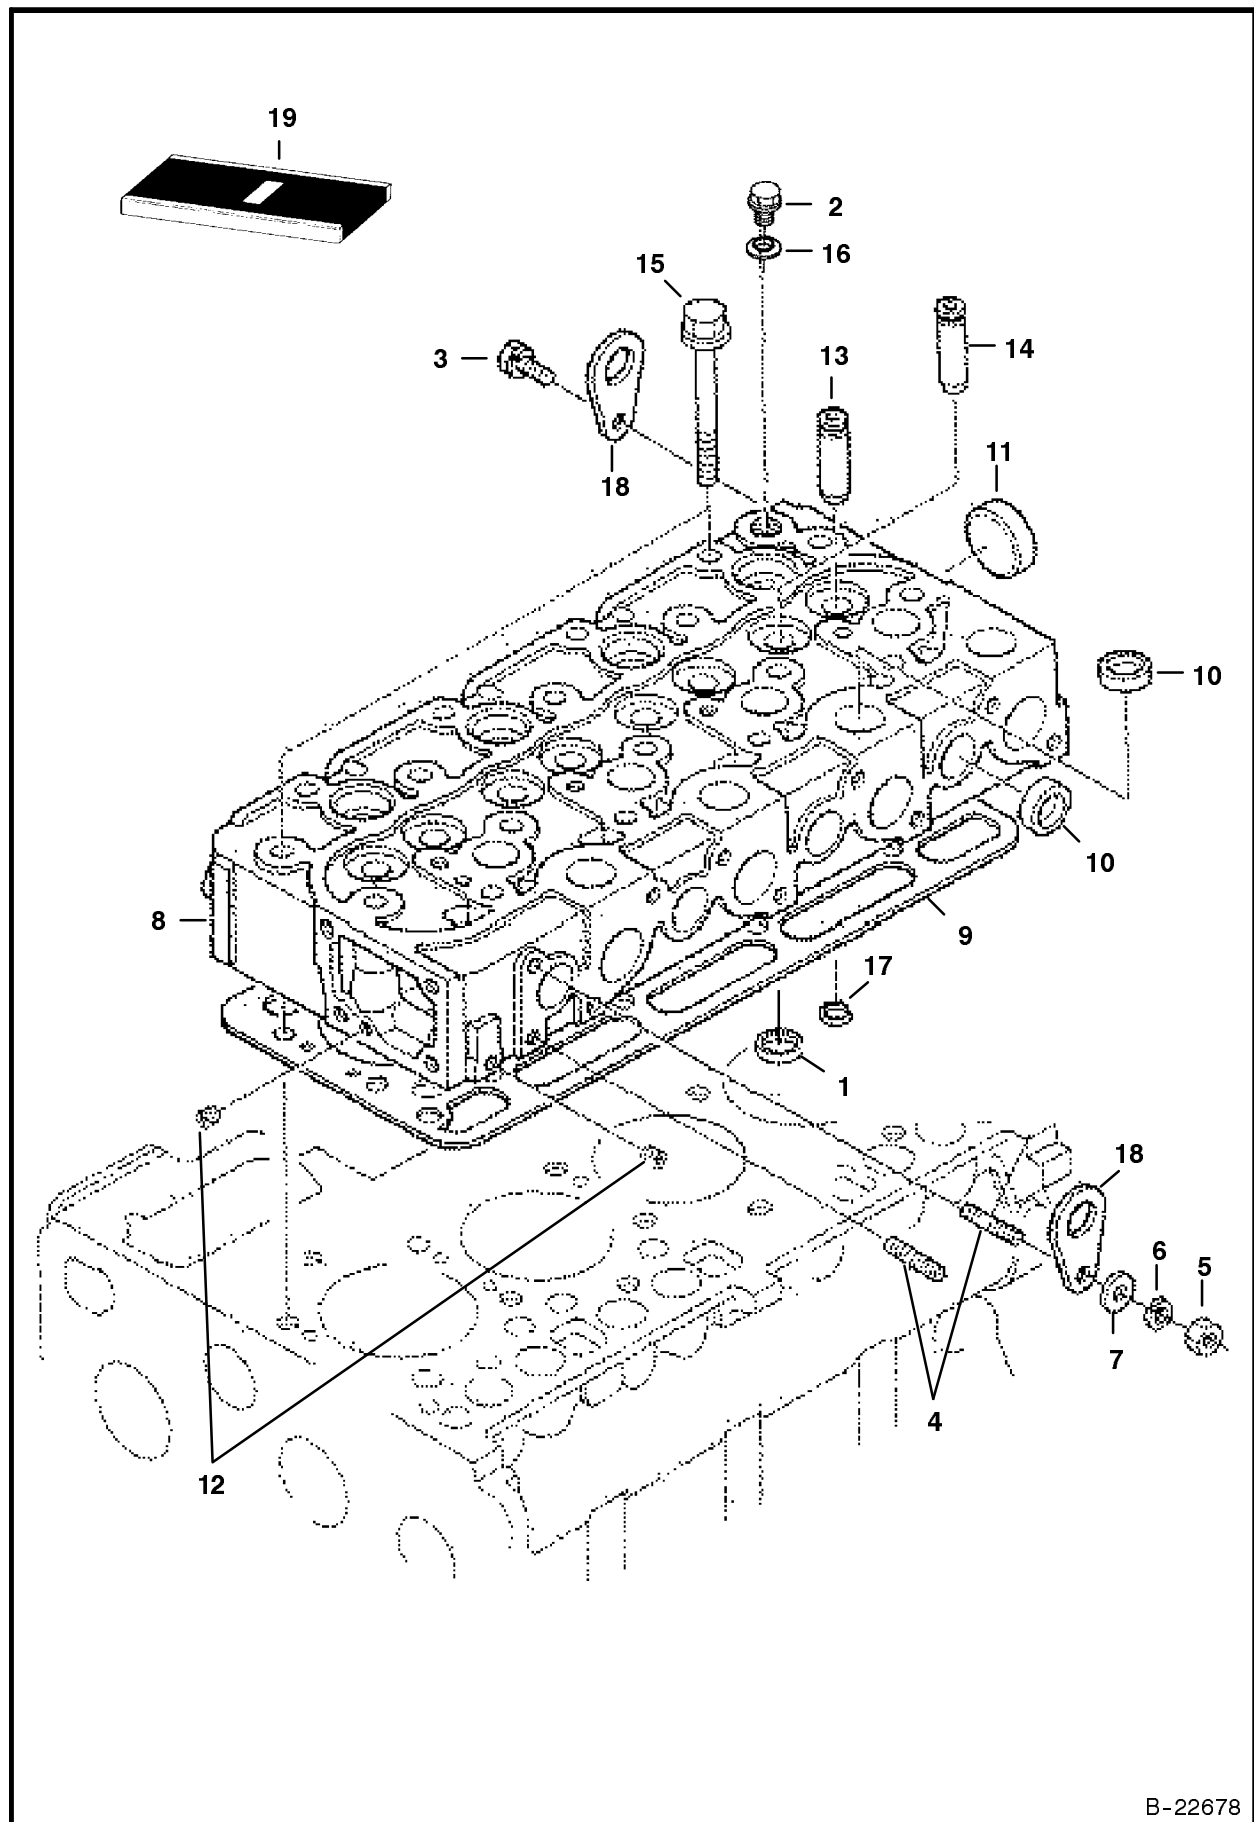


B-22678

CYLINDER HEAD (Cont'd)

(Kubota - V2203MDI)

[illegible]


OIL PAN
(Kubota - V2203MDI)

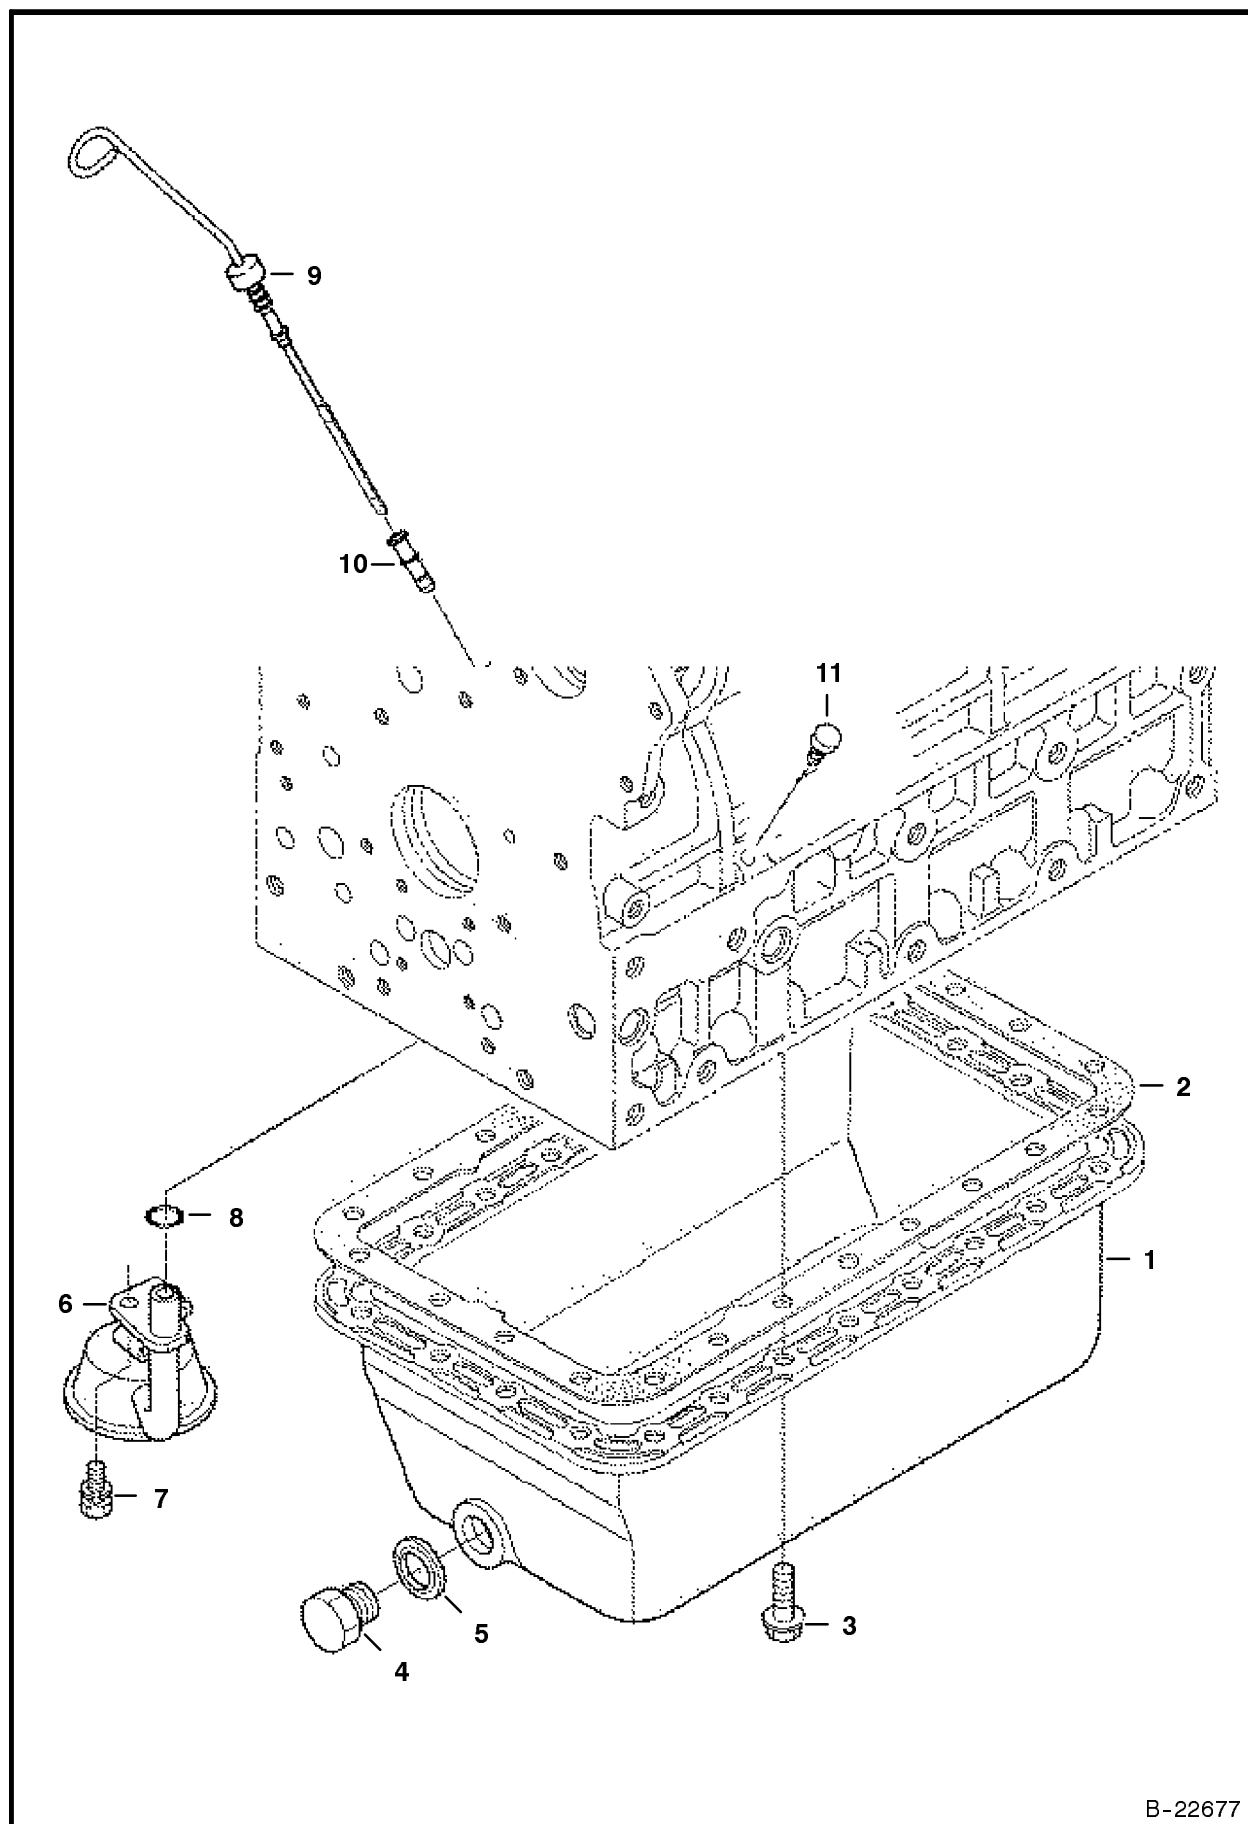

B-22677

[illegible]

PISTON & CRANKSHAFT (Kubota - V2203MDI)

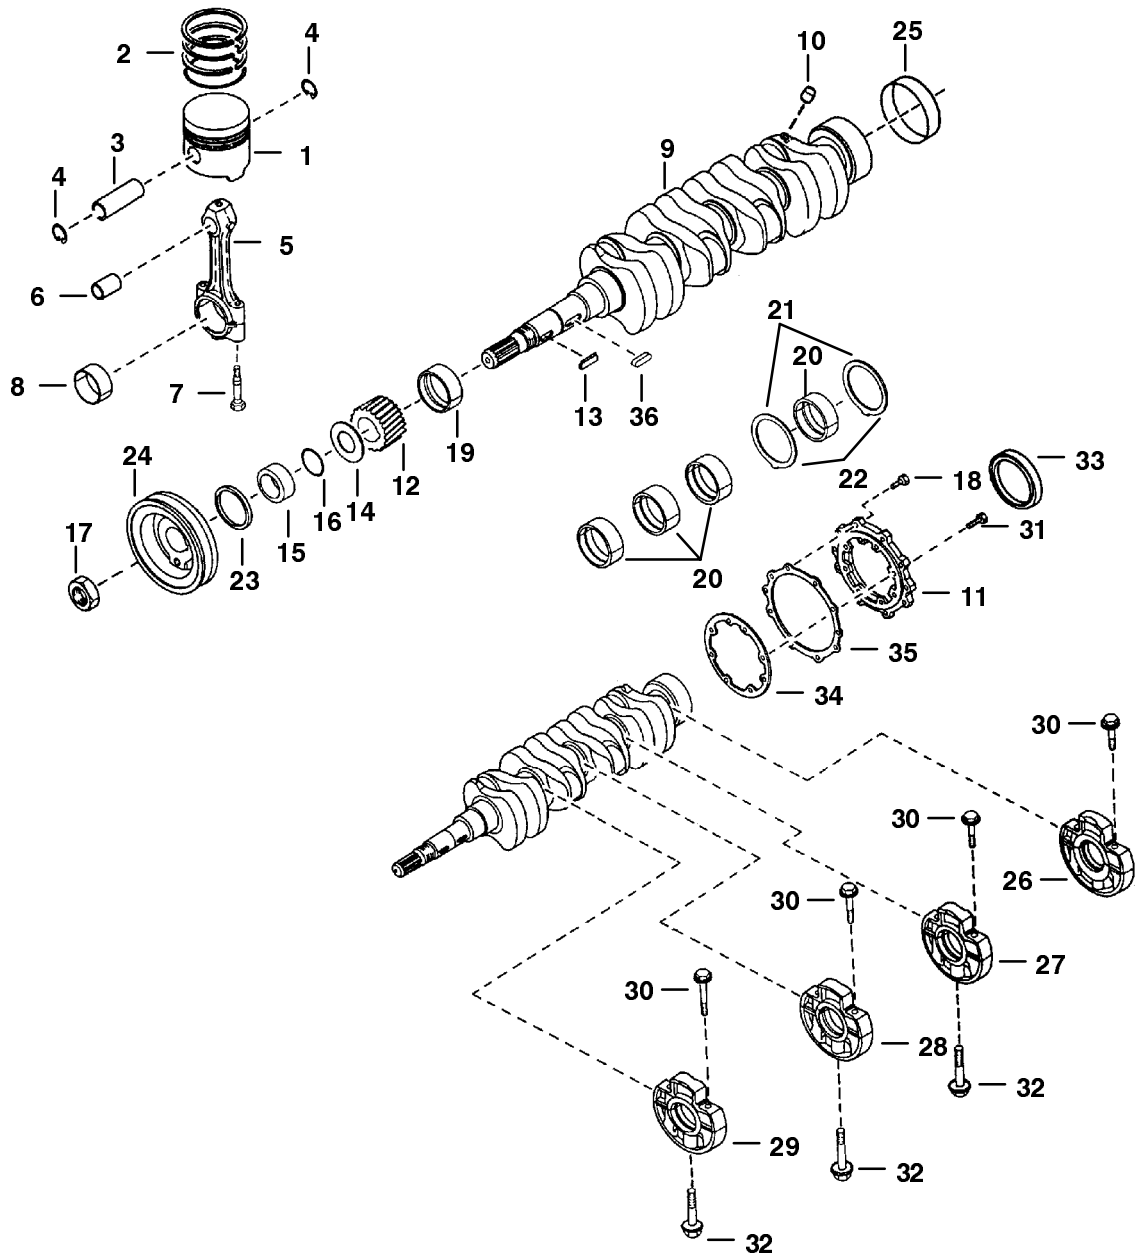


B-22684

PISTON & CRANKSHAFT (Cont'd)
(Kubota - V2203MDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685506	PISTON	Std.		4
	6685509	PISTON	+.25		4
2	6685095	RINGS	piston - Std.		4
	6685096	RINGS	piston - +.25		4
3	6655179	PIN			4
4	6655180	CIR-CLIP			8
5	6655181	ROD	connecting - W/Ref. 6, 7 & 8		4
6	6655243	BUSHING			4
7	6655498	BOLT			8
8	6655183	BEARING	rod - Std.		4
	6655236	BEARING	rod (0,2 mm-.0079)		4
	6655237	BEARING	rod (0,4 mm-.0157)		4
9	6684806	CRANKSHAFT	Ref. 10 & 25 - Ref. 10 must be installed before using		1
10	6652633	PLUG	Must be installed before using		
			Ref. 9 crankshaft - See S/L dated 3 Jan 85		4
11	6685515	COVER			1
12	6685481	GEAR			1
13	3974546	KEY			2
14	6653861	SLINGER	oil		1
15	3975337	COLLAR			1
16	3974577	O-RING			1
17	3974671	NUT			1
18	4CM-825	BOLT			8
19	6685486	BEARING	main - Std.		1
	6685490	BEARING	main (0,2 mm-.0079)		1
	6685491	BEARING	main (0,4 mm-.0157)		1
20	6685487	BEARING	main - Std.		4
	6685492	BEARING	main (0,2 mm-.0079)		4
	6685493	BEARING	main (0,4 mm-.0157)		4
21	6685488	WASHER	thrust - Std.		2
	6685494	WASHER	thrust (0,2 mm-.0079)		2
	6685495	WASHER	thrust (0,4 mm-.0157)		2
22	6685489	WASHER	thrust - Std.		2
	6685496	WASHER	thrust (0,2 mm-.0079)		2
	6685497	WASHER	thrust (0,4 mm-.0157)		2
23	6631664	SEAL	oil		1
24	6685521	PULLEY			1
25	6653859	SLEEVE			1
26	6685480	CASE	main bearing - W/Ref. 30		1
27	6685485	CASE	main bearing - W/Ref. 30		1
28	6685484	CASE	main bearing - W/Ref. 30		1
29	6685483	CASE	main bearing - W/Ref. 30		1
30	6685482	BOLT			8
31	4CM-828	BOLT			8
32	6653821	BOLT			3
33	6684789	SEAL	oil		1
34	6684788	GASKET			1
35	6666814	GASKET			1
36	6685469	KEY			1

FUEL CAMSHAFT
(Kubota - V2203MDI)

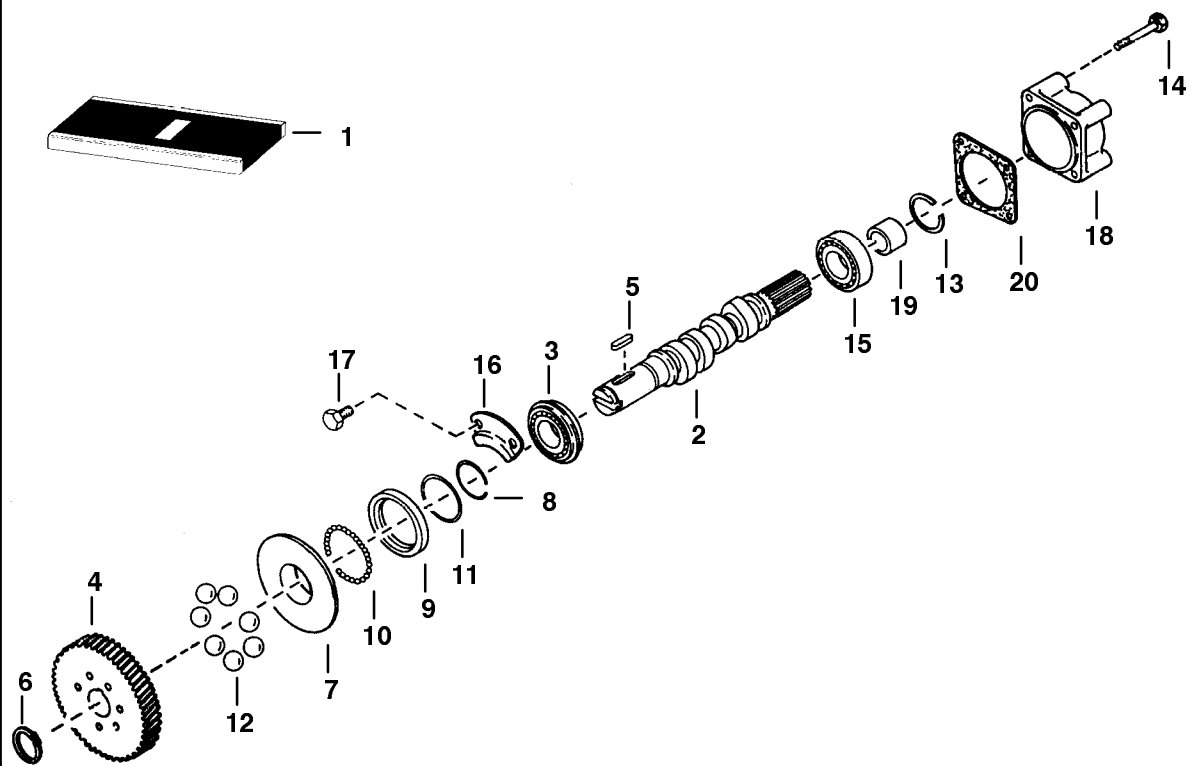


B-13144

FUEL CAMSHAFT (Cont'd)

(Kubota - V2203MDI)

[illegible]

CAMSHAFT (Kubota - V2203MDI)

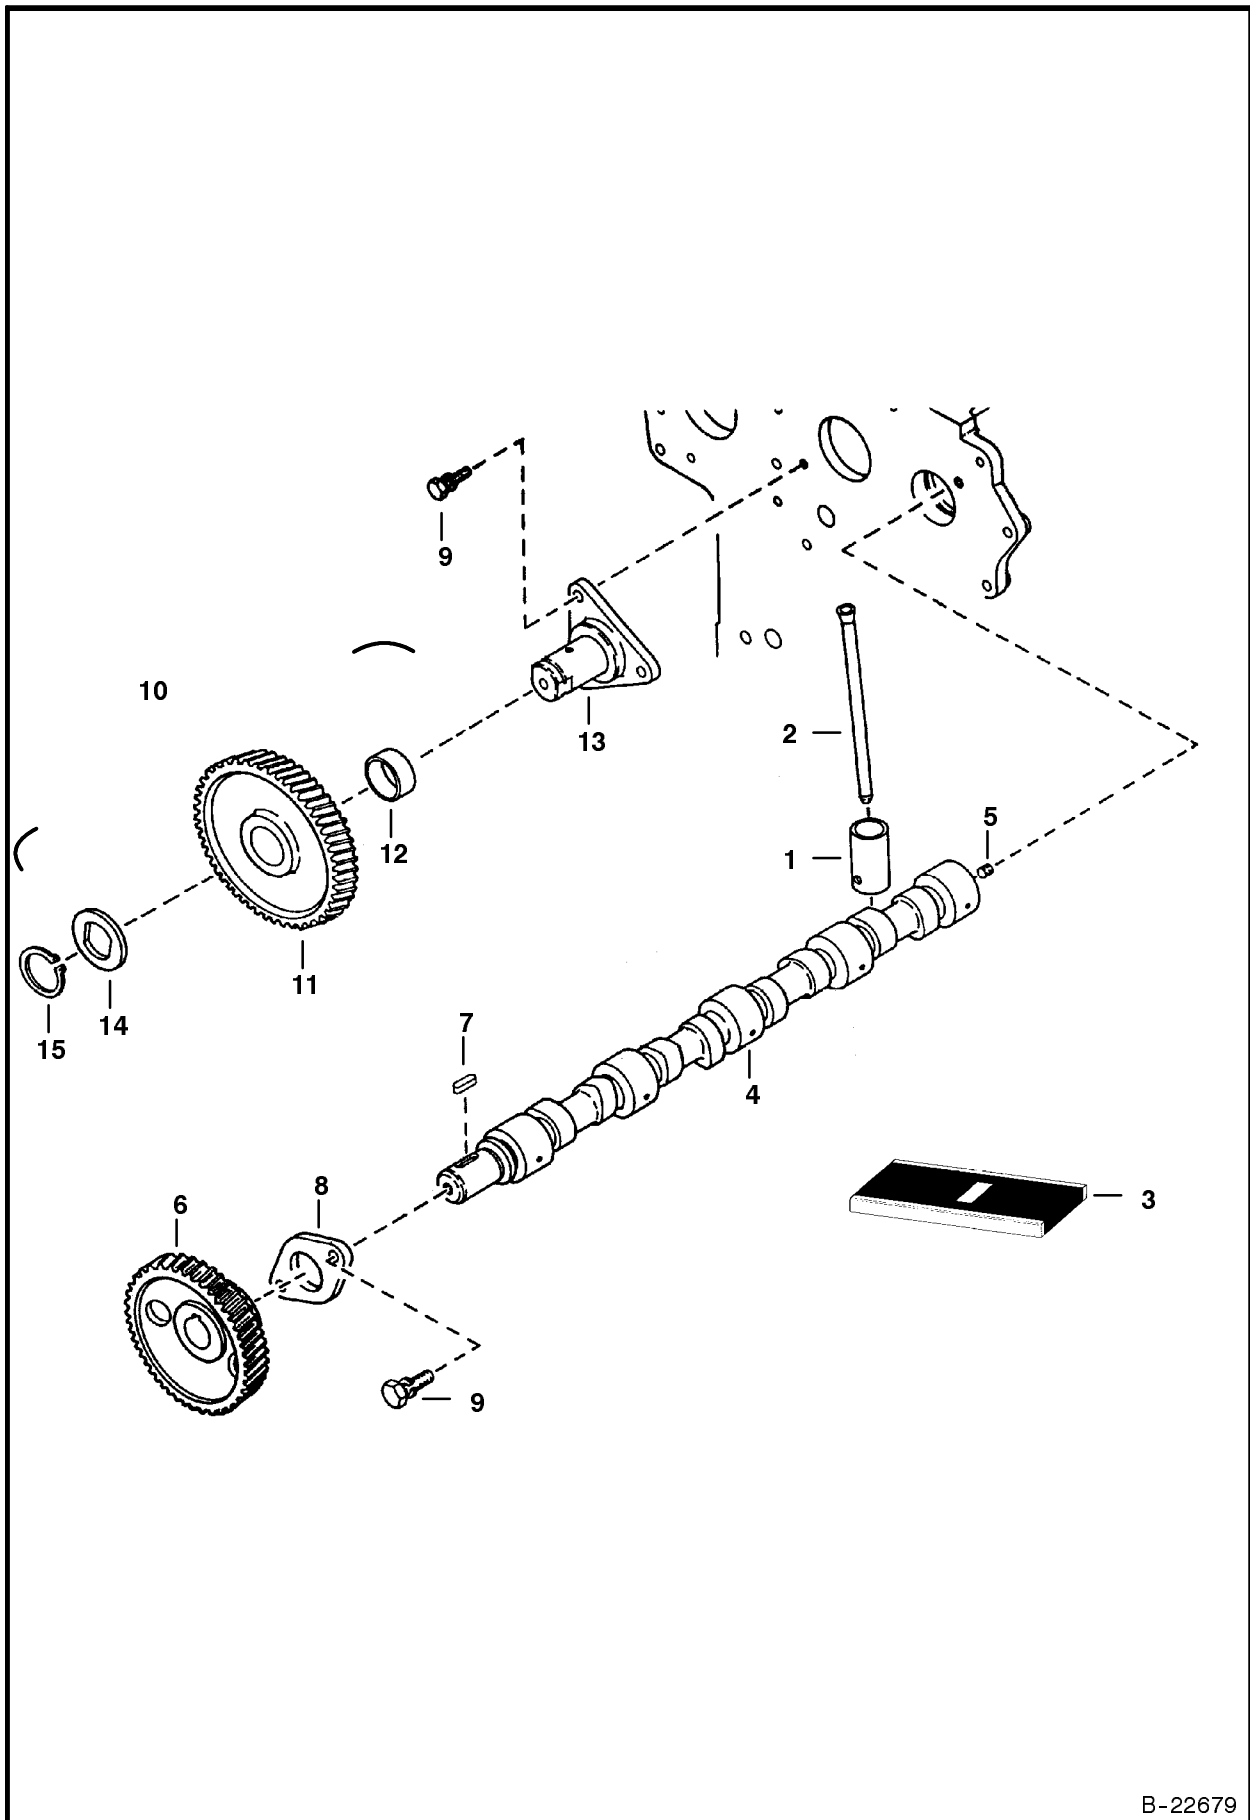


B-22679

CAMSHAFT (Cont'd) (Kubota - V2203MDI)

[illegible]


**WATER PUMP
(Kubota - V2203MDI)**

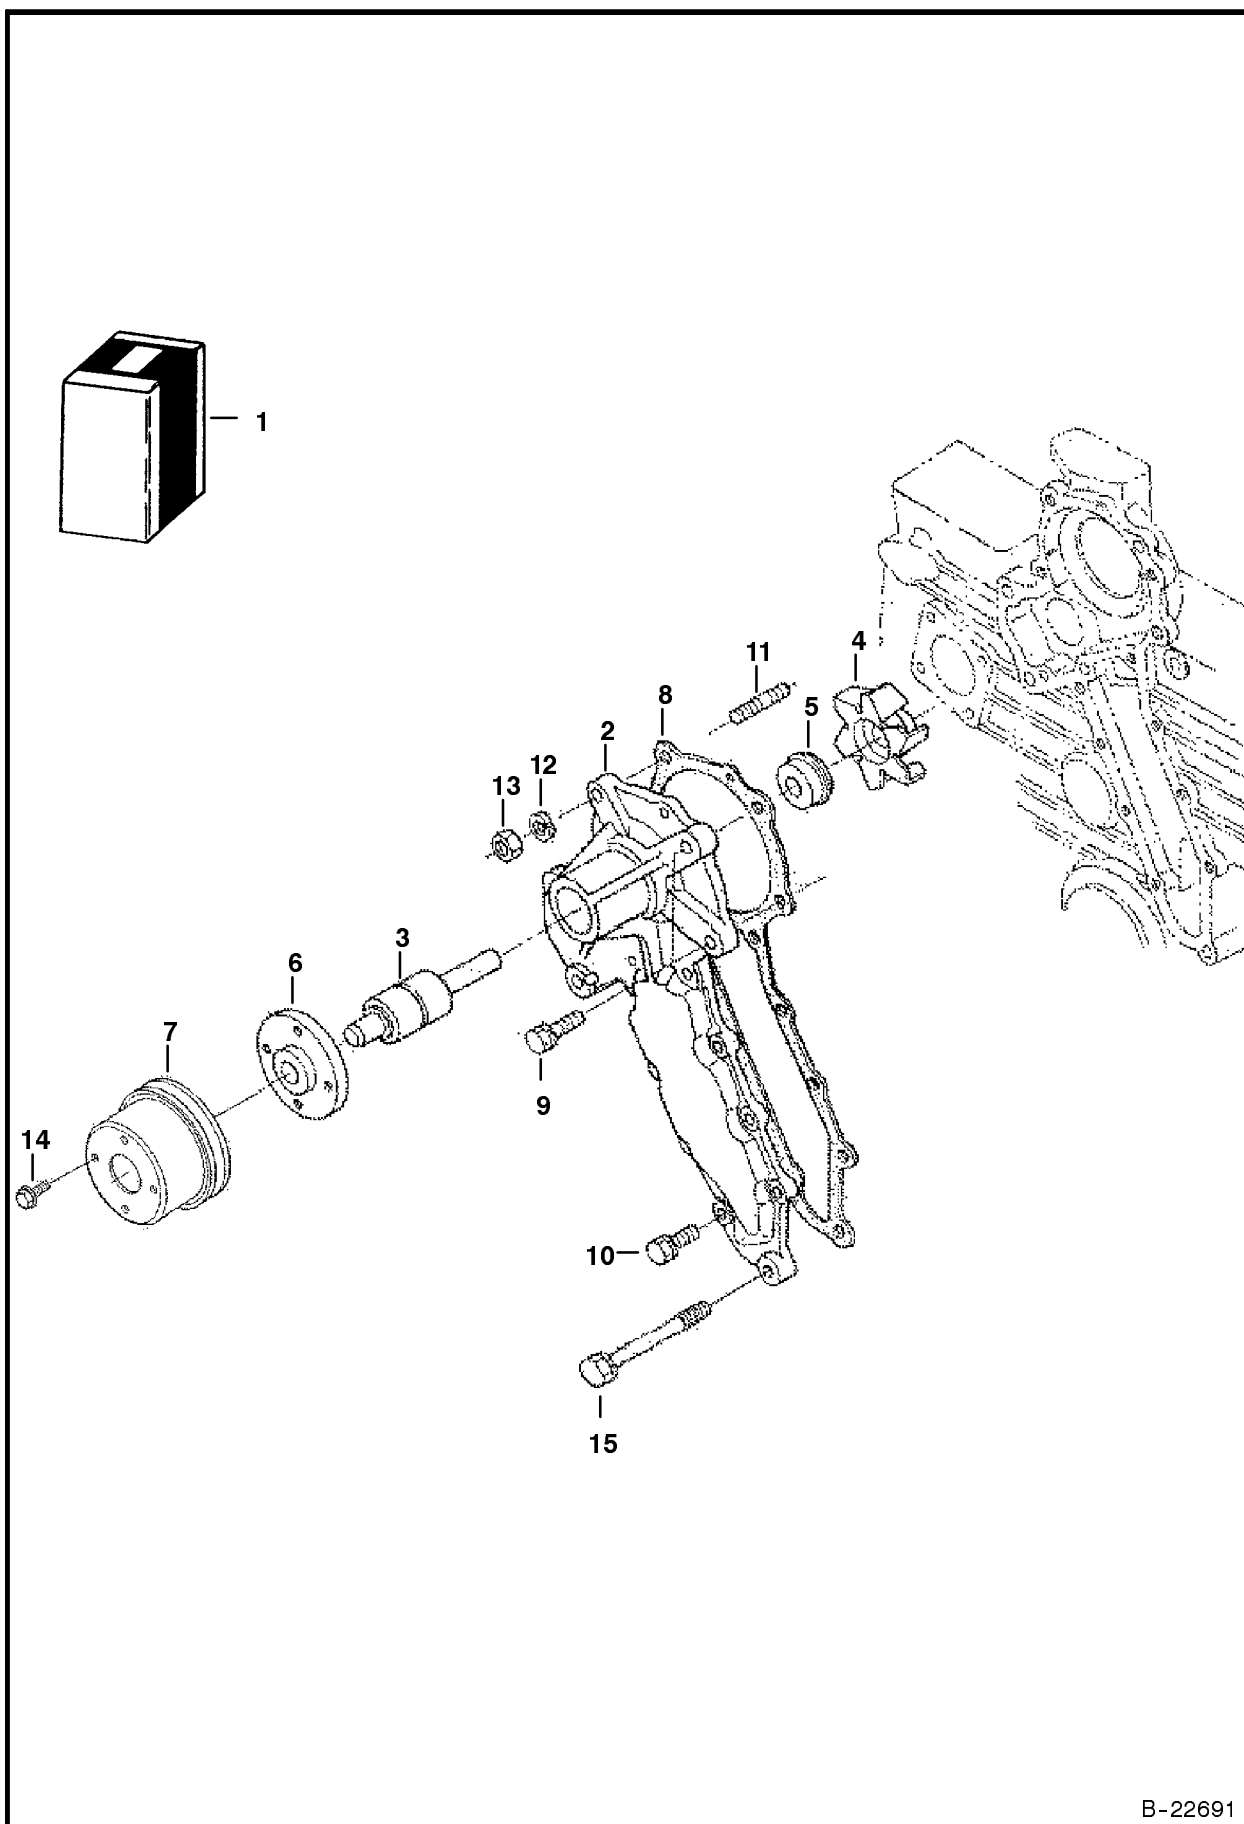

B-22691

[illegible]

WATER FLANGE & THERMOSTAT
(Kubota - V2203MDI)

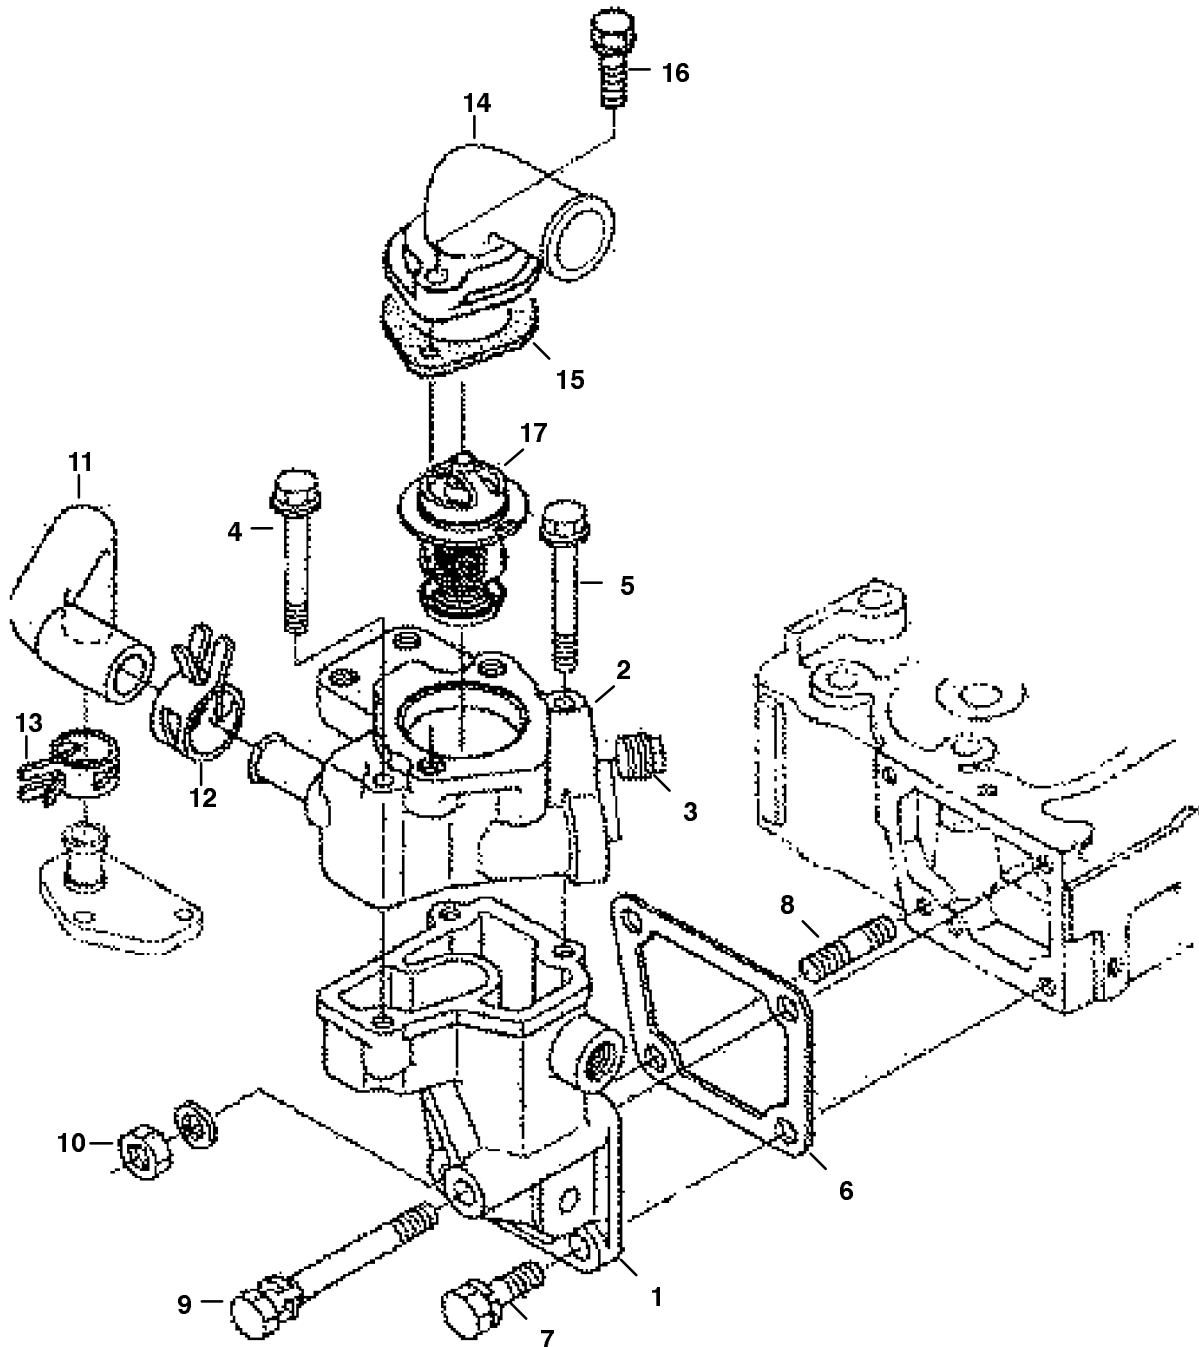


B-22690

WATER FLANGE & THERMOSTAT (Cont'd)

(Kubota - V2203MDI)

[illegible]


MANIFOLDS
(Kubota - V2203MDI)

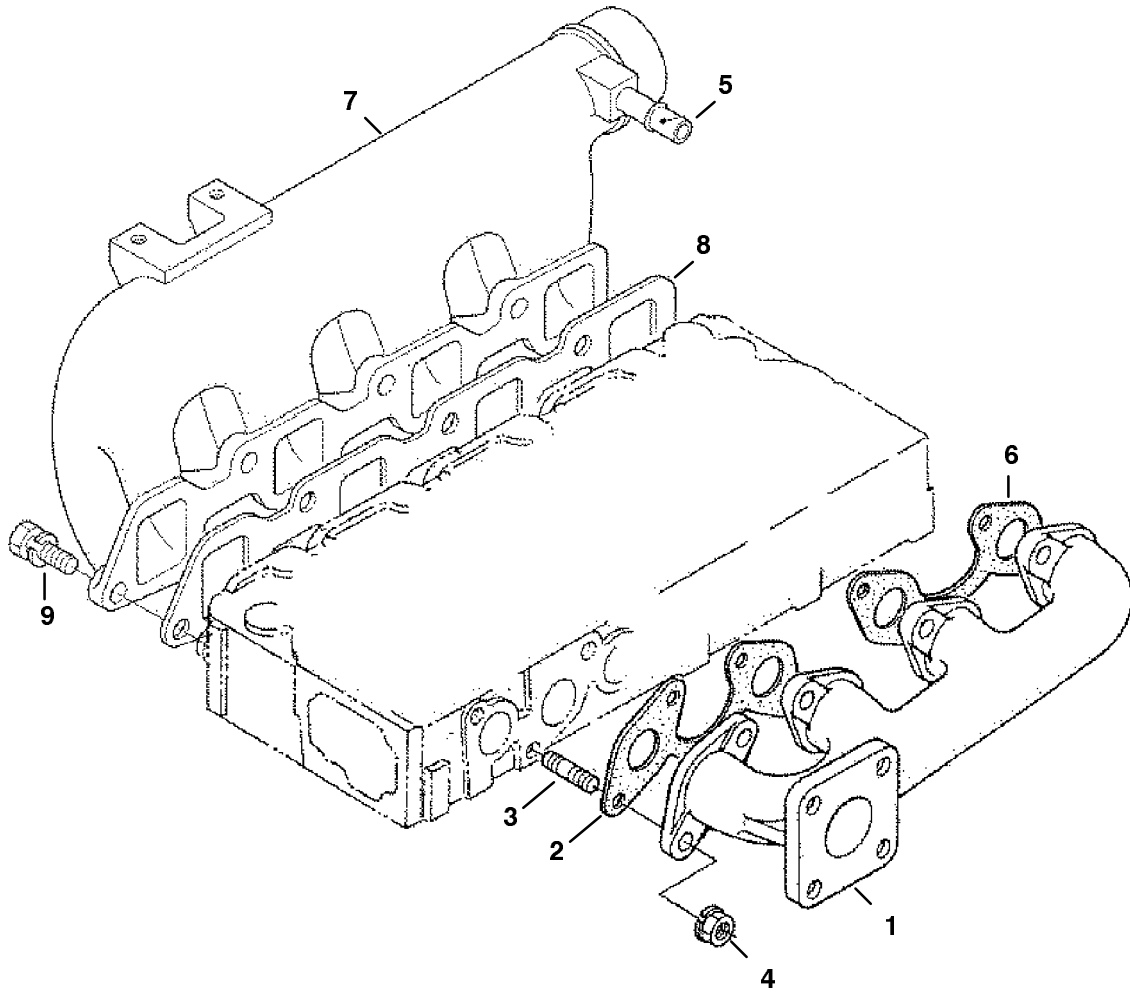

B-22693

[illegible]

ENGINE STOP LEVER (Kubota - V2203MDI)

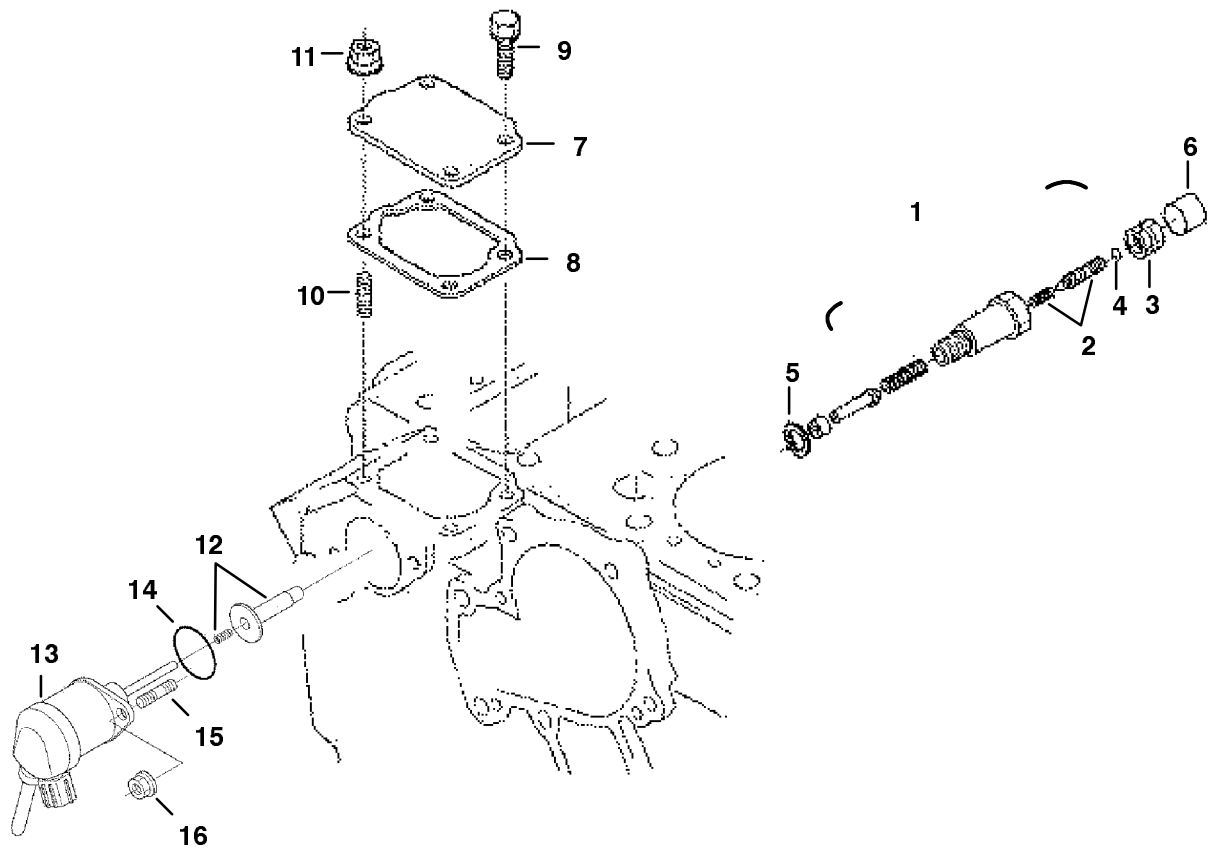


B-22685

ENGINE STOP LEVER (Cont'd)

(Kubota - V2203MDI)

[illegible]


GOVERNOR
(Kubota - V2203MDI)

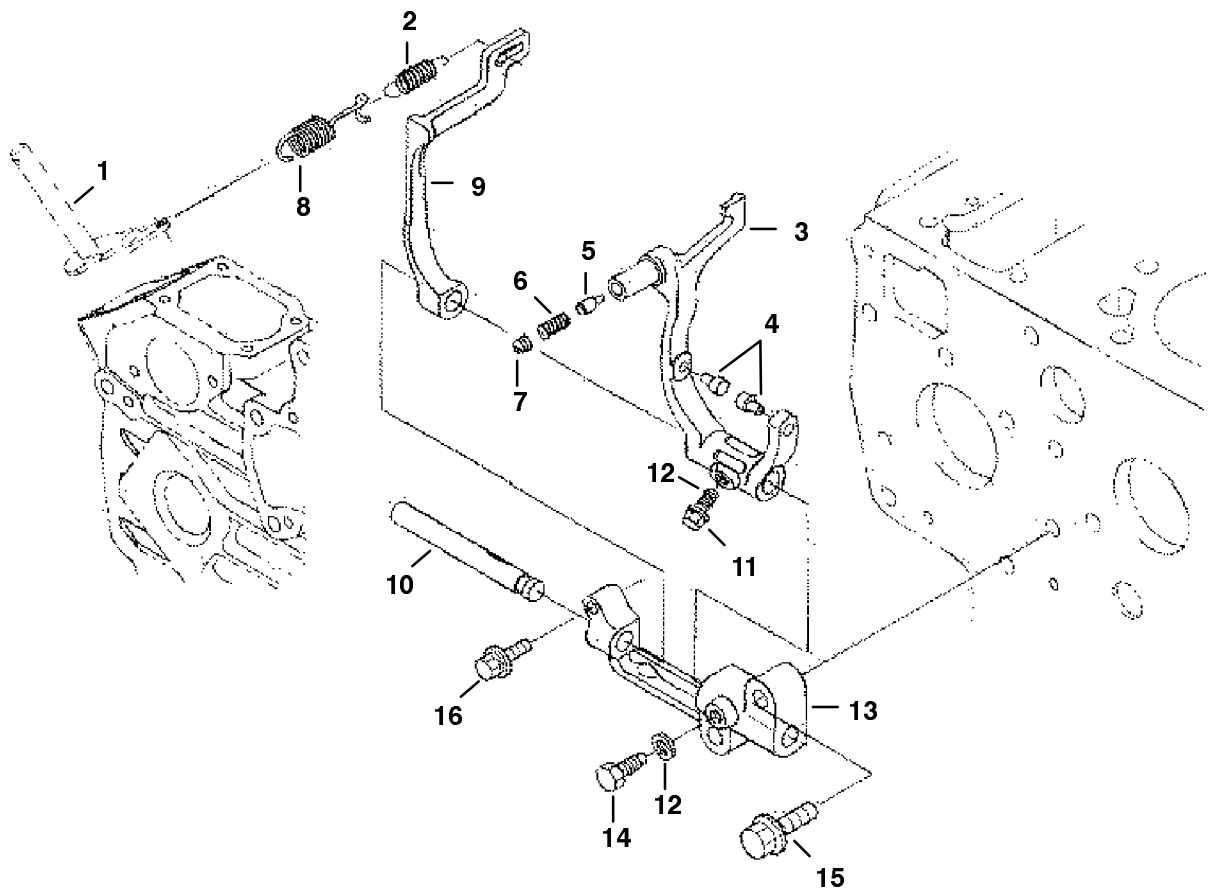

B-22687

[illegible]

**SPEED CONTROL PLATE
(Kubota - V2203MDI)**

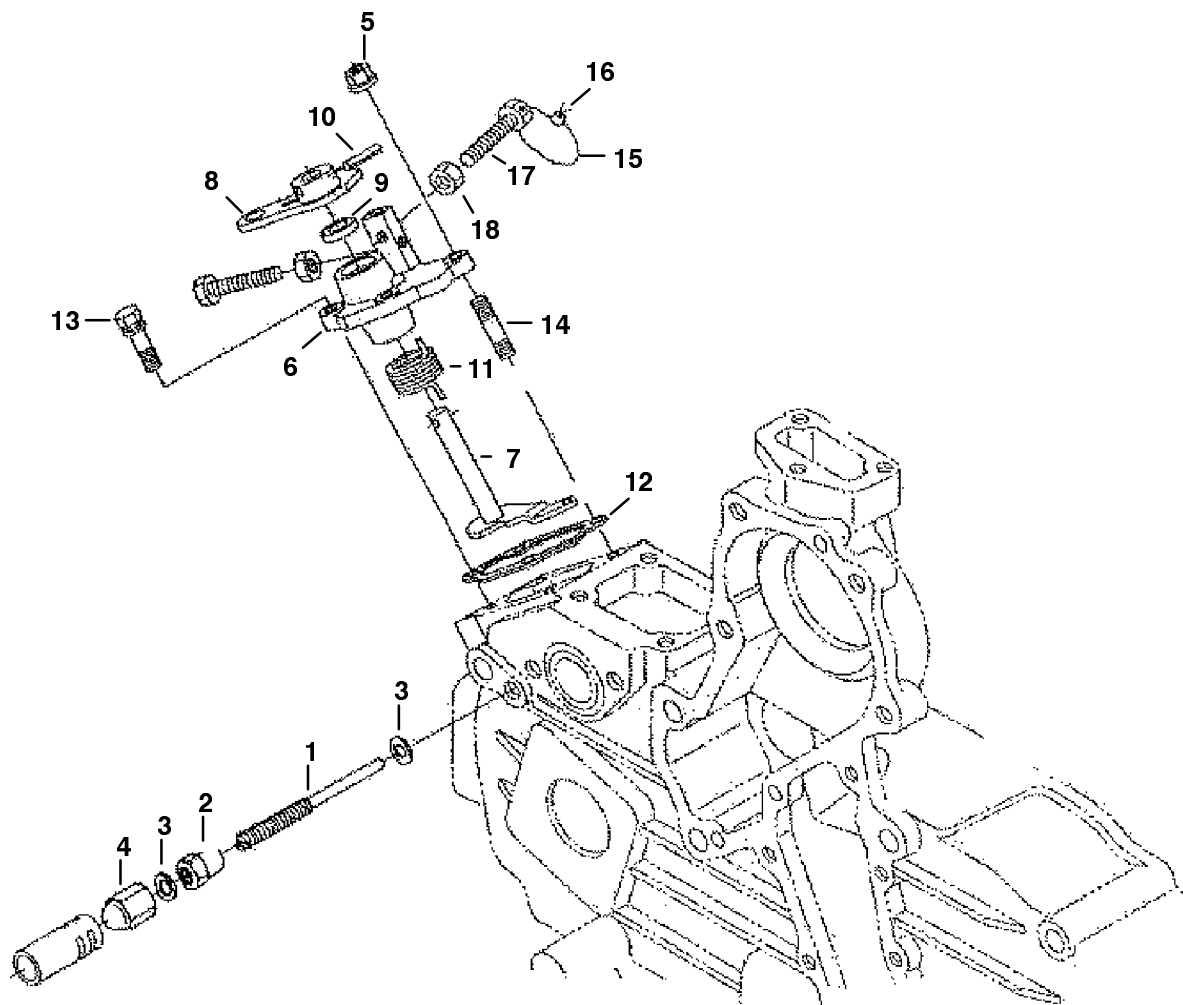


B-22688

SPEED CONTROL PLATE (Cont'd)

(Kubota - V2203MDI)

[illegible]

INJECTION PUMP (Kubota - V2203MDI)

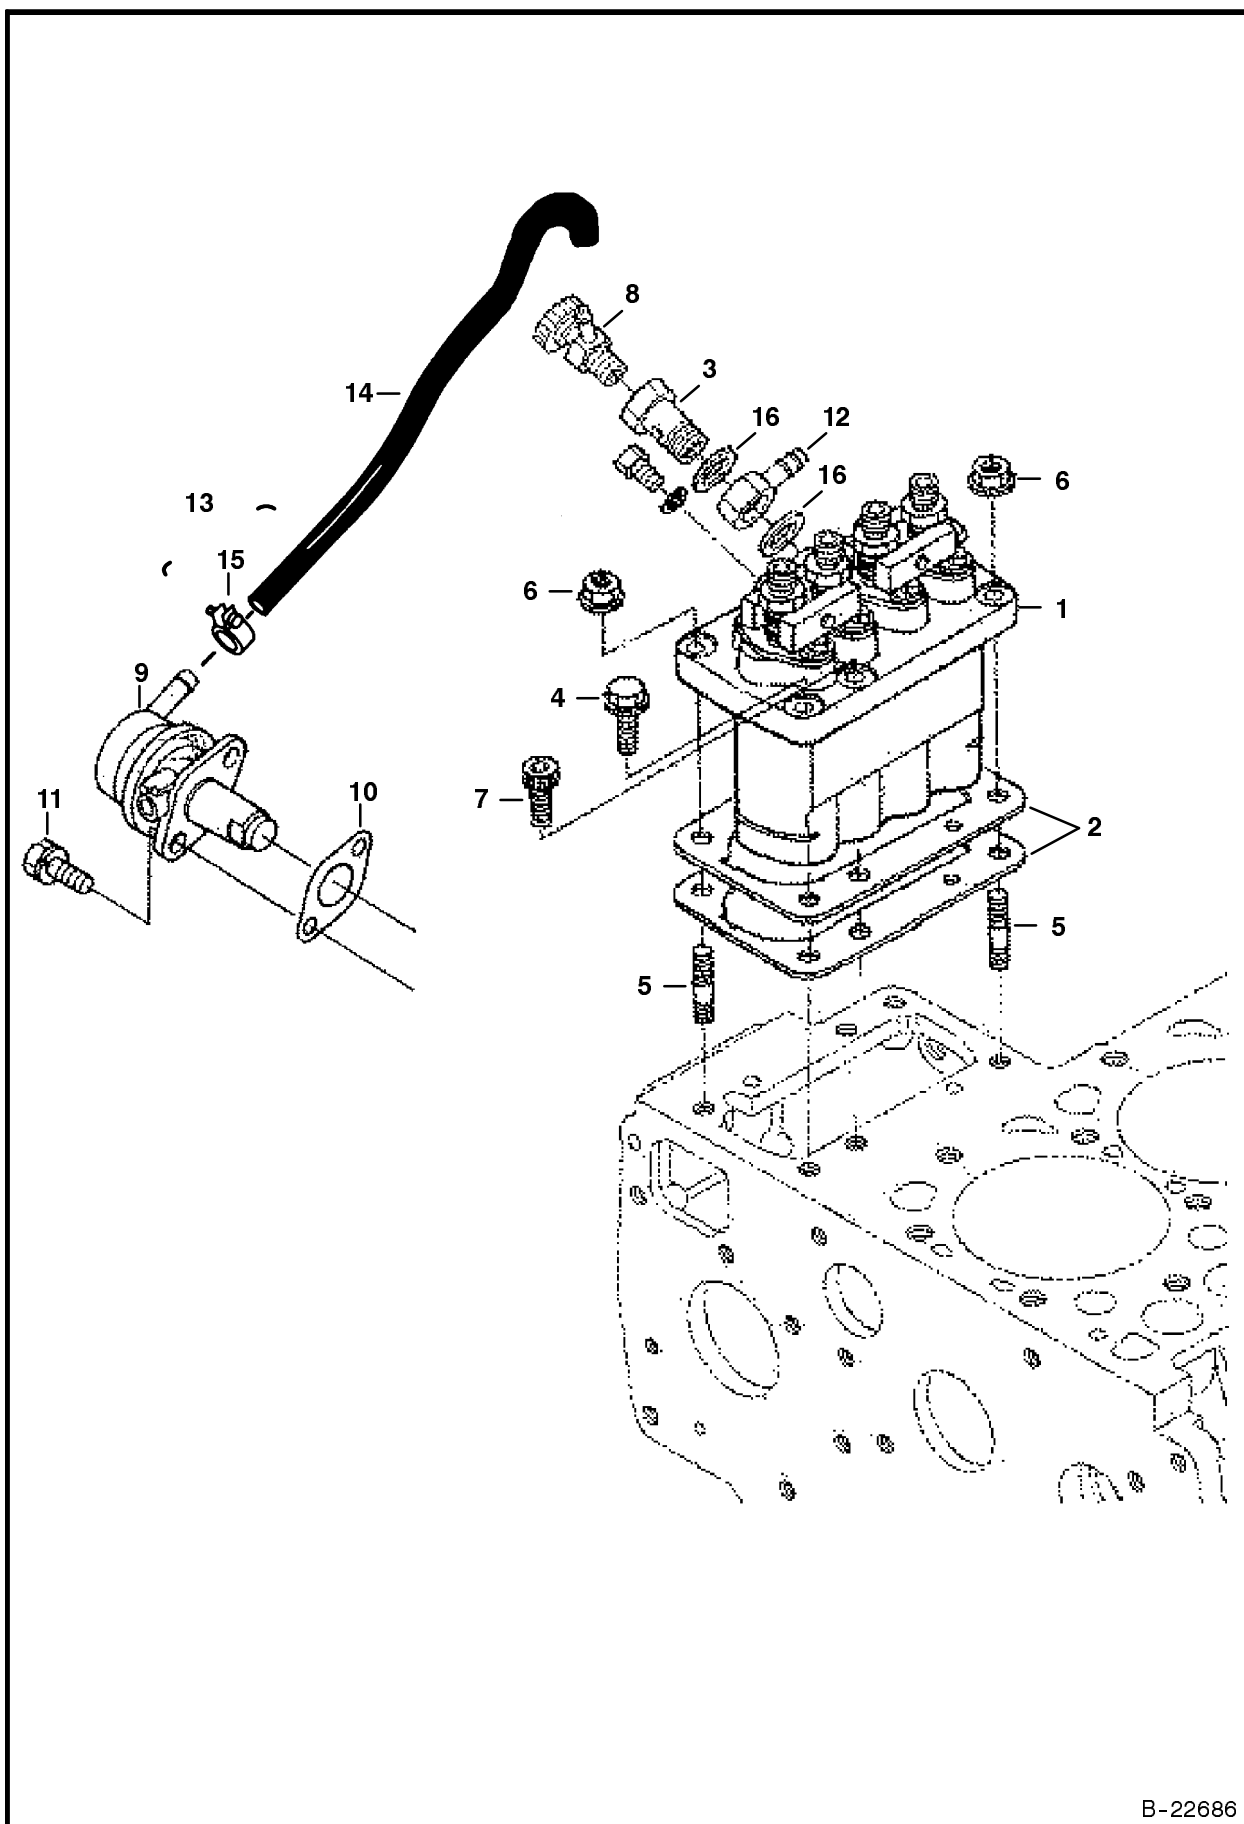


B-22686

INJECTION PUMP (Cont'd)

(Kubota - V2203MDI)

[illegible]

INJECTION PUMP (Kubota - V2203MDI)

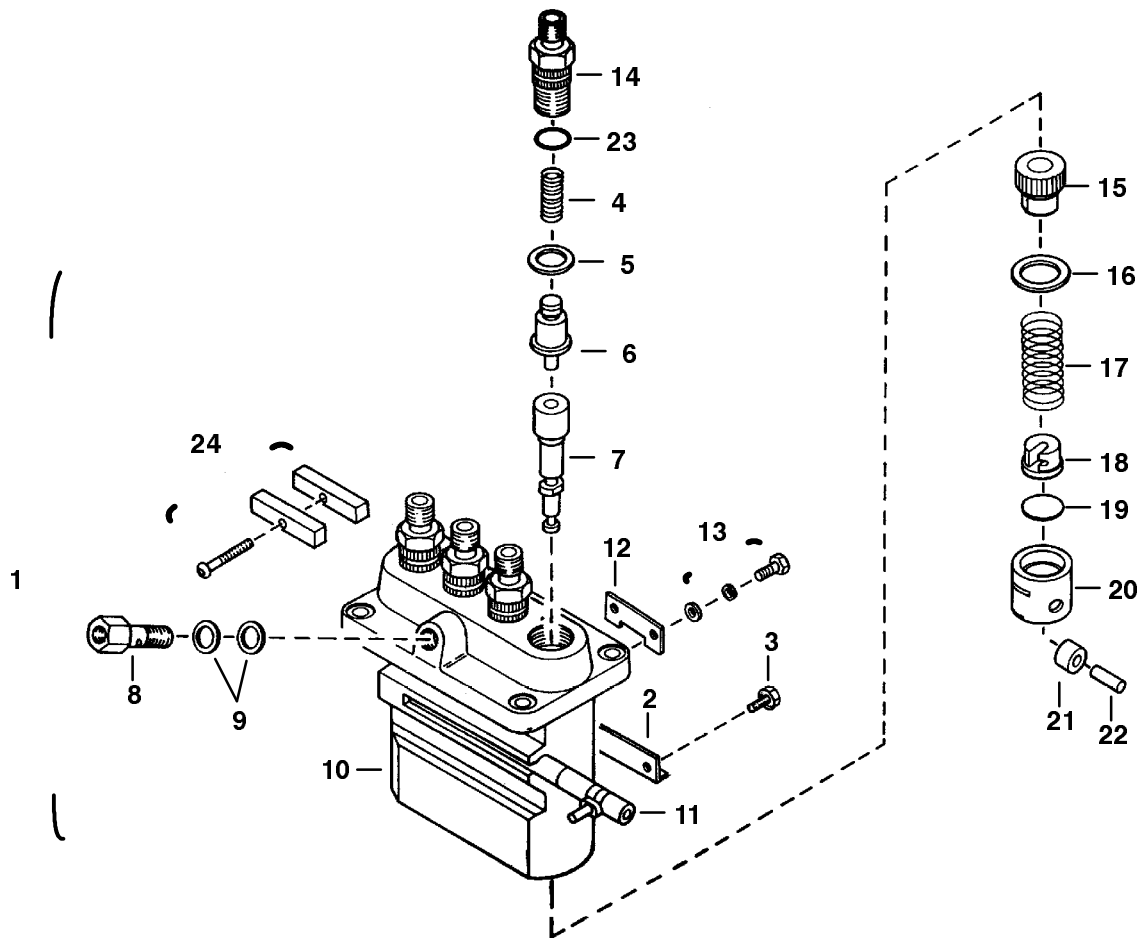


B-13156

INJECTION PUMP (Cont'd)
(Kubota - V2203MDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685511	PUMP	injection - No serviceable parts available - Take to injection pump specialist		1
2	6655207	PLATE	adjust		3
3	6655206	BOLT			3
4	6655203	SPRING	delivery valve		4
5	3974368	GASKET	delivery valve		4
6	6655202	VALVE	delivery		4
7	6655201	ELEMENT	pump		4
8	6685470	SCREW			1
9	6599119	GASKET			2
10	NSS	HOUSING	pump		1
11	3974787	RACK	control		1
12	6655209	PLATE	adjusting		3
13	3974366	BOLT			3
14	6655204	HOLDER	delivery valve		4
15	6653894	SLEEVE	control		4
16	3974381	SEAT	spring - Upper		4
17	3974382	SPRING	plunger		4
18	3974383	SEAT	spring - Under		4
19	3974384	SHIM			4
20	3974385	TAPPET	W/Ref. 21, 22		4
21	NSS	ROLLER			4
22	NSS	PIN			4
23	6655518	O-RING			4
24	6655205	PLATE ASSY.			2

INJECTOR NOZZLES
(Kubota - V2203MDI)

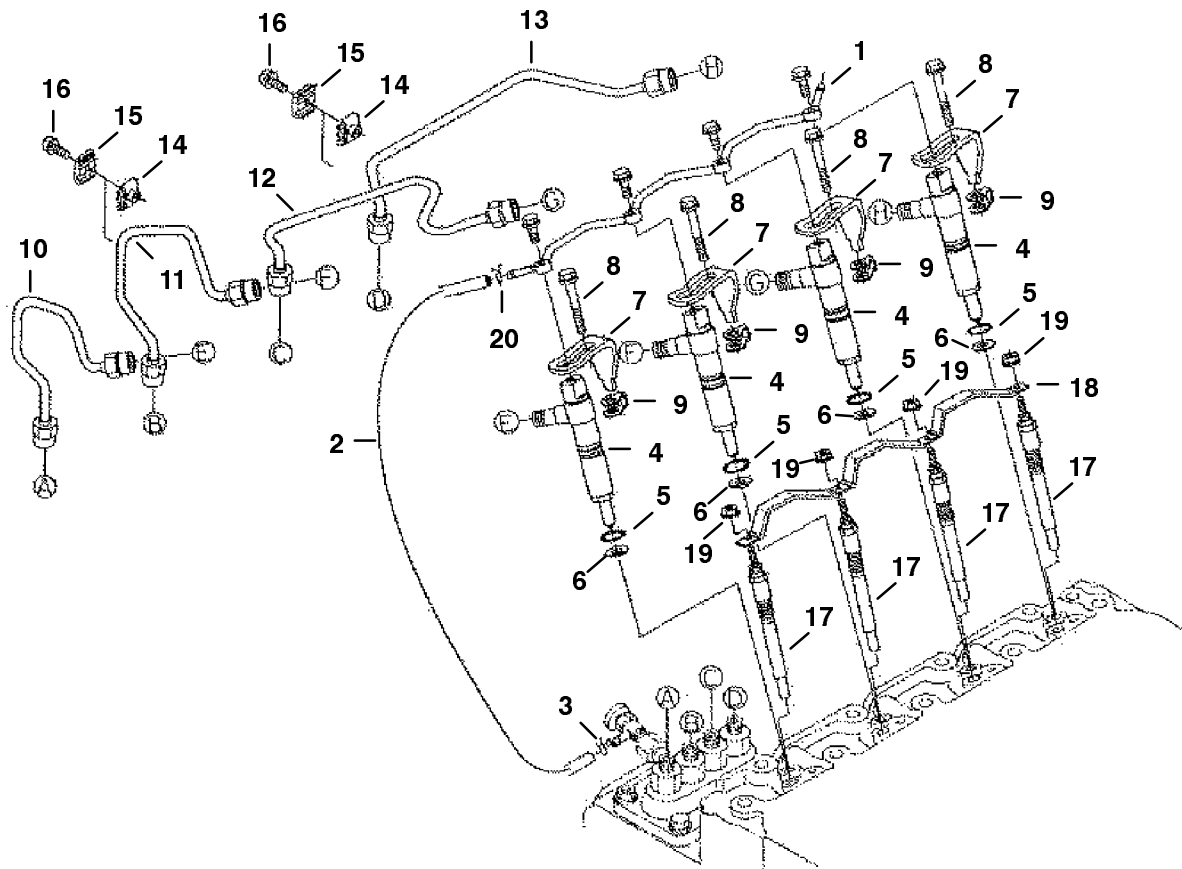


B-22689

INJECTOR NOZZLES (Cont'd)

(Kubota - V2203MDI)

[illegible]

INJECTOR HOLDER
(Kubota - V2203MDI)

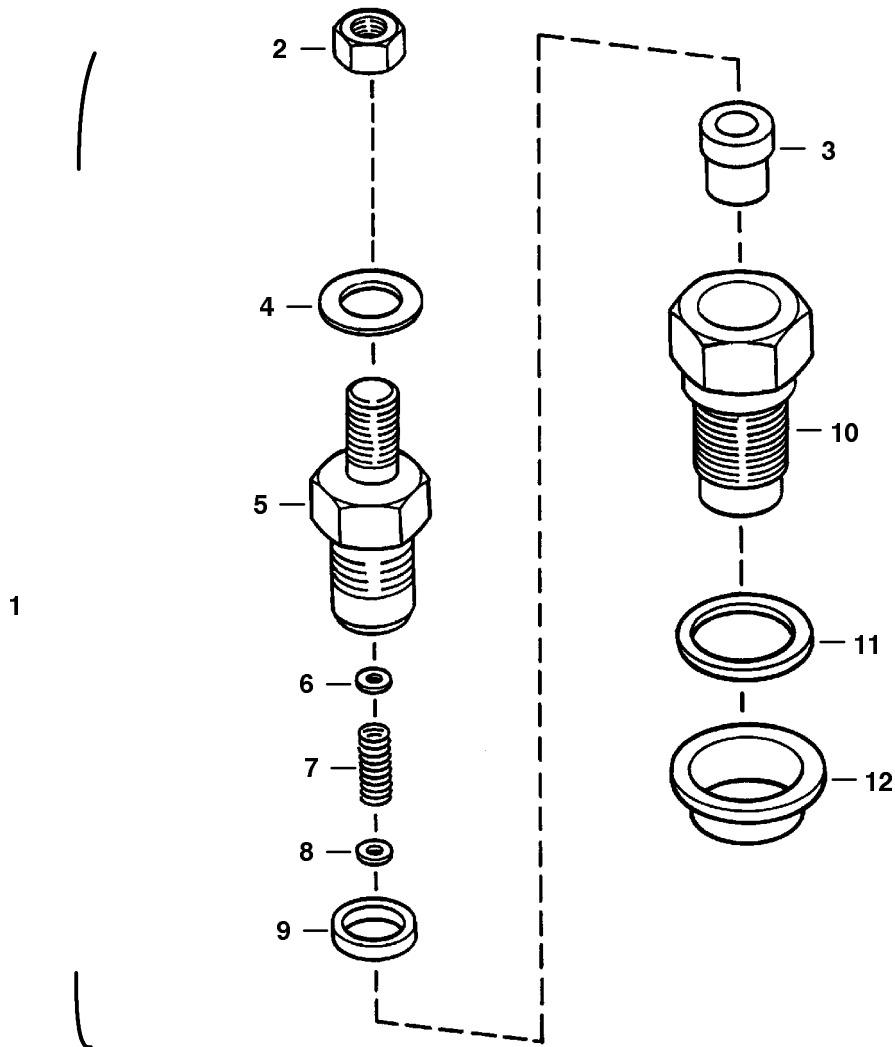


B-13154

INJECTOR HOLDER (Cont'd)

(Kubota - V2203MDI)

[illegible]

**ENGINE & GASKET KITS
(Kubota - V2003TMDI)**

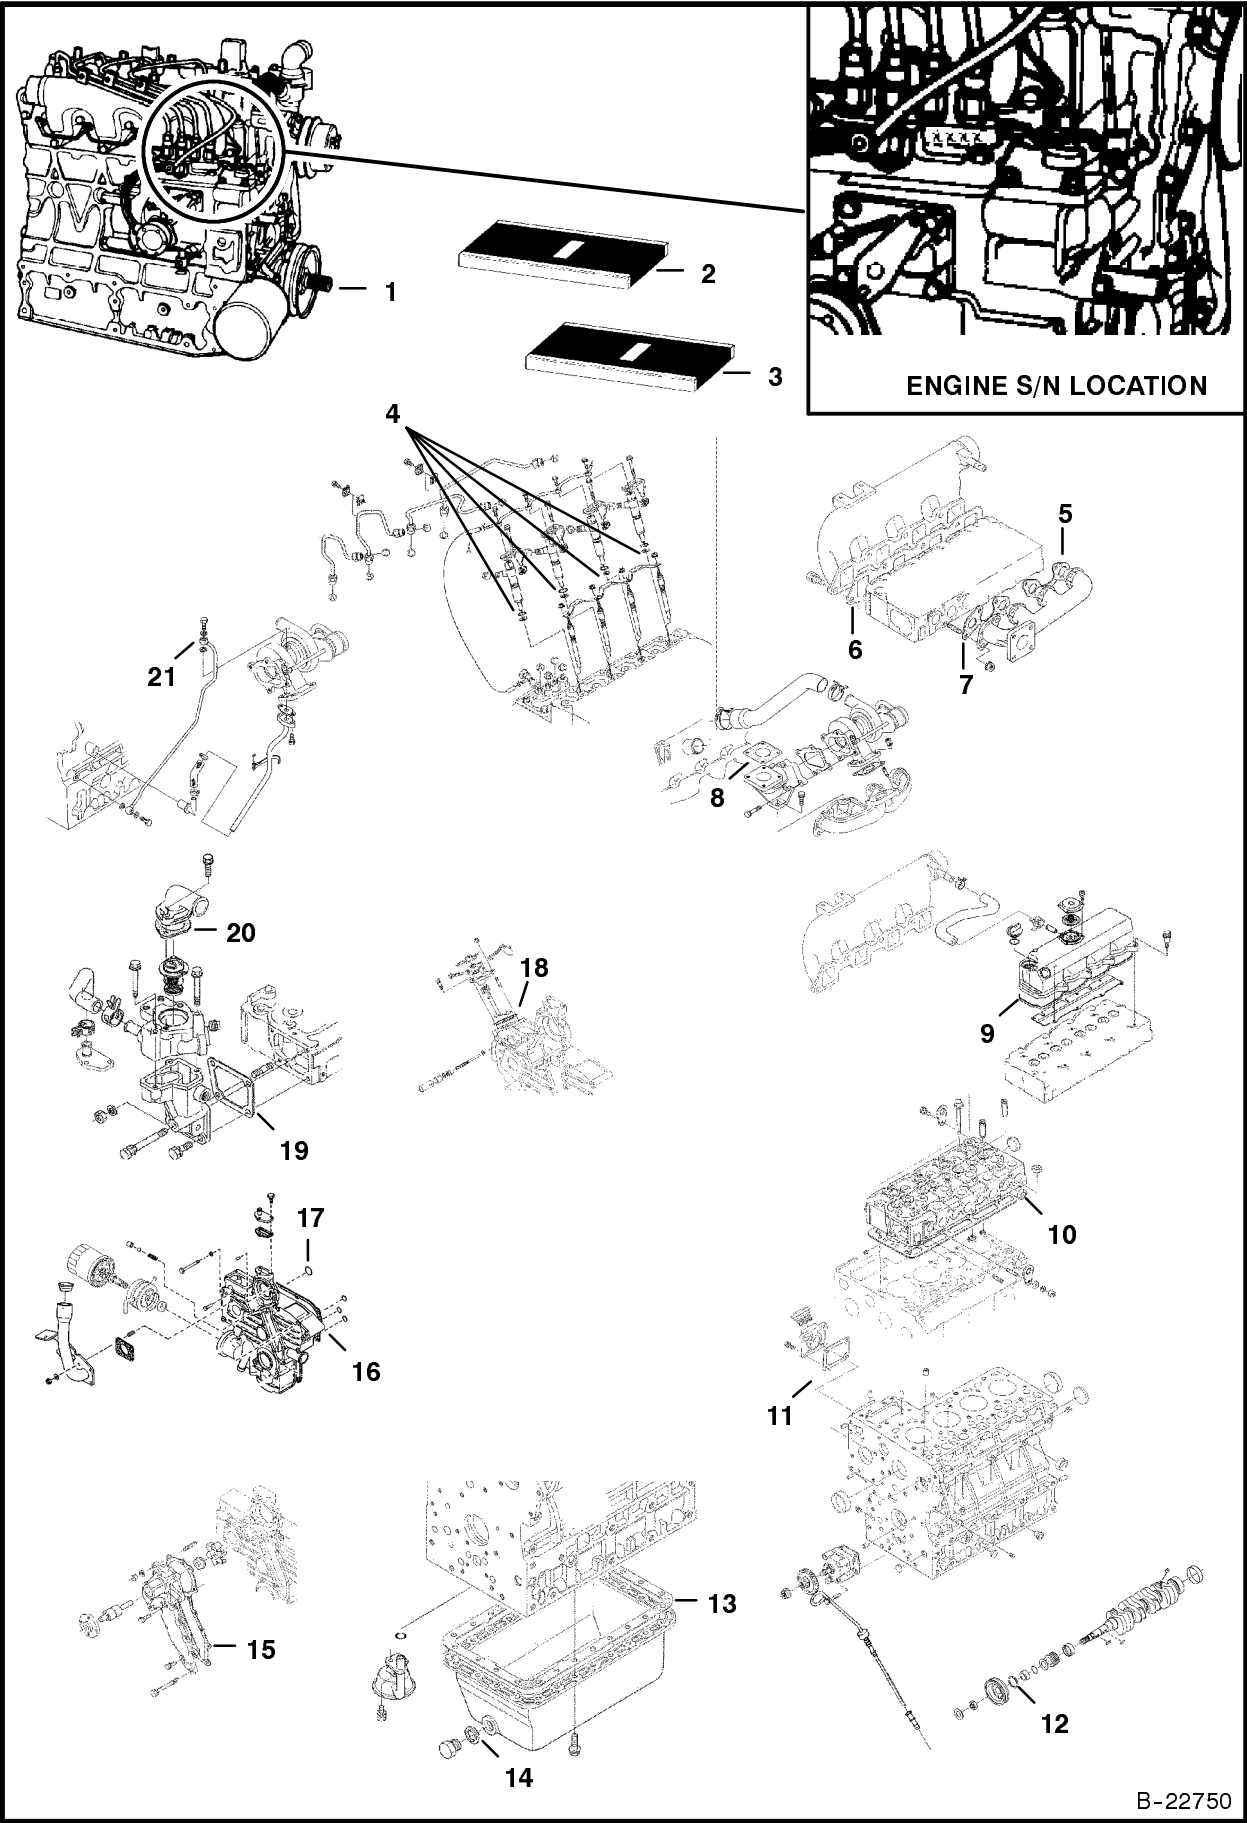


B-22750

ENGINE & GASKET KITS (Cont'd)

(Kubota - V2003TMDI)

[illegible]

GEARCASE
(Kubota - V2003TMDI)

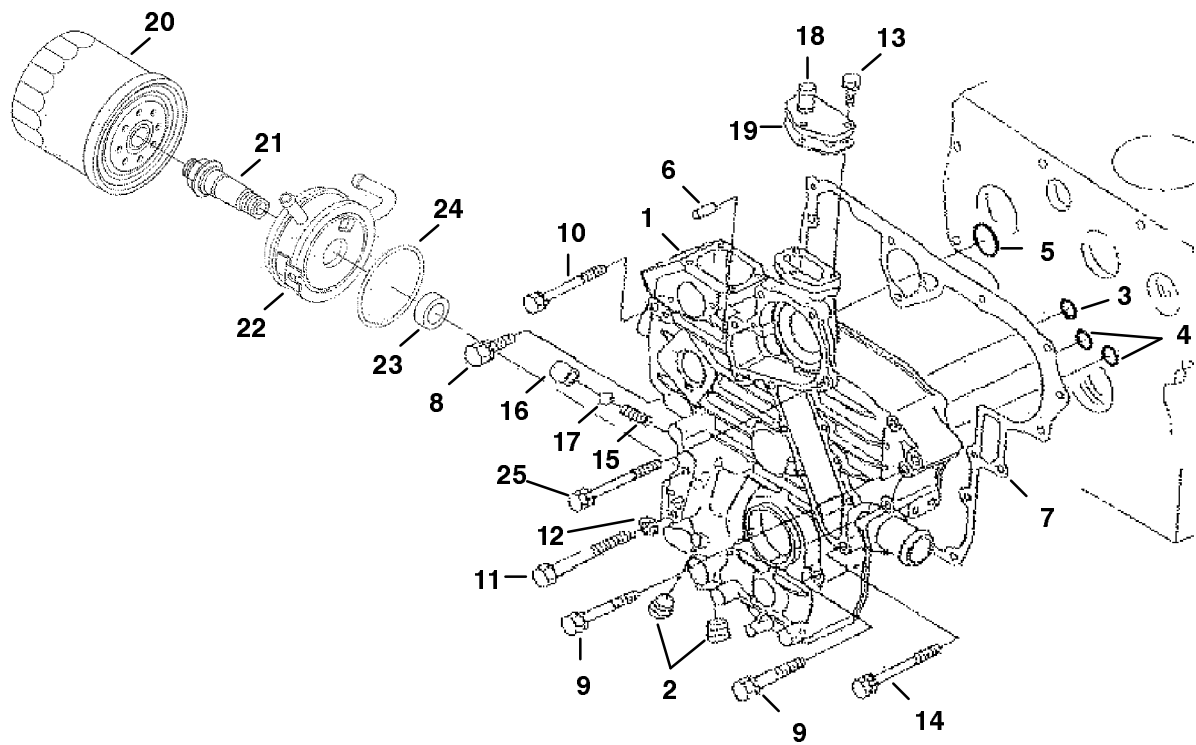


B-22736

GEARCASE (Cont'd)
(Kubota - V2003TMDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685523	GEAR CASE			1
2	6672360	PLUG			2
3	6685466	O-RING			1
4	6685467	O-RING			2
5	6685468	O-RING			1
6	3974395	PIN			2
7	6684770	GASKET			1
8	1CM-835	BOLT			1
9	1CM-870	BOLT			7
10	6653807	BOLT			1
11	6684772	BOLT			2
12	6667422	WASHER			2
13	4CM-620	BOLT			3
14	6653808	BOLT			4
15	6652652	SPRING			1
16	3974893	SEAT	valve		1
17	10J-13	BALL			1
18	3974894	FLANGE	water return		1
19	6684774	GASKET			1
20	6675517	FILTER	6 pack		1
21	6675681	ADAPTER			1
22	6685641	OIL COOLER	See Page 221		1
23	6685637	COLLAR			1
24	6657422	O-RING			1
25	6653808	BOLT			4

OIL COOLER
(Kubota - V2003TMDI)

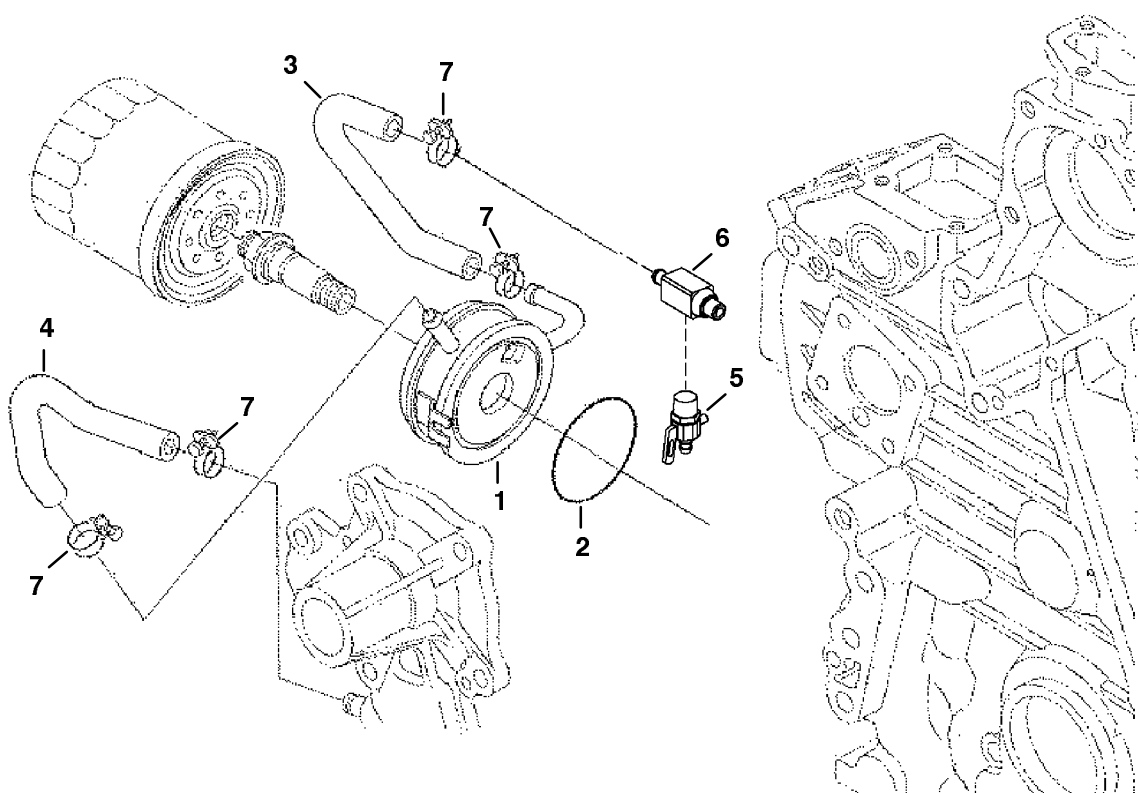


B-22748

OIL COOLER (Cont'd) (Kubota - V2003TMDI)

[illegible]

CRANKCASE (Kubota - V2003TMDI)

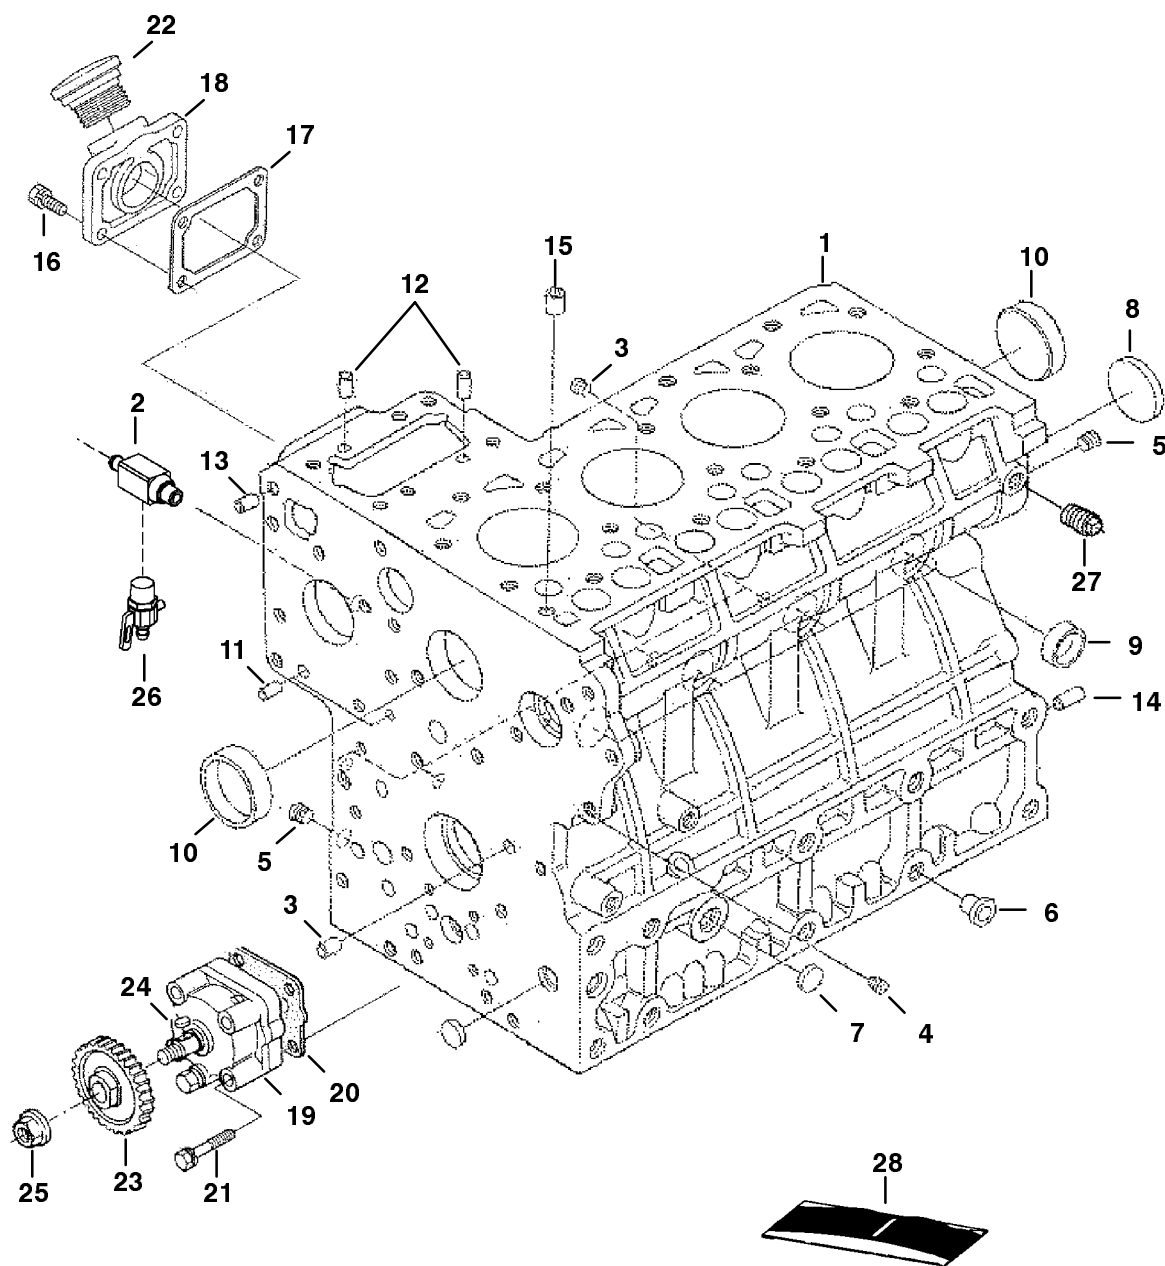

B-22733

CRANKCASE (Cont'd)
(Kubota - V2003TMDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685579	CRANKCASE	assy. - W/Ref. 2 - 15		1
2	6678946	FITTING			1
3	6652574	PLUG			5
4	6685477	PLUG			1
5	6652575	PLUG			2
6	6598187	PLUG			2
7	6667418	PLUG	expansion		3
8	6657663	PLUG	expansion		1
9	3974389	CAP	sealing		6
10	6680639	CAP	sealing		2
11	3974393	PIN	straight		2
12	3974394	PIN	straight		3
13	3974395	PIN	straight		2
14	3974868	PIN	straight		1
15	3974037	PIN	pipe		1
16	6652580	BOLT			4
17	6684752	GASKET			1
18	6685478	FLANGE	oil fill		1
19	6682498	OIL PUMP			1
20	6666782	GASKET			1
21	6655195	BOLT			4
22	6685472	CAP	oil fill		1
23	3975441	GEAR			1
24	15JM-410	KEY			1
25	6653888	NUT			1
26	6672190	VALVE			1
27	16F-2	PLUG			1
28		GASKET KIT	Lower - Does not include rear oil seal - See Page 217		1

This technical diagram illustrates the exploded view of a 4-cylinder engine assembly. The components are numbered as follows:

- 1**: Intake manifold
- 2**: Intake valve
- 3**: Intake valve gasket
- 4**: Cylinder head
- 5**: Piston
- 6**: Piston pin
- 7**: Piston ring
- 8**: Piston ring gasket
- 9**: Piston pin gasket
- 10**: Piston gasket
- 11**: Piston pin gasket
- 12**: Piston pin gasket
- 13**: Piston pin gasket
- 14**: Piston pin gasket

The diagram shows the assembly sequence from the base (piston and cylinder head) up to the intake manifold. The piston is shown with its rings and gaskets, and the cylinder head is shown with its valves and gaskets. The intake manifold is shown at the top, connected to the intake valve.

[illegible]


This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or valve actuator, mounted on a base plate. The components are numbered 1 through 21. The base plate (1) is a rectangular plate with a grid of circular holes. A central vertical shaft (2) passes through the base. A series of gears (3, 4, 5, 6, 7) are mounted on this shaft. A long, thin rod (8) is shown extending from the base. A complex linkage mechanism (9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21) is shown in an exploded state, with various pins, washers, and bushings (18, 19) used for assembly. The diagram shows the relative positions and assembly sequence of these parts.

VALVE ROCKER ARM (Cont'd)

(Kubota - V2003TMDI)

[illegible]

CYLINDER HEAD (Kubota - V2003TMDI)

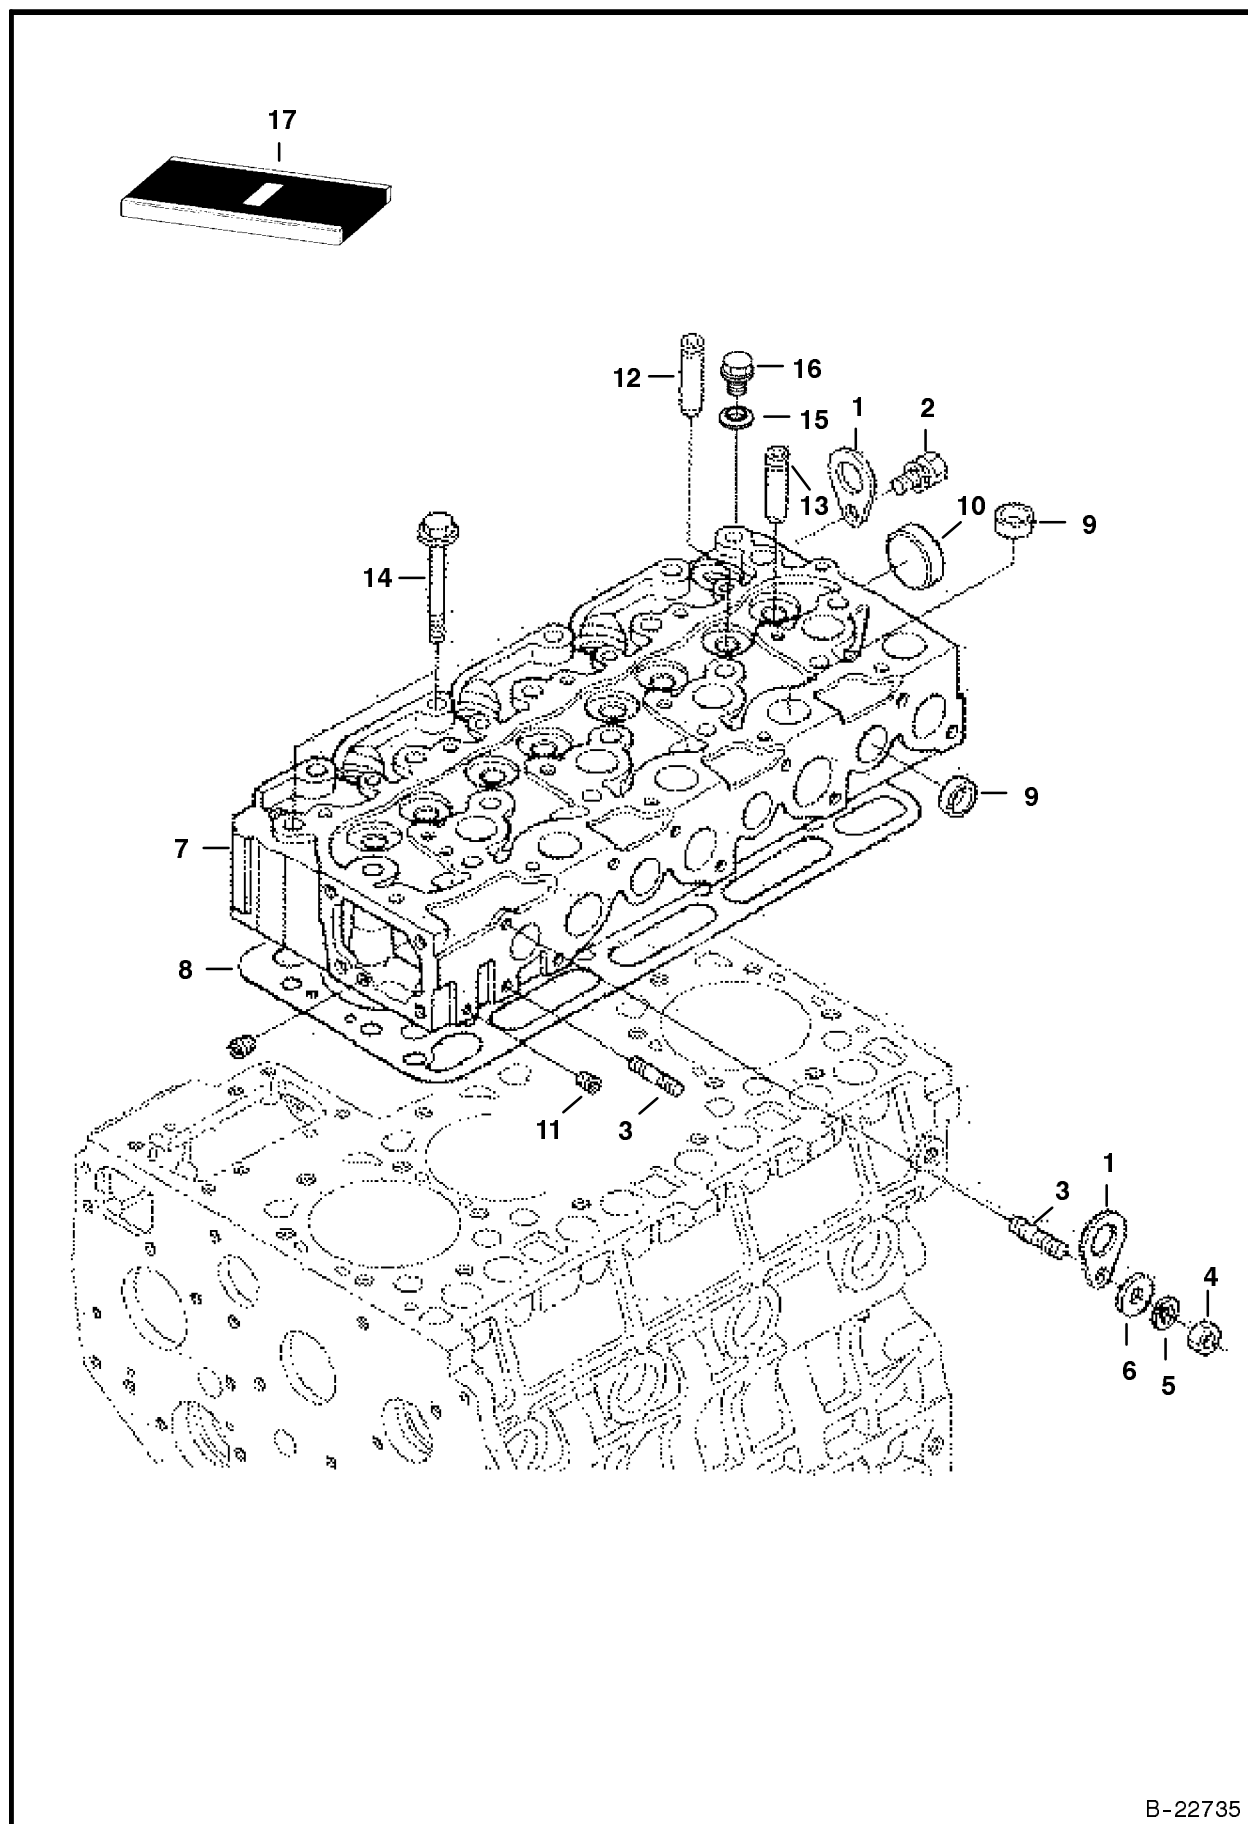


B-22735

CYLINDER HEAD (Cont'd)

(Kubota - V2003TMDI)

[illegible]


OIL PAN
(Kubota - V2003TMDI)

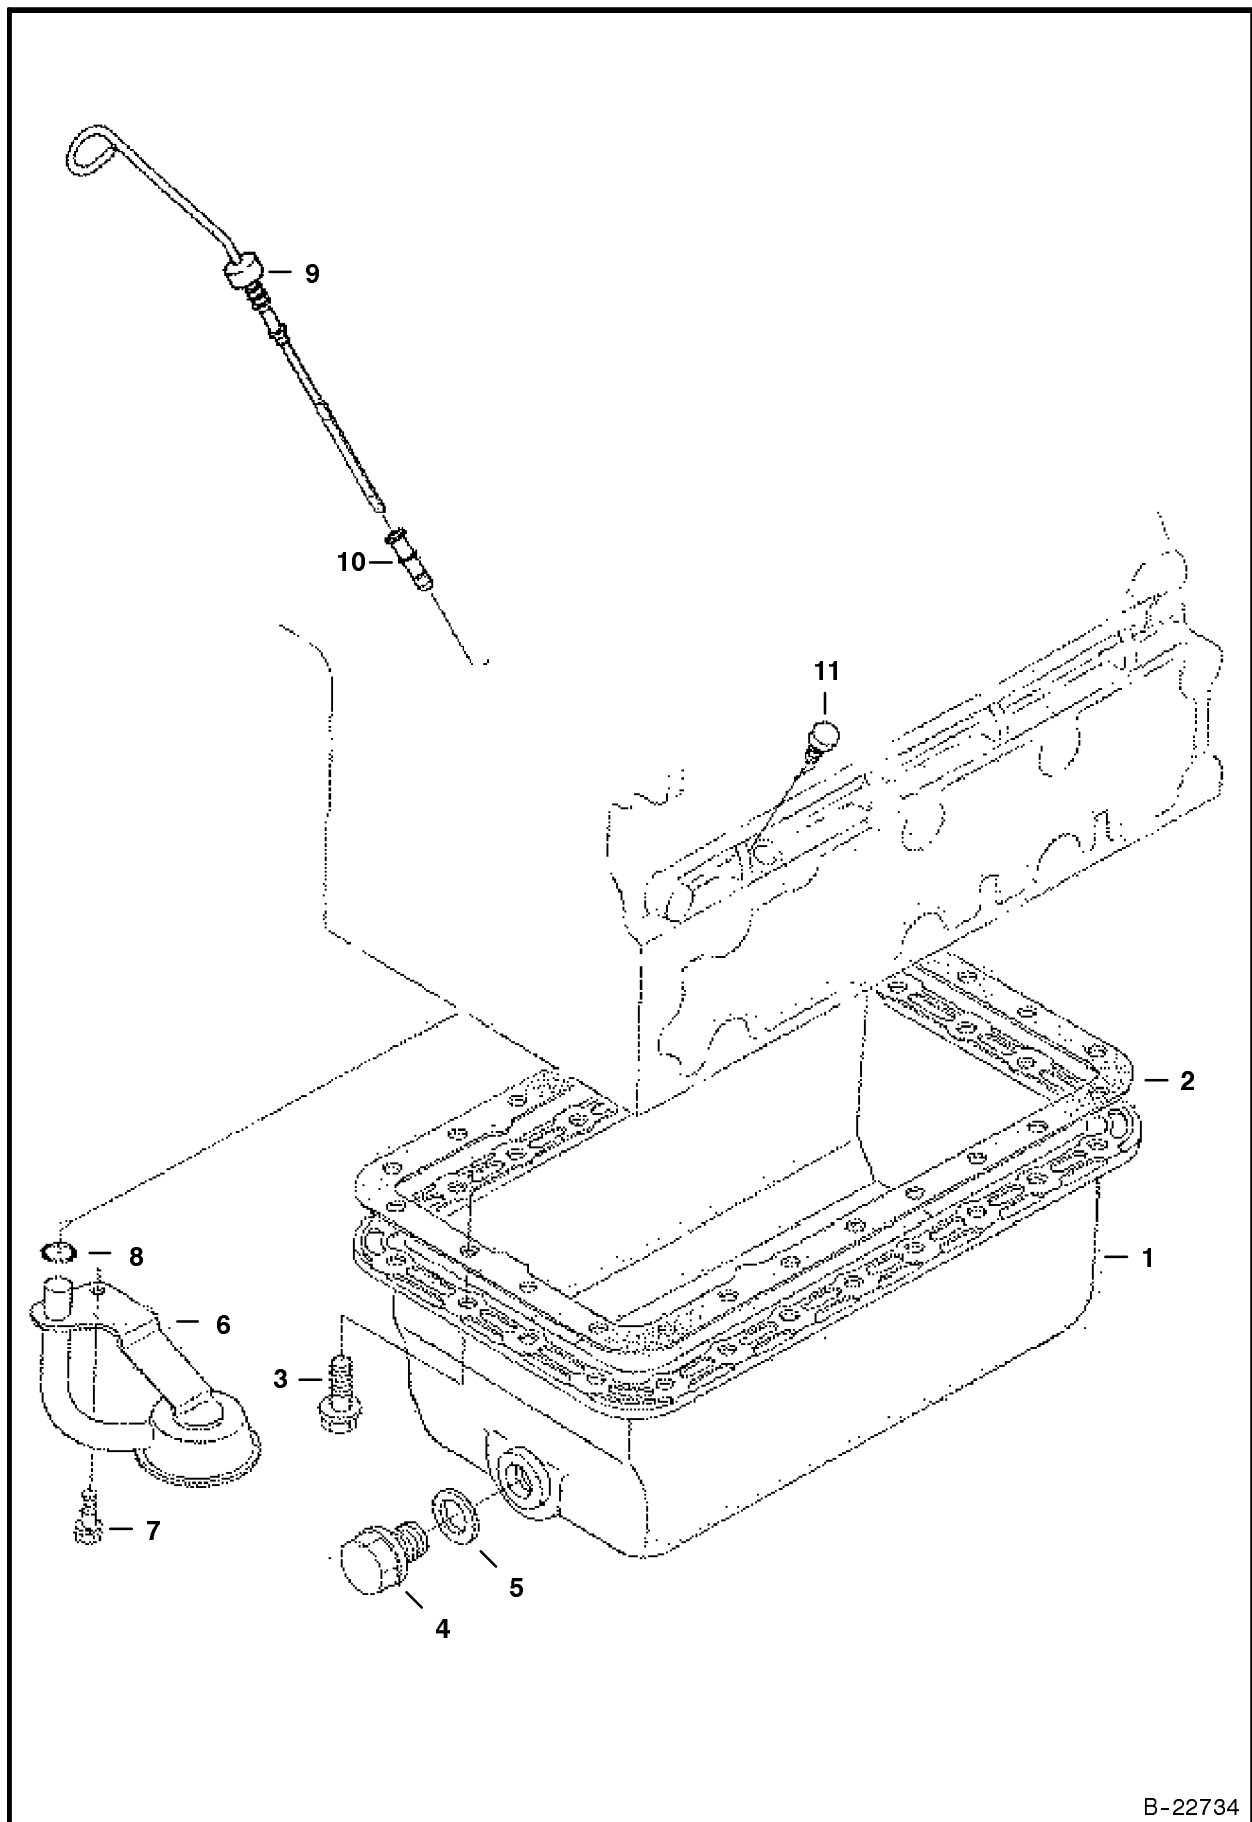

B-22734

[illegible]

PISTON & CRANKSHAFT (Kubota - V2003TMDI)

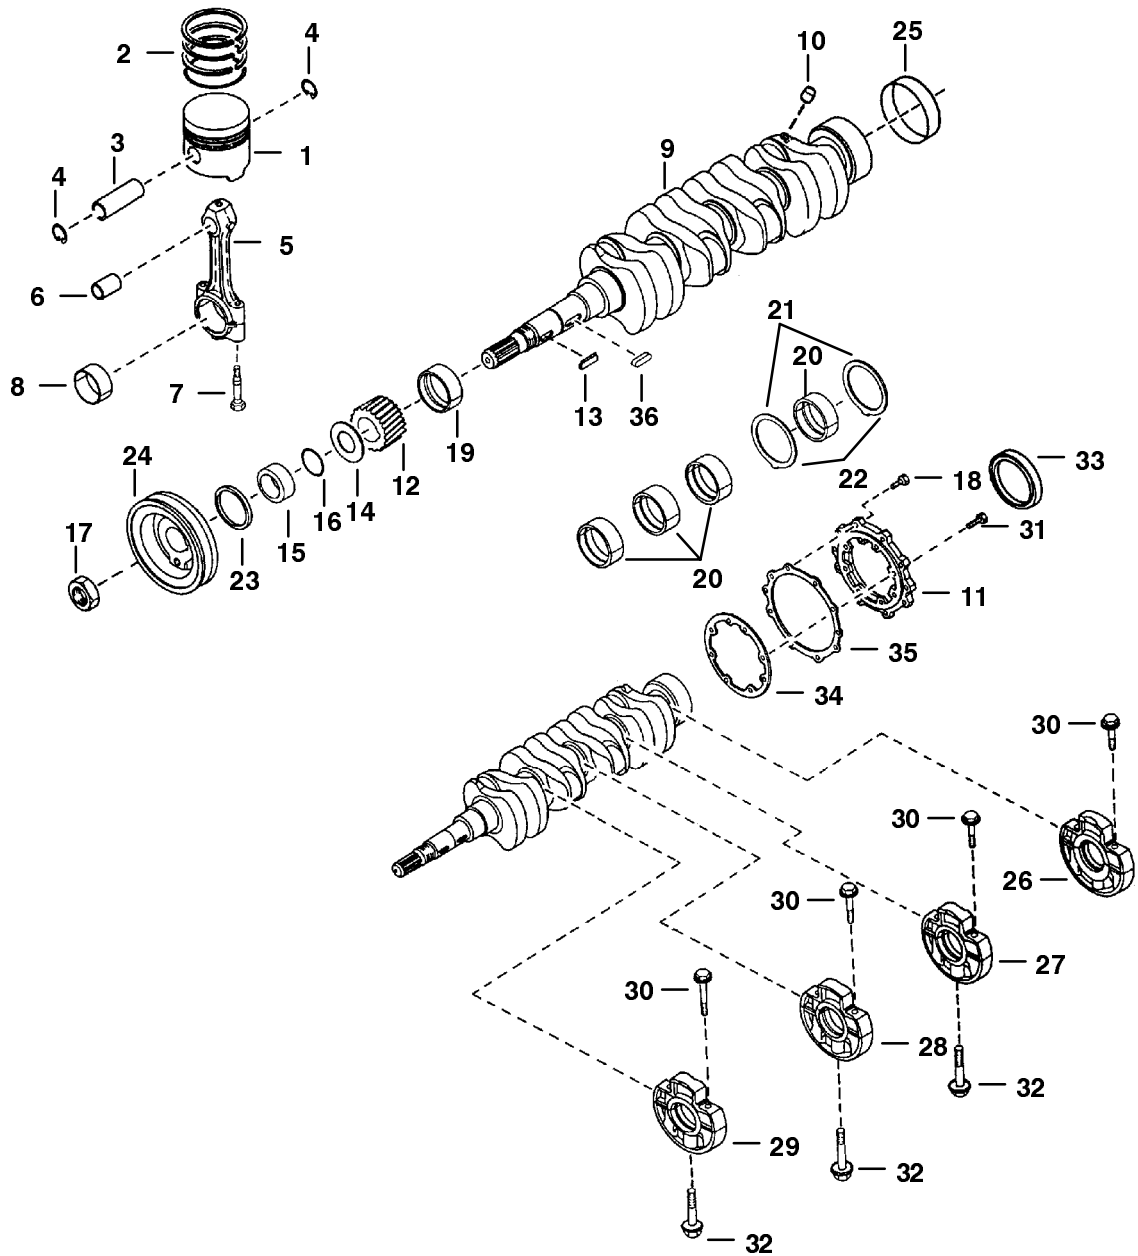


B-22684A

PISTON & CRANKSHAFT (Cont'd)
(Kubota - V2003TMDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6684799	PISTON	Std.		4
	6684800	PISTON	+.25		4
2	6684803	RINGS	piston - Std.		4
	6684804	RINGS	piston - +.25		4
3	6655179	PIN			4
4	6655180	CIR-CLIP			8
5	6655181	ROD	connecting - W/Ref. 6, 7 & 8		4
6	6655243	BUSHING			4
7	6655498	BOLT			8
8	6655183	BEARING	rod - Std.		4
	6655236	BEARING	rod (0,2 mm-.0079)		4
	6655237	BEARING	rod (0,4 mm-.0157)		4
9	6684806	CRANKSHAFT	Ref. 10 & 25 - Ref. 10 must be installed before using		1
10	6652633	PLUG	Must be installed before using		
			Ref. 9 crankshaft - See S/L dated 3 Jan 85		4
11	6685515	COVER			1
12	6685481	GEAR			1
13	3974546	KEY			2
14	6653861	SLINGER	oil		1
15	3975337	COLLAR			1
16	3974577	O-RING			1
17	3974671	NUT			1
18	4CM-825	BOLT			8
19	6685486	BEARING	main - Std.		1
	6685490	BEARING	main (0,2 mm-.0079)		1
	6685491	BEARING	main (0,4 mm-.0157)		1
20	6685487	BEARING	main - Std.		4
	6685492	BEARING	main (0,2 mm-.0079)		4
	6685493	BEARING	main (0,4 mm-.0157)		4
21	6685488	WASHER	thrust - Std.		2
	6685494	WASHER	thrust (0,2 mm-.0079)		2
	6685495	WASHER	thrust (0,4 mm-.0157)		2
22	6685489	WASHER	thrust - Std.		2
	6685496	WASHER	thrust (0,2 mm-.0079)		2
	6685497	WASHER	thrust (0,4 mm-.0157)		2
23	6631664	SEAL	oil		1
24	6685521	PULLEY			1
25	6653859	SLEEVE			1
26	6685480	CASE	main bearing - W/Ref. 30		1
27	6685586	CASE	main bearing - W/Ref. 30		1
28	6685585	CASE	main bearing - W/Ref. 30		1
29	6685584	CASE	main bearing - W/Ref. 30		1
30	6685482	BOLT			8
31	4CM-828	BOLT			8
32	6653821	BOLT			3
33	6684789	SEAL	oil		1
34	6684788	GASKET			1
35	6666814	GASKET			1
36	6685469	KEY			1

**FUEL CAMSHAFT
(Kubota - V2003TMDI)**

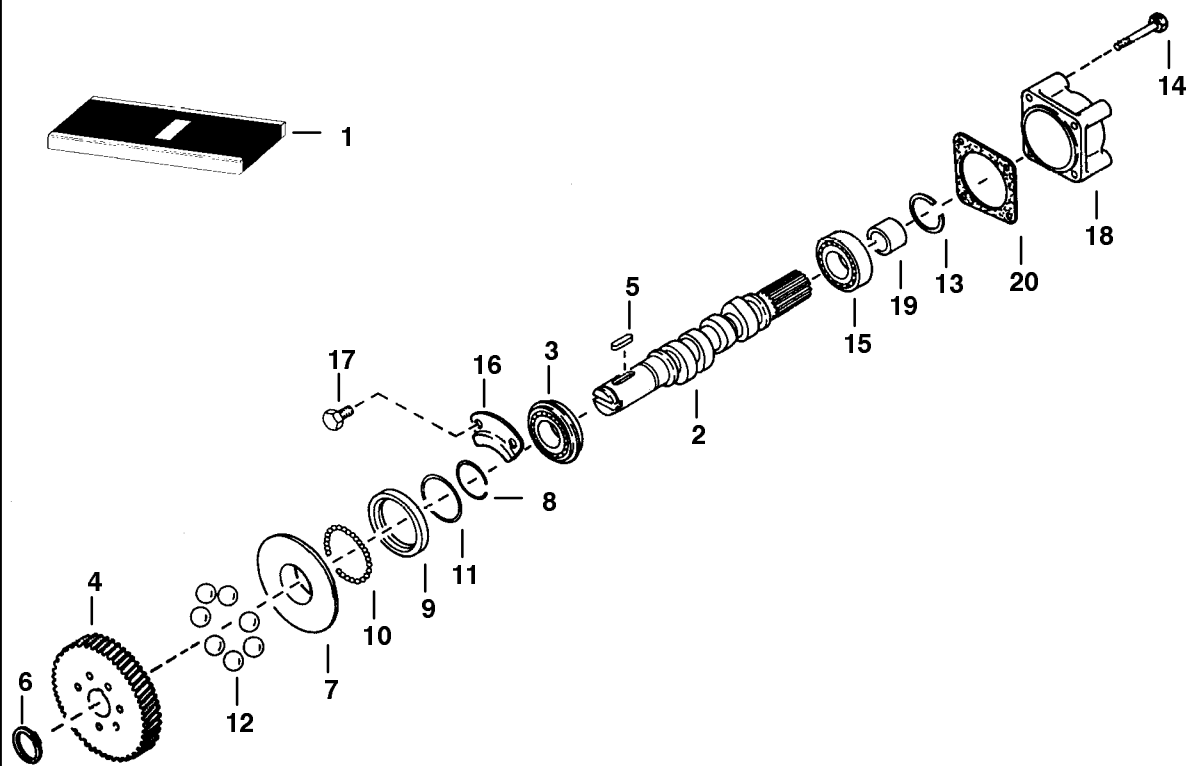


B-13144A

FUEL CAMSHAFT (Cont'd)

(Kubota - V2003TMDI)

[illegible]

CAMSHAFT (Kubota - V2003TMDI)

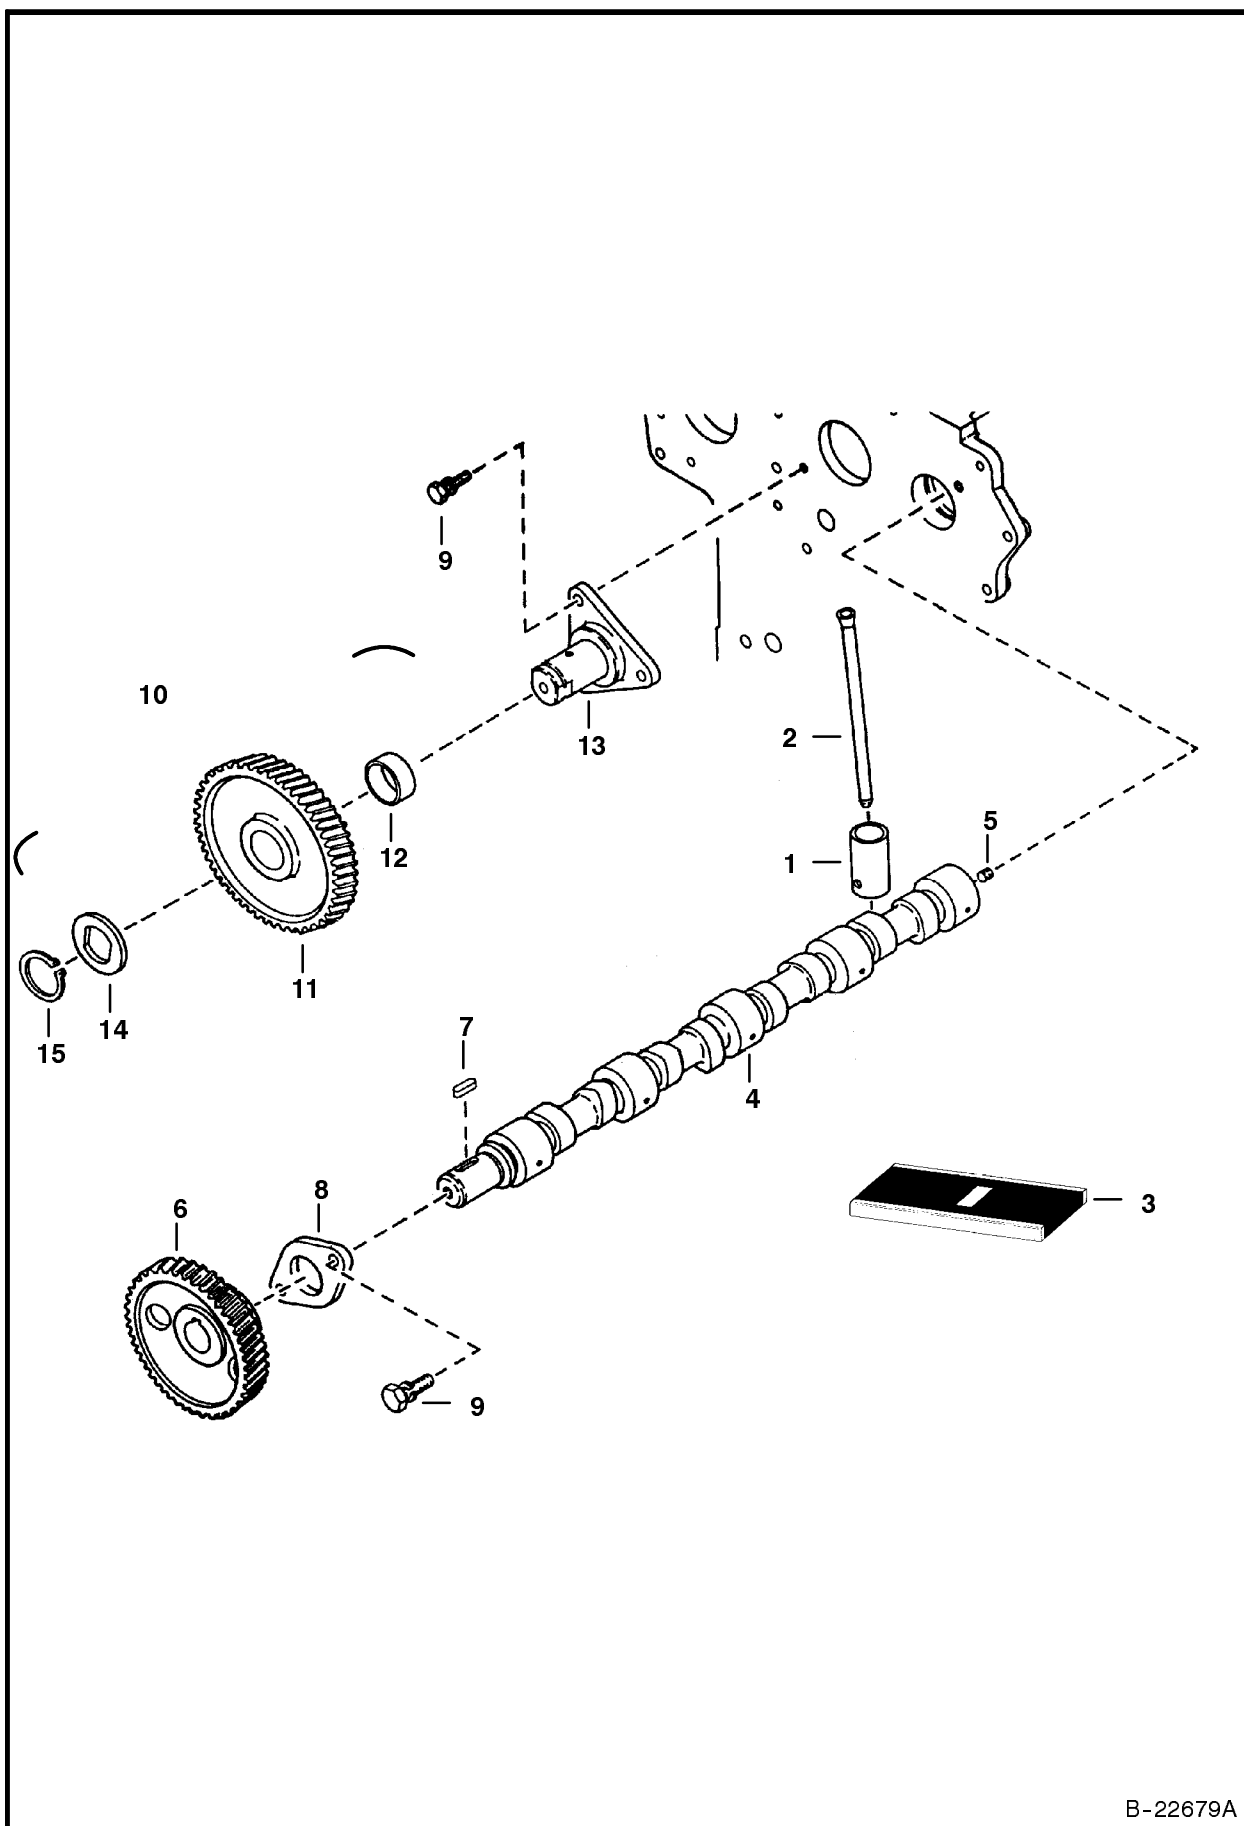


B-22679A

CAMSHAFT (Cont'd)

[illegible]


**WATER PUMP
(Kubota - V2003TMDI)**

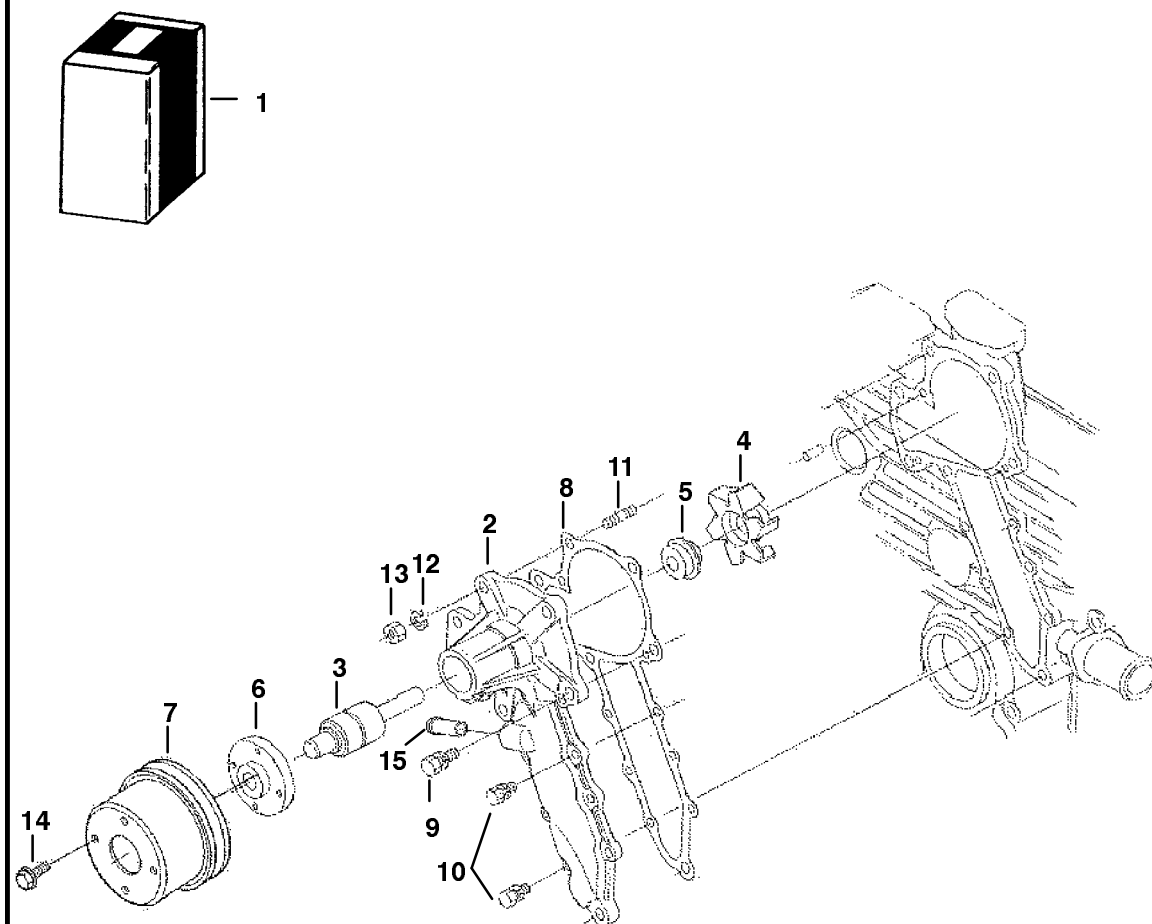

B-22740

[illegible]

WATER FLANGE & THERMOSTAT (Kubota - V2003TMDI)

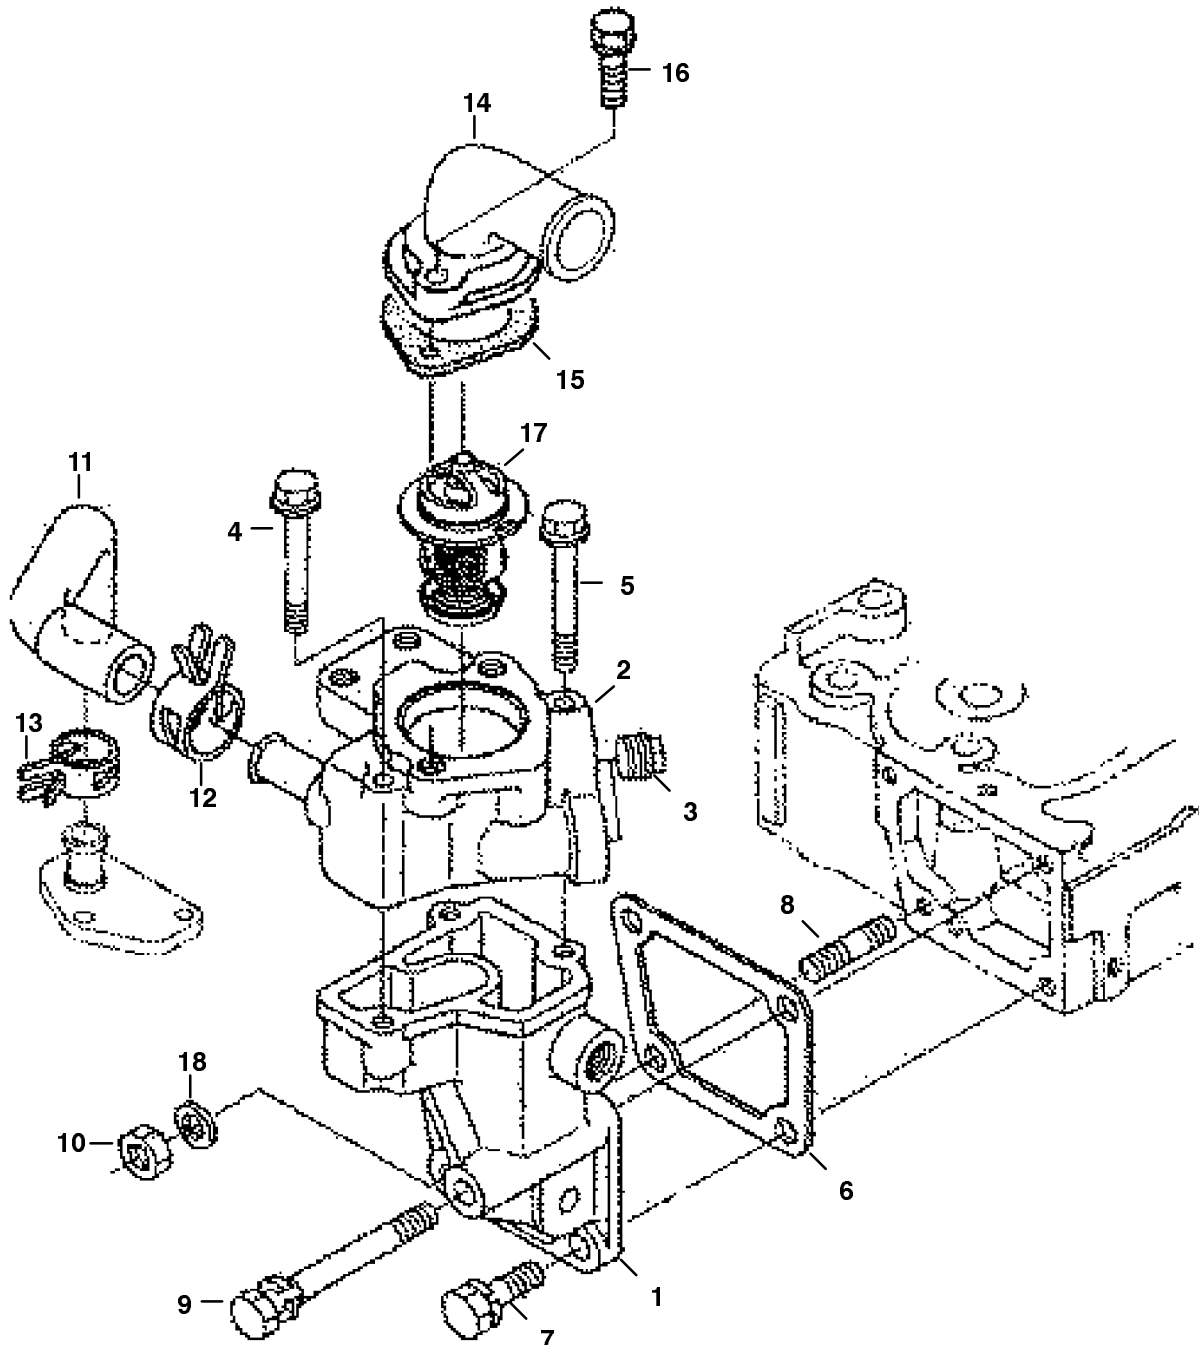


B-22690R

WATER FLANGE & THERMOSTAT (Cont'd)

(Kubota - V2003TMDI)

[illegible]

MANIFOLDS
(Kubota - V2003TMDI)

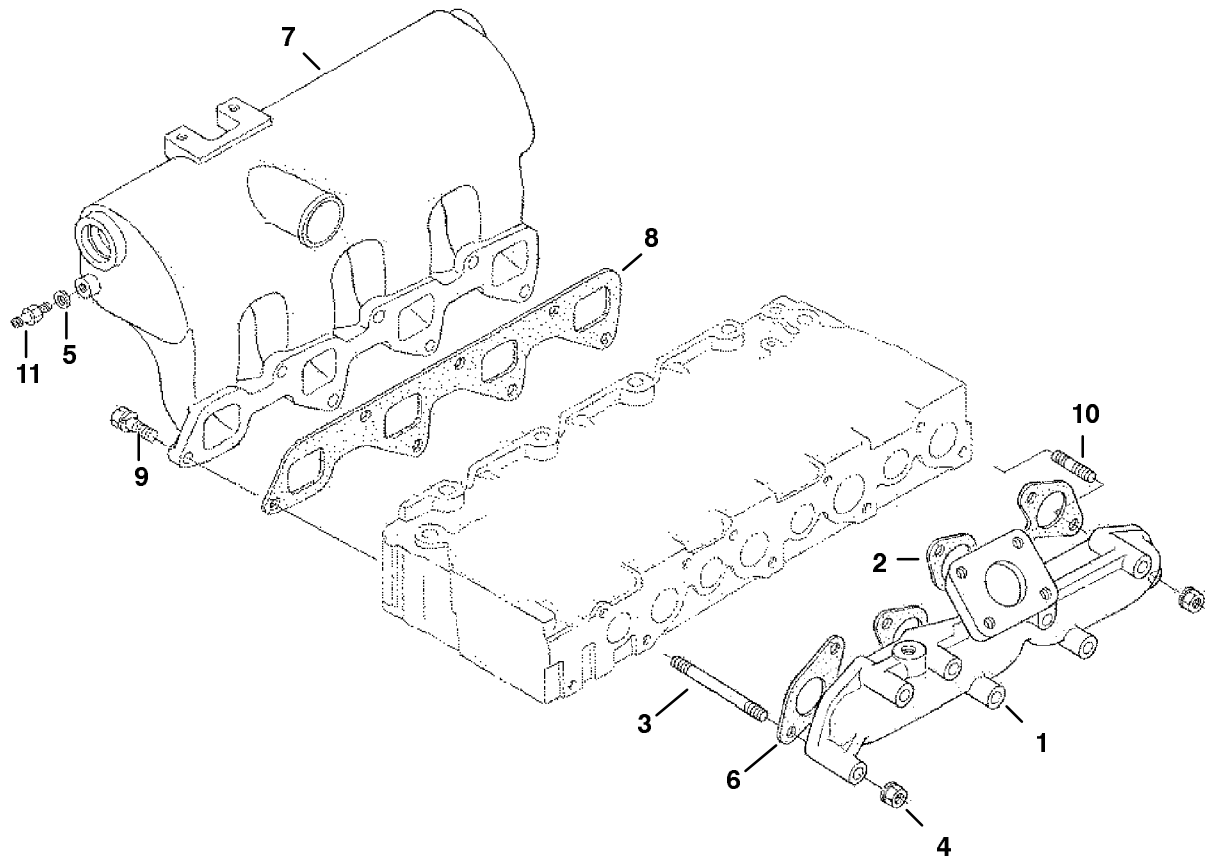


B-22741

MANIFOLDS (Cont'd)

(Kubota - V2003TMDI)

[illegible]

TURBO CHARGER
(Kubota - V2003TMDI)

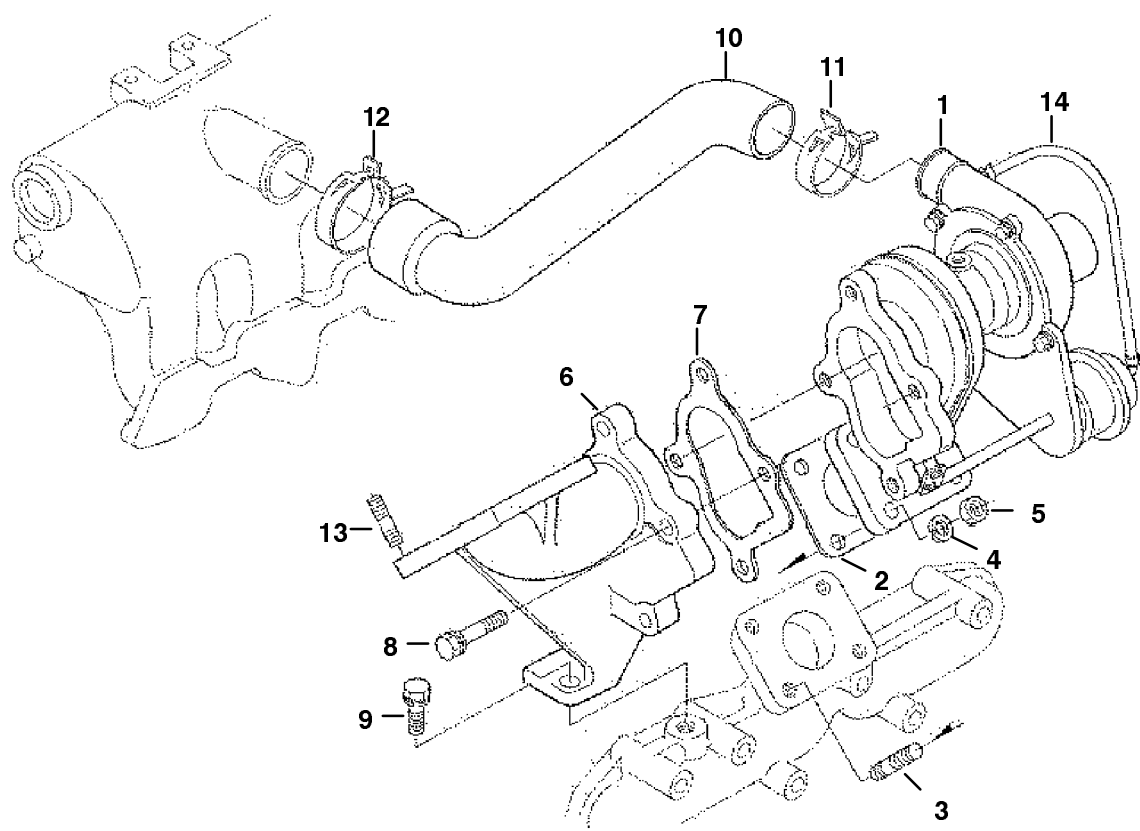


B-22742

TURBO CHARGER (Cont'd)

[illegible]


OIL PIPE
(Turbo Charger) (Kubota - V2003TMDI)

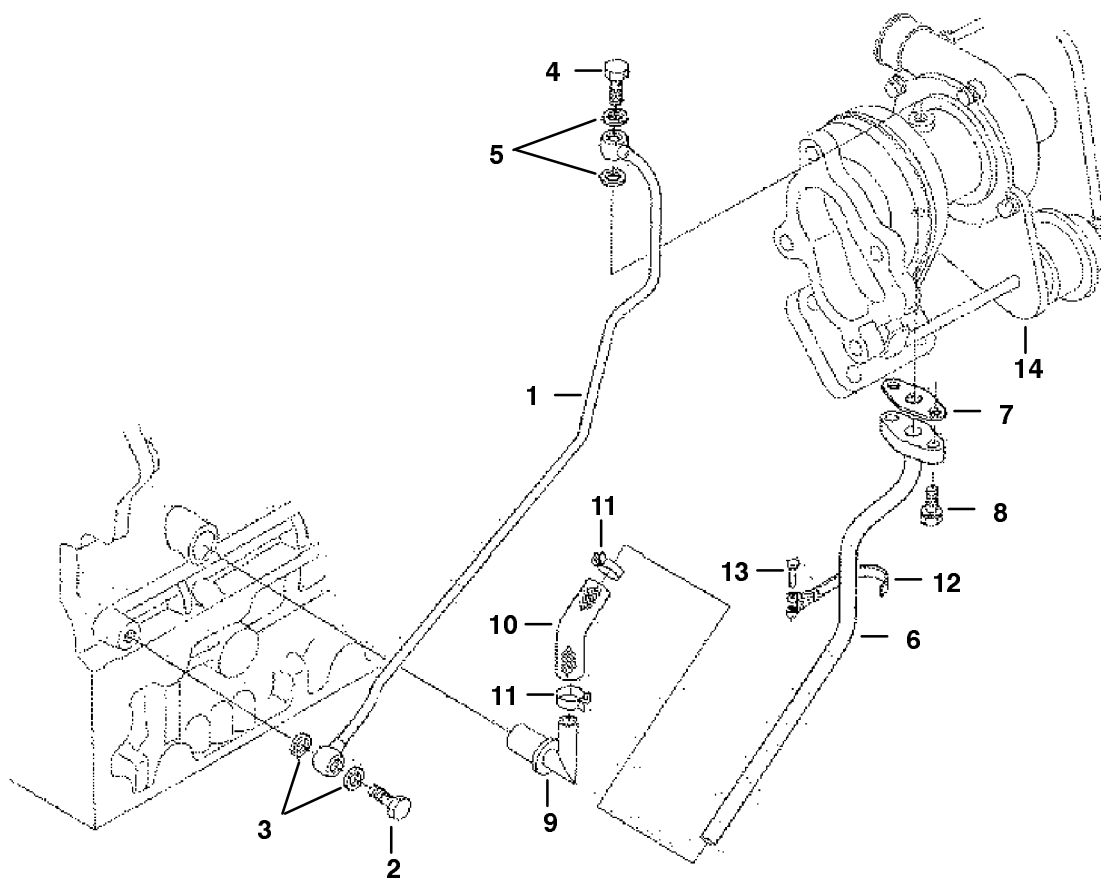

B-22747

[illegible]

**ENGINE STOP LEVER
(Kubota - V2003TMDI)**

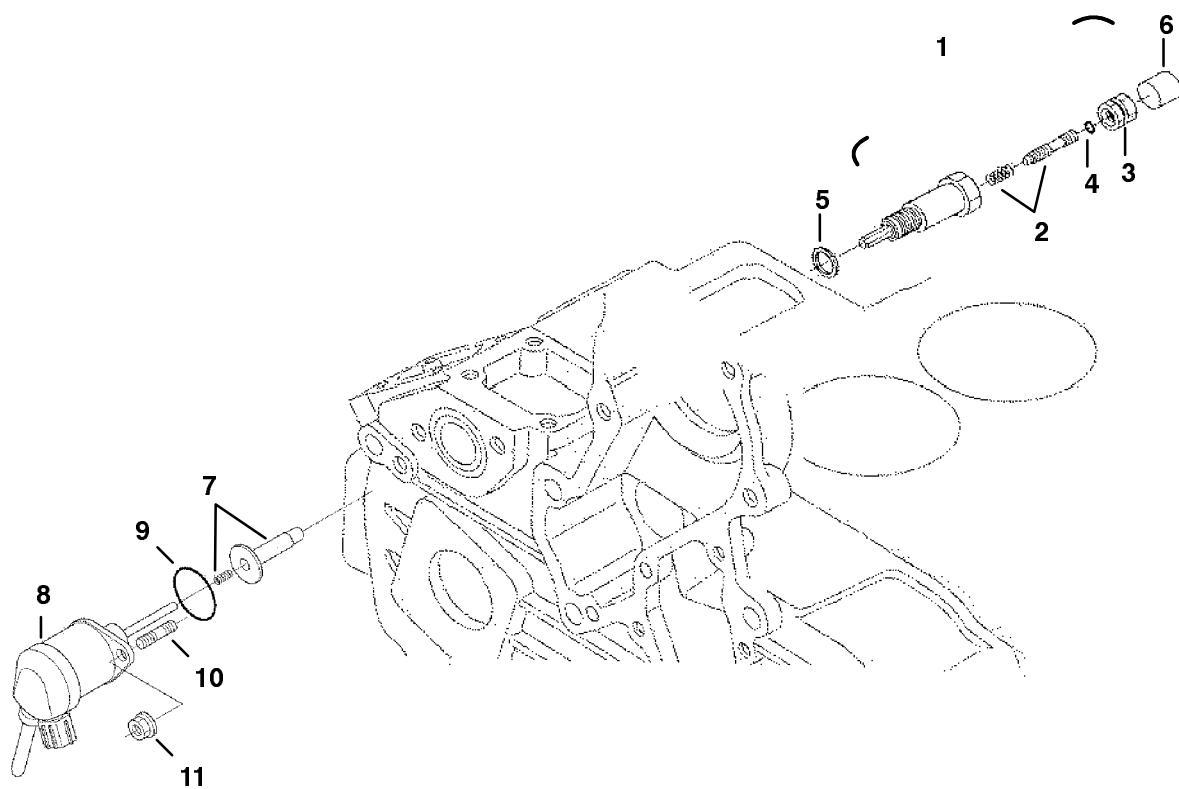


B-22737

ENGINE STOP LEVER (Cont'd)

(Kubota - V2003TMDI)

[illegible]


GOVERNOR
(Kubota - V2003TMDI)

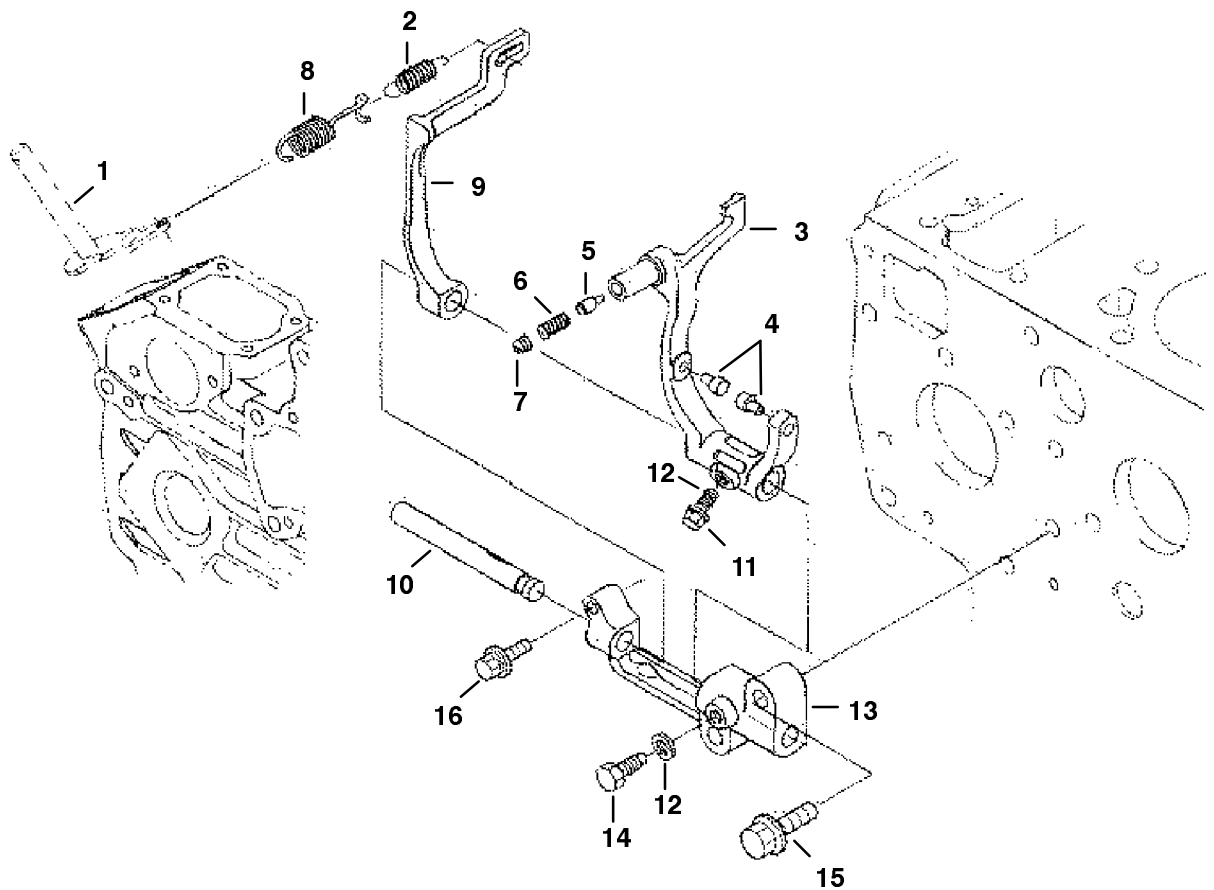

B-22687A

[illegible]

**SPEED CONTROL PLATE
(Kubota - V2003TMDI)**

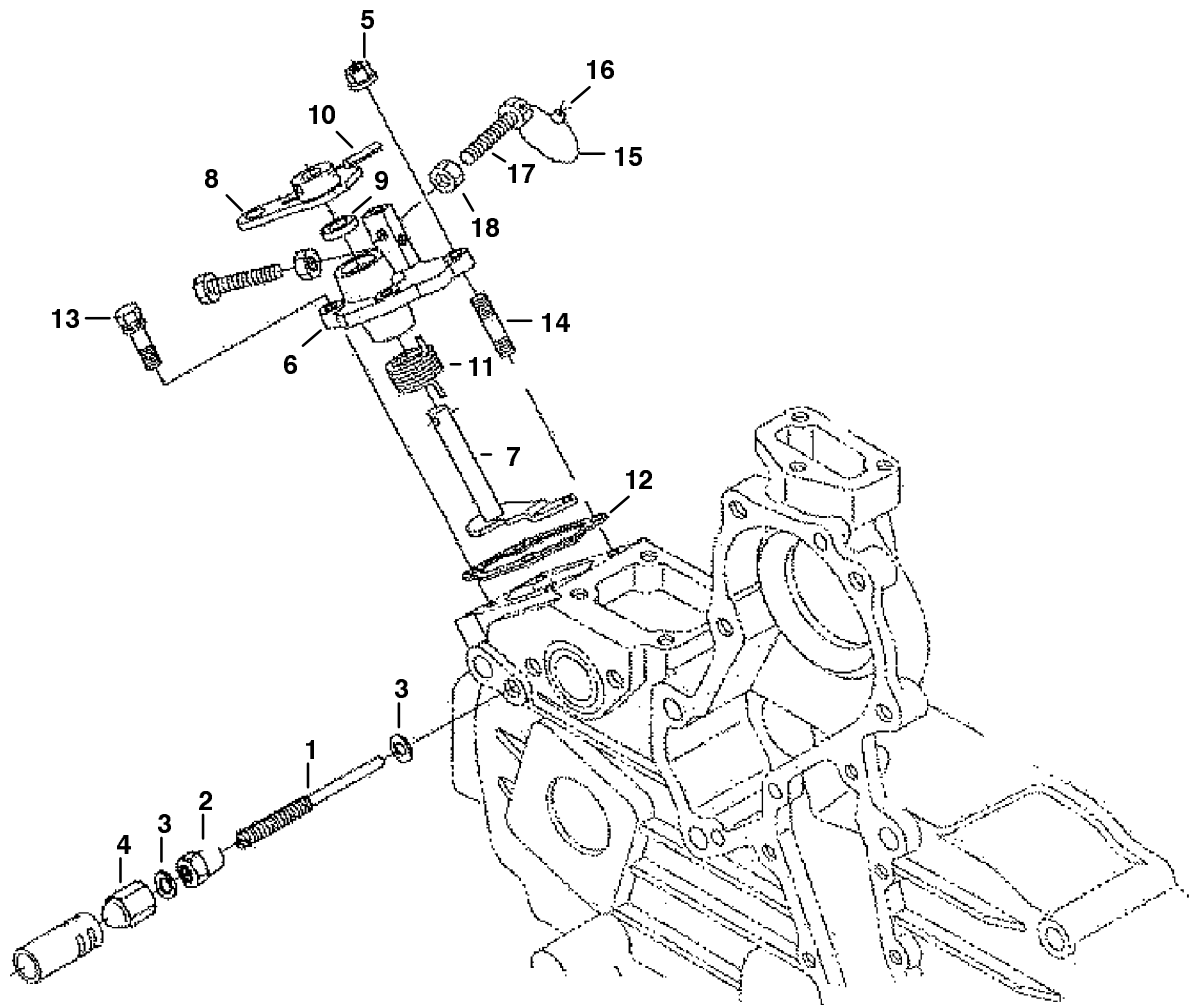


B-22688A

SPEED CONTROL PLATE (Cont'd)

(Kubota - V2003TMDI)

[illegible]

BOOST COMPENSATOR (Kubota - V2003TMDI)

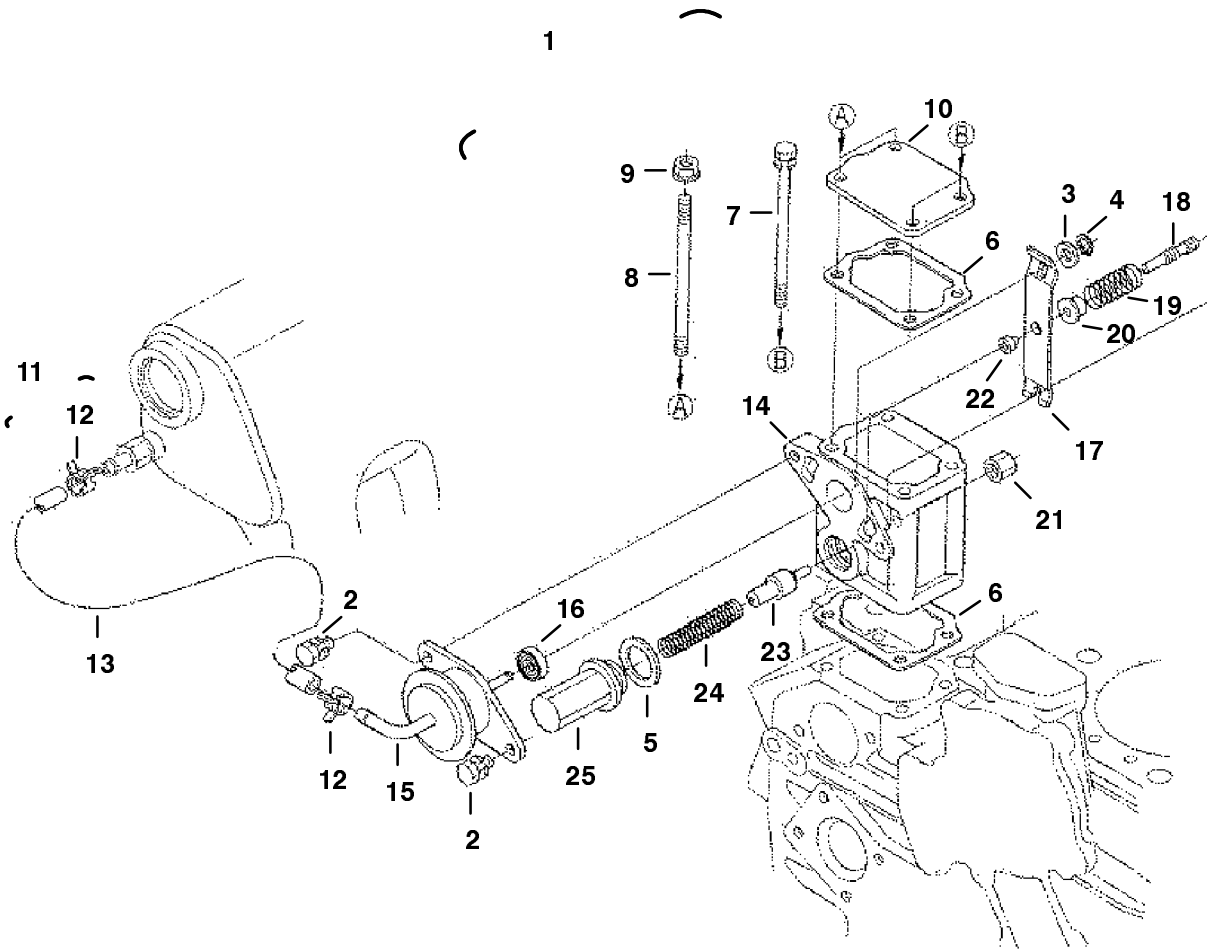


B-22739

BOOST COMPENSATOR (Cont'd)
(Kubota - V2003TMDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685638	COMPENSATOR	Ref. 2 - 5 & 14 - 25		1
2	6652682	BOLT			2
3	6685633	WASHER			1
4	6680821	CIR-CLIP			1
5	6685634	GASKET			1
6	6684824	GASKET			2
7	6657414	BOLT			2
8	6685639	STUD			2
9	6653561	NUT			2
10	6685500	COVER			1
11	6685645	PIPE ASSY			1
12	6680628	CLAMP			2
13	6685635	TUBE			1
14	NSS	HOUSING			1
15	NSS	ELBOW			1
16	NSS	SPACER			1
17	NSS	BRACKET			1
18	NSS	PISTON			1
19	NSS	SPRING			1
20	NSS	BUSHING			1
21	NSS	NUT			1
22	NSS	BUSHING			1
23	NSS	PISTON			1
24	NSS	SPRING			1
25	NSS	VALVE			1

INJECTION PUMP (Kubota - V2003TMDI)

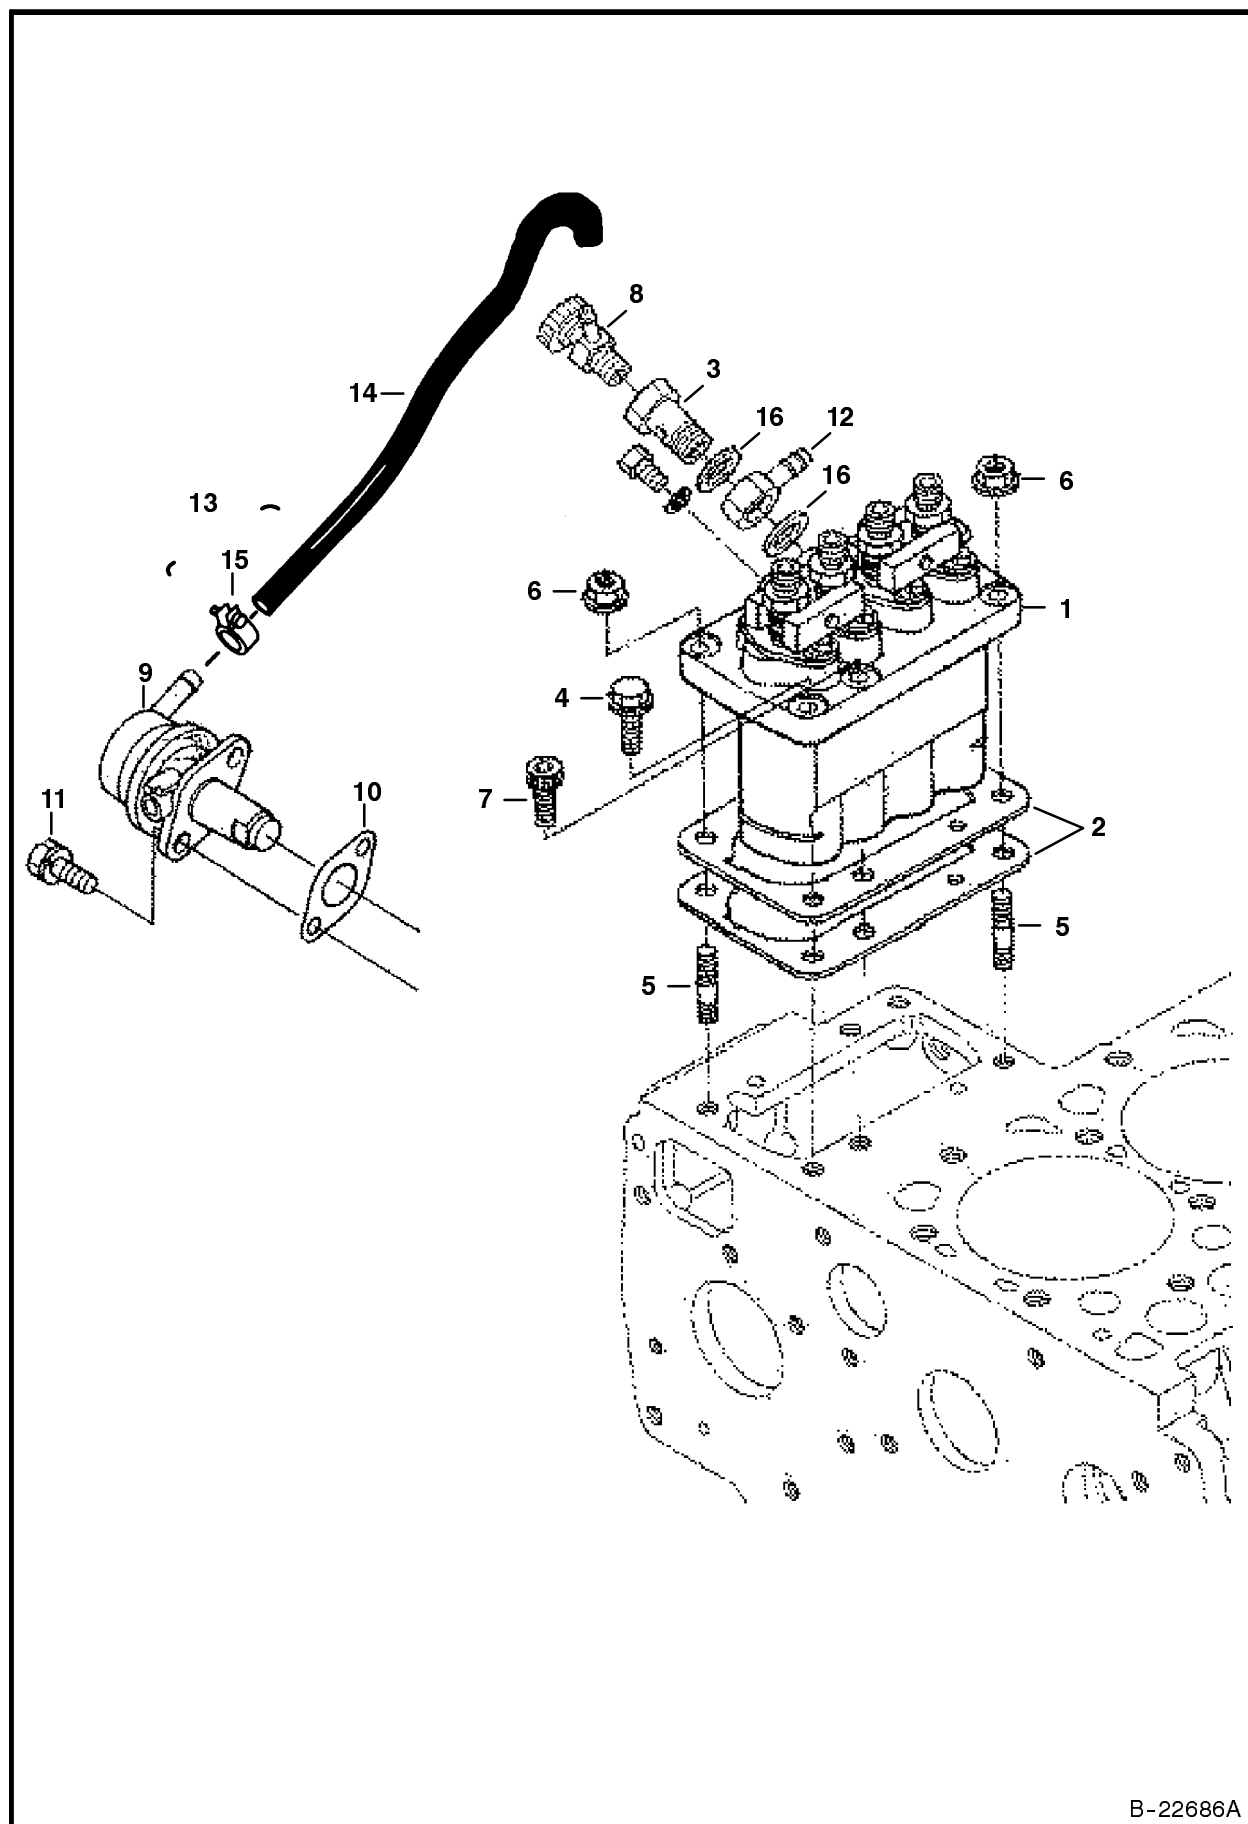


B-22686A

INJECTION PUMP (Cont'd)

(Kubota - V2003TMDI)

[illegible]

INJECTION PUMP **(Kubota - V2003TMDI)**

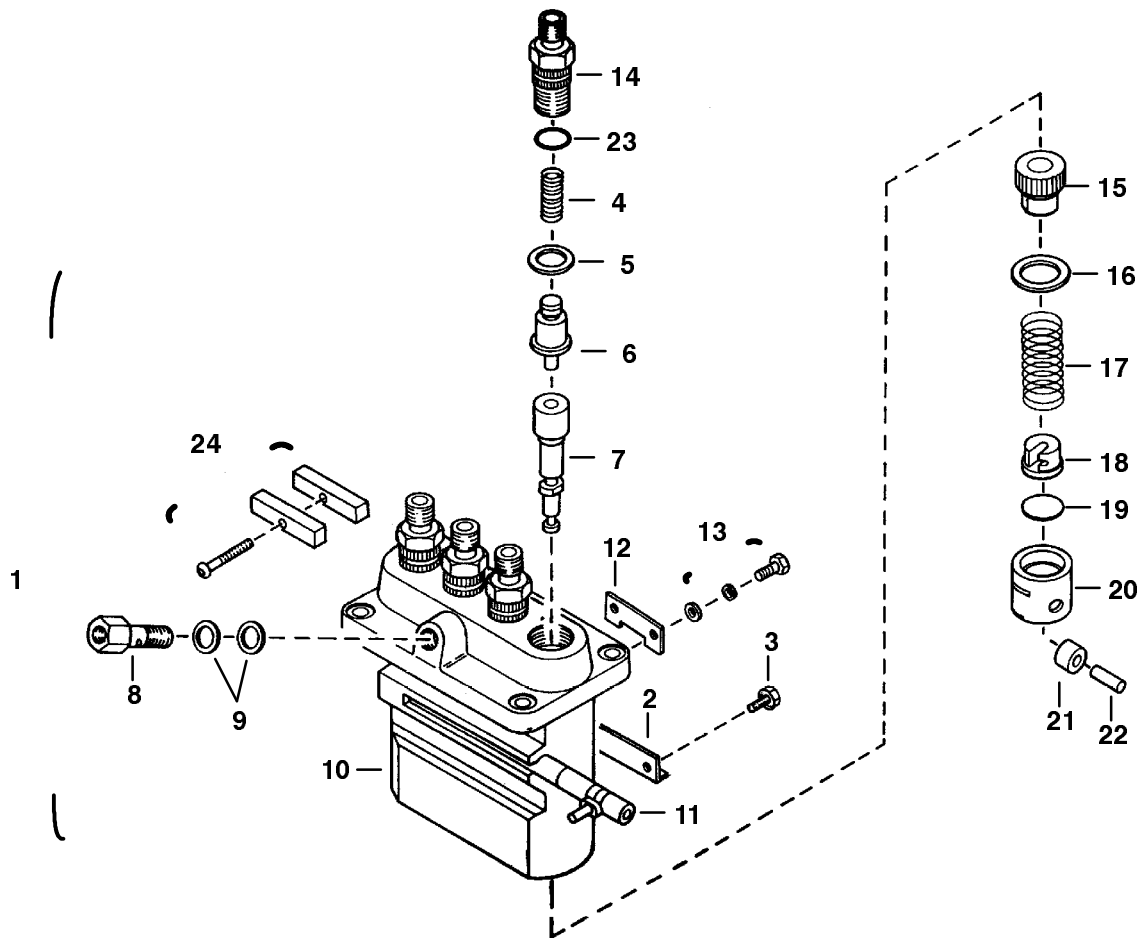


B-13156A

INJECTION PUMP (Cont'd)
(Kubota - V2003TMDI)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6684828	PUMP	injection - No serviceable parts available - Take to injection pump specialist		1
2	6655207	PLATE	adjust		3
3	6655206	BOLT			3
4	6655203	SPRING	delivery valve		4
5	3974368	GASKET	delivery valve		4
6	6655202	VALVE	delivery		4
7	6655201	ELEMENT	pump		4
8	6599084	SCREW			1
9	6599119	GASKET			2
10	NSS	HOUSING	pump		1
11	3974787	RACK	control		1
12	6655209	PLATE	adjusting		3
13	3974366	BOLT			3
14	6655204	HOLDER	delivery valve		4
15	6653894	SLEEVE	control		4
16	3974381	SEAT	spring - Upper		4
17	3974382	SPRING	plunger		4
18	3974383	SEAT	spring - Under		4
19	3974384	SHIM			4
20	3974385	TAPPET	W/Ref. 21, 22		4
21	NSS	ROLLER			4
22	NSS	PIN			4
23	6655518	O-RING			4
24	6655205	PLATE ASSY.			2

INJECTOR NOZZLES
(Kubota - V2003TMDI)

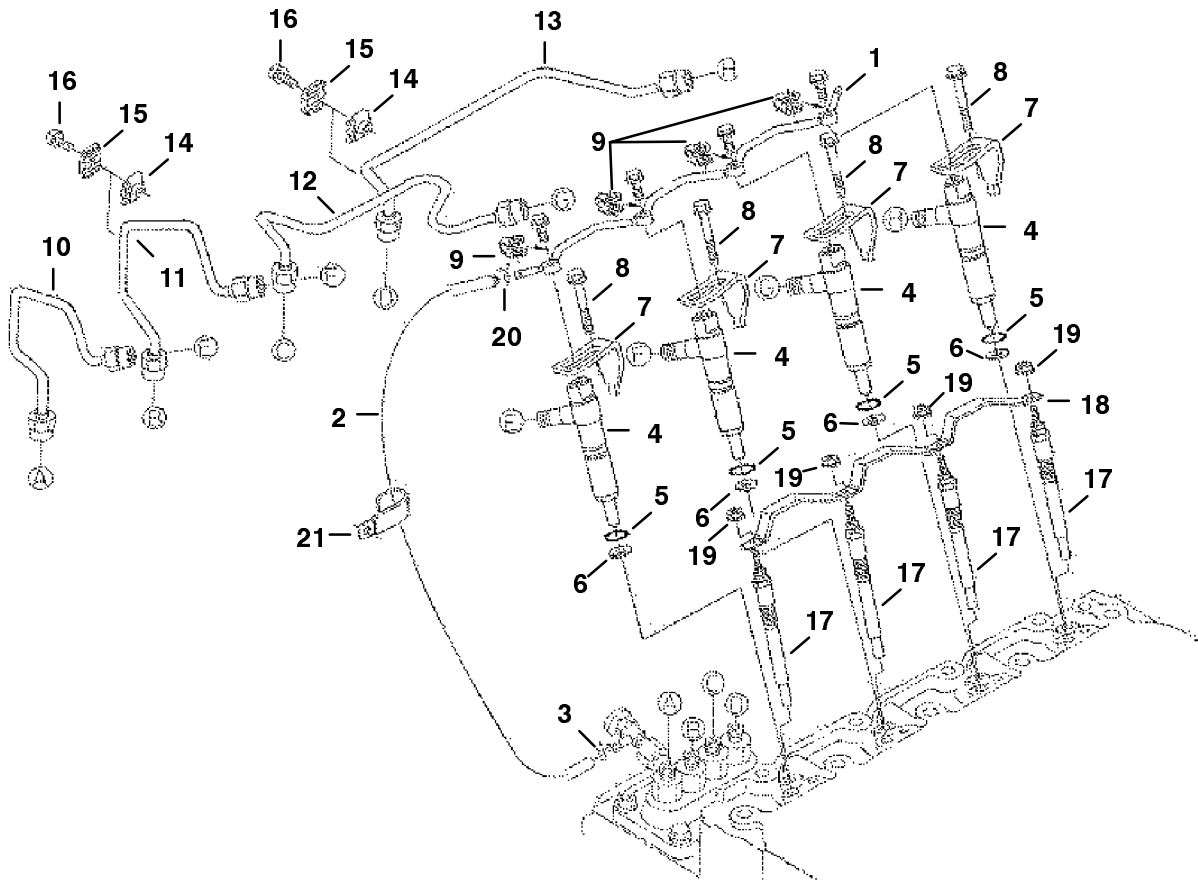


B-22738

INJECTOR NOZZLES (Cont'd)

(Kubota - V2003TMDI)

[illegible]

INJECTOR HOLDER
(Kubota - V2003TMDI)

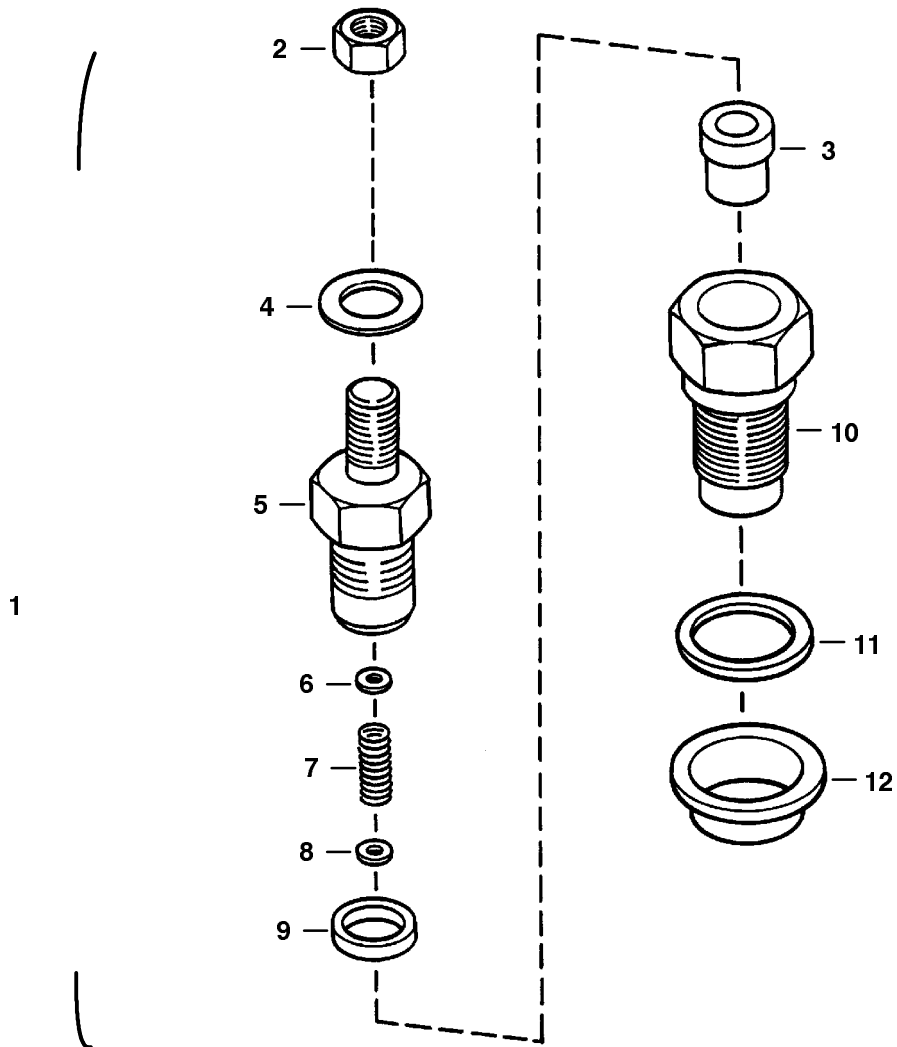


B-13154A

INJECTOR HOLDER (Cont'd)

(Kubota - V2003TMDI)

[illegible]

AIR CLEANER
(Kubota Engine - V2203MDI & V2003TMDI)

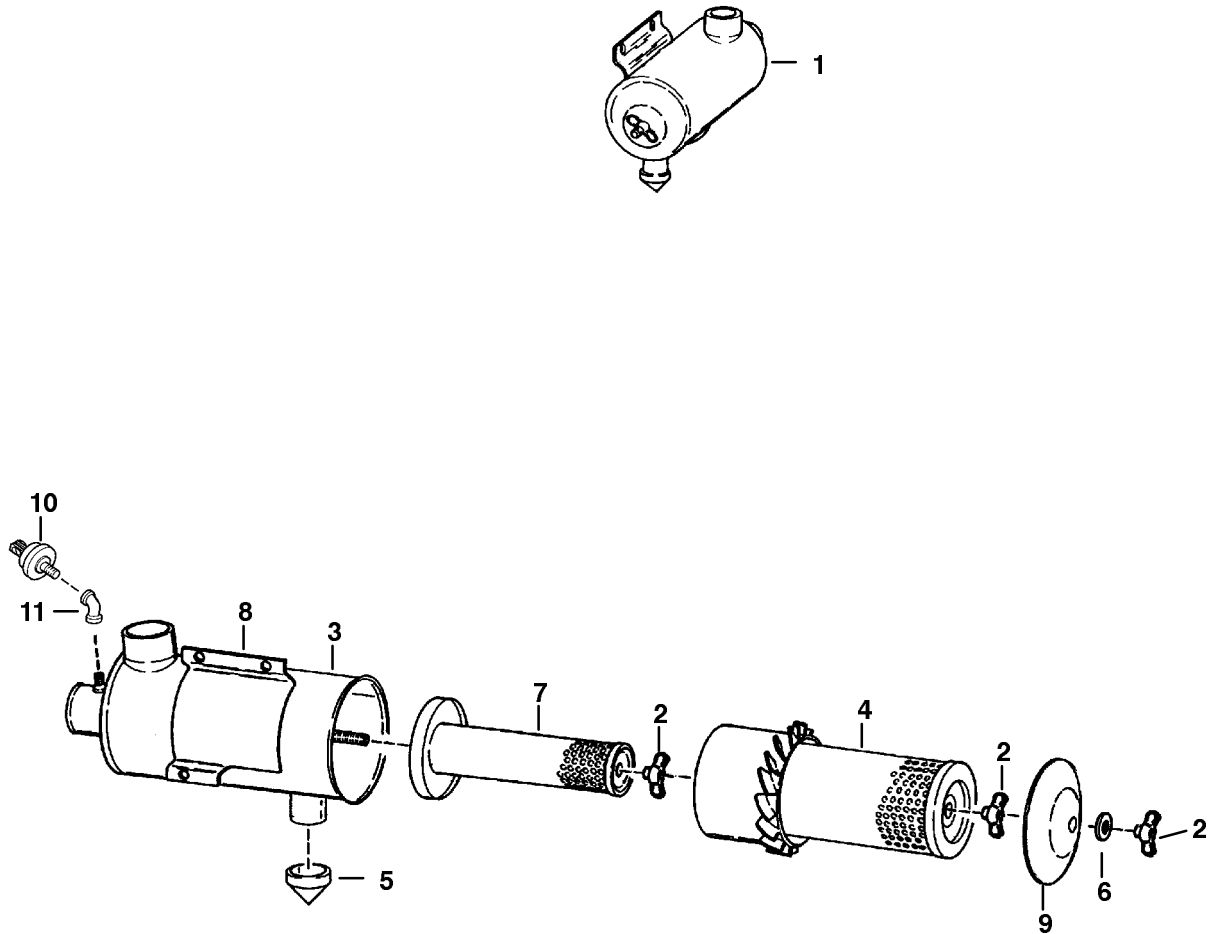

B-16478

[illegible]

S175/S185 CONTENTS

MAIN FRAME	11-42
MAINTENANCE ITEMS	11-12
MAINTENANCE SCHEDULE ITEMS	13-20
MAIN FRAME	21-22
OPERATOR CAB	23-26
SEAT & SEAT BAR	27-28
SEAT	29-30
PANELS	31-32
REAR DOOR	33-34
LIFT ARMS & BOBTACH	35-36
BOB-TACH	37-38
FUEL SYSTEM	39-42
DRIVE TRAIN	43-52
DRIVE TRAIN	43-44
AXLE	45-46
MOTOR CARRIER	47-48
DISC BRAKE	49-52
HYDRAULIC SYSTEM	53-98
HYDRAULIC CIRCUITRY	53-66
MANUAL LIFT RELEASE SYSTEM	67-70
AUXILIARY HYDRAULICS	71-72
TILT CYLINDER	73-74
LIFT CYLINDER	75-76
CONTROL PEDALS	77-78
HYDRAULIC CONTROL VALVE	79-94
BICS CONTROL VALVE	95-96
MANUAL LIFT RELEASE VALVE	97-98
HIGH FLOW HYDRAULICS	99-104
HIGH FLOW HYDRAULICS	99-104
HYDROSTATIC SYSTEM	105-136
HYDROSTATIC CIRCUITRY	105-116
HAND CONTROLS	117-120
HYDROSTATIC MOTOR	121-122
HYDROSTATIC PUMP	123-130
GEAR PUMP	131-132
HYDROSTATIC OIL FILTER	133-136
ELECTRICAL SYSTEM	137-158
CAB ELECTRICAL CIRCUITRY	137-138
ENGINE ELECTRICAL CIRCUITRY	139-142
CONTROLS ELECTRICAL	143-154
ALTERNATOR	155-156
STARTER	157-158
POWER UNIT	159-266
COOLING SYSTEM	159-162
ENGINE & ATTACHING PARTS	163-172
THROTTLE	173-174
COOLING FAN DRIVE ASSY.	175-176
ENGINE & GASKET KITS (KUBOTA V2203MDI)	177-178
GEARCASE (KUBOTA V2203MDI)	179-180
CRANKCASE (KUBOTA V2203MDI)	181-182
ROCKER ARM COVER (KUBOTA V2203MDI)	183-184
VALVE ROCKER ARM (KUBOTA V2203MDI)	185-186
CYLINDER HEAD (KUBOTA V2203MDI)	187-188

S175/S185 CONTENTS (Cont'd)


POWER UNIT (CONT'D)	159-266
OIL PAN (KUBOTA V2203MDI)	189-190
PISTON & CRANKSHAFT (KUBOTA V2203MDI)	191-192
FUEL CAMSHAFT (KUBOTA V2203MDI)	193-194
CAMSHAFT (KUBOTA V2203MDI)	195-196
WATER PUMP (KUBOTA V2203MDI)	197-198
WATER FLANGE & THERMOSTAT (KUBOTA V2203MDI)	199-200
MANIFOLDS (KUBOTA V2203MDI)	201-202
ENGINE STOP LEVER (KUBOTA V2203MDI)	203-204
GOVERNOR (KUBOTA V2203MDI)	205-206
SPEED CONTROL PLATE (KUBOTA V2203MDI)	207-208
INJECTION PUMP (KUBOTA V2203MDI)	209-212
INJECTOR NOZZLES (KUBOTA V2203MDI)	213-214
INJECTOR HOLDER (KUBOTA V2203MDI)	215-216
ENGINE & GASKET KITS (KUBOTA V2003TMDI)	217-218
GEARCASE (KUBOTA V2003TMDI)	219-220
OIL COOLER (KUBOTA V2003TMDI)	221-222
CRANKCASE (KUBOTA V2003TMDI)	223-224
ROCKER ARM COVER (KUBOTA V2003TMDI)	225-226
VALVE ROCKER ARM (KUBOTA V2003TMDI)	227-228
CYLINDER HEAD (KUBOTA V2003TMDI)	229-230
OIL PAN (KUBOTA V2003TMDI)	231-232
PISTON & CRANKSHAFT (KUBOTA V2003TMDI)	233-234
FUEL CAMSHAFT (KUBOTA V2003TMDI)	235-236
CAMSHAFT (KUBOTA V2003MDI)	237-238
WATER PUMP (KUBOTA V2003TMDI)	239-240
WATER FLANGE & THERMOSTAT (KUBOTA V2003TMDI)	241-242
MANIFOLDS (KUBOTA V2003TMDI)	243-244
TURBO CHARGER (KUBOTA V2003TMDI)	245-246
OIL PIPE (KUBOTA V2003TMDI)	247-248
ENGINE STOP LEVER (KUBOTA V2003TMDI)	249-250
GOVERNOR (KUBOTA V2003TMDI)	251-252
SPEED CONTROL PLATE (KUBOTA V2003TMDI)	253-254
BOOST COMPENSATOR (KUBOTA V2003TMDI)	255-256
INJECTION PUMP (KUBOTA V2003TMDI)	257-260
INJECTOR NOZZLES (KUBOTA V2003TMDI)	261-262
INJECTOR HOLDER (KUBOTA V2003TMDI)	263-264
AIR CLEANER	265-266
ACCESSORIES & OPTIONS	270-427
ACS CONVERSION KIT	270-271
ACCESS COVER	272-273
AXLE SEAL KIT	274-275
BACK-UP ALARM	276-277
BEACON	278-279
BLOCK HEATER	280-281
BOB-TACH LEVERS	282-283
BUCKET POSITIONING VALVE KIT	284-287
BUCKET POSITIONING VALVE	288-289
CAB DOOR	290-299
CAB ENCLOSURE	300-303
CAB WINDOWS	304-307
COUNTERWEIGHT KIT	308-311
DECALS	312-315
DELUXE CAB	316-317
DUAL BATTERY KIT	318-319

S175/S185 CONTENTS (Cont'd)

ACCESSORIES & OPTIONS (Cont'd)	270-427
ELECTRICAL CONNECTOR KIT	320-321
ELECTRICAL CONTROLS KIT	322-327
ENGINE MOUNT KIT	328-329
EUROPEAN ACCESSORIES	330-343
FIRE EXTINGUISHER	344-345
F.O.P.S. KIT	346-347
FLASHER LIGHTS	348-349
FRONT AUXILIARY	350-351
GAS SPRING KIT	352-353
HAND CONTROL KIT	354-357
HEATER & A/C	358-373
HORN KIT	374-375
LIFT LIT	376-379
LIGHT KIT	380-381
MUFFLER/PURIFIER KIT	382-383
POWER BOB-TACH KIT	384-387
POWER BOB-TACH	388-391
REAR AUXILIARY	392-395
REAR AUXILIARY VALVE	396-397
REAR DOOR LOCK	398-399
REAR WIPER	400-401
SEAL ENCLOSURE KIT	402-403
SEAT	404-407
SEAT BELT	408-413
SOUND KIT	414-415
SOUND OPTION	416-417
SOUND REDUCTION HARDHAT	418-419
STROBE LIGHT	420-421
TIRES & RIMS	422-425
BULK ITEMS	426-427
NUMERICAL INDEX	428-476
NUMERICAL INDEX	428-476

ACS CONVERSION KIT

NOTE: Loader must be equipped W/Advanced Hand Control Option for this kit to function.

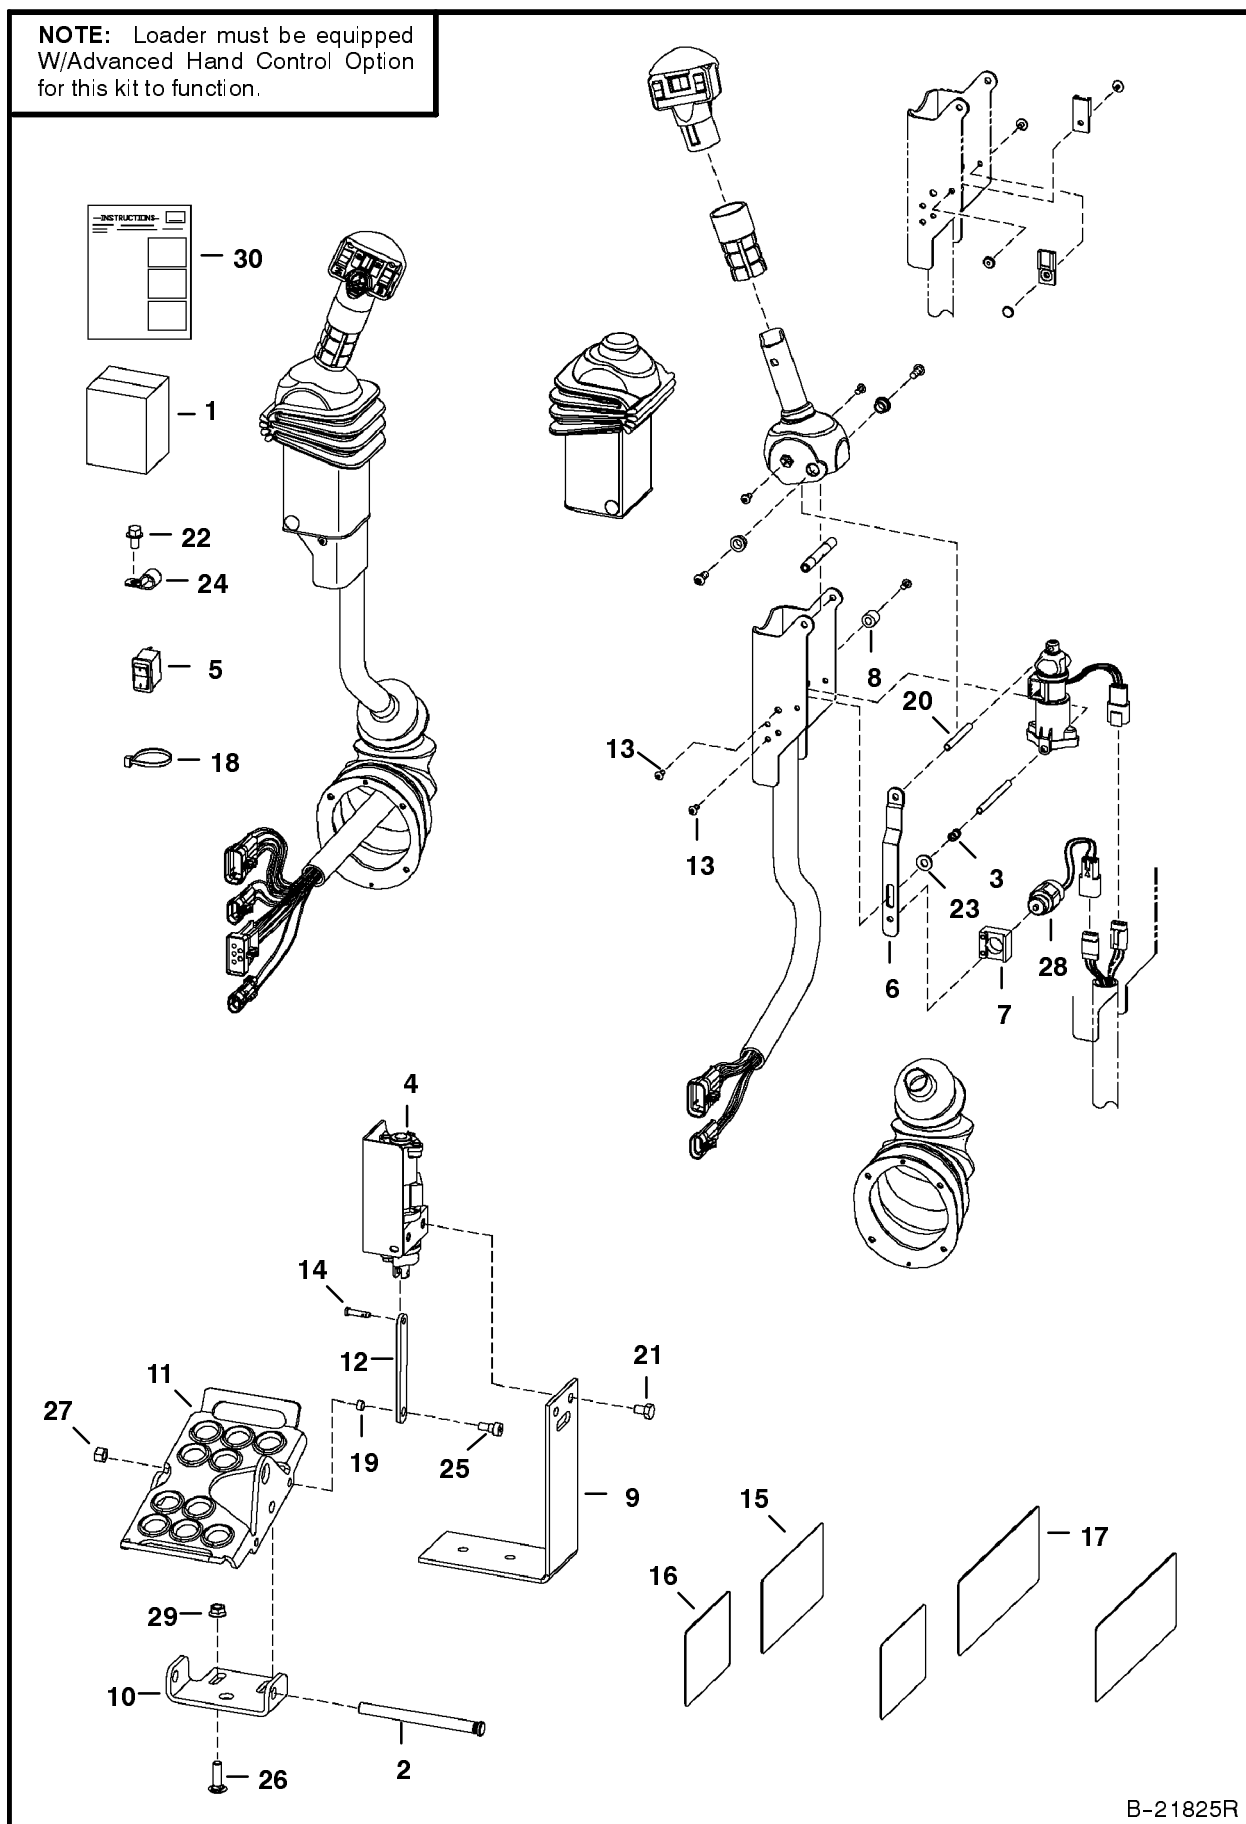


B-21825R

ACS CONVERSION KIT (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6731151	KIT	foot control - SEE NOTE - Ref. 2 - 14 & 17 - 30		1
2	6564657	PIN			2
3	6680470	SPRING			2
4*	6684912	SENSOR	foot pedal - R.H. - Was 6680420 [D]		1
*	6676029 6684911	SOLENOID SENSOR	foot pedal - L.H. - Was 6680421 [D]		1 1
5	6676029	SOLENOID			1
6	6676537	SWITCH			2
6	6680477	STRAP			2
7	6680468	MOUNT	solenoid		2
8	6719834	SPACER	threaded		2
9	6726573	BRACKET			2
10	6726679	MOUNT	pedal		2
11	6726680	PEDAL			2
12	6726681	LINK			2
13	6727065	BOLT			12
14	6727496	PIN			2
15	6727926	DECAL	operations - models S175/S185, 773G, 863G, 873G, 883 & 963G		1
16	6728045	DECAL	operations - models T190 & T200		1
16	6727941	DECAL	ACS operations - Not in Kit		1
17	6728539	DECAL	warning - models S175/S185, 773G, 863G, 873G, 883 & 963G		1
	6728540	DECAL	warning - models T190 & T200		1
18	6624289	TIE			2
19	6729467	SPACER			2
20	6680469	SPACER	threaded		2
21	17C-608	BOLT			4
22	84G-3710	BOLT			2
23	25E-13	WASHER			2
24	30H-62	CLAMP			2
25	17C-514	BOLT			2
26	37C-620	BOLT			4
27	95D-5	NUT			2
28	6676029	SOLENOID			2
29	57D-6	NUT			4
30	6901492	INSTRUCTIONS			1


ACCESS COVER
(Cleanout - Lower Front of Chaincase)

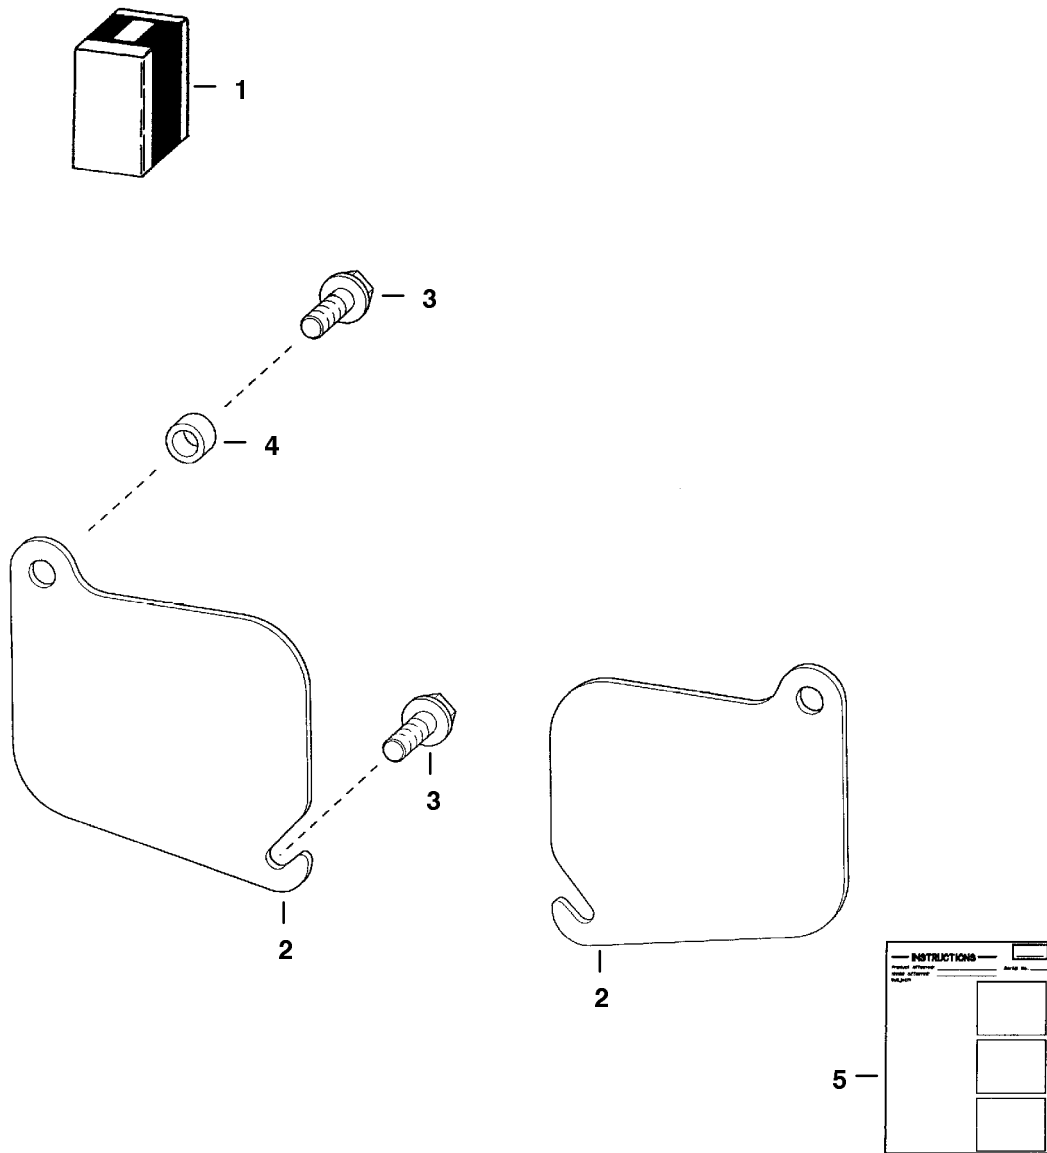

TS-1049

[illegible]

AXLE SEAL KIT

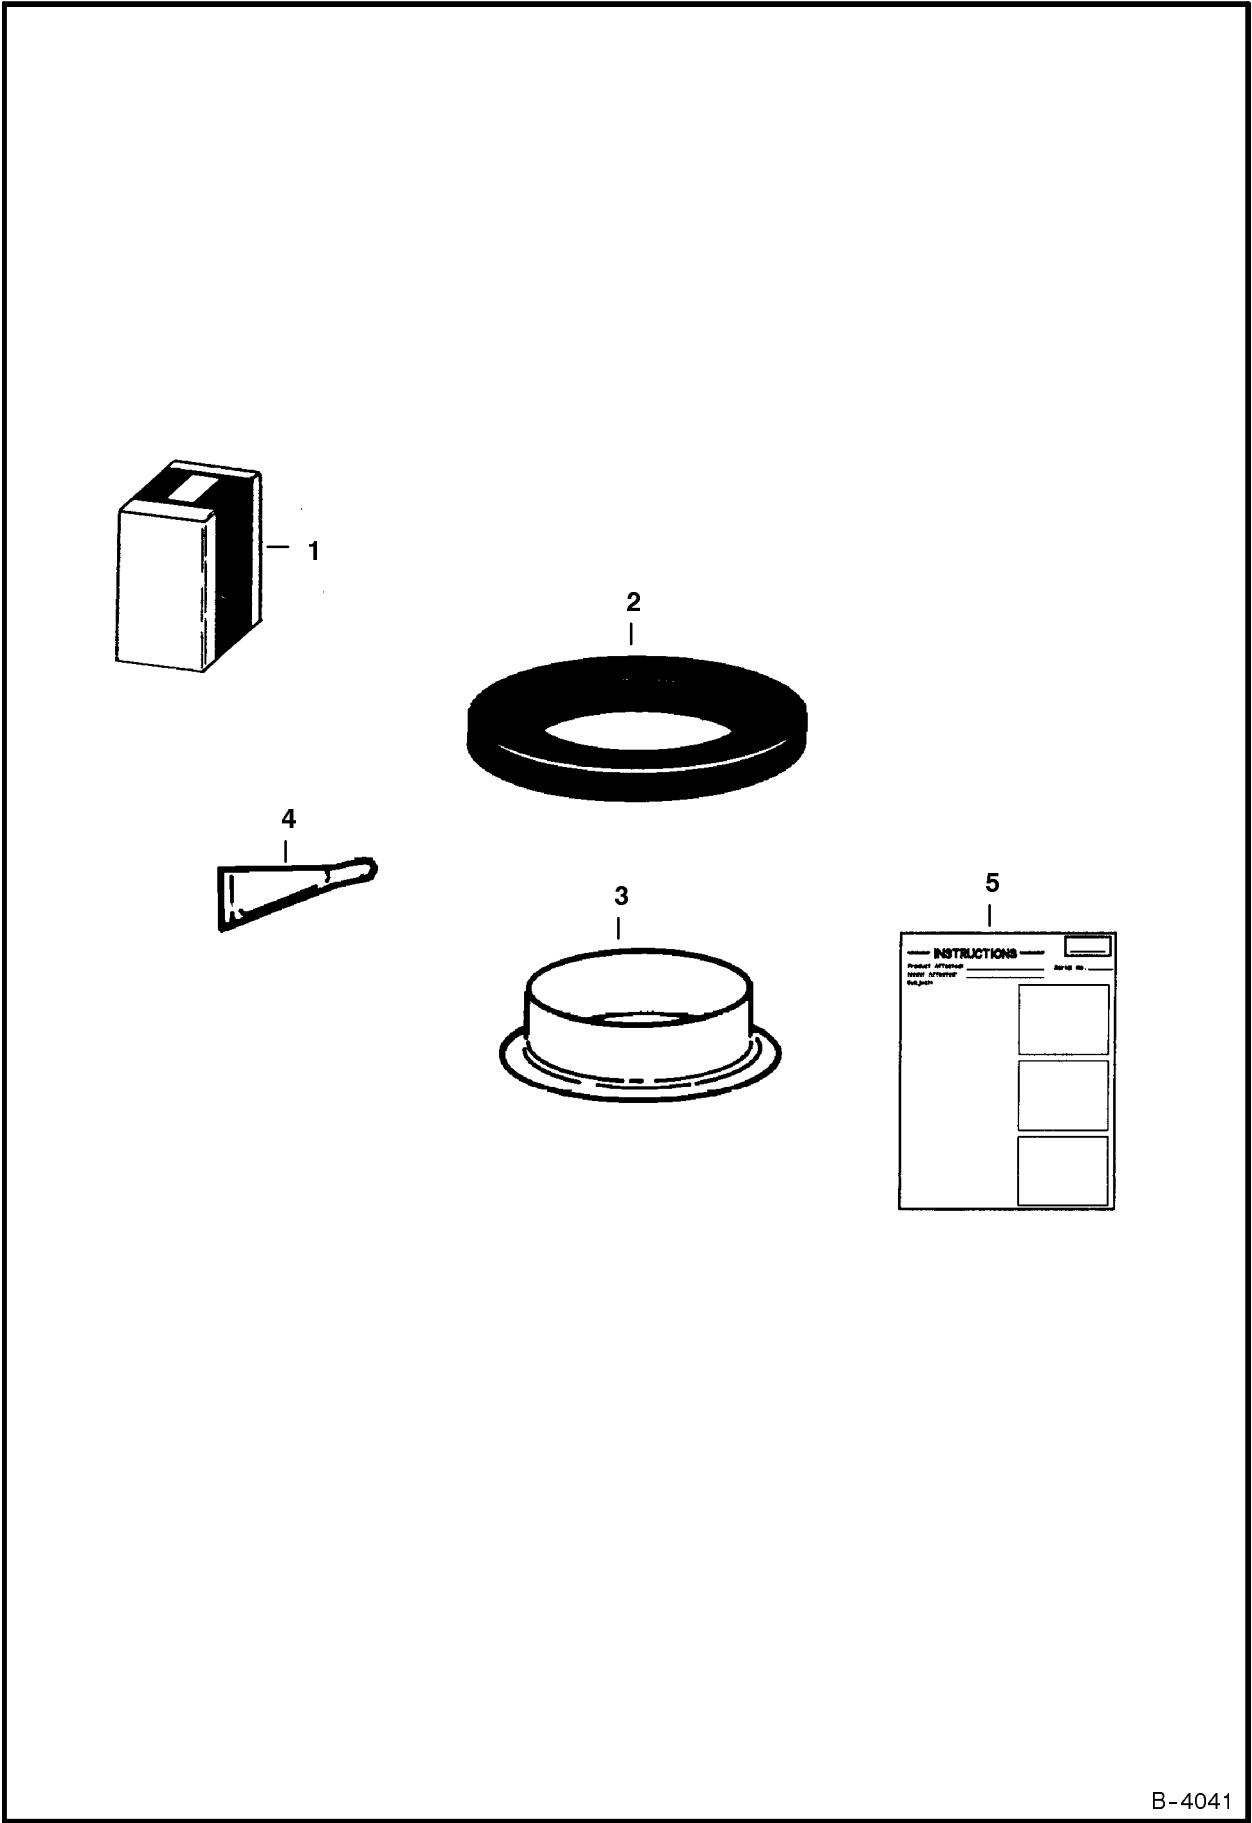


B-4041

AXLE SEAL KIT (Cont'd)

[illegible]

BACK-UP ALARM

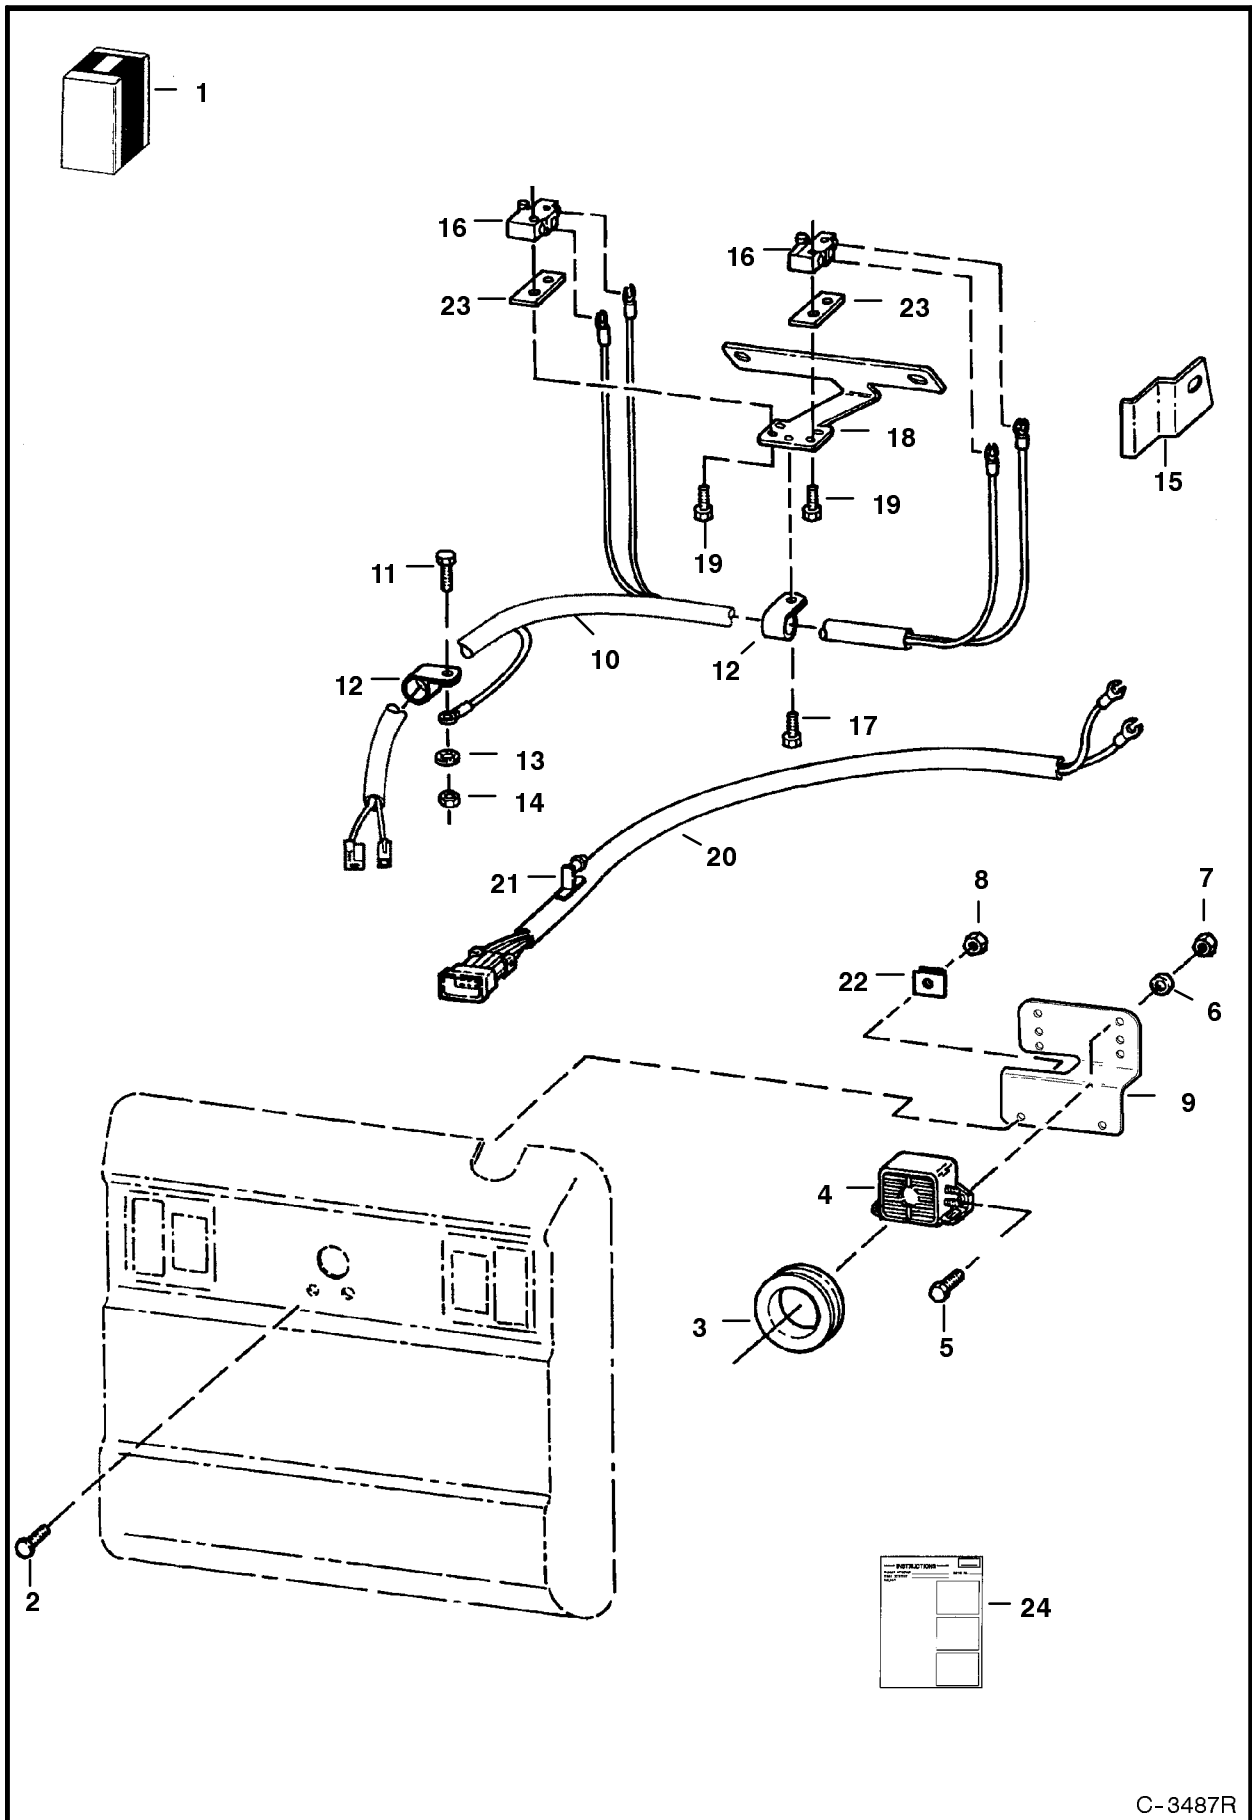


C-3487R

BACK-UP ALARM (Cont'd)

[illegible]

BEACON

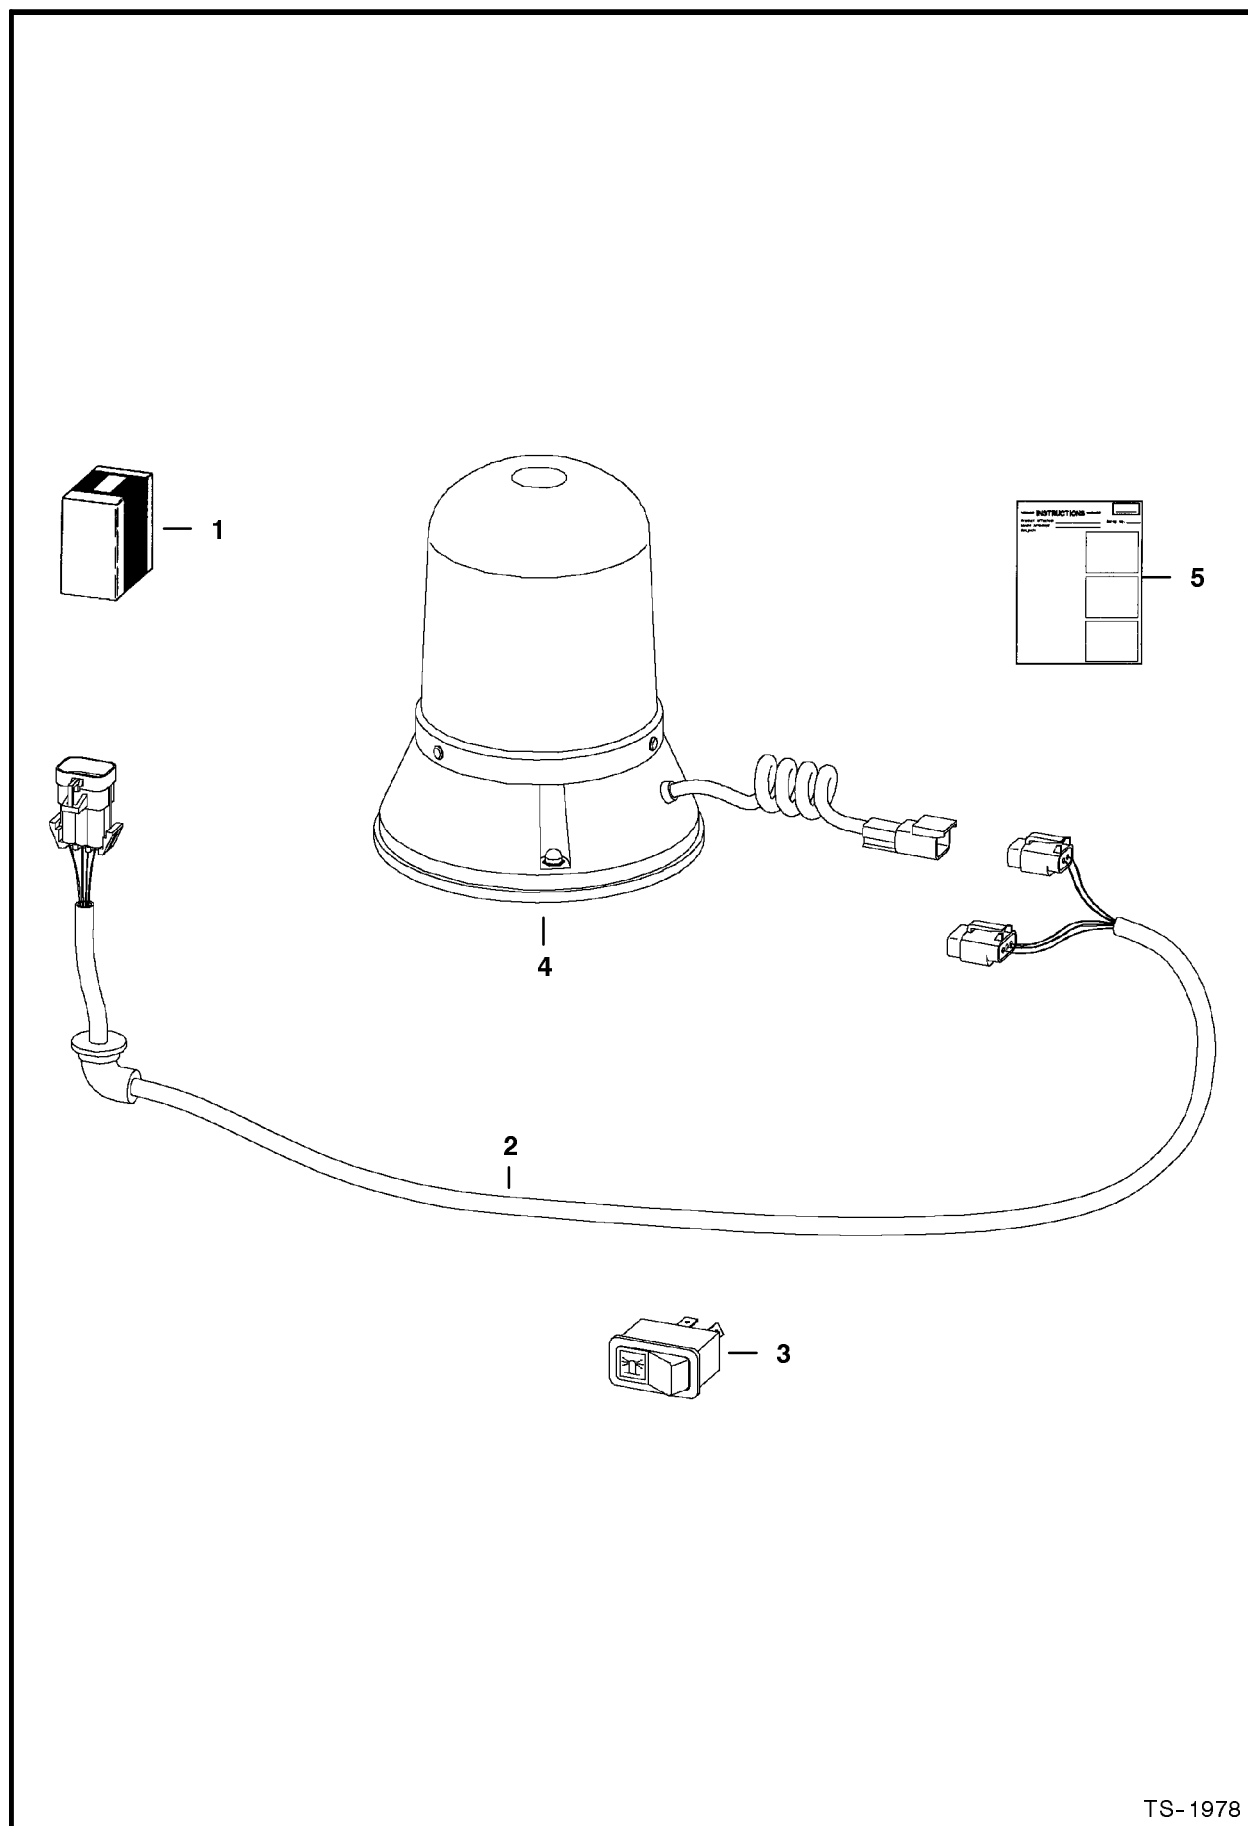


TS-1978

BEACON (Cont'd)

[illegible]

BLOCK HEATER (Engine)

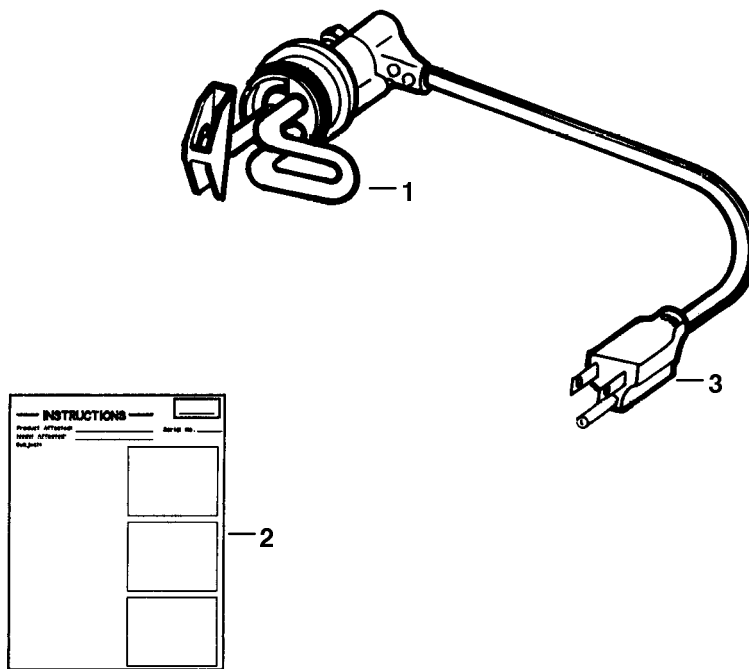


B-12299

BLOCK HEATER (Cont'd) (Engine)

[illegible]


BOB-TACH LEVERS
(For Use W/Industrial Grapple Fork)

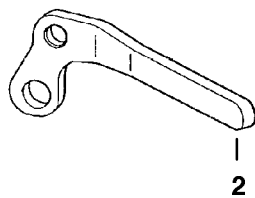

TS-1019

[illegible]

BUCKET POSITIONING VALVE KIT

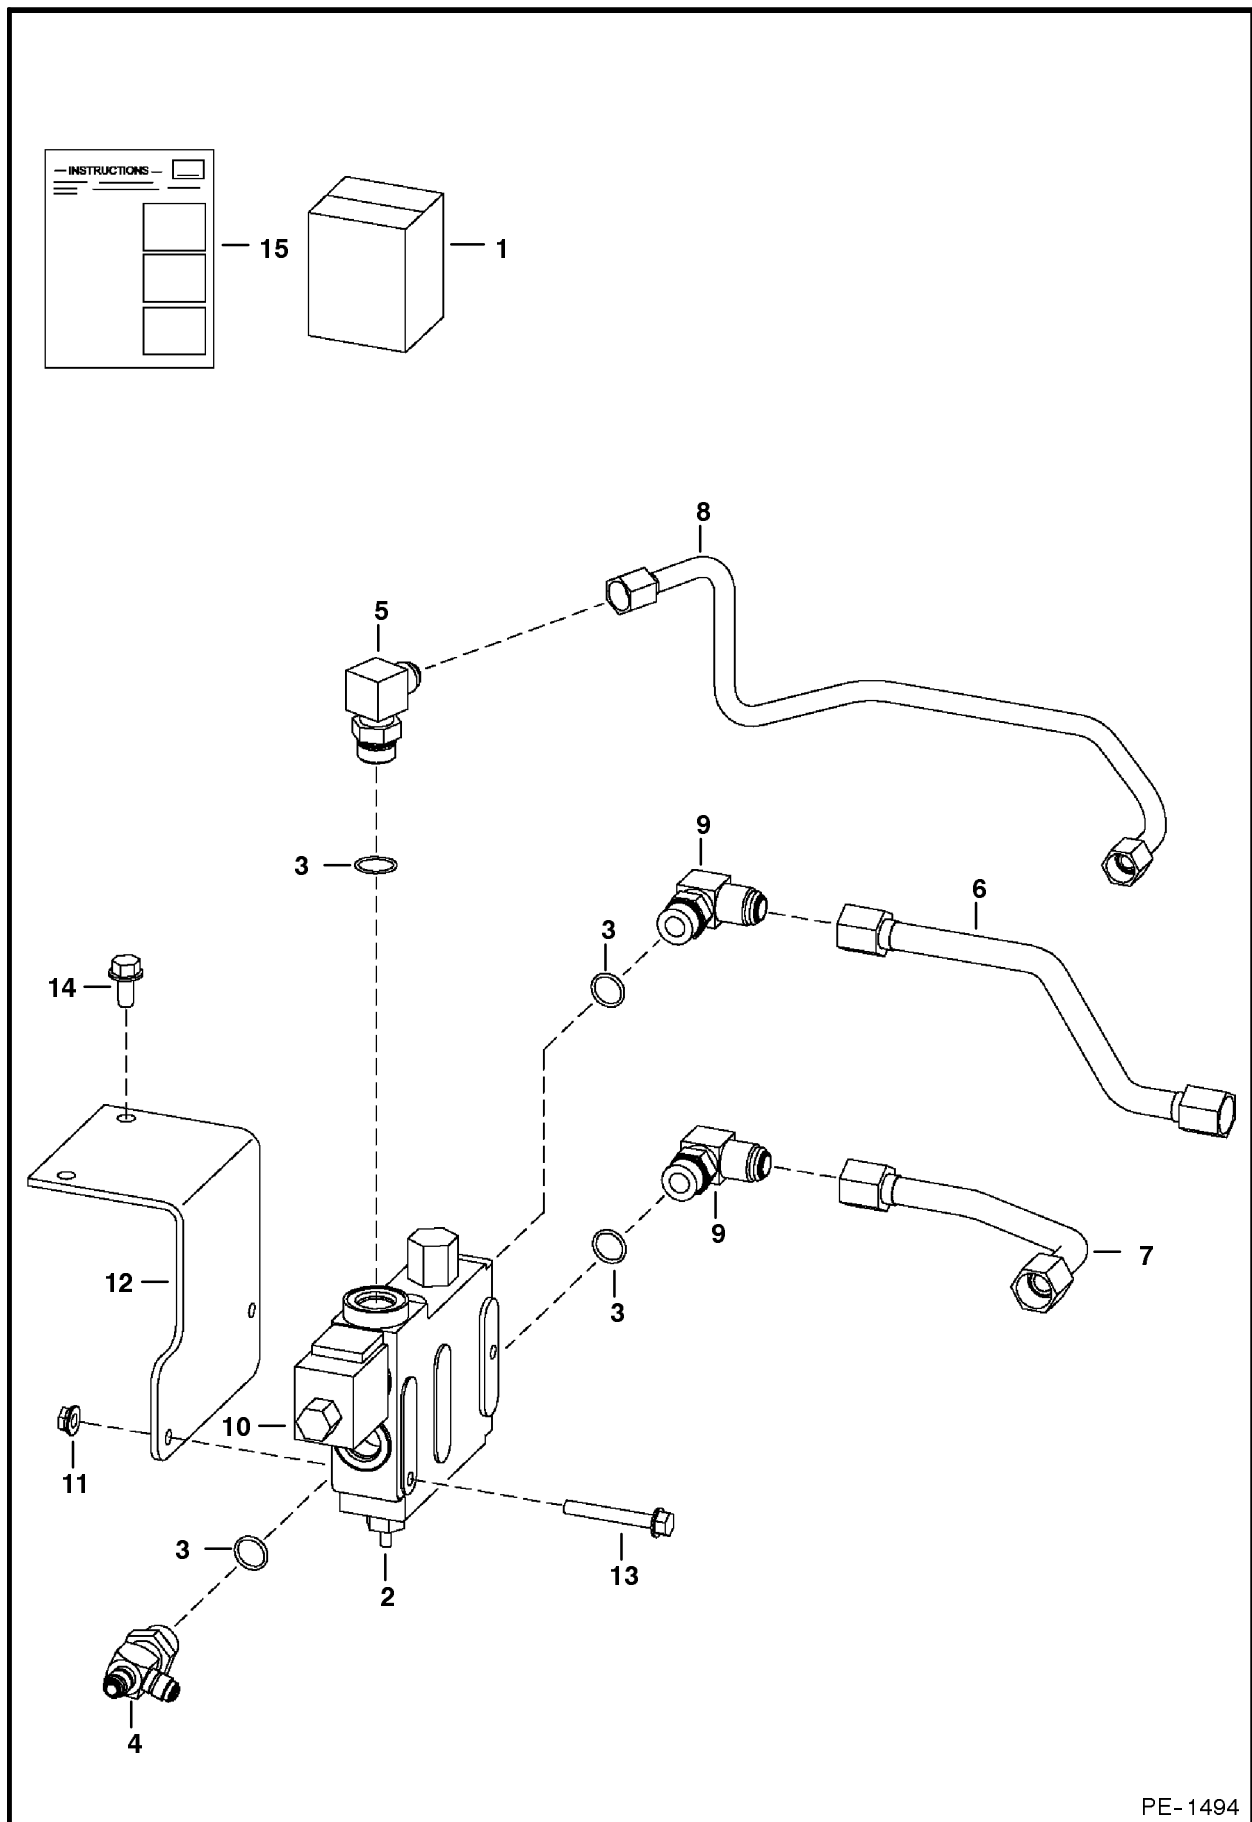


PE-1494

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

[illegible]

*** BUCKET POSITIONING VALVE KIT**

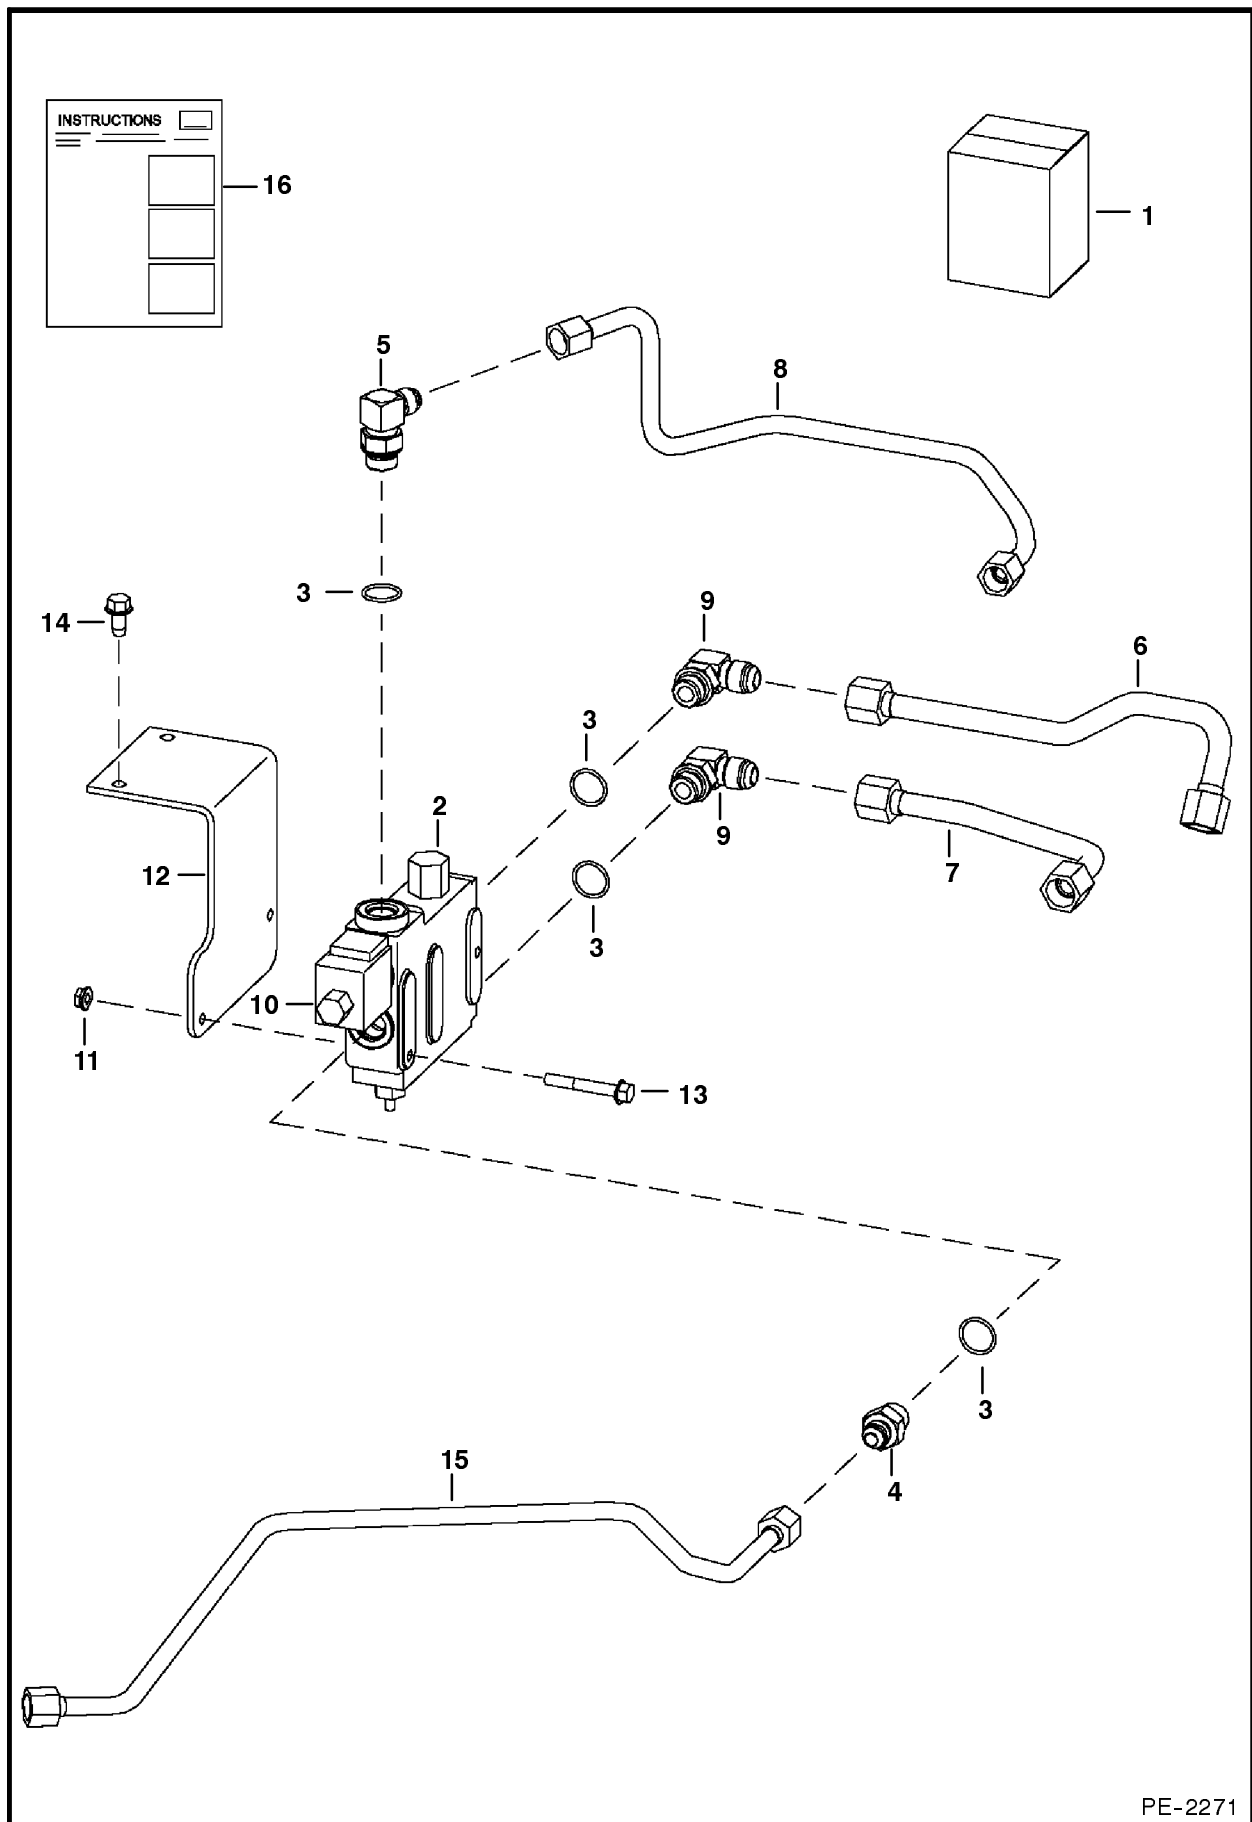


PE-2271

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

[illegible]

BUCKET POSITIONING VALVE

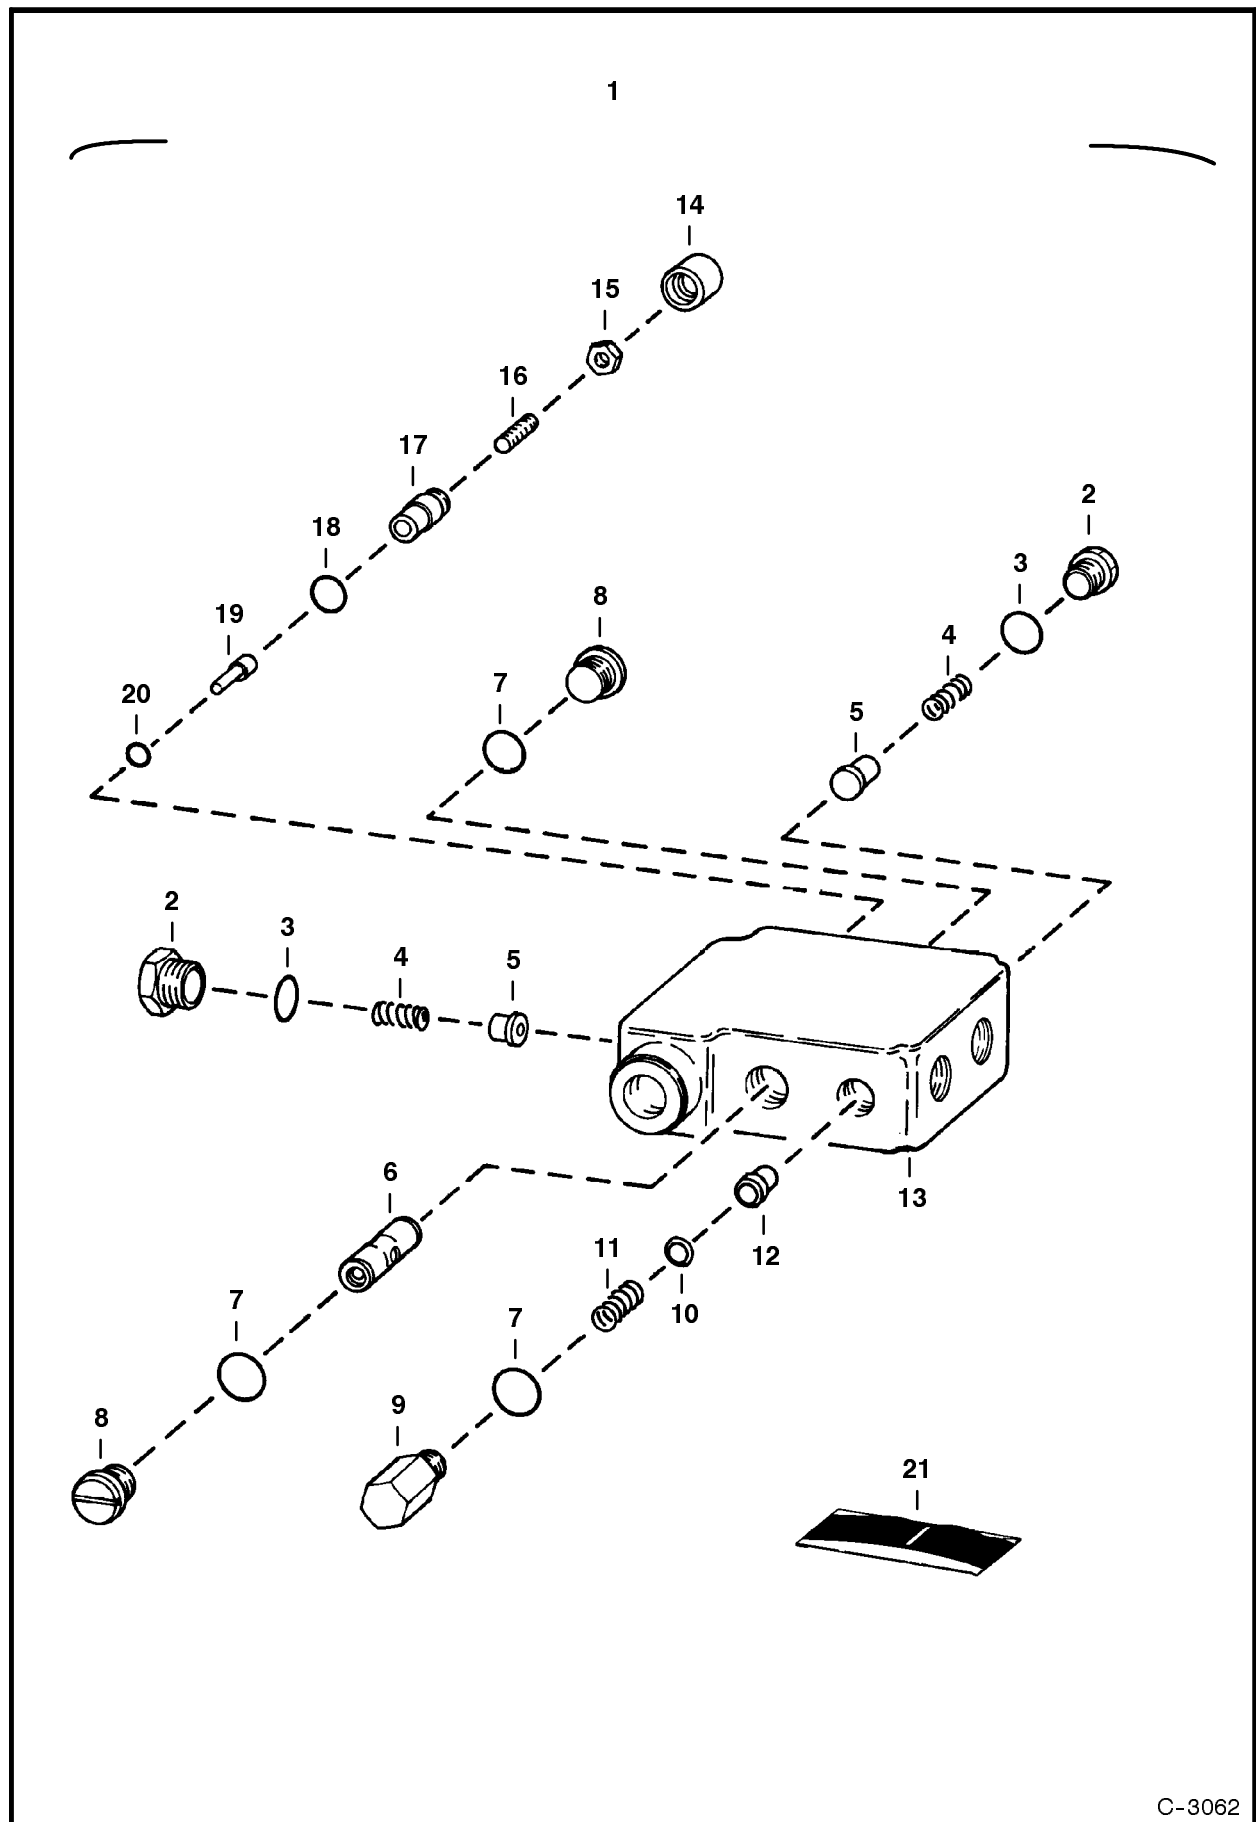


C-3062

BUCKET POSITIONING VALVE (Cont'd)

[illegible]

CAB DOOR

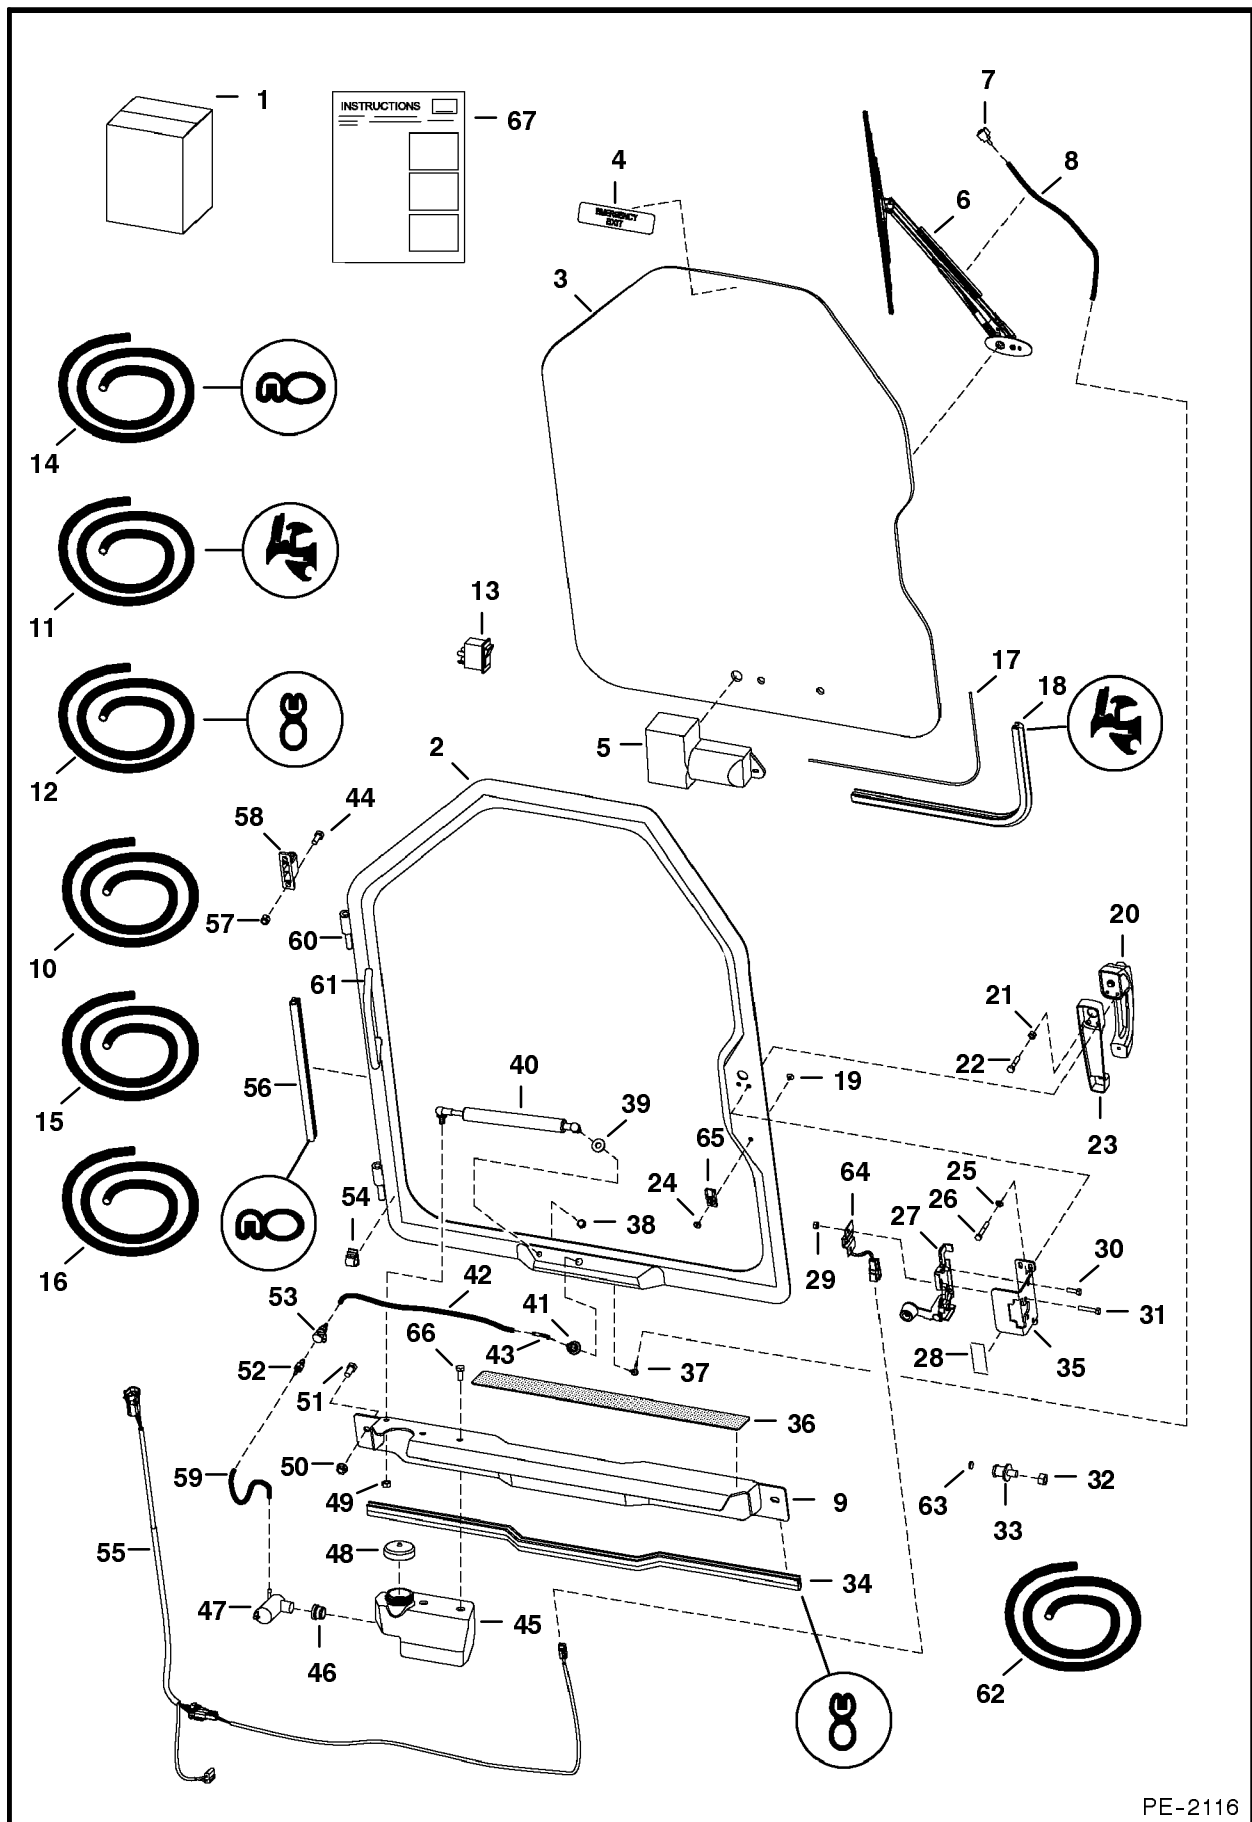


PE-2116

CAB DOOR (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6730822	KIT	door		1
2	6726435	DOOR	W/Ref. 60 & 61		1
3	6729776	WINDOW	.25" thick glass - See Page 294		1
4	6707852	DECAL	exit		1
5	6679476	MOTOR	See Page 294		1
6	6677833	ARM ASSY	See Page 294		1
7	6678920	NOZZLE	wiper arm mount - See Page 294		1
8		HOSE	See Page 294		1
9	6730816	SHIELD			1
10	6676918	HOSE	50'(15,240 mm) long roll - .125" I.D. - black		1
11	6665568	SEAL	bulk - Sold Per Foot		x
12	6513152	SEAL	bulk - Sold Per Foot		x
13	6665707	SWITCH	front wiper		1
14	6675558	SEAL	bulk - Sold Per Foot		1
15	6554149	CORD	bulk - Sold Per Foot		x
16	6676003	HOSE	bulk - Sold Per Foot - .109" I.D. - black		x
17	NAP	CORD	window - 113.3" (2877,8 mm) - Order Ref. 15		1
18	NAP	SEAL	window - 113.3" (2877,8 mm) - Order Ref. 11		1
19	6665321	RIVET	male plastic		1
20	6674667	HANDLE			1
21	6709527	KEY	ign/rear door		1
22	61D-4	NUT			1
23	17C-420	BOLT			1
24	6717146	SPACER	handle		1
25	6665322	RIVET	female plastic		1
26	6EM-60	WASHER			3
27	1CM-640	BOLT			3
28	6674666	LATCH			1
29	6732975	DECAL	door sensor		1
30	4DM-6	NUT			2
31	1CM-620	BOLT			2
32	4CM-635	BOLT			2
33	91D-7	NUT			1
34	6677194	STRIKER BOLT			1
35	NAP	SEAL	threshold - 36" (914,4 mm) - - Order (3) ft. of Ref. 12		1
36	6717369	BRACKET	latch		1
37	6542731	SAFETY TREAD			1
38	6676500	ELBOW			1
39	46D-5	NUT	acorn		1
40	25E-16	WASHER			1
41	6682586	GAS SPRING			1
	6678548	SOCKET	ball		2
	6649244	BALL STUD			2
	6649245	RETAINER	spring		2
	6676499	GROMMET	wiper		1

CAB DOOR (Cont'd)

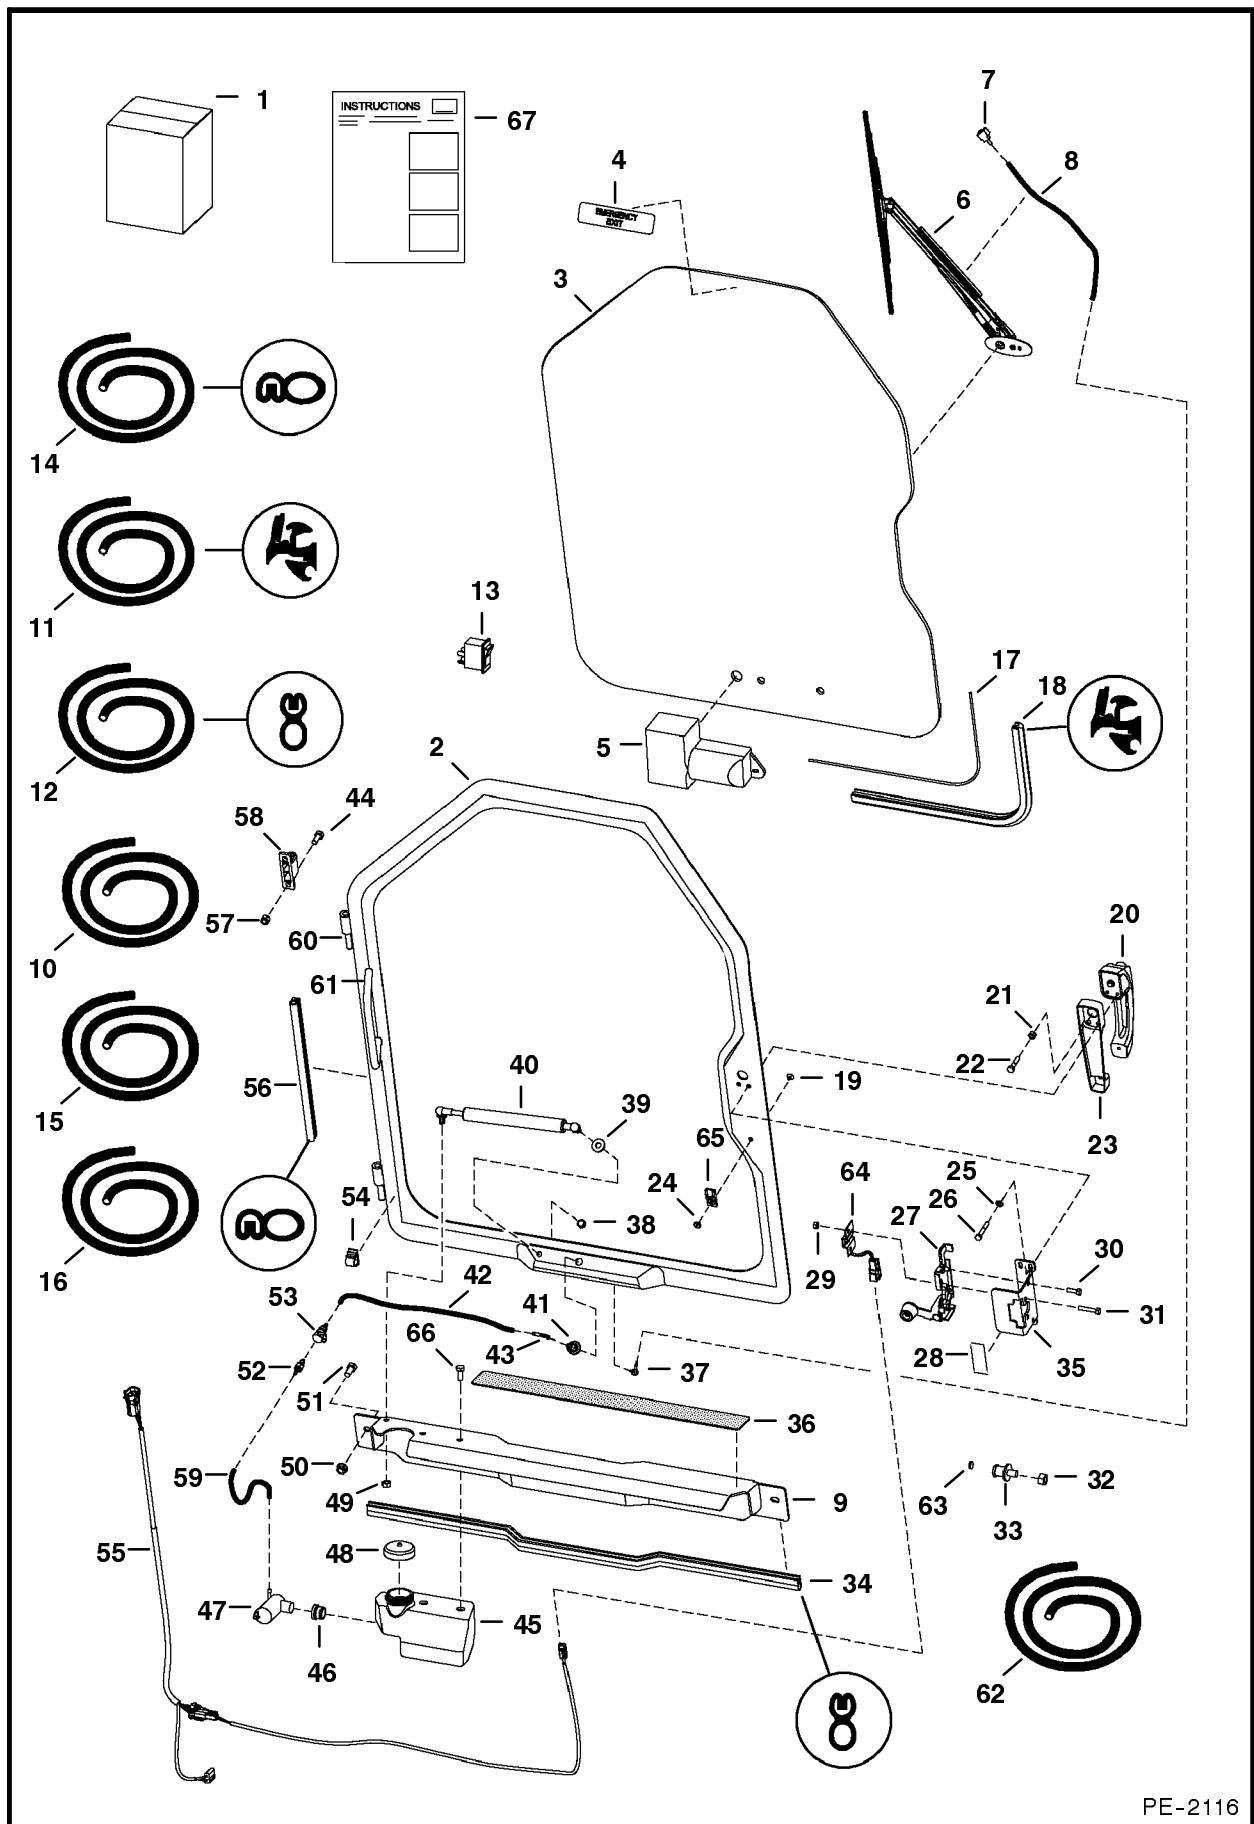


PE-2116

CAB DOOR (Cont'd)

[illegible]

**CAB DOOR
(Window & Wiper)**

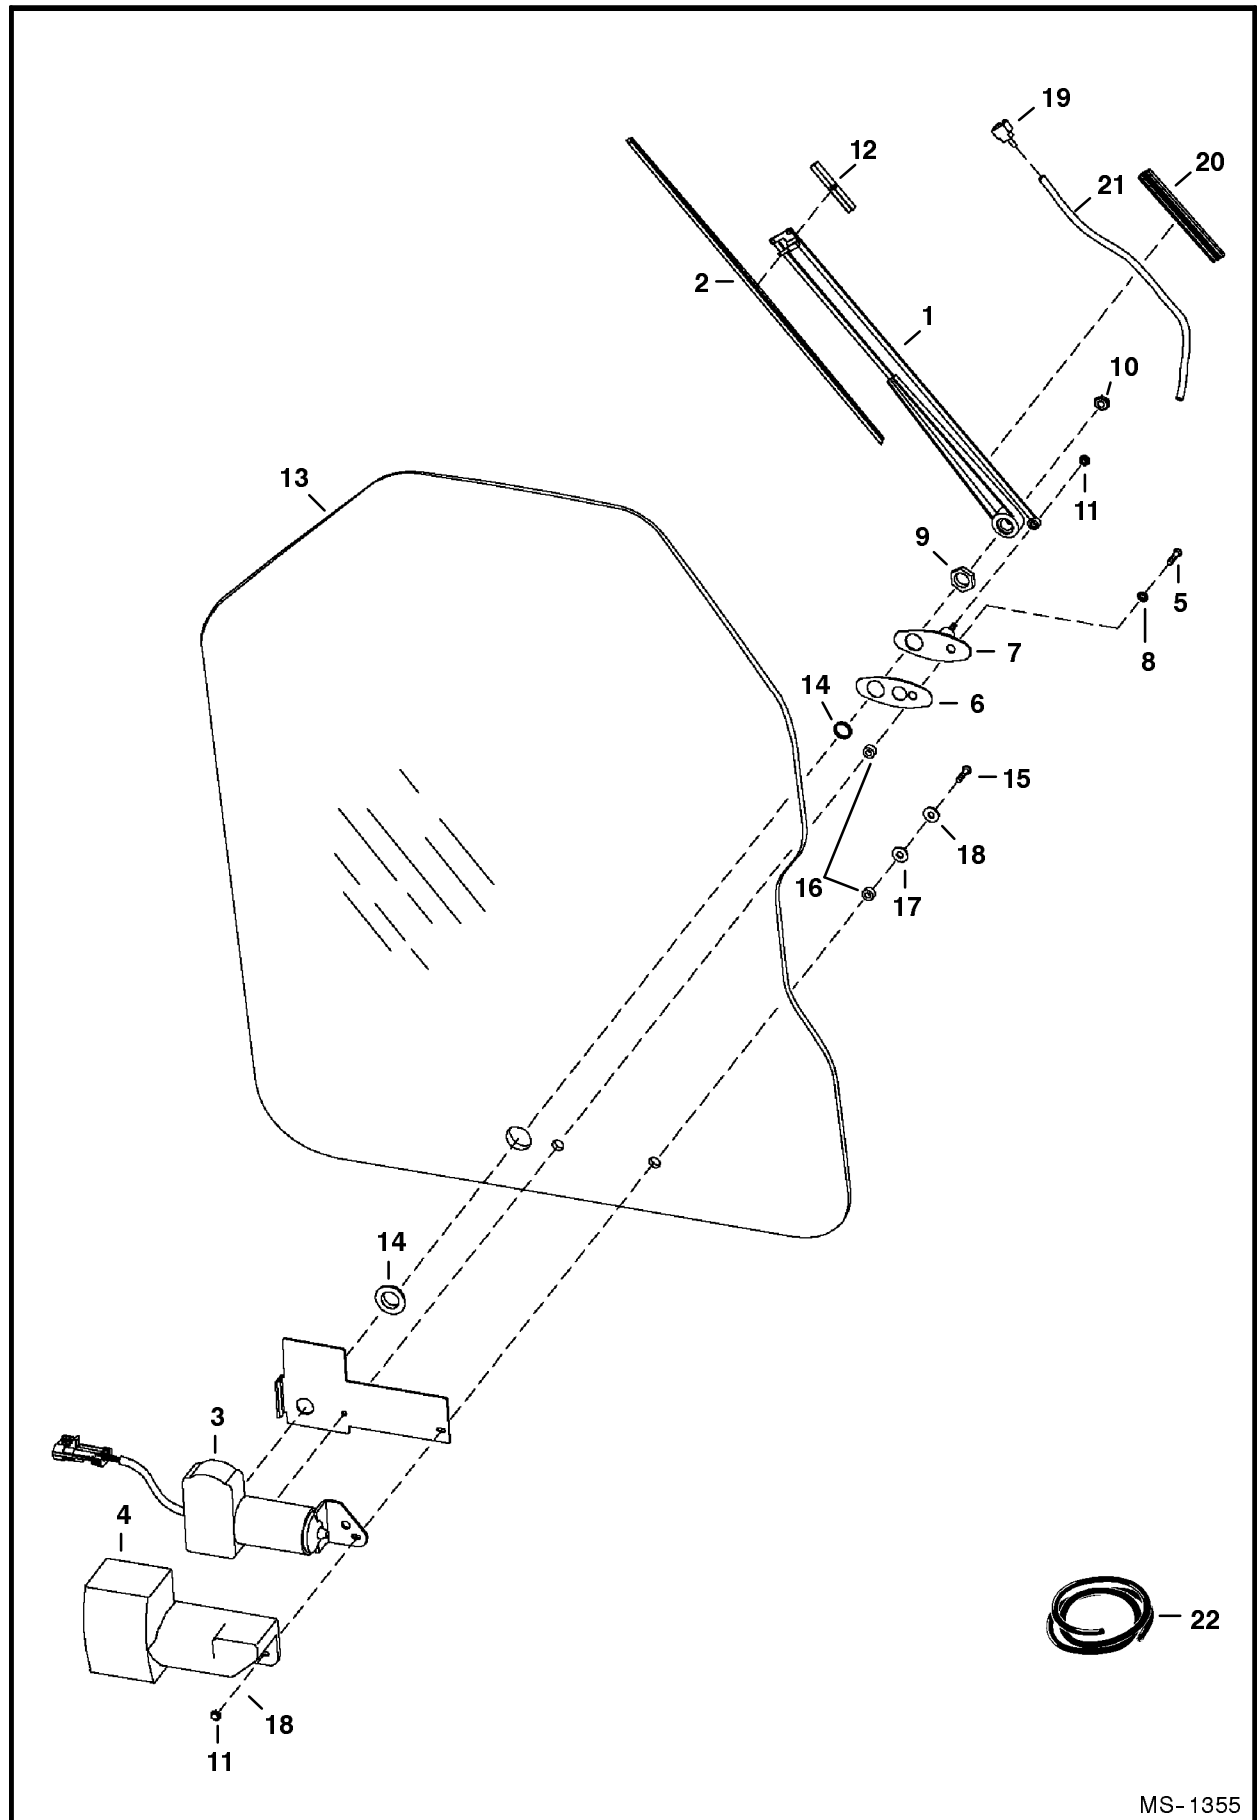


MS-1355

CAB DOOR (Cont'd) (Window & Wiper)

[illegible]

CAB DOOR (Special Applications)

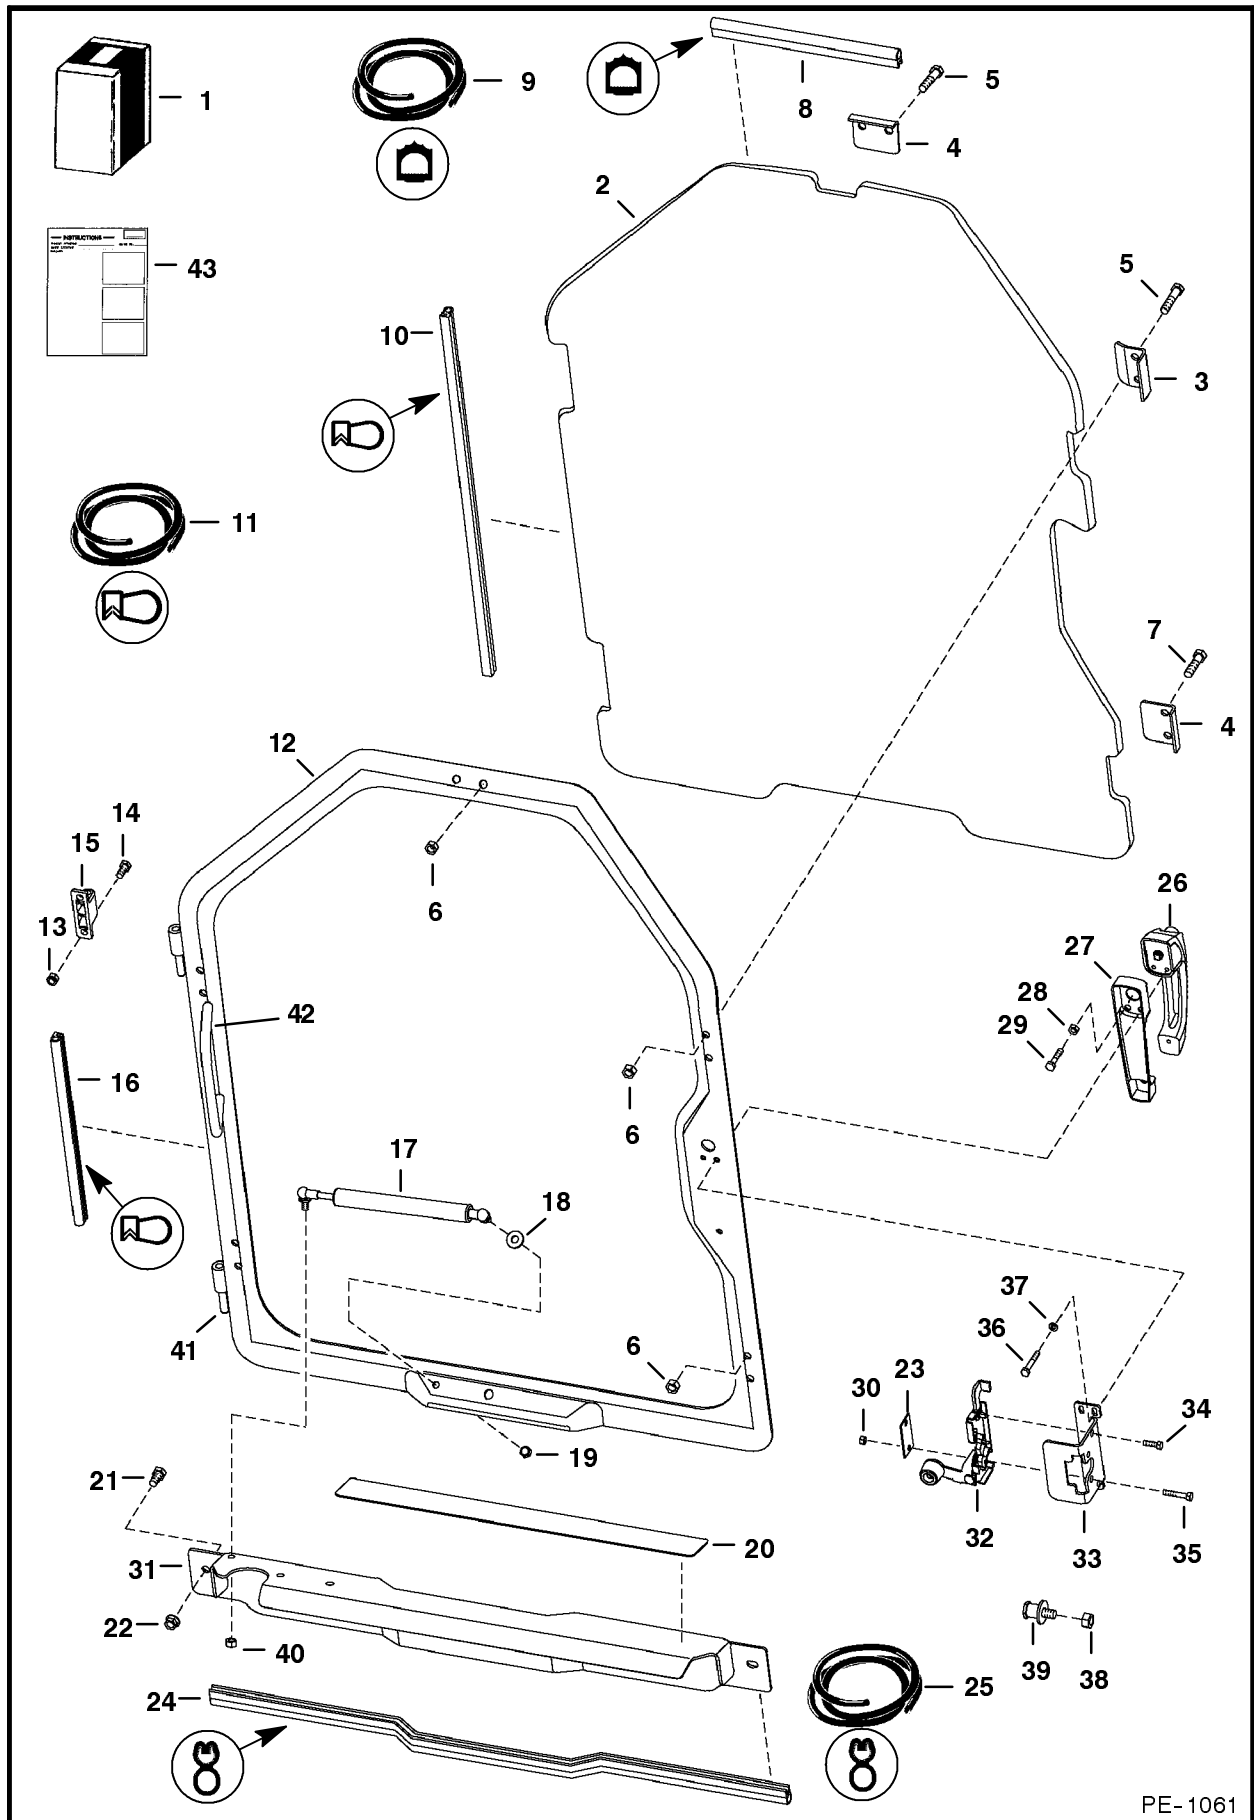


PE-1061

CAB DOOR (Cont'd)
(Special Applications)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6730823	KIT	door		1
2	6732351	WINDOW	.5" thick polycarbonate -W/ top notch		1
3	6725938	CLAMP			2
4	6725937	CLAMP			3
5	17C-628	BOLT			6
6	95D-6	NUT			10
7	17C-624	BOLT			4
8	NAP	SEAL	12"(304,8 mm) long - Order Ref. 9		
9	6670759	SEAL	- Used W/Ref. 2 (W/O notch)		1
10	NAP	SEAL	bulk - Sold Per Foot		x
			115"(2921 mm) long -Order Ref. 11		1
11	6675558	SEAL	bulk - Sold Per Foot		x
12	6726932	DOOR	W/Ref. 41		1
13	59D-5	NUT			4
14	17C-512	BOLT			4
15	6717593	HINGE	base		2
16	NAP	SEAL	127.3"(3233,4 mm) long -		
			Order Ref. 11		1
17	6682586	GAS SPRING			1
	6678548	SOCKET	ball		2
	6649244	BALL STUD			2
	6649245	RETAINER	spring		2
18	25E-16	WASHER			1
19	46D-5	NUT	acorn		1
20	6542731	SAFETY TREAD			1
21	55D-6	NUT			2
22	17C-612	BOLT			2
23	6718520	COVER	latch		1
24	NAP	SEAL	36"(914,4 mm) long -Order Ref. 25		1
25	6513152	SEAL	bulk - Sold Per Foot		x
26	6674667	HANDLE			1
	6709527	KEY	ign. & rear door		1
27	6717146	SPACER	handle		1
28	61D-4	NUT			1
29	17C-420	BOLT			1
30	4DM-6	NUT			2
31	6730816	SHIELD			1
32	6674666	LATCH			1
33	6717369	BRACKET	latch		1
34	1CM-620	BOLT			2
35	1CM-635	BOLT			2
36	1CM-640	BOLT			3
37	6EM-60	WASHER			3
38	91D-7	NUT			1
39	6654170	STRIKER BOLT			1
40	61D-5	NUT			1
41	6718376	HINGE	door		2
42	6718521	HANDLE	grab		1
43	6901013	INSTRUCTIONS			1


CAB DOOR (Lexan Window)

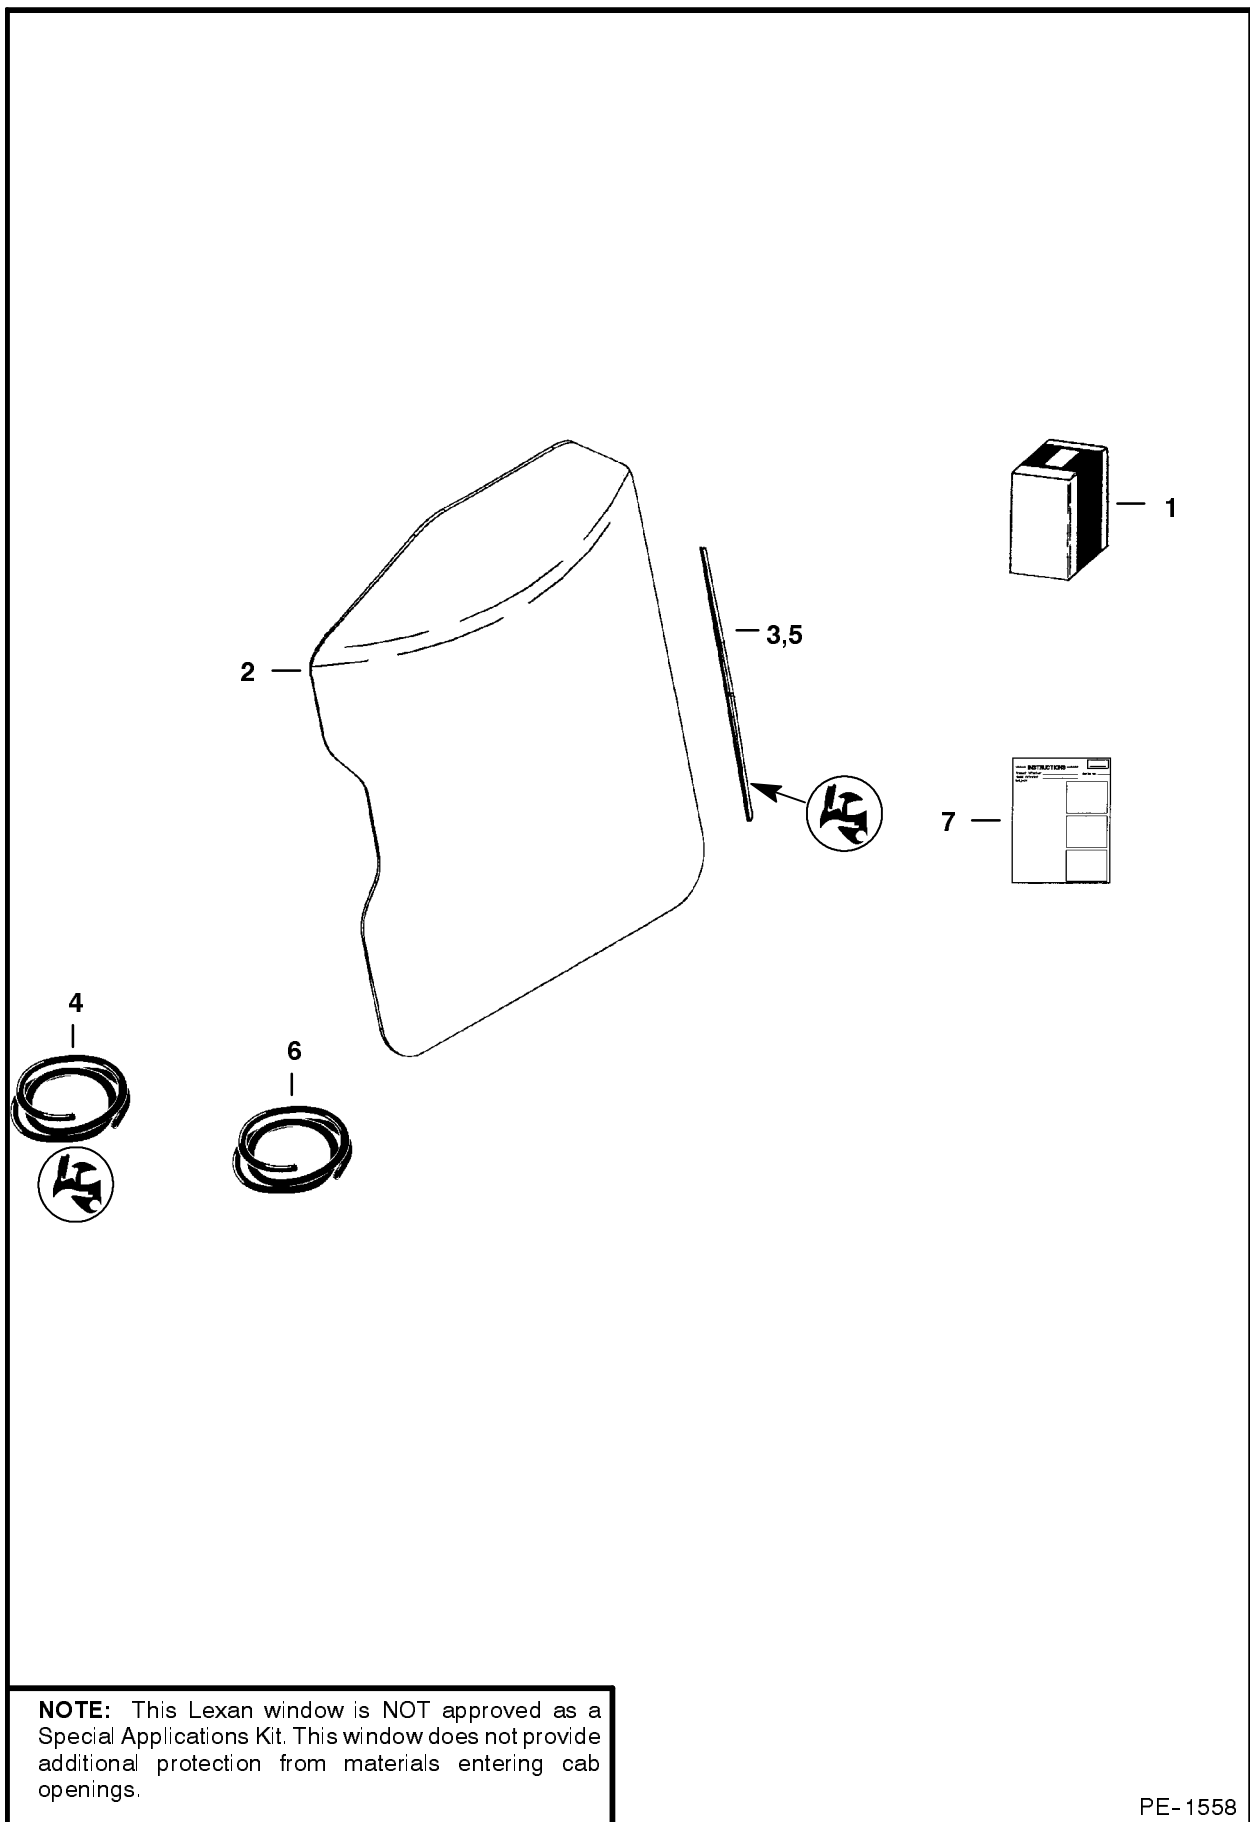

CAB DOOR (Cont'd) (Lexan Window)

[illegible]

**CAB ENCLOSURE
(Envelope)**

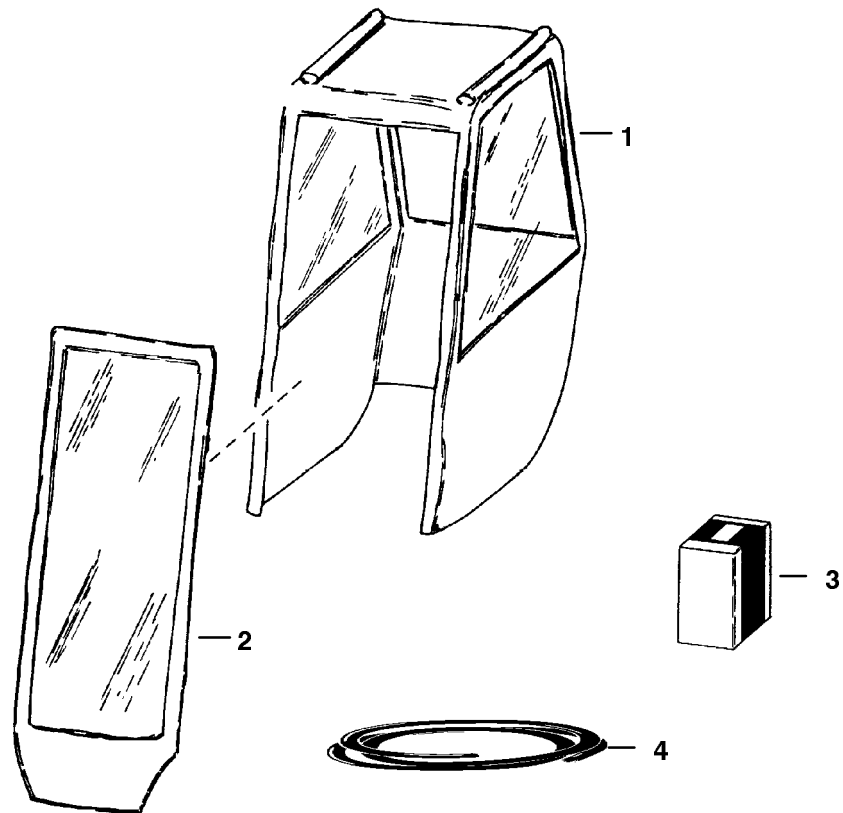


B-1413

CAB ENCLOSURE (Cont'd)
(Envelope)

[illegible]

CAB ENCLOSURE

NOTE: Order Cab Enclosure Kit from Gwinner SALES #6719666.
Order Special Applications Kit from Gwinner SALES # 6719326.

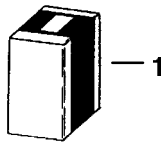


B-17100

CAB ENCLOSURE (Cont'd)

[illegible]

CAB WINDOWS

NOTE: Order Top & Rear Window Kit from Gwinner Sales # 6718805.
Order Side Window Kit from Gwinner Sales # 6718806.

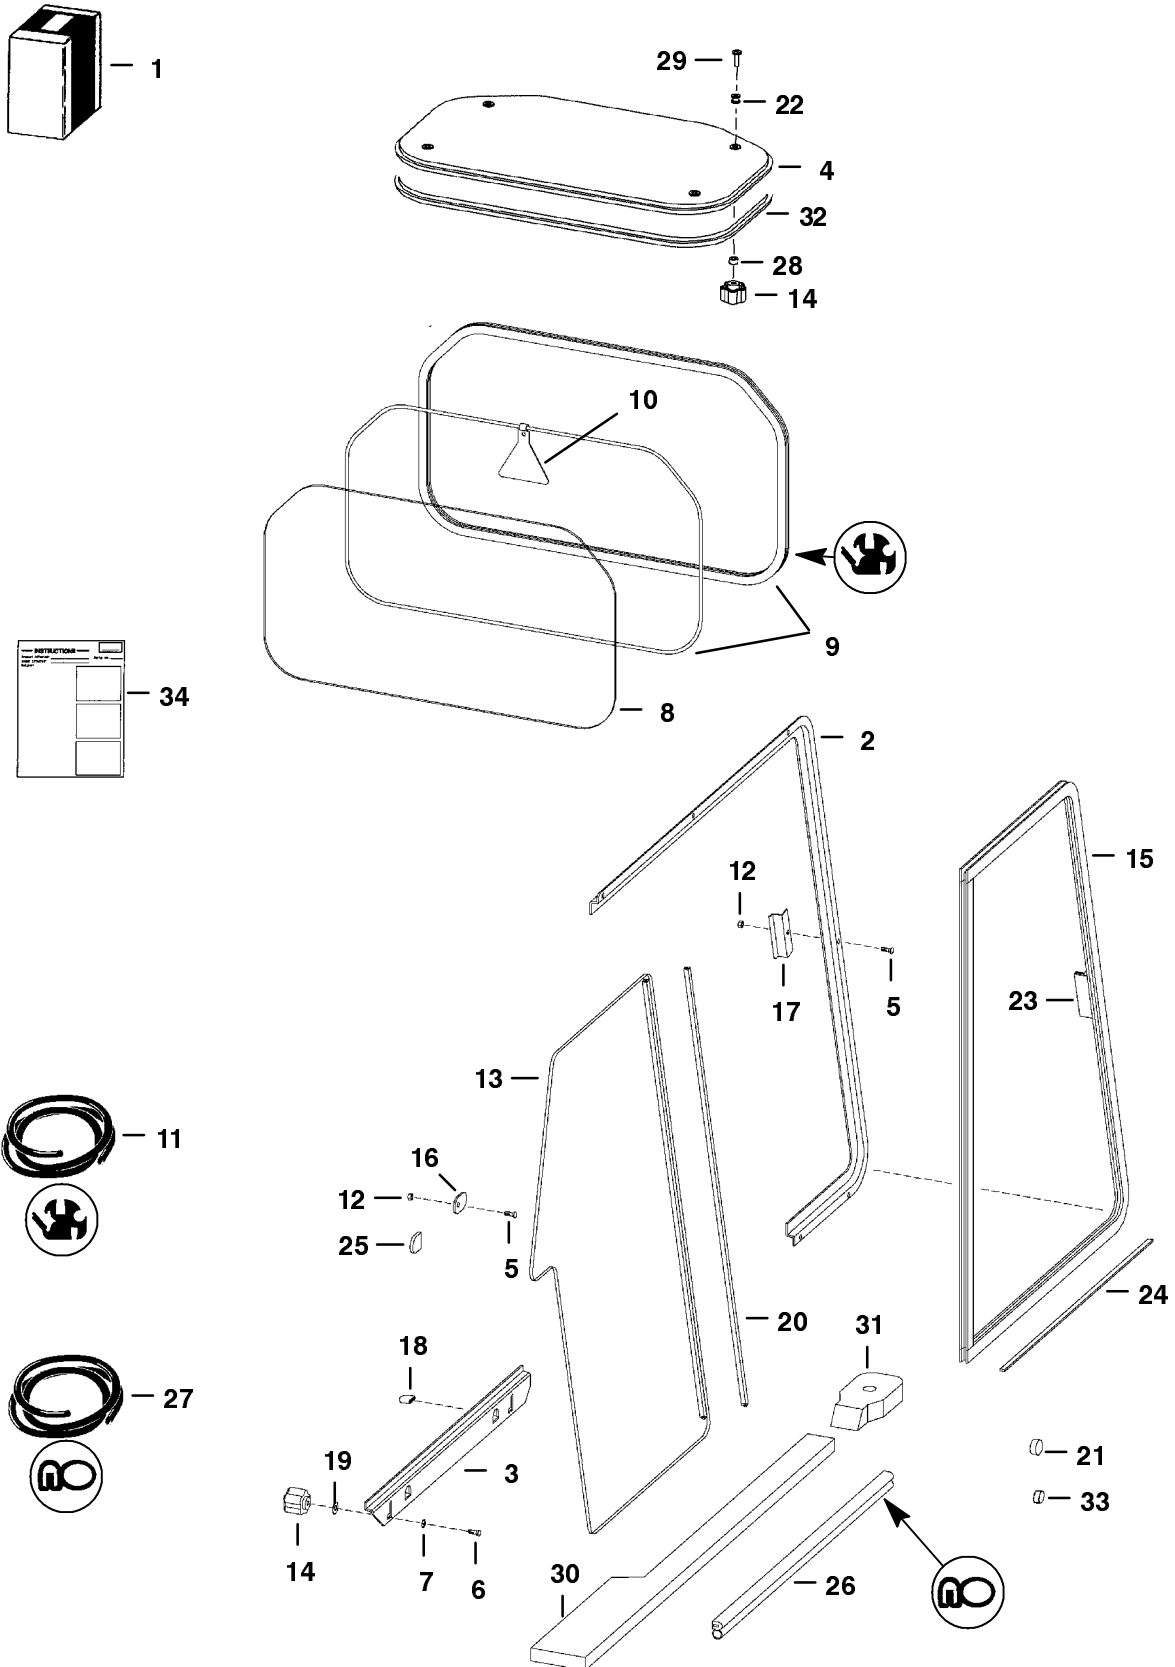


MS-1340

CAB WINDOWS (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	SALES	KIT	Top & Rear Window - SEE NOTE		1
	SALES	KIT	Side Window - SEE NOTE		1
2	6717870	TRACK	L.H. side		1
	6717872	TRACK	R.H. side		1
3	6717871	TRACK	L.H. bottom		1
	6717873	TRACK	R.H. bottom		1
4	6728629	WINDOW	assy. - lexan - W/Ref. 22 & 32		1
5	10C-410	BOLT	carriage		18
6	10C-416	BOLT	carriage		4
7	25E-14	WASHER			4
8	6717874	WINDOW	rear		1
	6719413	WINDOW	rear - lexan		1
9	NAP	EXTRUSION	75.75" (1924 mm) long -		
			Order Ref. 11		x
	NAP	CORD	75.75" (1924 mm) long -		
			Order Ref. 11		x
10	6731478	EXIT TAG			1
11	6675387	EXTRUSION	bulk - Sold Per Foot		x
	6554149	CORD	bulk - Sold Per Foot		x
12	59D-4	NUT			18
13	6674520	WINDOW	L.H. rear - W/Ref. 20		1
	6674522	WINDOW	R.H. rear - W/Ref. 20		1
14	6681614	KNOB			8
15	6674519	WINDOW	L.H. front - W/Ref. 23		1
	6674521	WINDOW	R.H. front - W/Ref. 23		1
16	6719063	STOP			2
17	6719037	STRIKER			2
18	6719065	COVER	tab		4
19	6675212	RETAINER	bolt		4
20	6675833	SEAL	rear window dual wiper W/tape		2
21	6657719	PLUG	for .75" dia. hole		2
22	6675545	GROMMET			4
23	6678283	HANDLE	W/tape & instructions		2
24	6676927	FELT STRIP	20.38" (517,7 mm) long		2
25	6677198	CAP	tab		2
26	NAP	SEAL	24" (609,6 mm) long -		
			Order Ref. 27		1
27	6555351	SEAL	bulk - Sold Per Foot		x
28	6664085	BUSHING	nylon		4
29	91G-420	BOLT			4
30	6729010	SEAL	L.H. - cab to main frame - foam		1
	6729009	SEAL	R.H. - cab to main frame - foam		1
31	6729011	SEAL	cab mount		2
32	NAP	SEAL	Order Ref. 4		1
33	6677973	PLUG	for .22" dia. hole		2
34	6901013	INSTRUCTIONS			1
	6900853	INSTRUCTIONS	Side Windows		1

CAB WINDOWS (Rear Window Removal Kit)

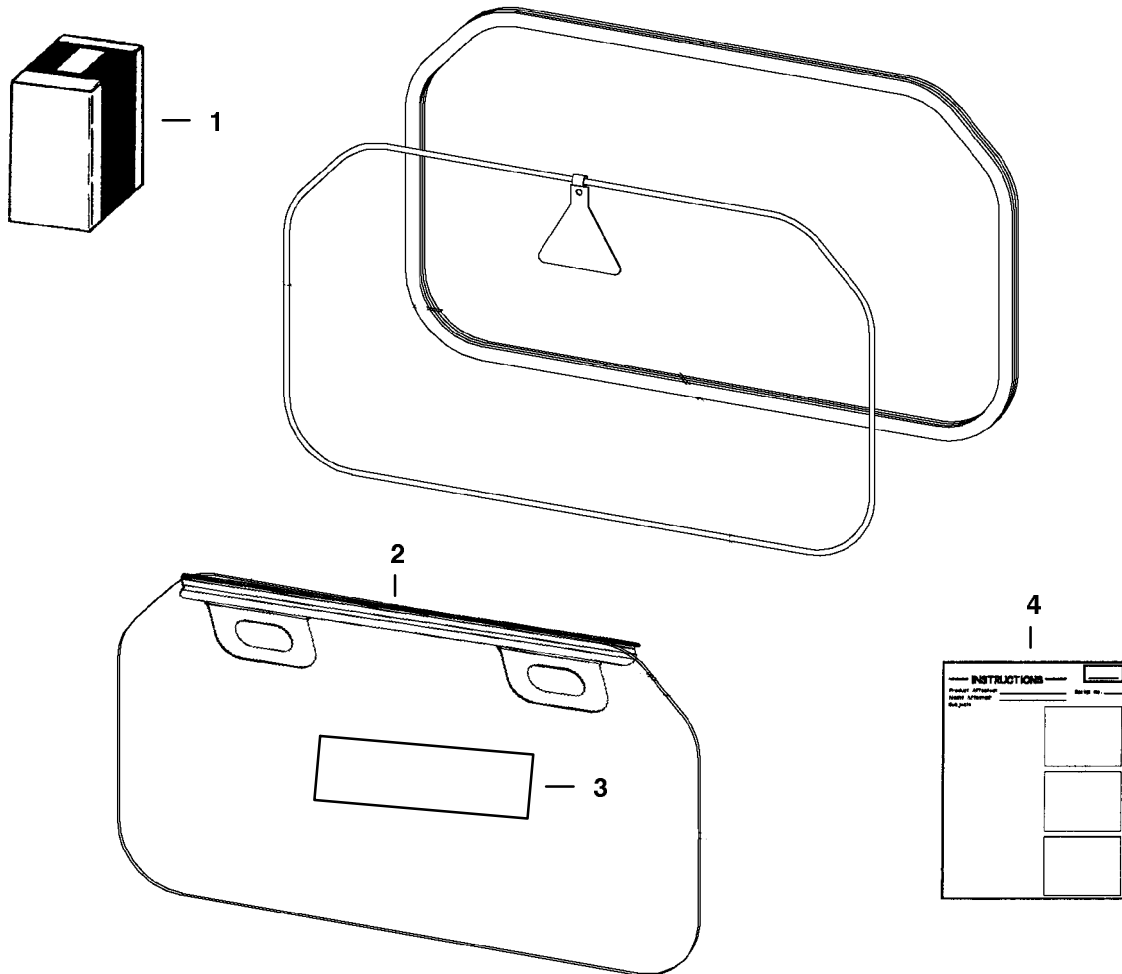


TS-2006

[illegible]

COUNTERWEIGHT KIT (Front Axle)

NOTE: Order Counterweight Kit from Gwinner Sales # 6704284.

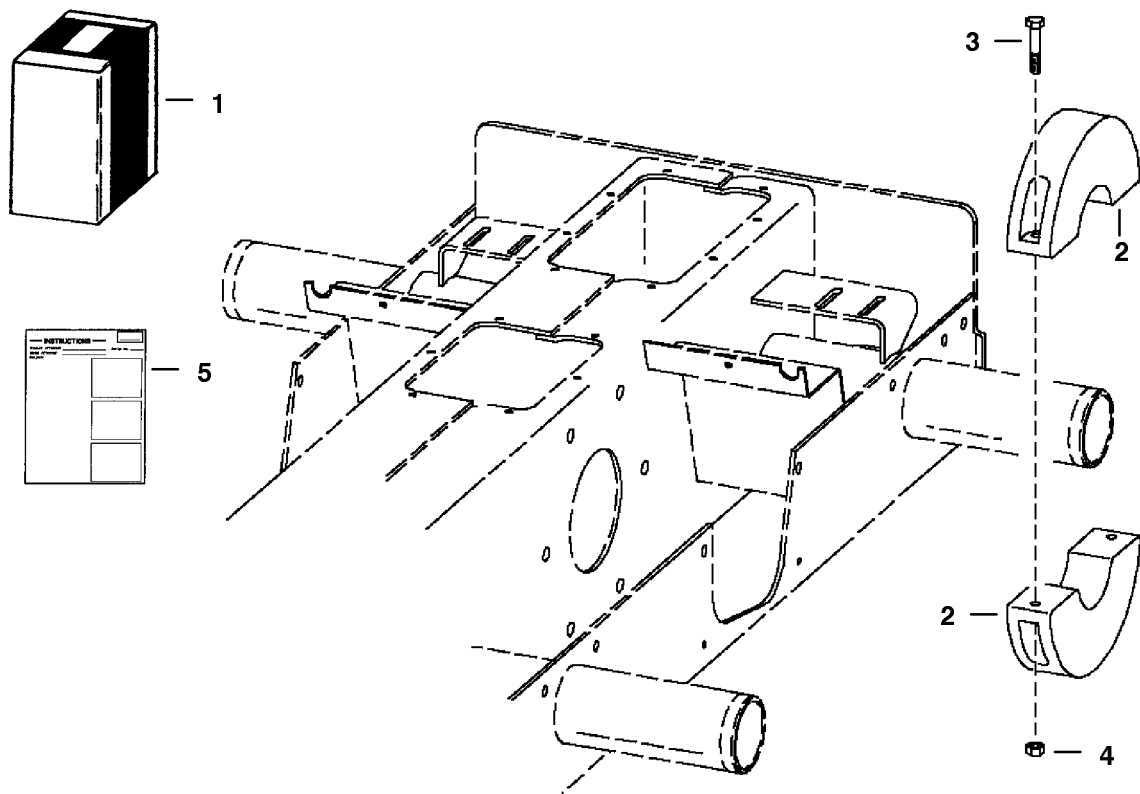


TS-1020

COUNTERWEIGHT KIT (Cont'd)

[illegible]

COUNTERWEIGHT KIT (1850 lb.)

NOTE: Order Counterweight Kit from Gwinner Sales # 6714932.

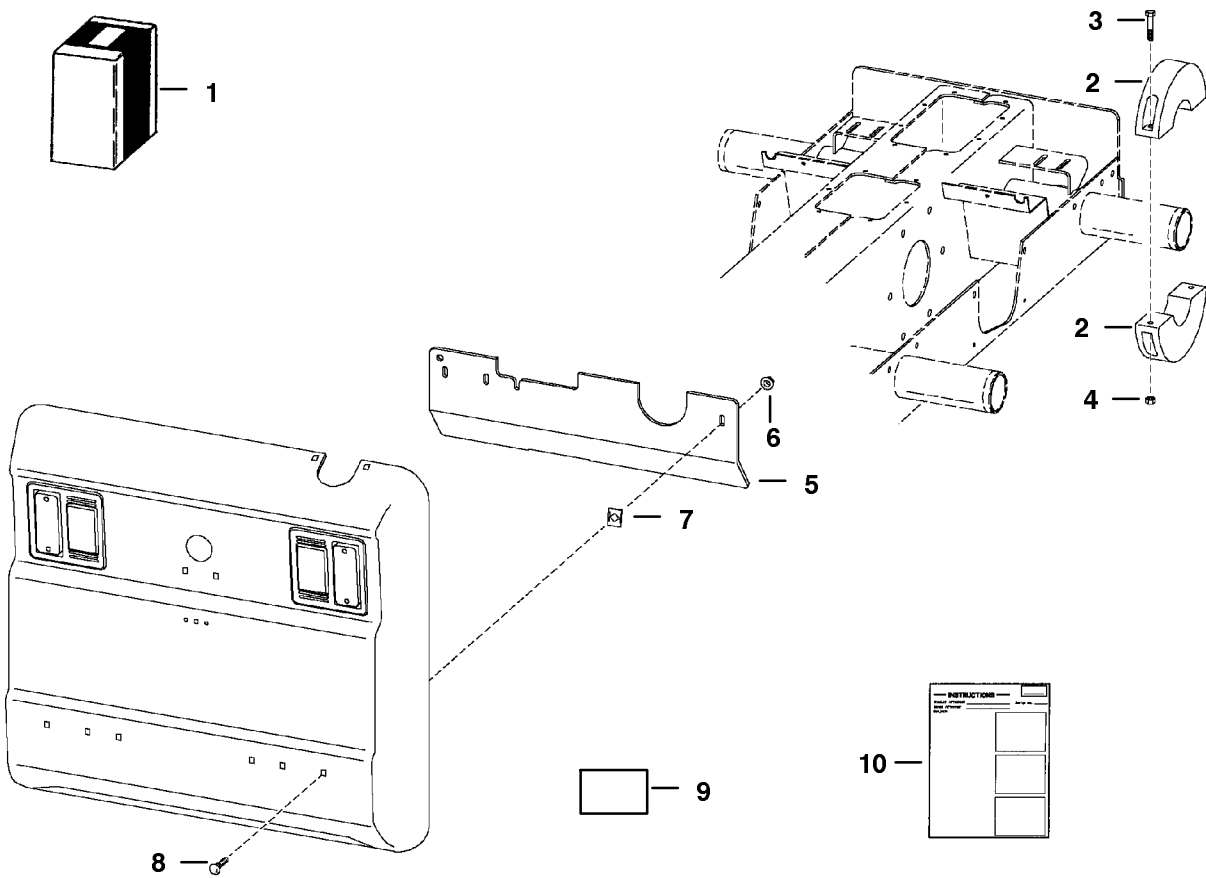


B-17013

COUNTERWEIGHT KIT (Cont'd)

[illegible]

DECALS

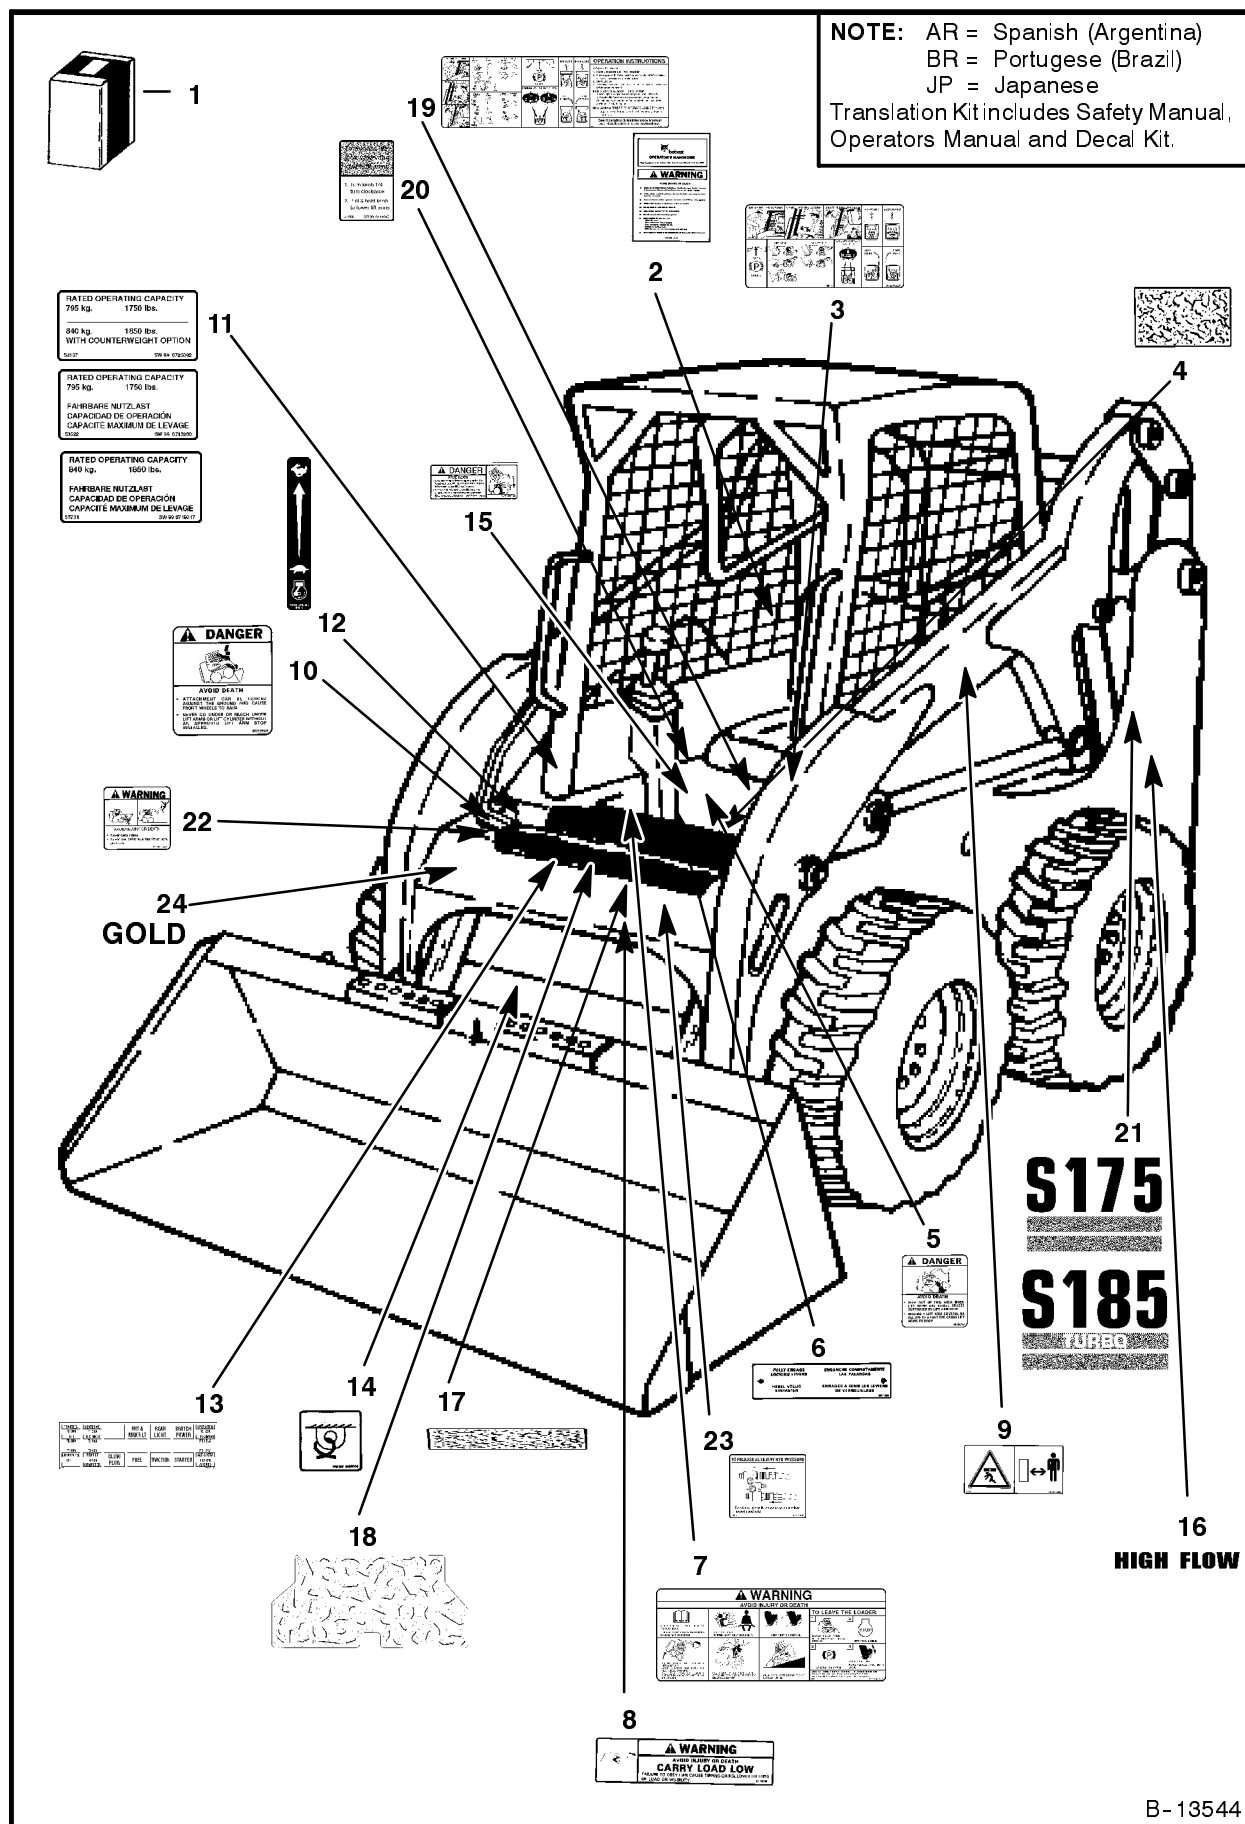


DECALS (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6902296	KIT	decal		1
	6734551AR	KIT	decal - SEE NOTE - S175		1
	6734551BR	KIT	decal - SEE NOTE - S175		1
	6734551JP	KIT	decal - SEE NOTE - S175		1
	6734555AR	KIT	decal - SEE NOTE - S185		1
	6734555BR	KIT	decal - SEE NOTE - S185		1
	6734555JP	KIT	decal - SEE NOTE - S185		1
	6734550AR	KIT	translation - SEE NOTE - S175		1
	6734550BR	KIT	translation - SEE NOTE - S175		1
	6734554AR	KIT	translation - SEE NOTE - S185		1
	6734554BR	KIT	translation - SEE NOTE - S185		1
2*	6737783	KIT	handbook - W/Wire Rope - Not in		
	6558309	WIRE ROPE	Decal Kit - Was 6719563 [A] 33" (838,2 mm) long - bulk - Sold Per Foot - Also Order (2) of		1
	6558310	SLEEVE	6558310		x
	17C-512	BOLT	wire rope		2
	61D-5	NUT			1
	84G-3112	BOLT			1
3	6727926	DECAL	operating - foot pedal		1
	6727926	DECAL	operating - ACS		1
4	6554100	SAFETY TREAD	6" x 6" (152,4 mm x 152,4 mm)		4
5*	6702301	DECAL	danger - Was 6579639 [A]		1
6	6561383	DECAL	Bob-tach		1
7	6728539	DECAL	warning		1
8	6579528	DECAL	carry load low		1
9	6713507	DECAL	stay clear - European -Not in Kit		2
10*	6702302	DECAL	danger - Was 6579509 [A]		1
11	6725092	DECAL	load 1750 -1850 W/counterweights		1
	6718200	DECAL	load 1750 - Not in Kit		1
	6725374	DECAL	load 1850-1950 W/counterweights		1
12	6735140	DECAL	throttle		1
13	6718774	DECAL	fuse/relay - 2" x 7" (50,8 mm x 177,8 mm)		1
14	6595014	DECAL	tow hook		1
15	6717343	DECAL	danger		2
16	6727913	DECAL	high flow - Not in Kit		1
17	6710746	SAFETY TREAD	1.25" x 15"(31,8 mm x 381 mm)		2
18	6712791	SAFETY TREAD	12" x 25.30"(304,8 mm x 642,6 mm)		1
19	6727926	DECAL	operations		1
	6717639	DECAL	seat & seat bar operating - AHC		
	6727941	DECAL	- Not in Kit seat & seat bar operating - ACS - Not in Kit		1
					1
20	6711840	DECAL	lift lock		1
21	6732532	DECAL	model S175		1
	6732533	DECAL	model S185		1
22	6710358	DECAL	warning		1
23	6731757	DECAL	front aux. coupler - Not in Kit		1
24	6735862	DECAL	gold package		1

DECALS

NOTE: AR = Spanish (Argentina)
BR = Portuguese (Brazil)
JP = Japanese
Translation Kit includes Safety Manual,
Operators Manual and Decal Kit.

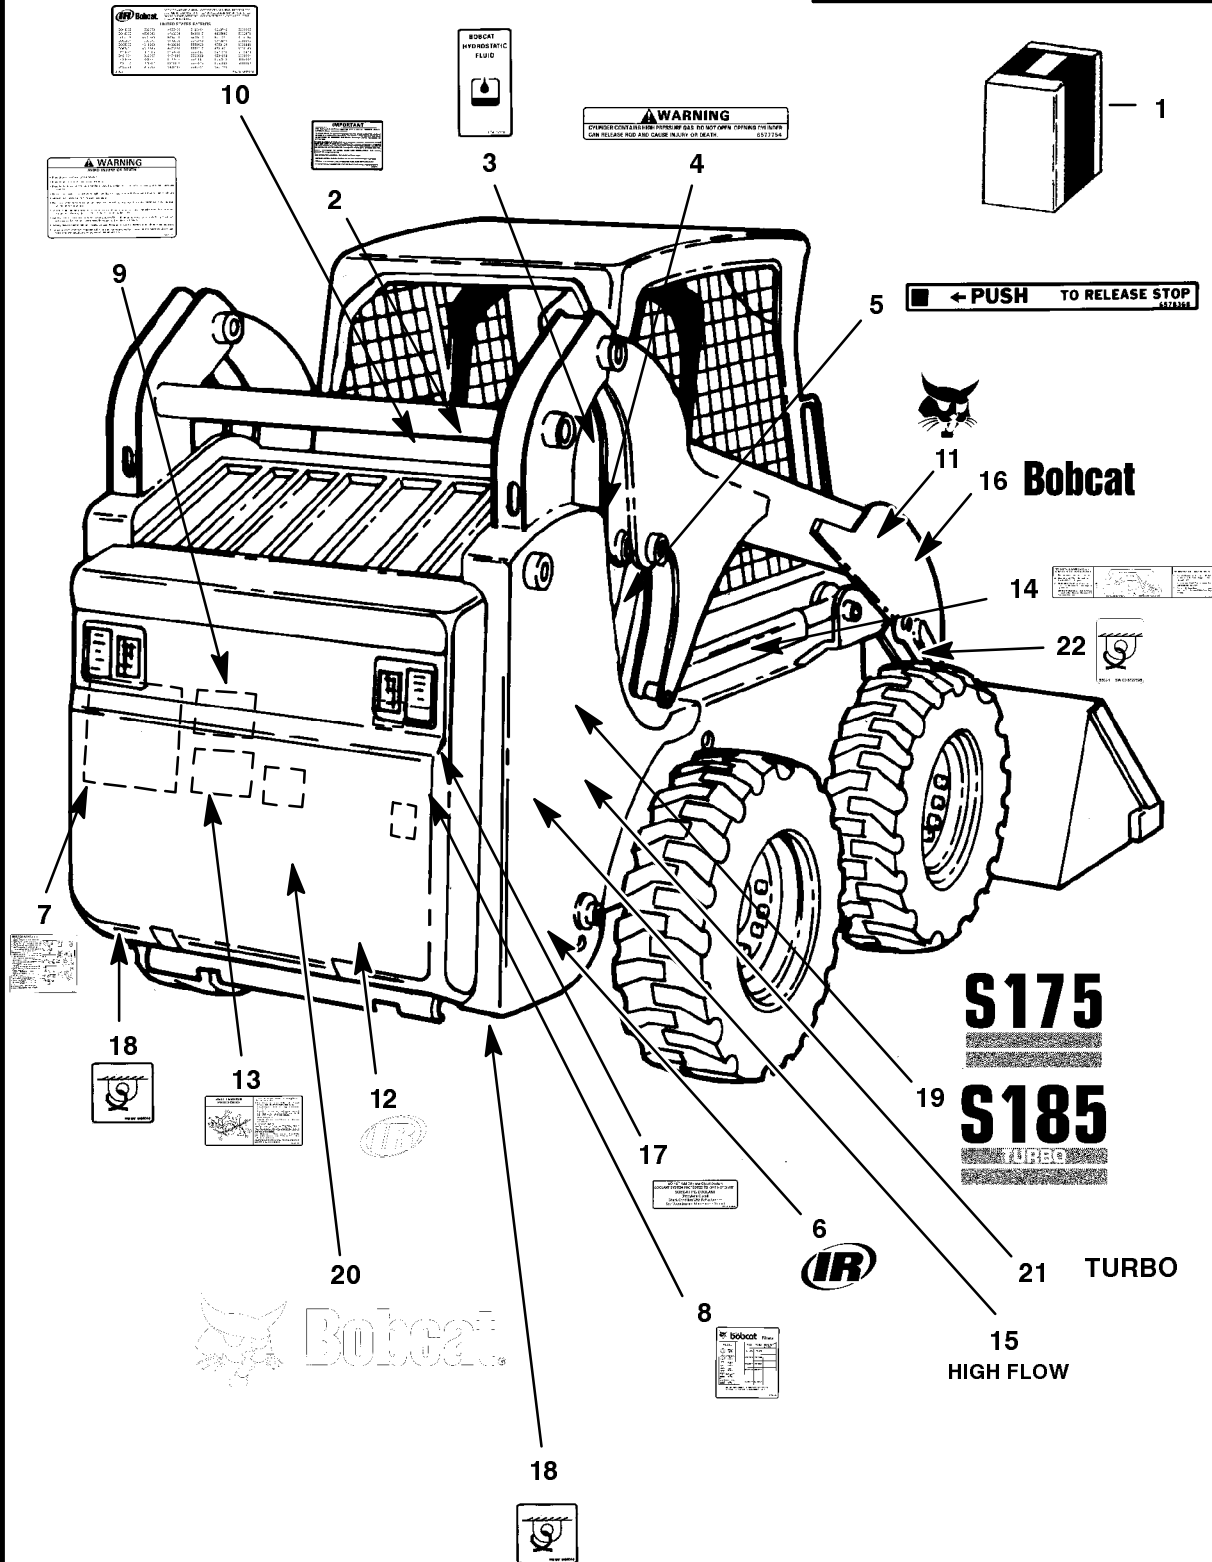


B-22767

DECALS (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6902296	KIT	decal		1
	6734551AR	KIT	decal - SEE NOTE - S175		1
	6734551BR	KIT	decal - SEE NOTE - S175		1
	6734551JP	KIT	decal - SEE NOTE - S175		1
	6734555AR	KIT	decal - SEE NOTE - S185		1
	6734555BR	KIT	decal - SEE NOTE - S185		1
	6734555JP	KIT	decal - SEE NOTE - S185		1
	6734550AR	KIT	translation - SEE NOTE - S175		1
	6734550BR	KIT	translation - SEE NOTE - S175		1
	6734554AR	KIT	translation - SEE NOTE - S185		1
	6734554BR	KIT	translation - SEE NOTE - S185		1
2	6560573	DECAL	spark arrestor		1
3	6565990	DECAL	hydraulic fluid		1
4	6577754	DECAL	warning		2
5	6578368	DECAL	push		1
6	6735864	DECAL	IR - black		2
7	6734534	DECAL	service/warning/service parts		1
8	6565200	DECAL	eng. filter		1
9	6579511	DECAL	warning - Not in Kit		1
10	6557224	DECAL	patent		1
11	6731507	DECAL	R.H. - Bobcat head - black		1
	6731508	DECAL	L.H. - Bobcat head - black		1
12	6732423	DECAL	IR - white - Not in Kit		1
13	6709030	DECAL	belt tension - spring loaded		
			idler		1
14	6719018	DECAL	boom stop		1
15	6727913	DECAL	hi-flow - Not in Kit		1
16	6731336	DECAL	Bobcat - black		2
17	6708929	DECAL	propylene glycol antifreeze		1
18	6595014	DECAL	tow hook		2
19	6732532	DECAL	model S175		1
	6732533	DECAL	model S185		1
20	6735901	DECAL	Bobcat W/Head - white		1
21	6727912	DECAL	turbo - Not in Kit		2
22	6727595	DECAL	tie down		2

DELUXE CAB

NOTE: When installing heater in export loaders built with deluxe cab, also order 6715365 Harness.

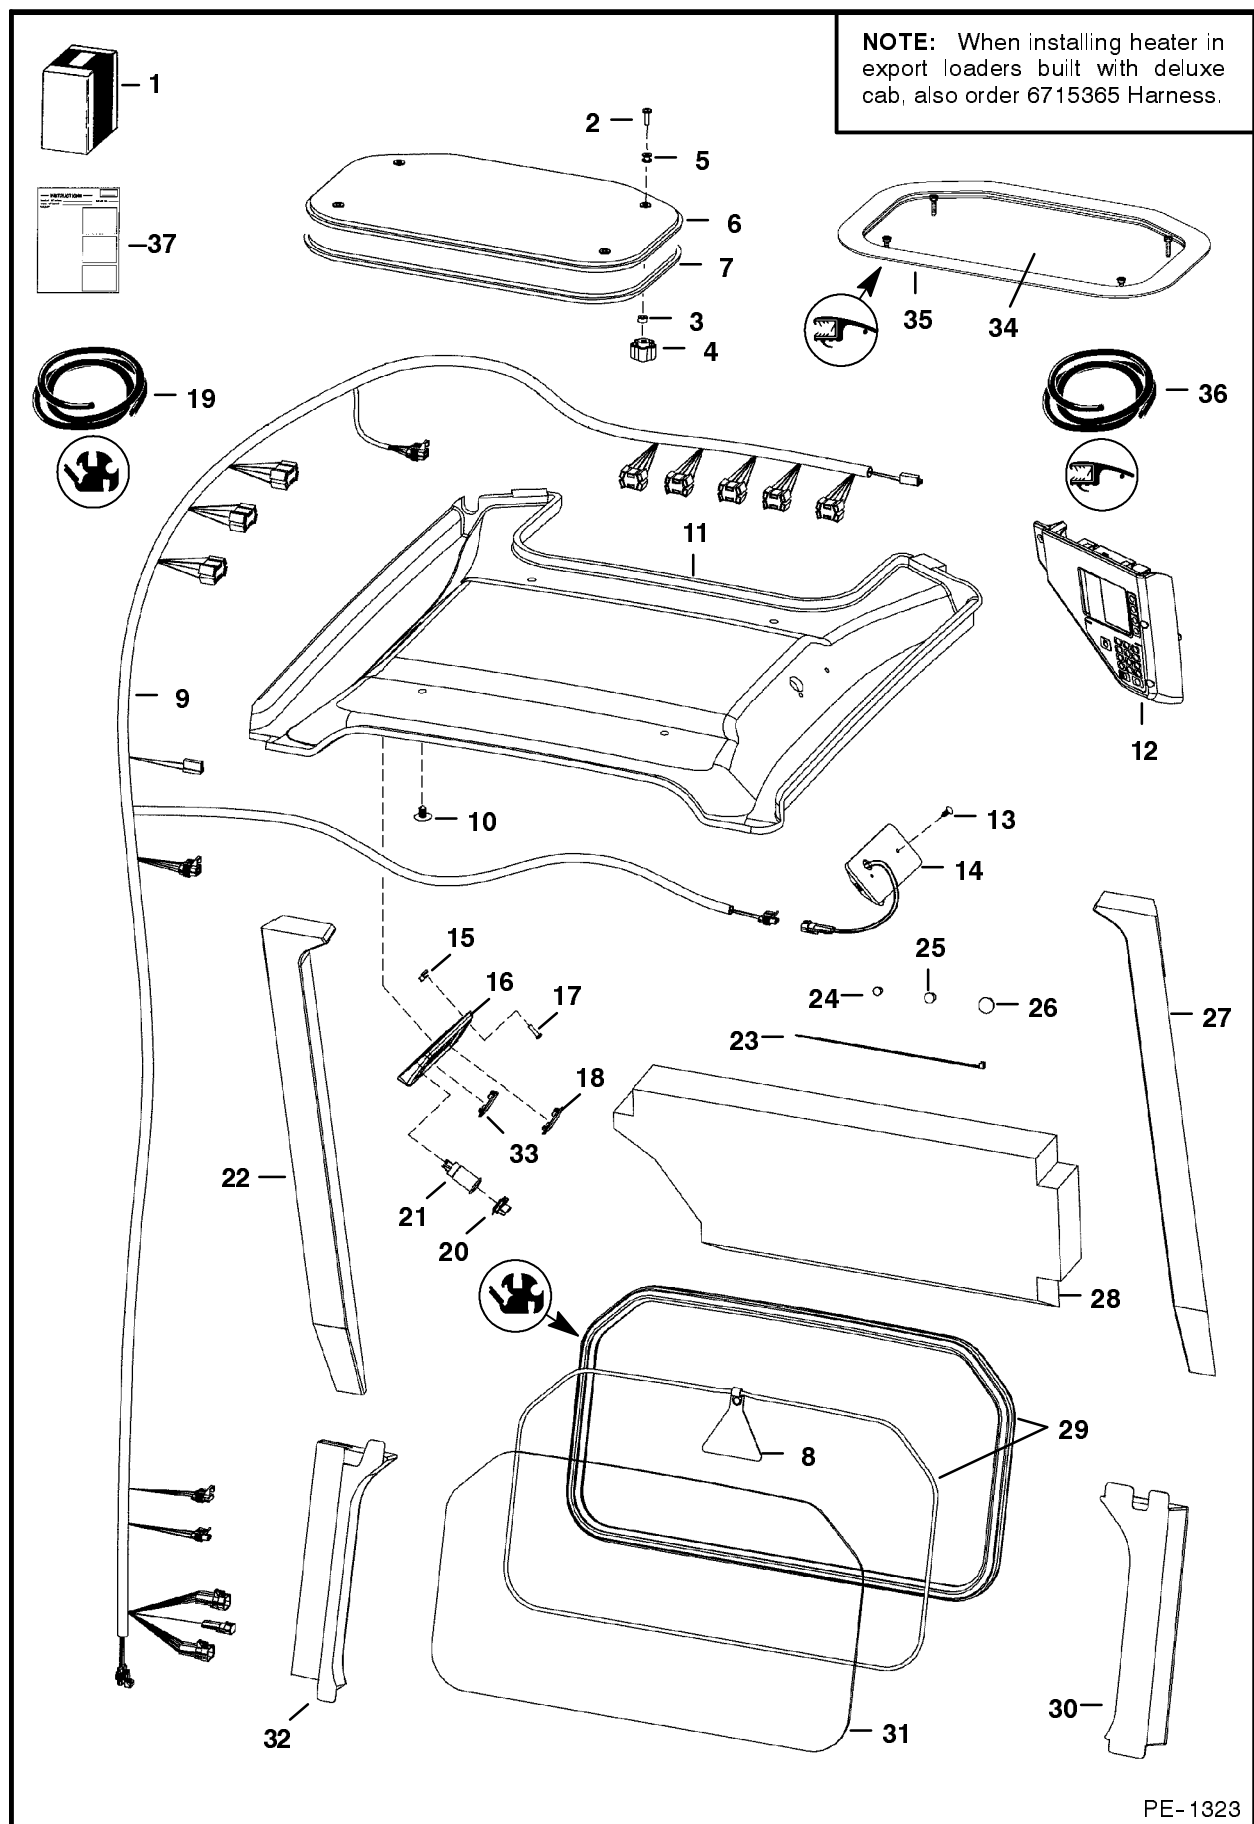


PE-1323

DELUXE CAB (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6729233	KIT	deluxe cab - SEE NOTE		1
2	91G-420	BOLT			4
3	6664085	BUSHING	nylon		4
4	6681614	KNOB			4
5	6675545	GROMMET			4
6	6728629	WINDOW	assy. - W/Ref. 5 & 7		1
7	NAP	SEAL	Order Ref. 6		x
8	6731478	EXIT TAG			1
9	6727190	HARNESS			1
	6715365	HARNESS	accessories - Export - SEE NOTE - Not in Kits		1
10	6674895	RETAINER	snap in		4
11*	6737704	INSULATION	headliner - Was 6717515 [A]		1
12	6683395	PANEL	R.H. - deluxe - keyless		1
	NAP	INSTRUCTIONS	See Loader Service Manual		1
13	6664221	RETAINER	snap in		2
14	6680326	LIGHT	dome		1
	6665367	BULB			1
15	6669091	CLIP			4
16	6718580	PANEL			1
17	6669224	BOLT			4
18	6665314	PLUG	switch		5
19	6675387	EXTRUSION	bulk - Sold Per Foot		x
	6554149	CORD	bulk - Sold Per Foot		x
20	6664224	CAP			1
21	6664223	OUTLET			1
22	6717519	INSULATION			1
23	6610510	TIE			6
24	5289686	PLUG	black - plugs a .375" hole		1
25	6649949	PLUG	plugs a .50" hole		2
26	6657719	PLUG	plugs a .75" hole		1
27	6717520	INSULATION			1
28	6727299	INSULATION	cab back		1
29	NAP	EXTRUSION	75.75" (1924 mm) long - Order Ref. 19		x
	NAP	CORD	75.75" (1924 mm) long - Order Ref. 19		x
30	6717518	INSULATION			1
31	6717874	WINDOW	rear		1
32	6717517	INSULATION			1
33	6668742	SWITCH	travel control - Export		1
34	NAP	WINDOW	Order Ref. 6		1
35	NAP	SEAL	Order Ref. 6		x
36	NAP	SEAL	bulk - Sold Per Foot - Order Ref. 6		x
37	6900851	INSTRUCTIONS			1

DUAL BATTERY KIT (W/O Starter)

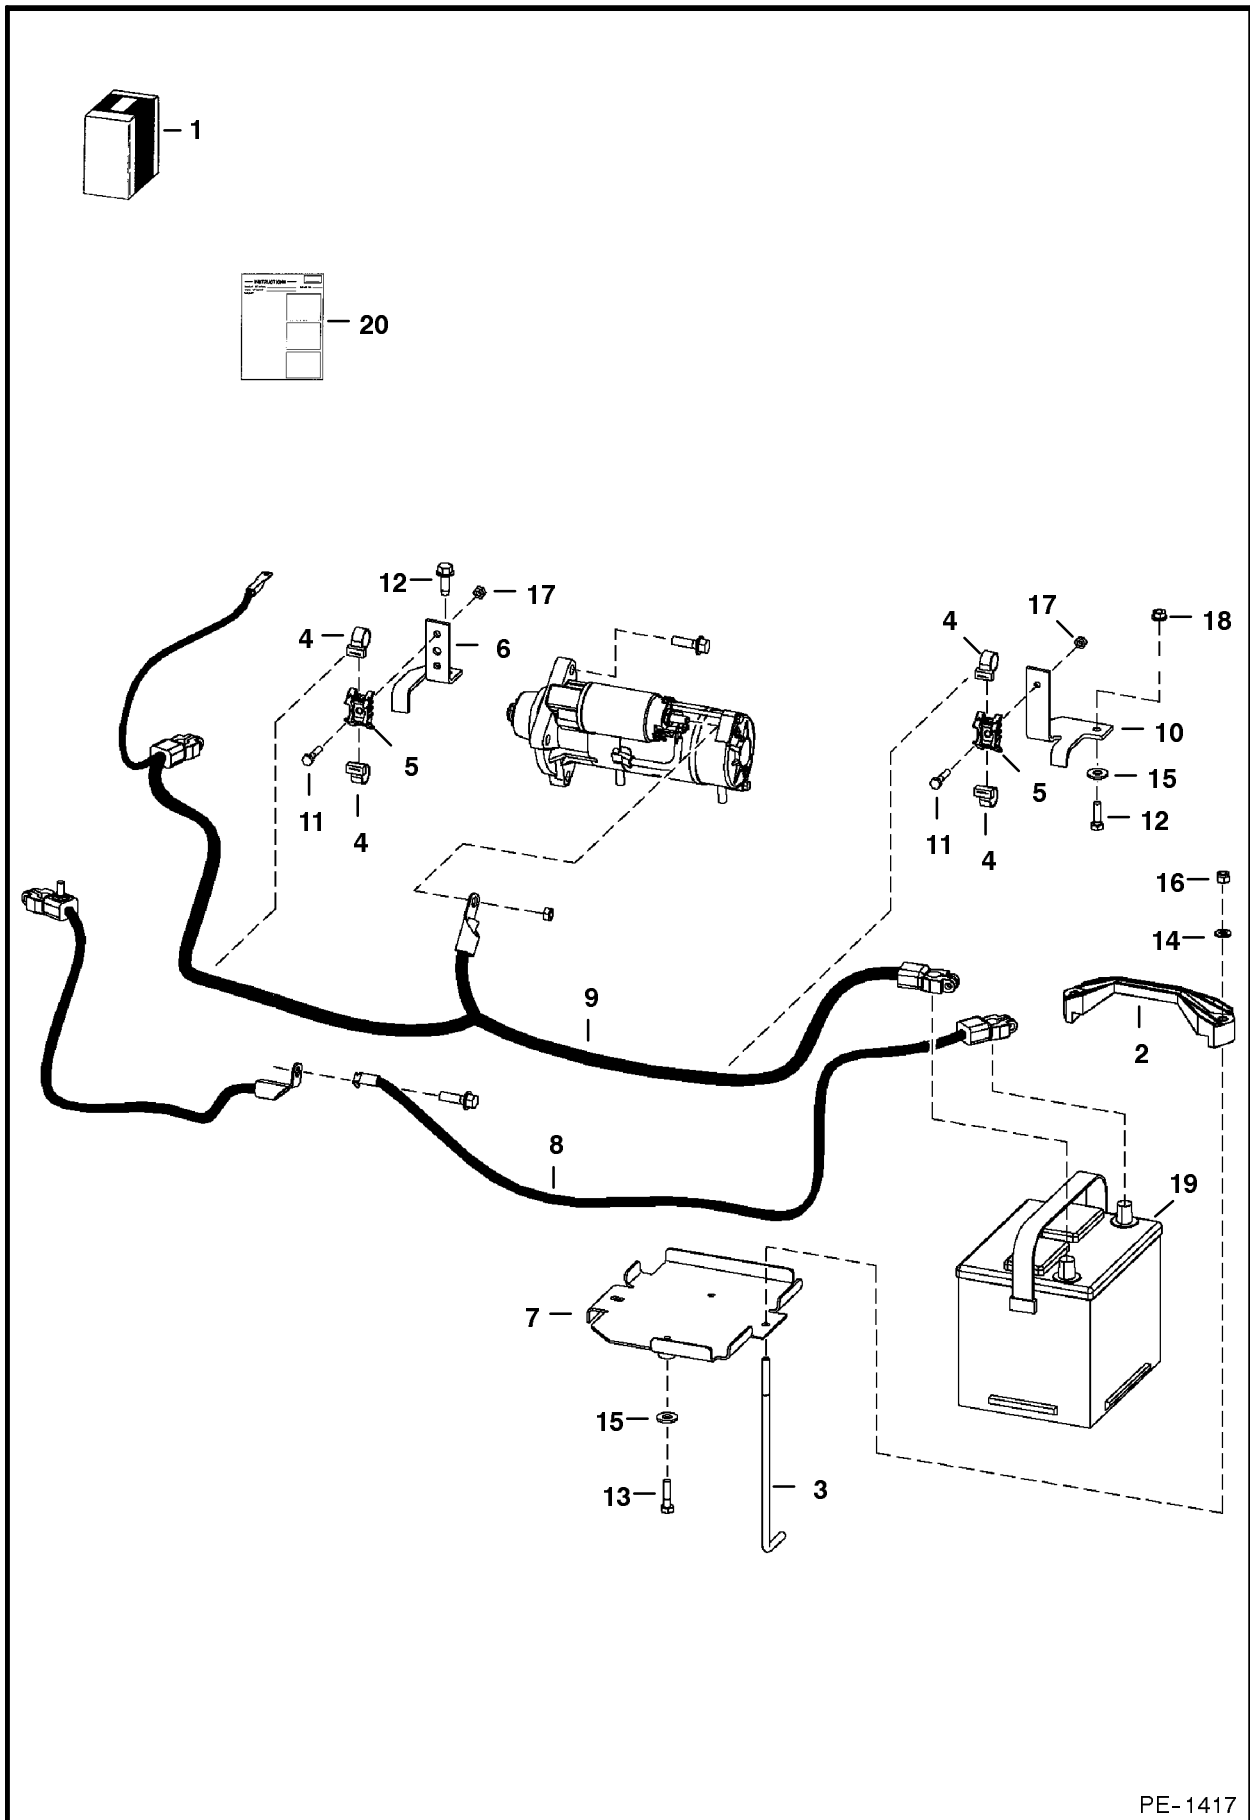


PE-1417

DUAL BATTERY KIT (Cont'd) (W/O Starter)

[illegible]

ELECTRICAL CONNECTOR KIT
(7-Pin)

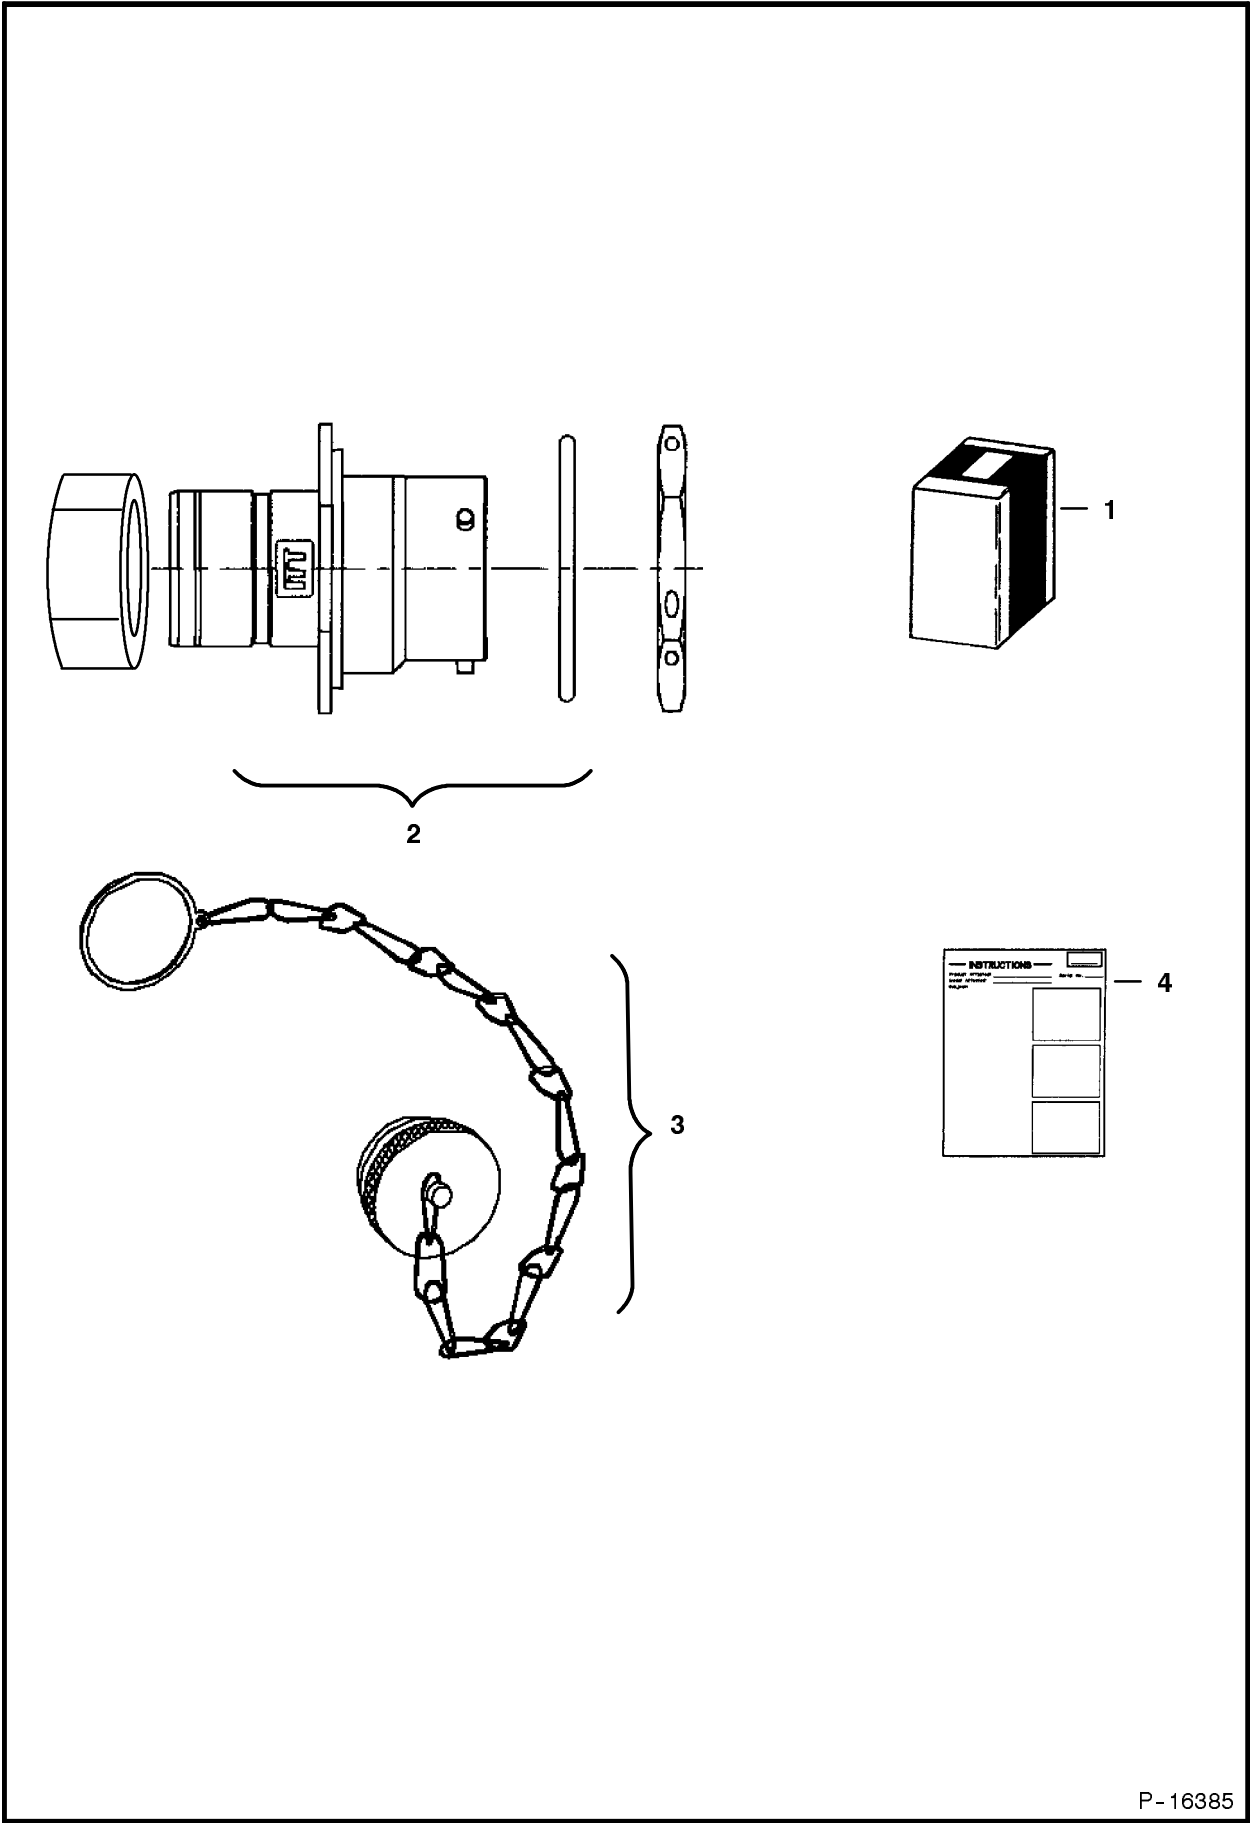


P-16385

ELECTRICAL CONNECTOR KIT (Cont'd)

(7-Pin)

[illegible]

ELECTRICAL CONTROLS KIT (14 Pin Attachments)

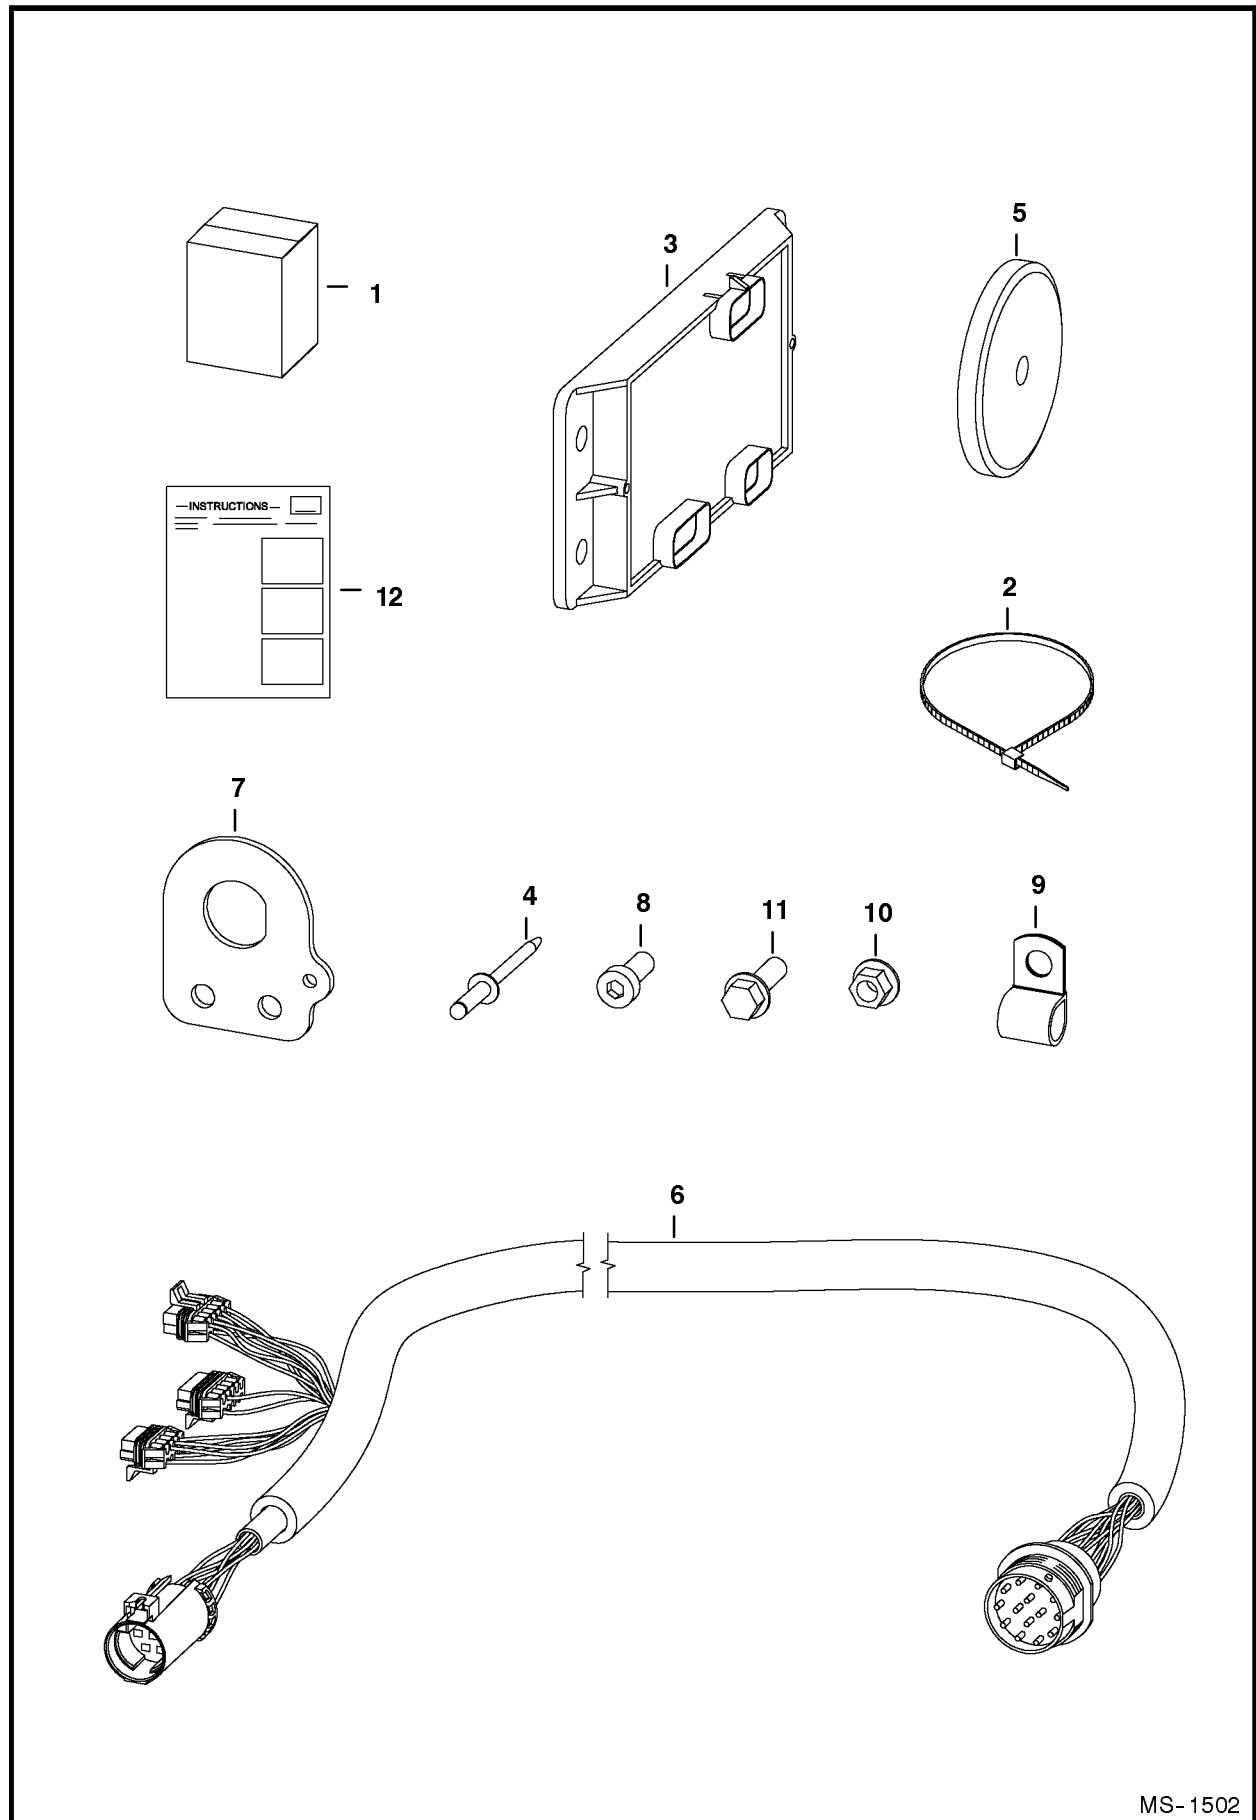


MS-1502

ELECTRICAL CONTROLS KIT (Cont'd)

(14 Pin Attachments)

[illegible]


**ELECTRICAL CONTROLS KIT
(7 Pin Attachments)**

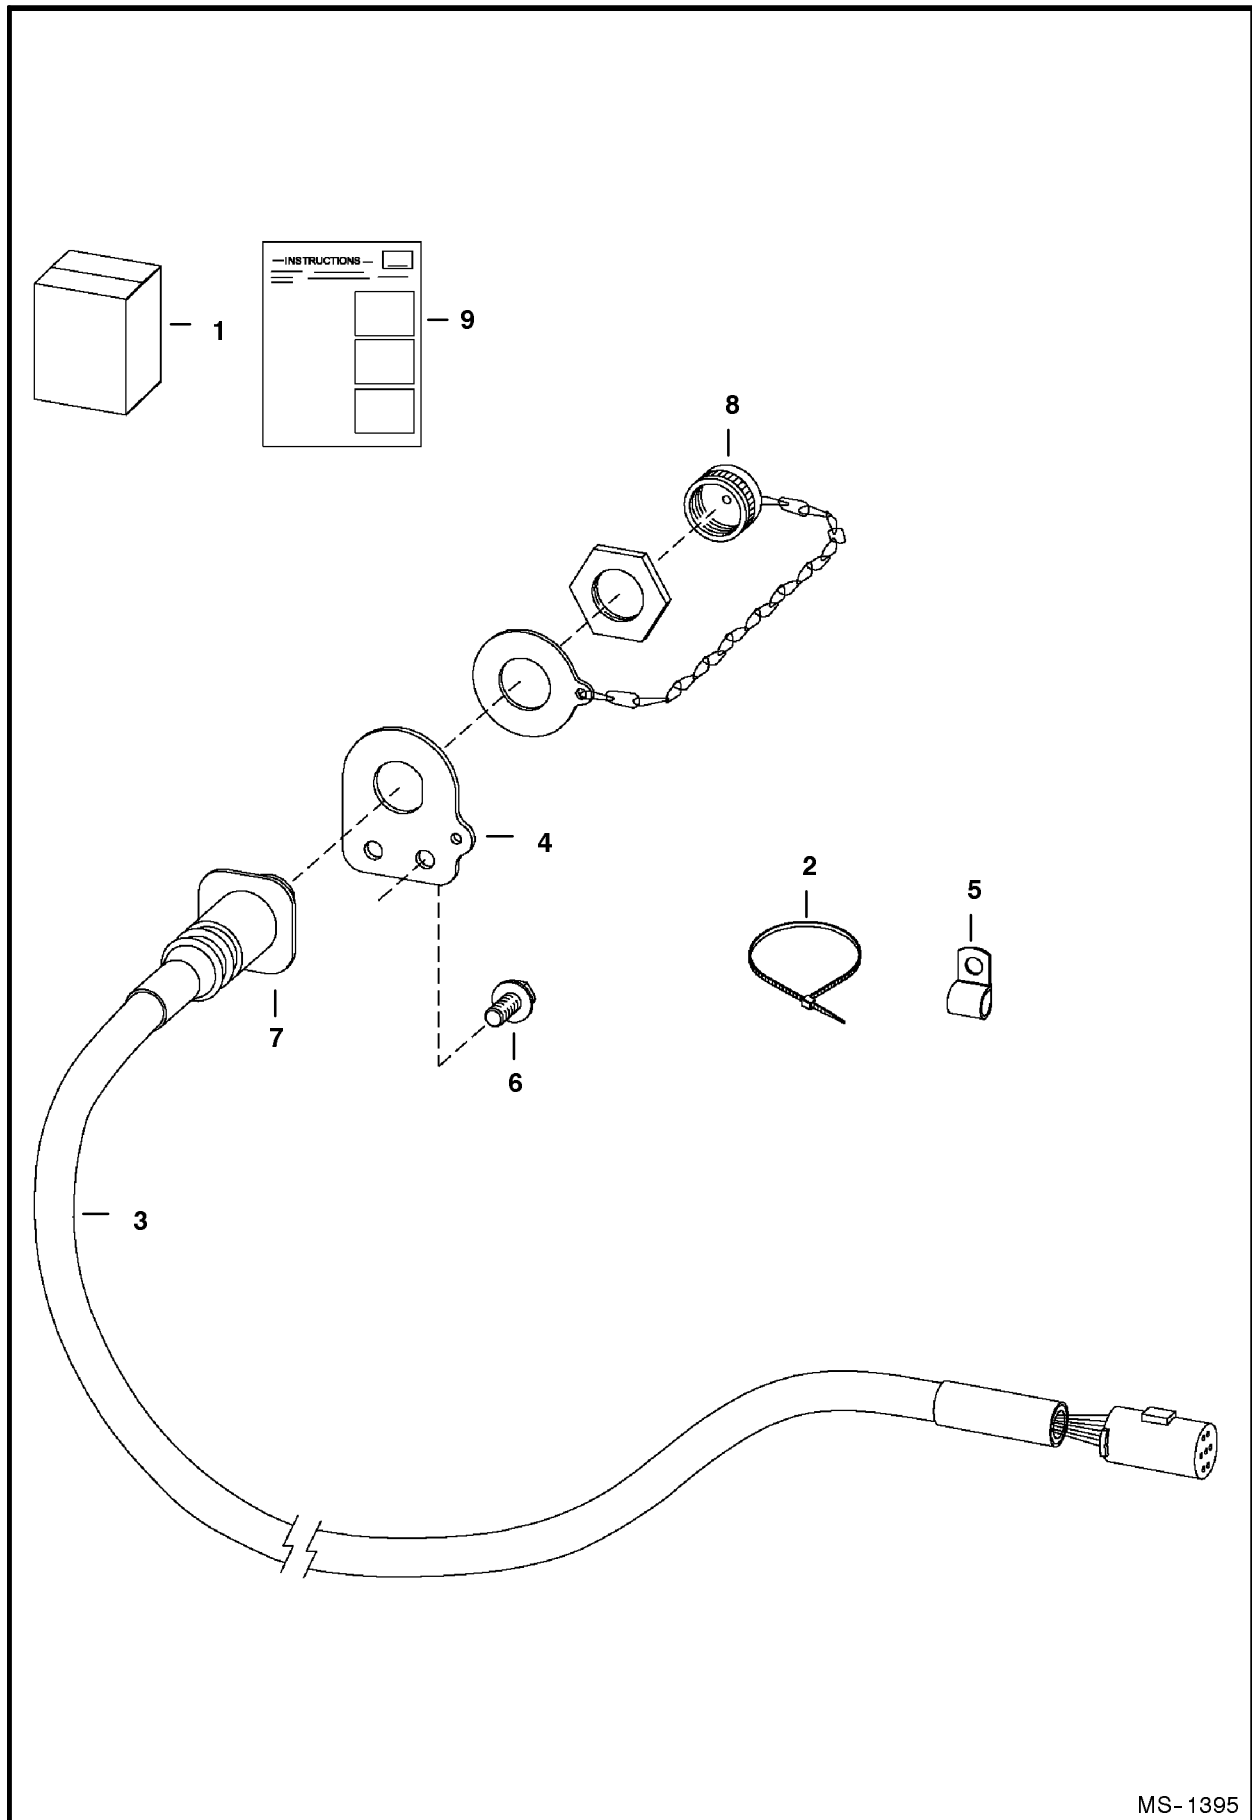

MS-1395

[illegible]

ELECTRICAL CONTROLS KIT **(To Run "G" Series Attachments & Old Attachments) (W/O Toggle Switch)**

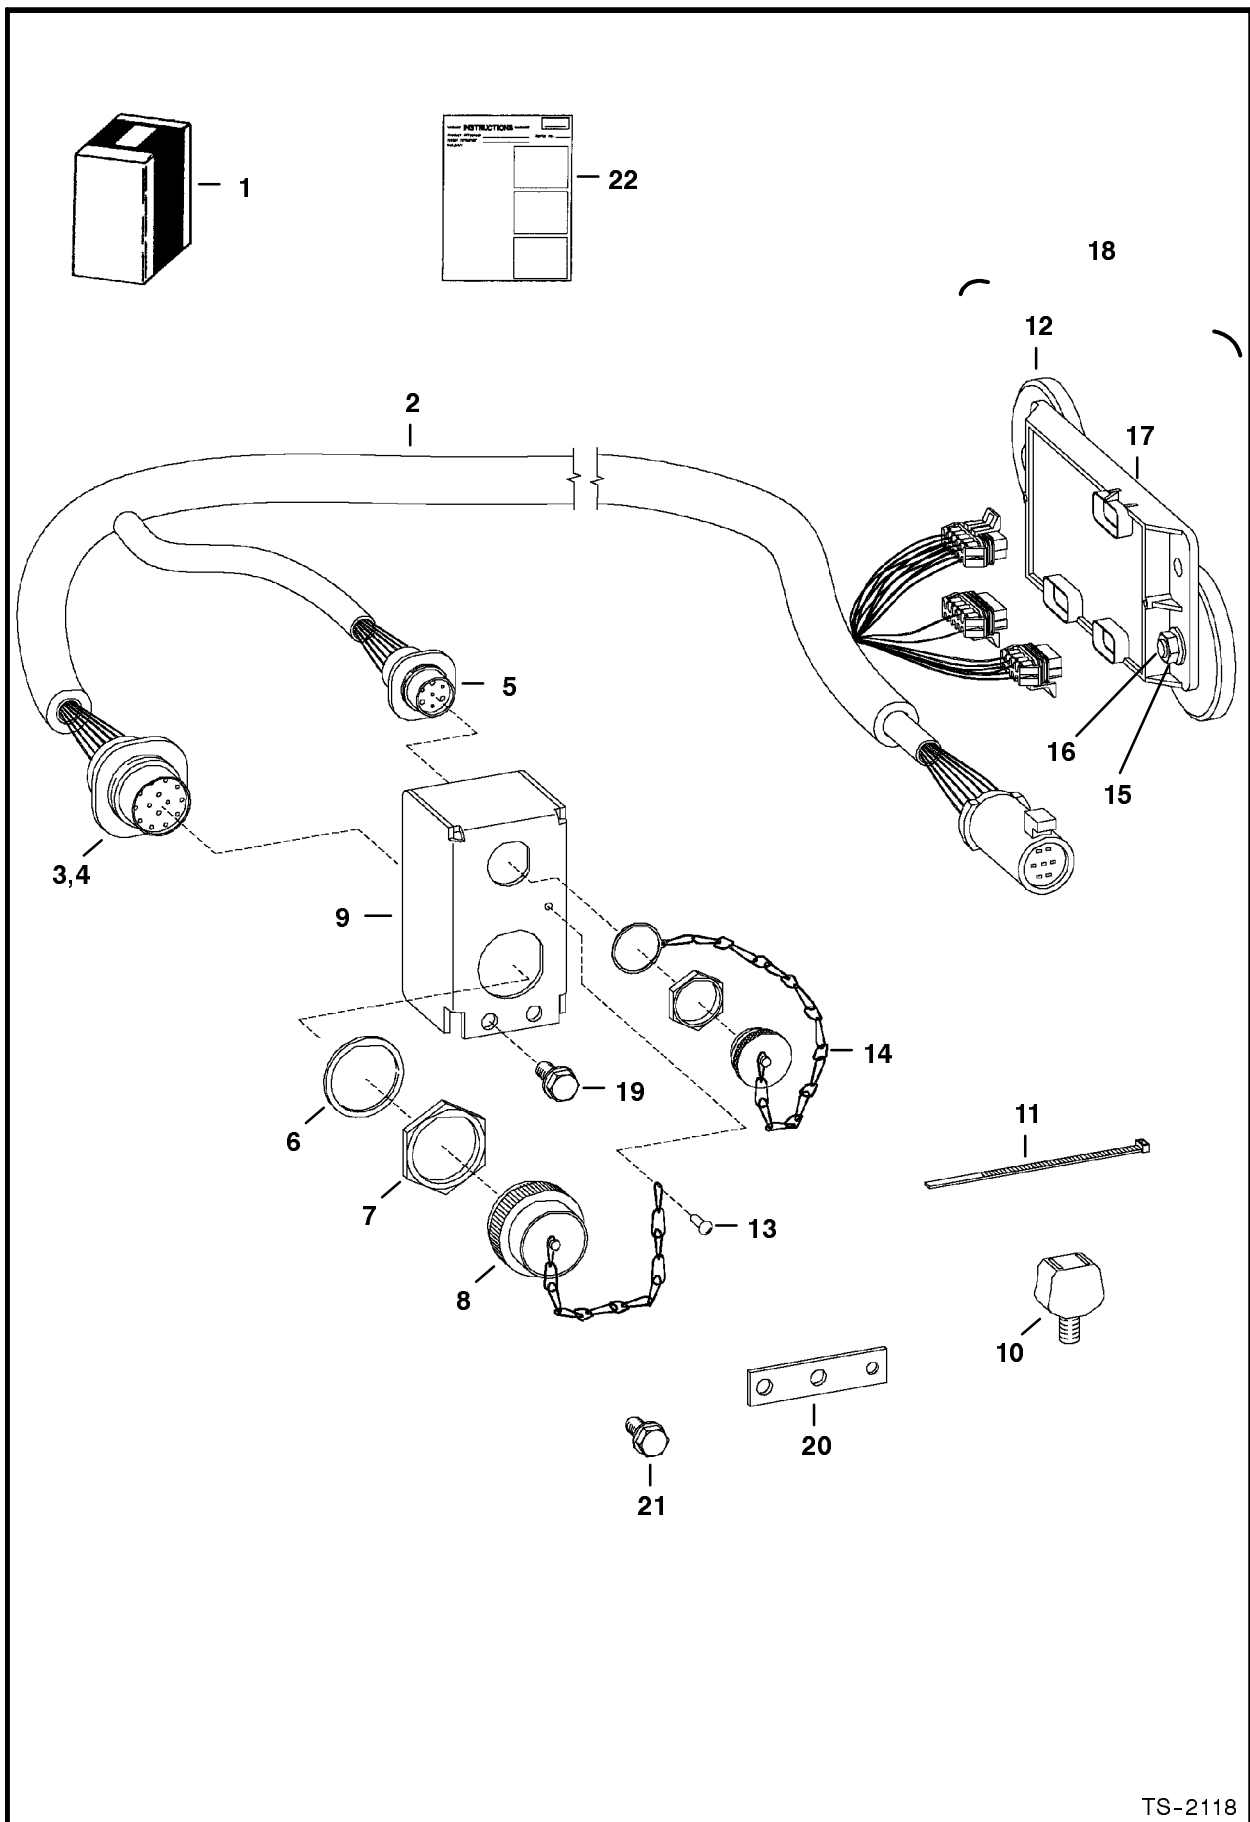


TS-2118

(To Run "G" Series Attachments & Old Attachments) (W/O Toggle Switch)

[illegible]

**ENGINE MOUNT KIT
(For Rough Application)**

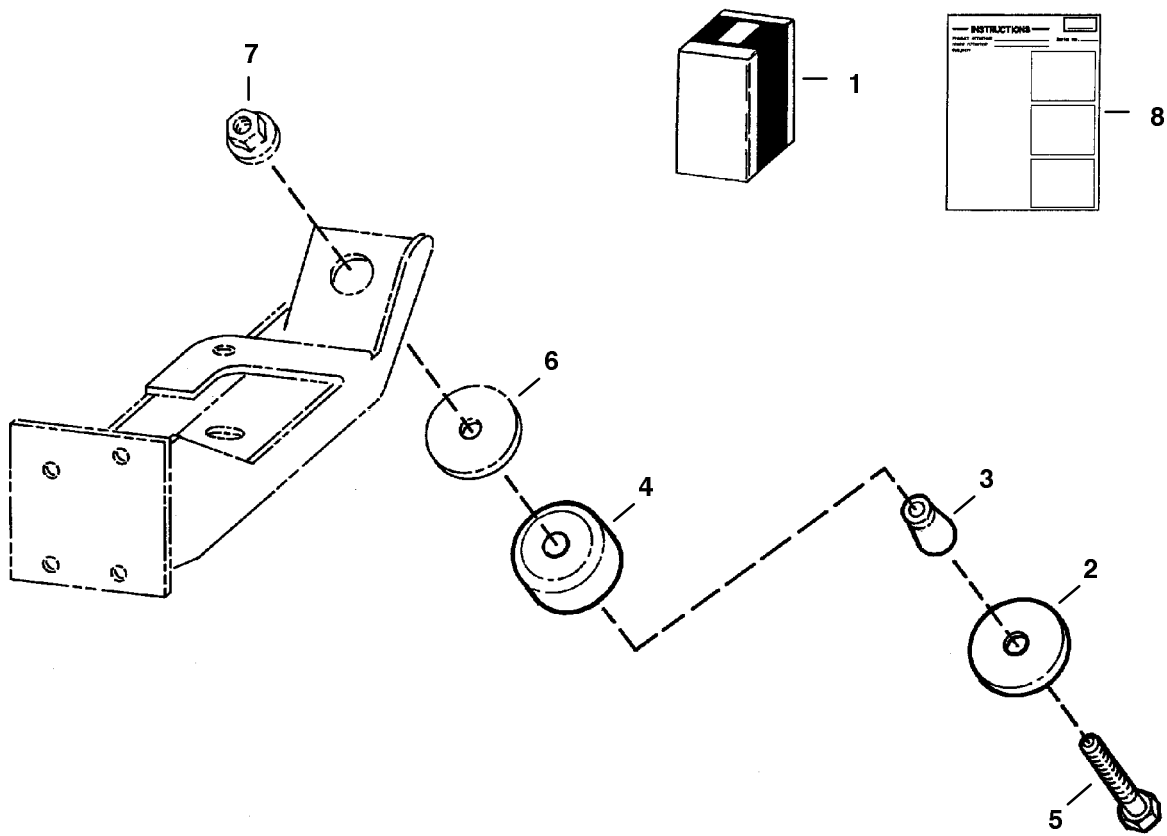


B-14623

ENGINE MOUNT KIT (Cont'd)

(For Rough Application)

[illegible]

EUROPEAN ACCESSORIES (Caliper Brake Kit)

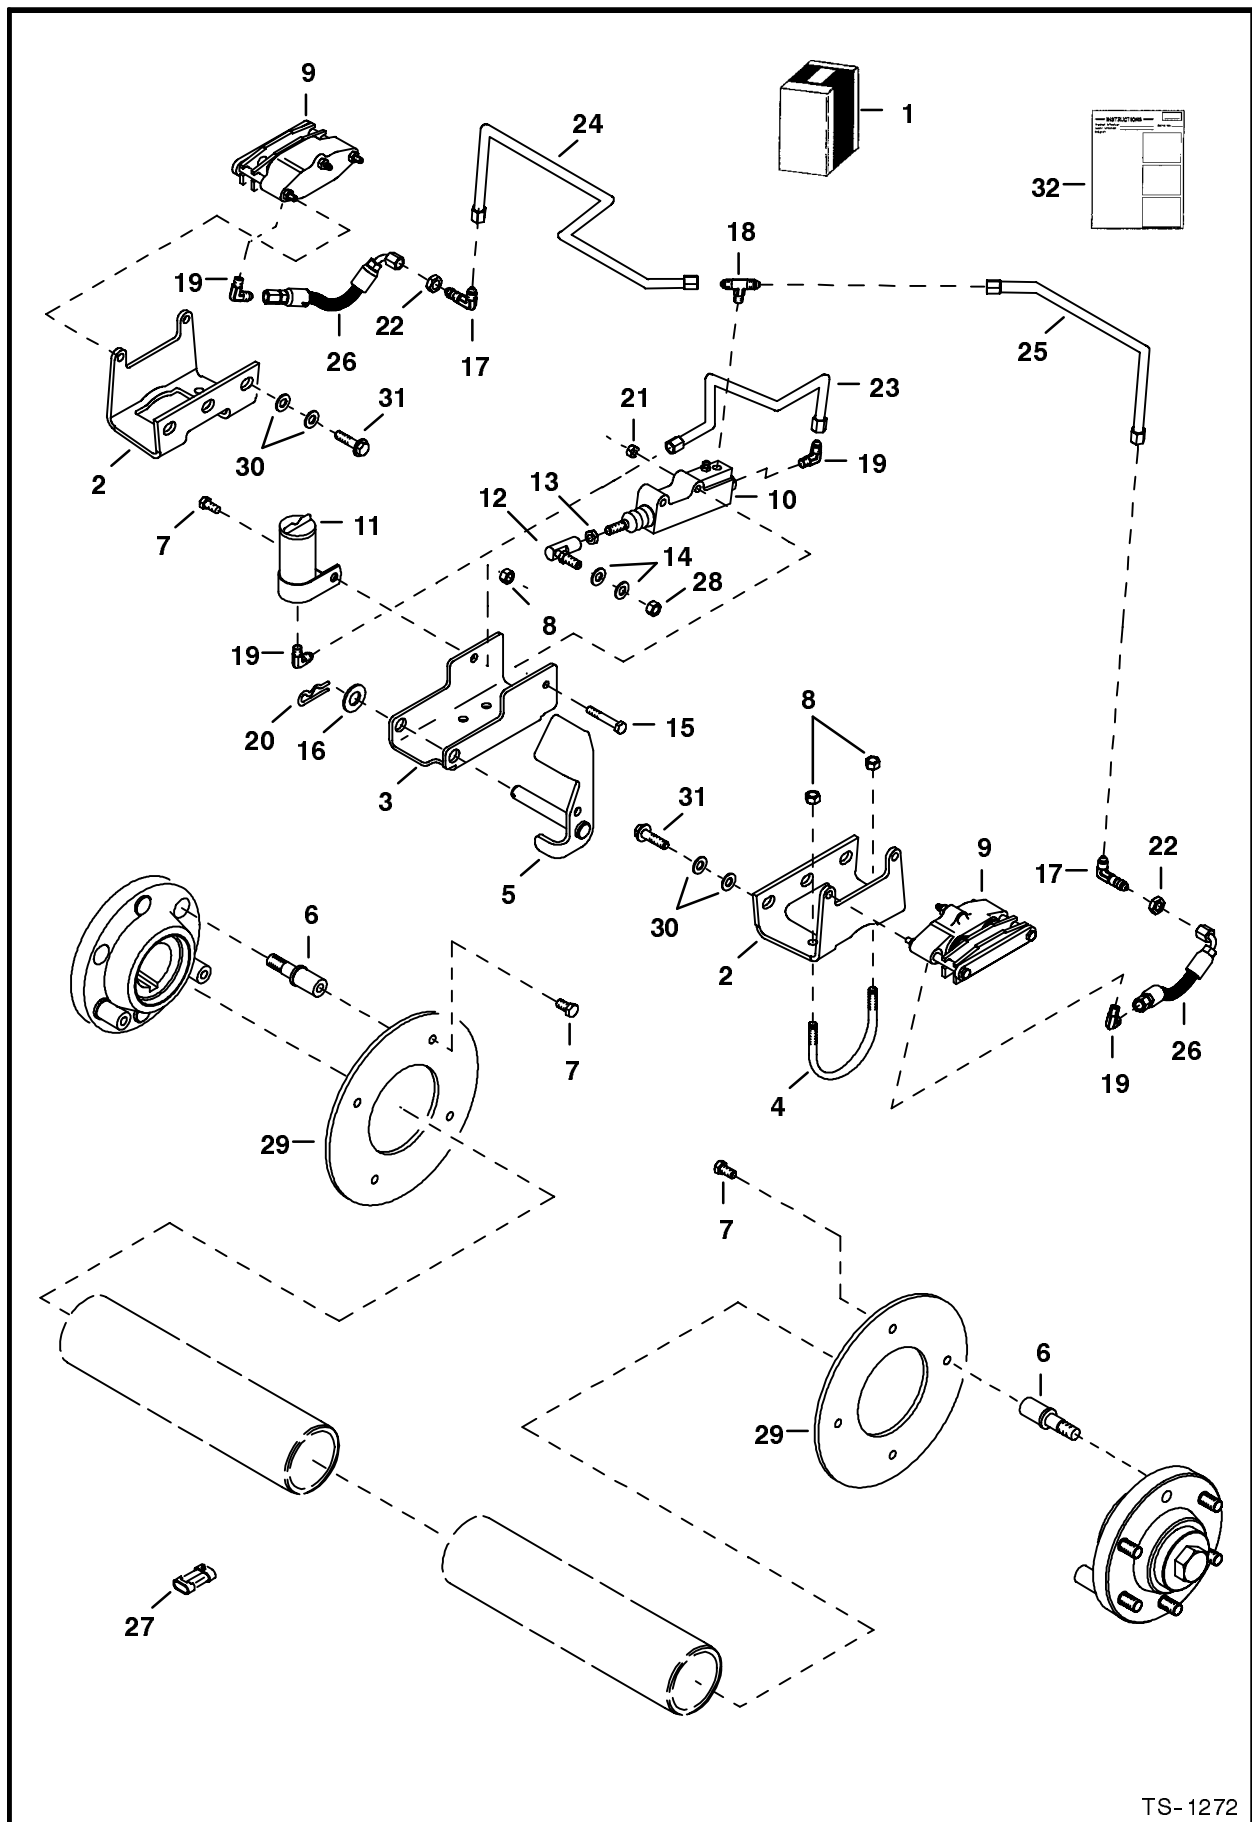


TS- 1272

EUROPEAN ACCESSORIES (Cont'd)
(Caliper Brake Kit)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6719150	KIT	Ref. 2 - 32		1
2	6718728	MOUNT ASSY.	caliper		2
3	6709236	MOUNT	pedal		1
4	6709237	CLAMP			2
5	6709239	PEDAL ASSY.	brake		1
6	6709229	BOLT	wheel		8
7	17C-612	BOLT			9
8	91D-6	NUT			5
9	6666932	BRAKE	See Page 332		2
10	6666933	CYLINDER	See Page 332		1
11	6661117	TANK			1
12	6599744	BALL JOINT			1
13	8D-6	NUT			1
14	25E-17	WASHER			2
15	17C-532	BOLT			2
16	25E-25	WASHER			1
17	45K-3	ELBOW			2
18	98F-3	TEE			1
19	83F-3	ELBOW			4
20	1318565	PIN			1
21	91D-5	NUT			2
22	86F-3	NUT			2
23	6709400	TUBE			1
24	6718205	TUBE			1
25	6718206	TUBE			1
26	6709547	HOSE			2
27	6667139	CAP			1
28	62D-6	NUT			1
29	6709234	DISC	brake		2
30	25E-11	WASHER			8
31	31C-824	BOLT			4
32	6900934	INSTRUCTIONS			1

EUROPEAN ACCESSORIES
(Caliper Brake)

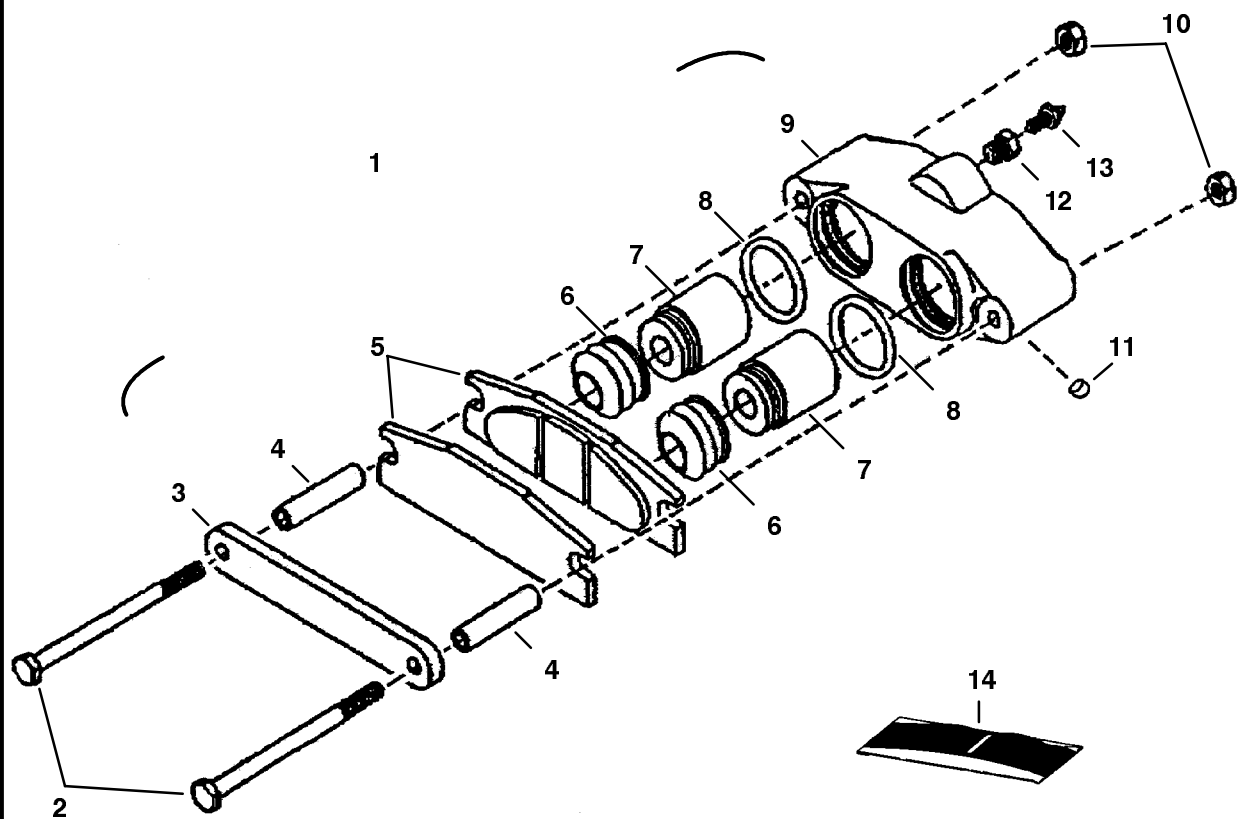


B-14851

EUROPEAN ACCESSORIES (Cont'd)

[illegible]


EUROPEAN ACCESSORIES
(Caliper Brakes - Master Cylinder)

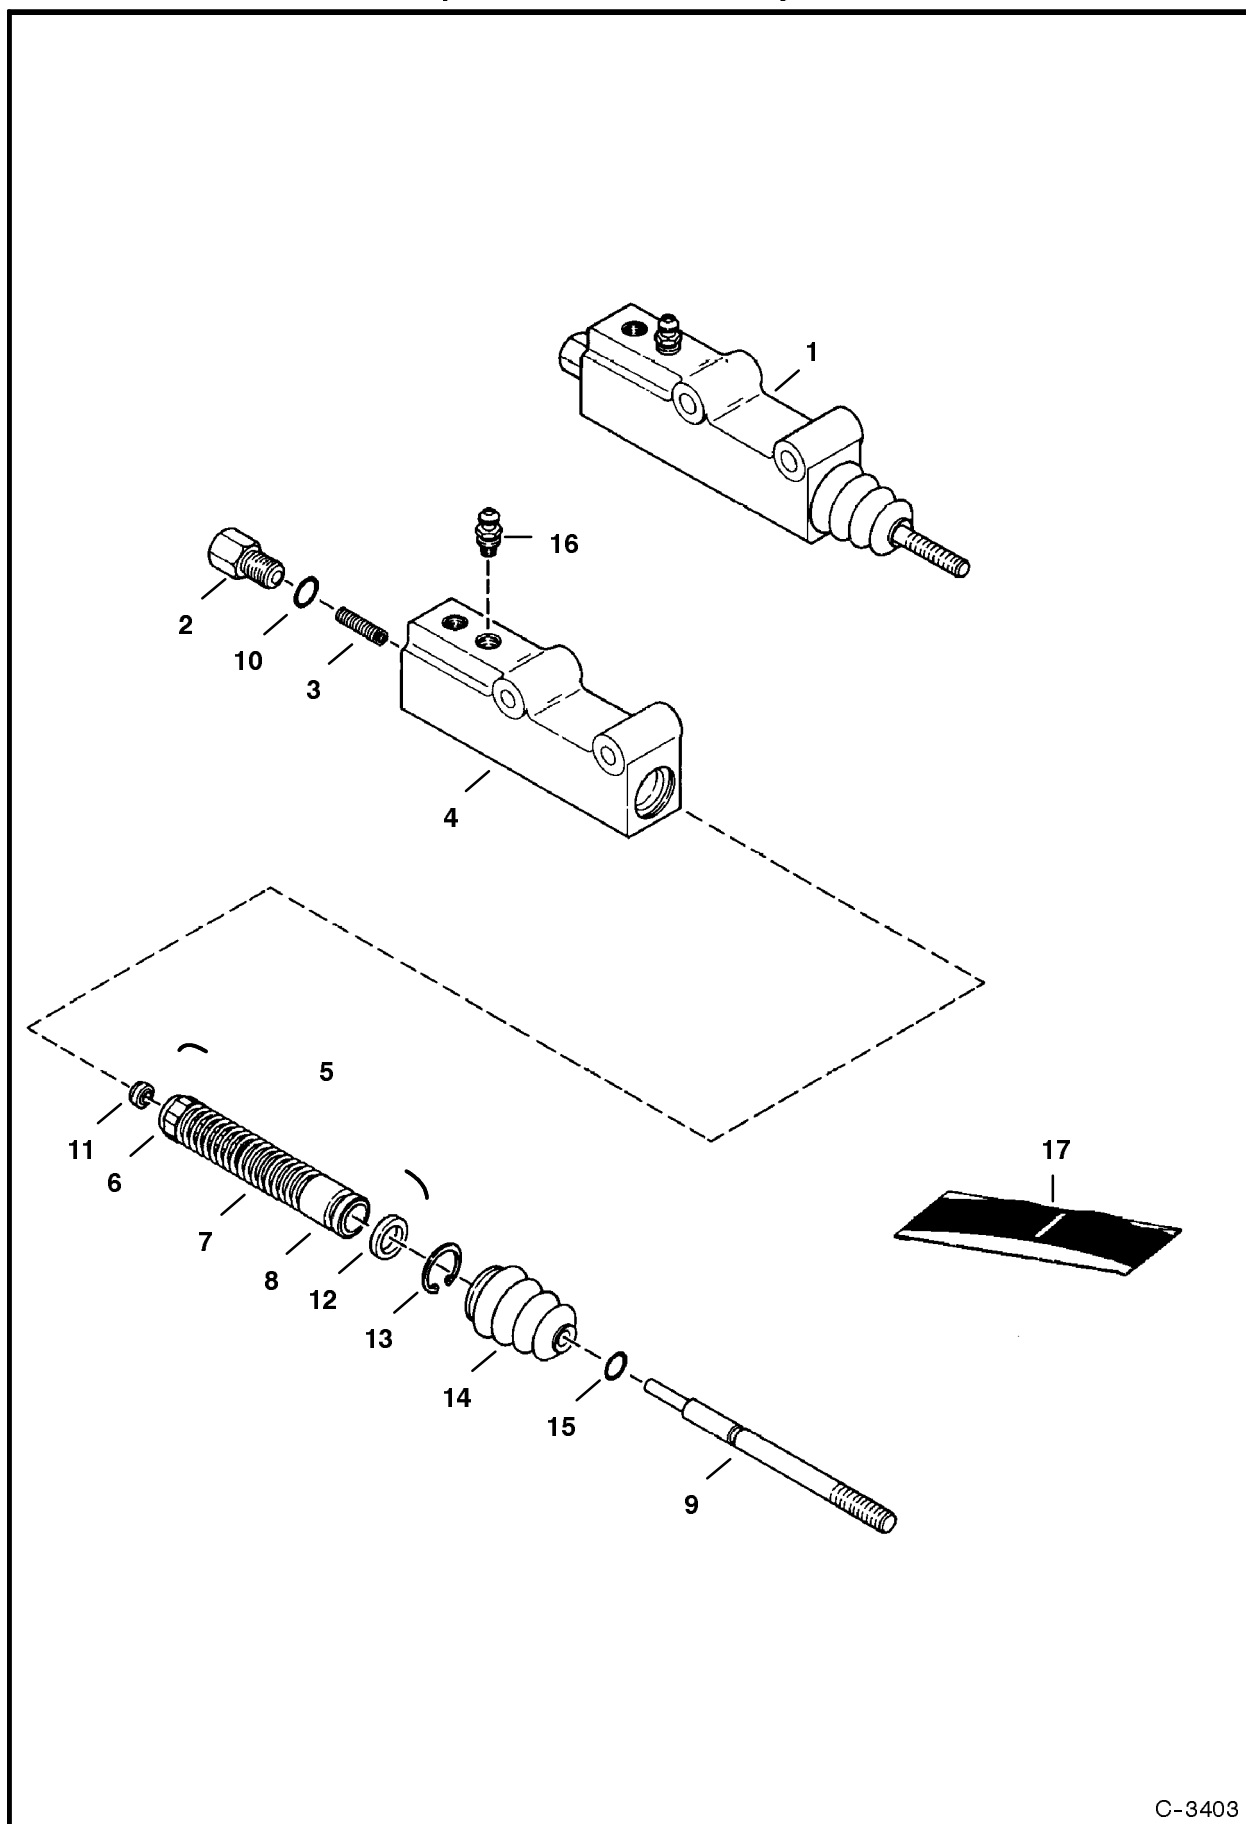

C-3403

[illegible]

EUROPEAN ACCESSORIES
(Pedal Extenders)

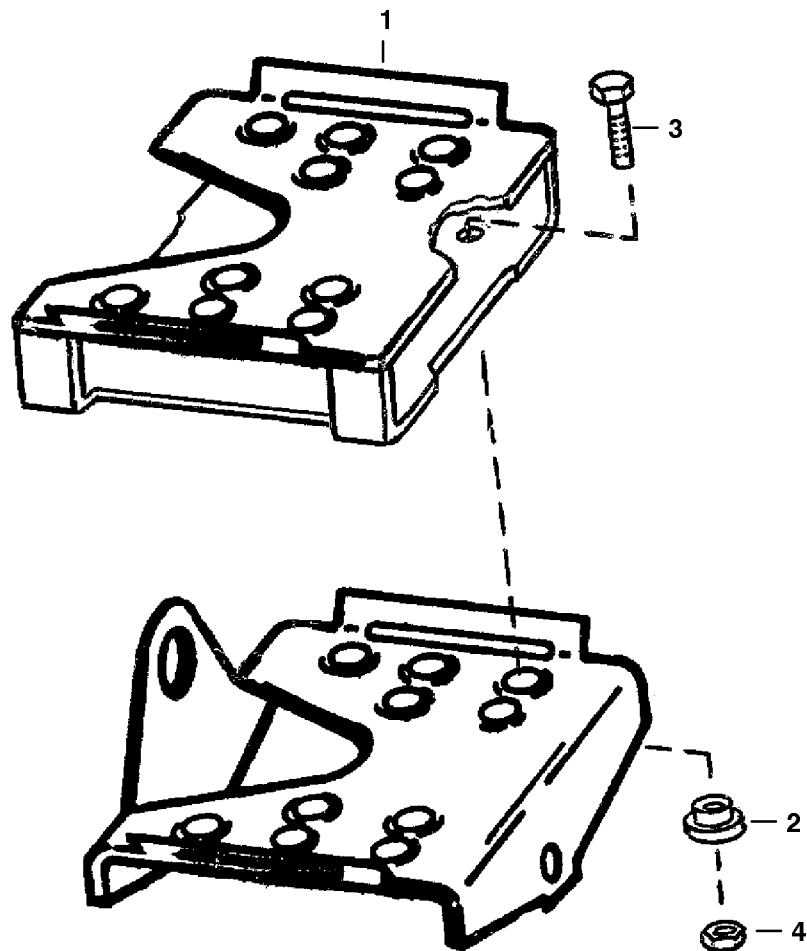


B-14856

EUROPEAN ACCESSORIES (Cont'd)

(Pedal Extenders)

[illegible]

EUROPEAN ACCESSORIES
(Rear Door Lights)

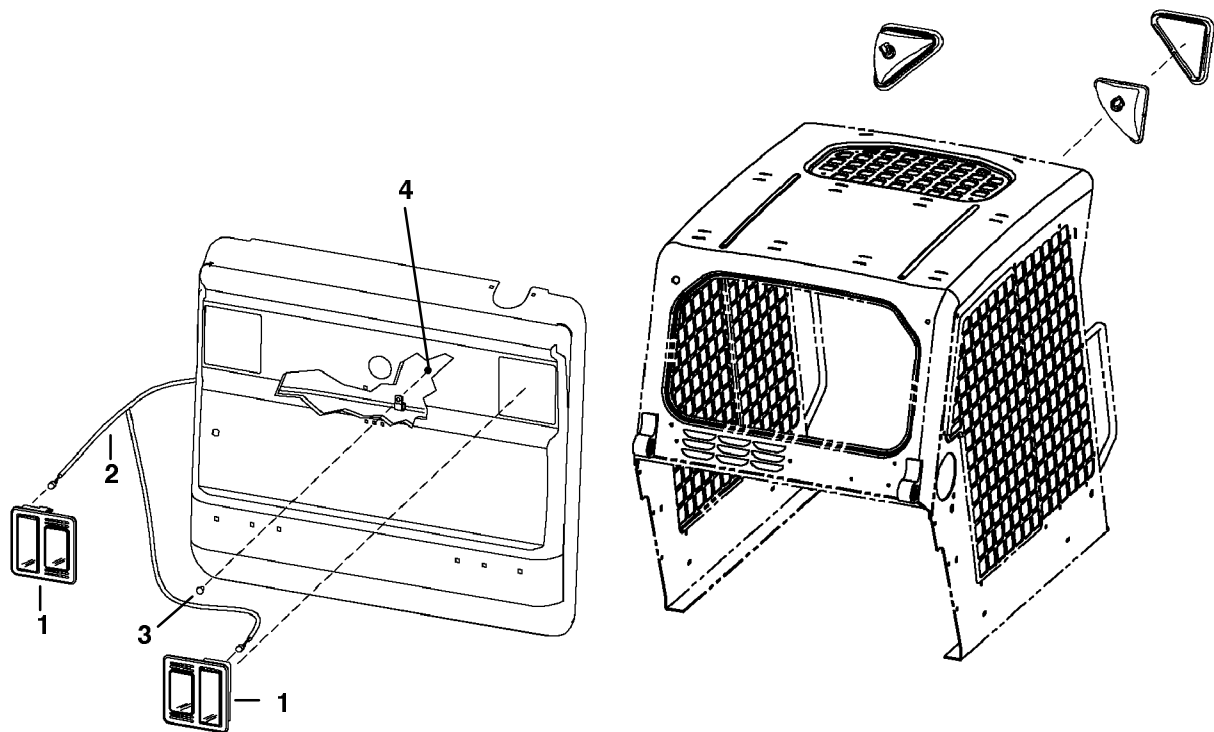


PE-1602

(Rear Door Lights)

[illegible]

EUROPEAN ACCESSORIES (Road Kit)

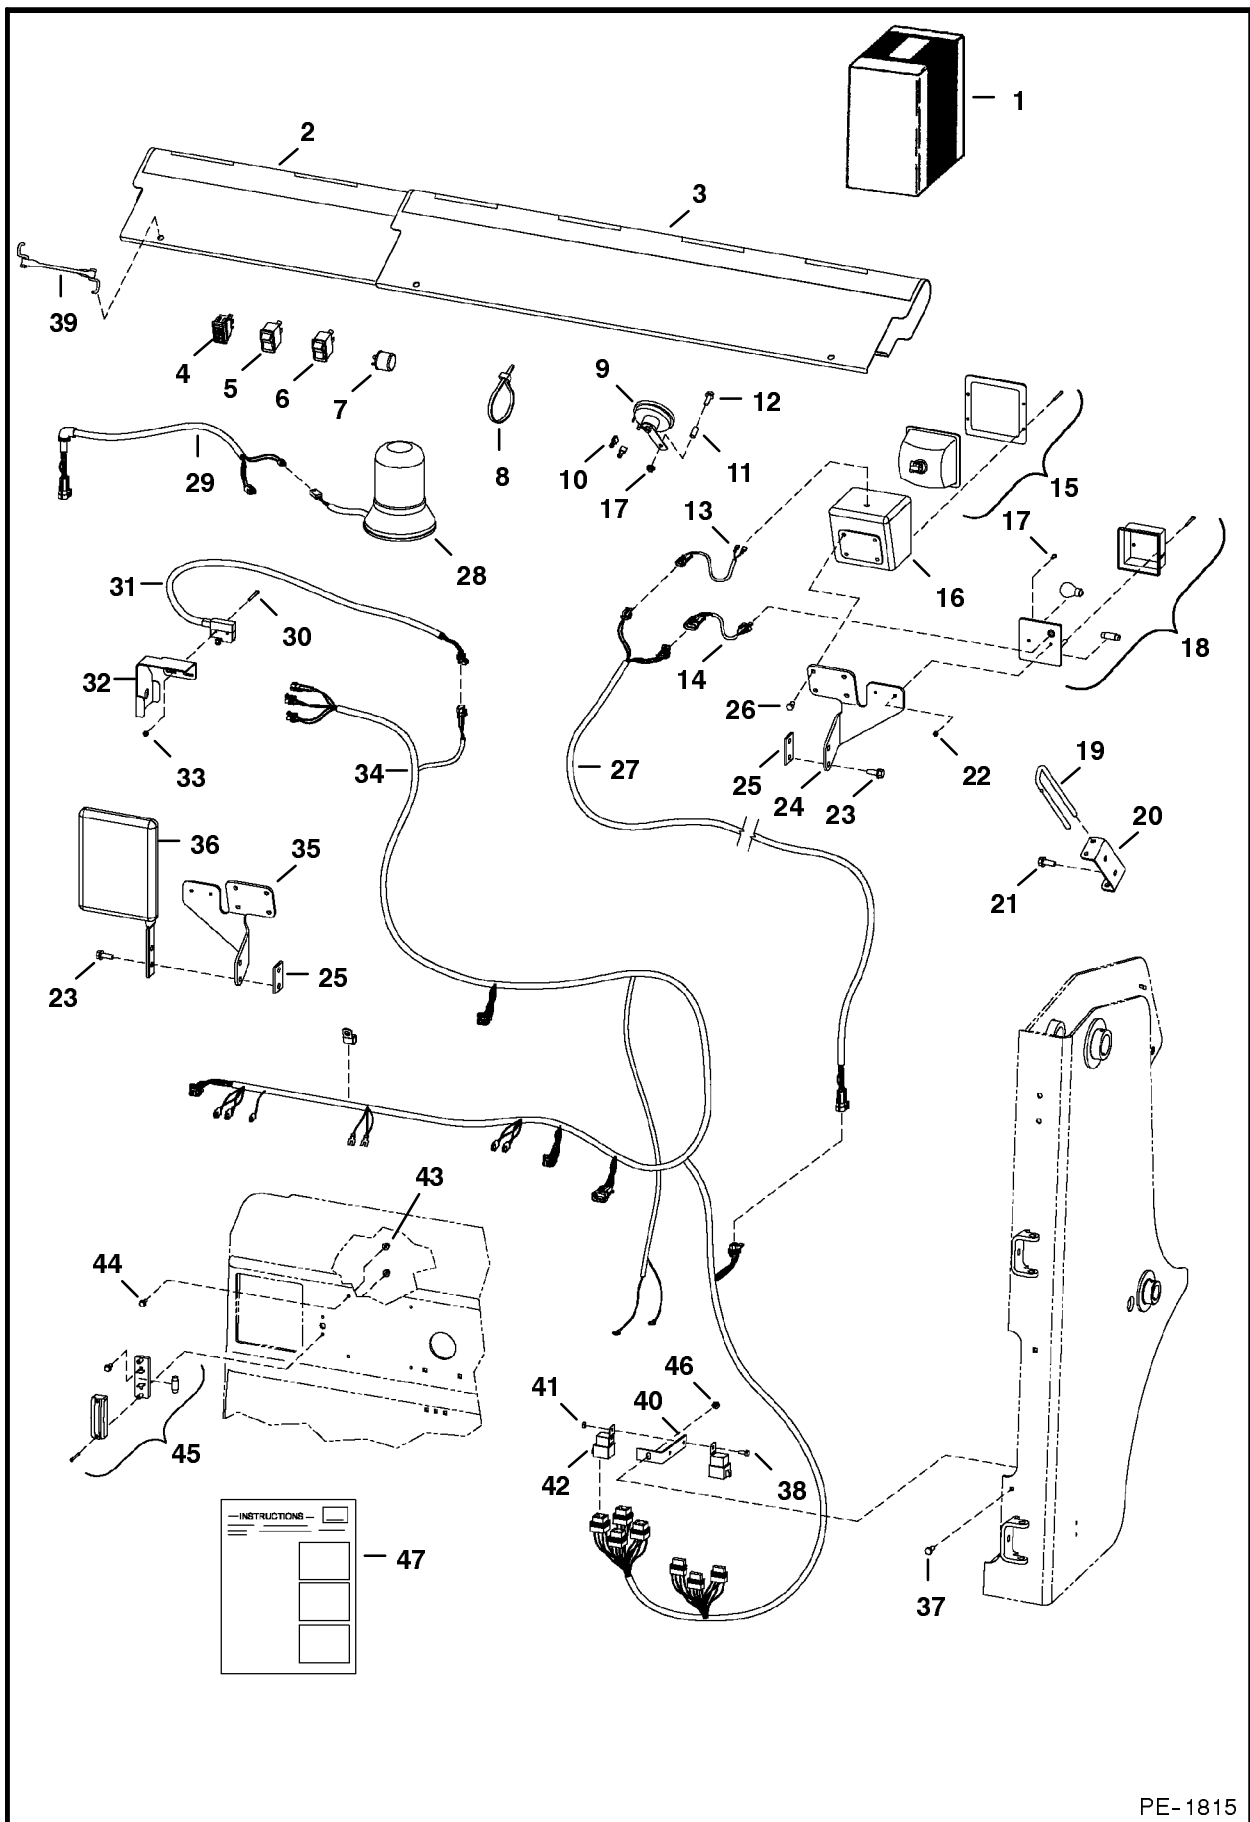


PE-1815

EUROPEAN ACCESSORIES (Cont'd)
(Road Kit)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	SALES	KIT			1
2	6713841	SHIELD	bucket		1
3	6714820	SHIELD	bucket		1
	6713840	DECAL			1
4	6676872	TURN SIGNAL			1
5	6668815	SWITCH	hazard		1
6	6668816	SWITCH	beacon		1
7	6557904	FLASHER			1
8	6624289	TIE			26
9	6671106	HORN			1
10	6675064	TERMINAL			2
11	6732206	SPACER			1
12	35C-536	BOLT			1
13	6713994	HARNESS	adapter - headlight		2
14	6713993	HARNESS	adapter - light		2
15	6665728	LIGHT	front		2
16	6707804	HOUSING			2
17	85G-808	BOLT			4
18	6665727	LIGHT	front turn		2
19	6731222	PIN	Bob-tach		1
20	6731973	HOLDER	pin		1
21	84G-3712	BOLT			2
22	12D-8	NUT			4
23	84G-3716	BOLT			4
24	6713151	MOUNT	light - R.H.		1
25	6735825	SPACER			2
26	17C-508	BOLT			8
27	6731239	HARNESS	boom light		2
28	6675523	BEACON	light		1
29	6718872	HARNESS	cab exterior		1
30	85G-616	BOLT			2
31	6661150	SWITCH			1
32	6713736	BRACKETS			1
33	12D-6	NUT			2
34	6726430	HARNESS	engine/tail - Italian		1
35	6713150	MOUNT	light - L.H.		1
36	6665860	KIT	side mirror		1
37	17C-512	BOLT			1
38	17C-410	BOLT			2
39	6731819	STRAP	rubber		3
40	6702650	MOUNT	fuse		1
41	85D-4	NUT			2
42	6670312	SOLENOID	magnetic		4
43	83D-4	NUT			4
44	35C-410	BOLT			4
45	6665729	LIGHT	license plate		1
46	55D-5	NUT			2
47	6901663	INSTRUCTIONS			1

EUROPEAN ACCESSORIES (Sound Option)

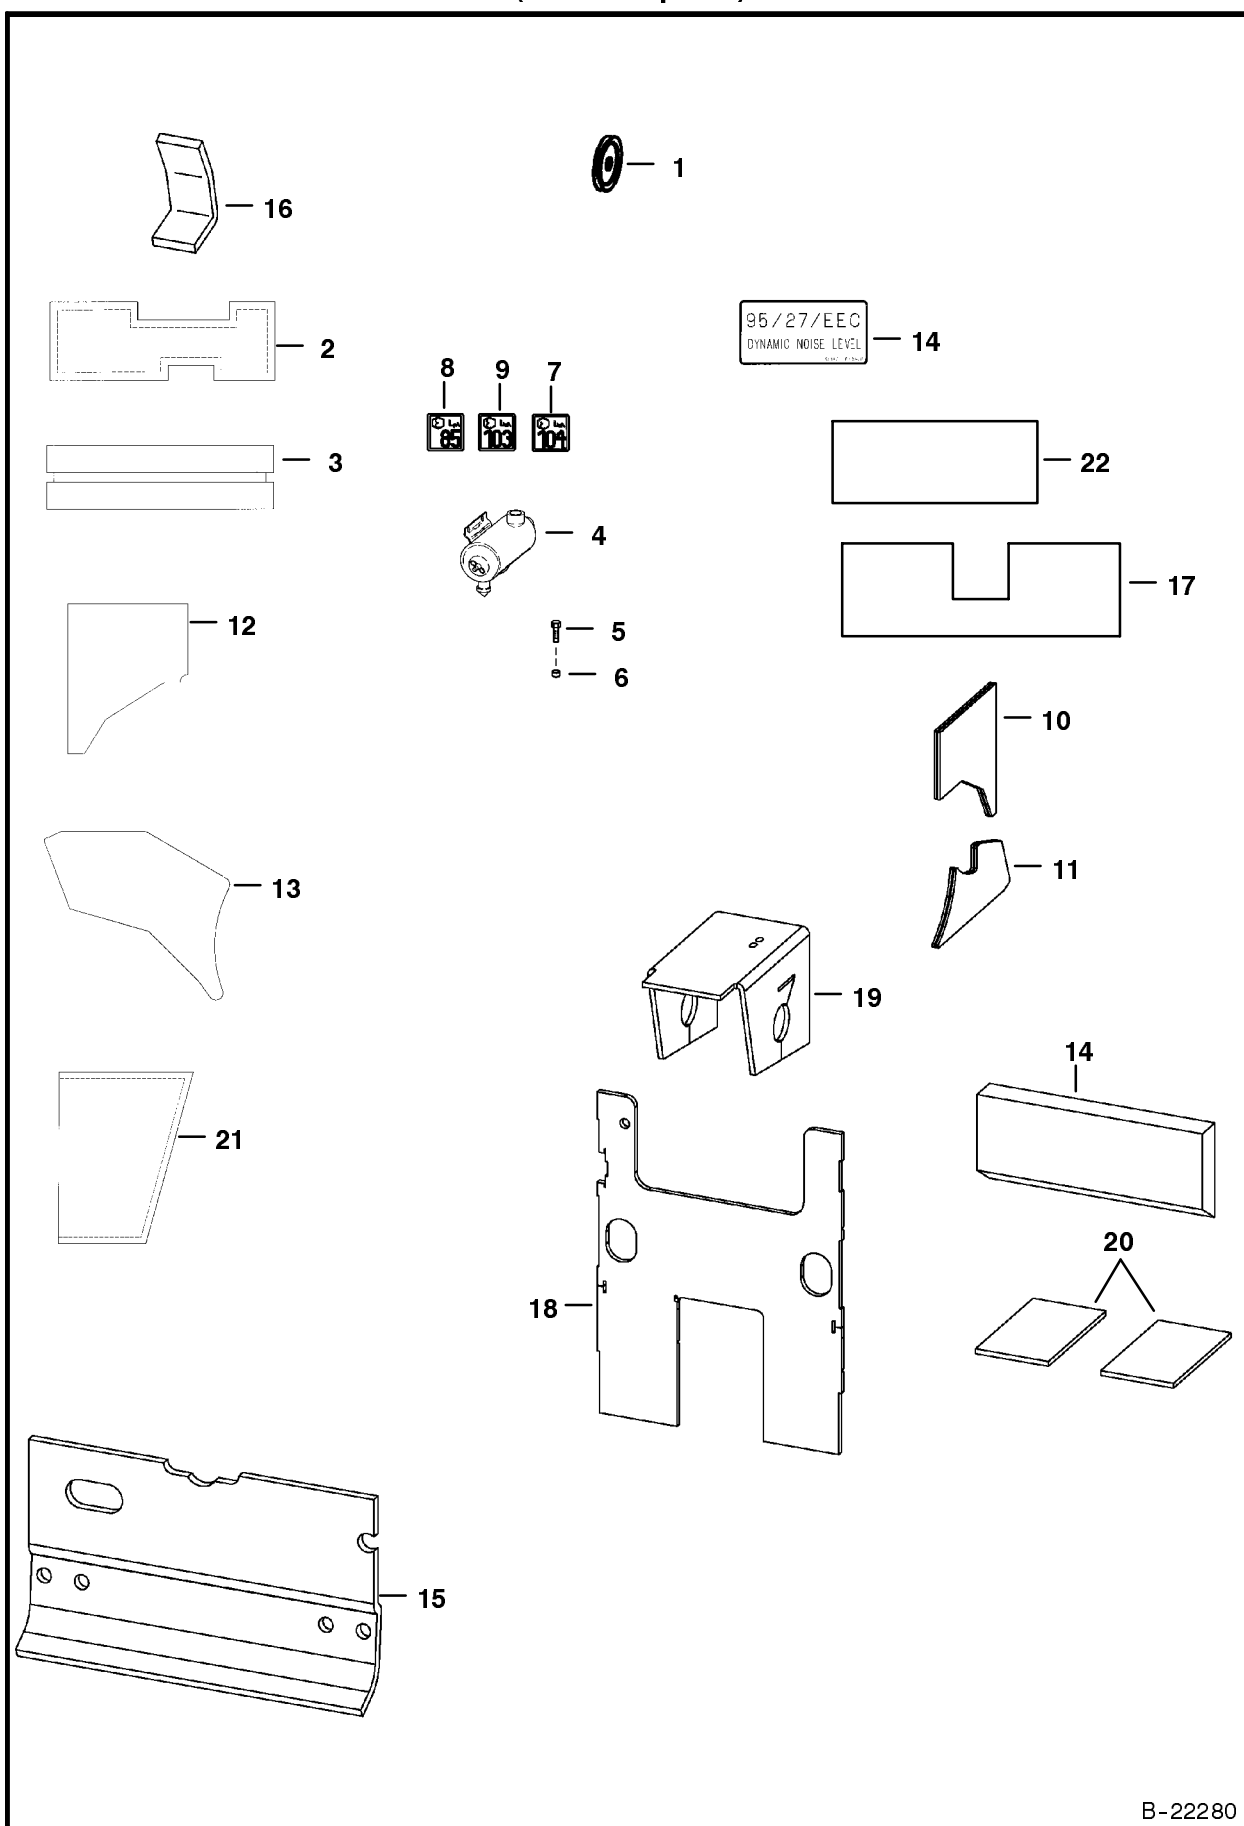


B-22280

EUROPEAN ACCESSORIES (Cont'd)

[illegible]


FIRE EXTINGUISHER

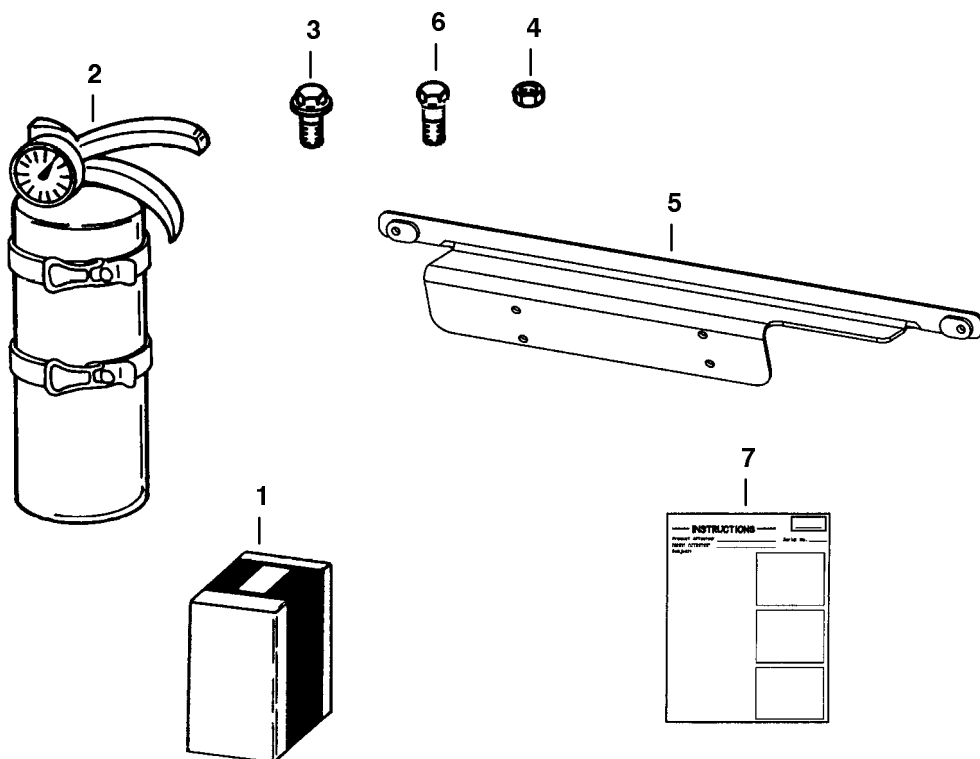

A-2386

FIRE EXTINGUISHER (Cont'd)

[illegible]

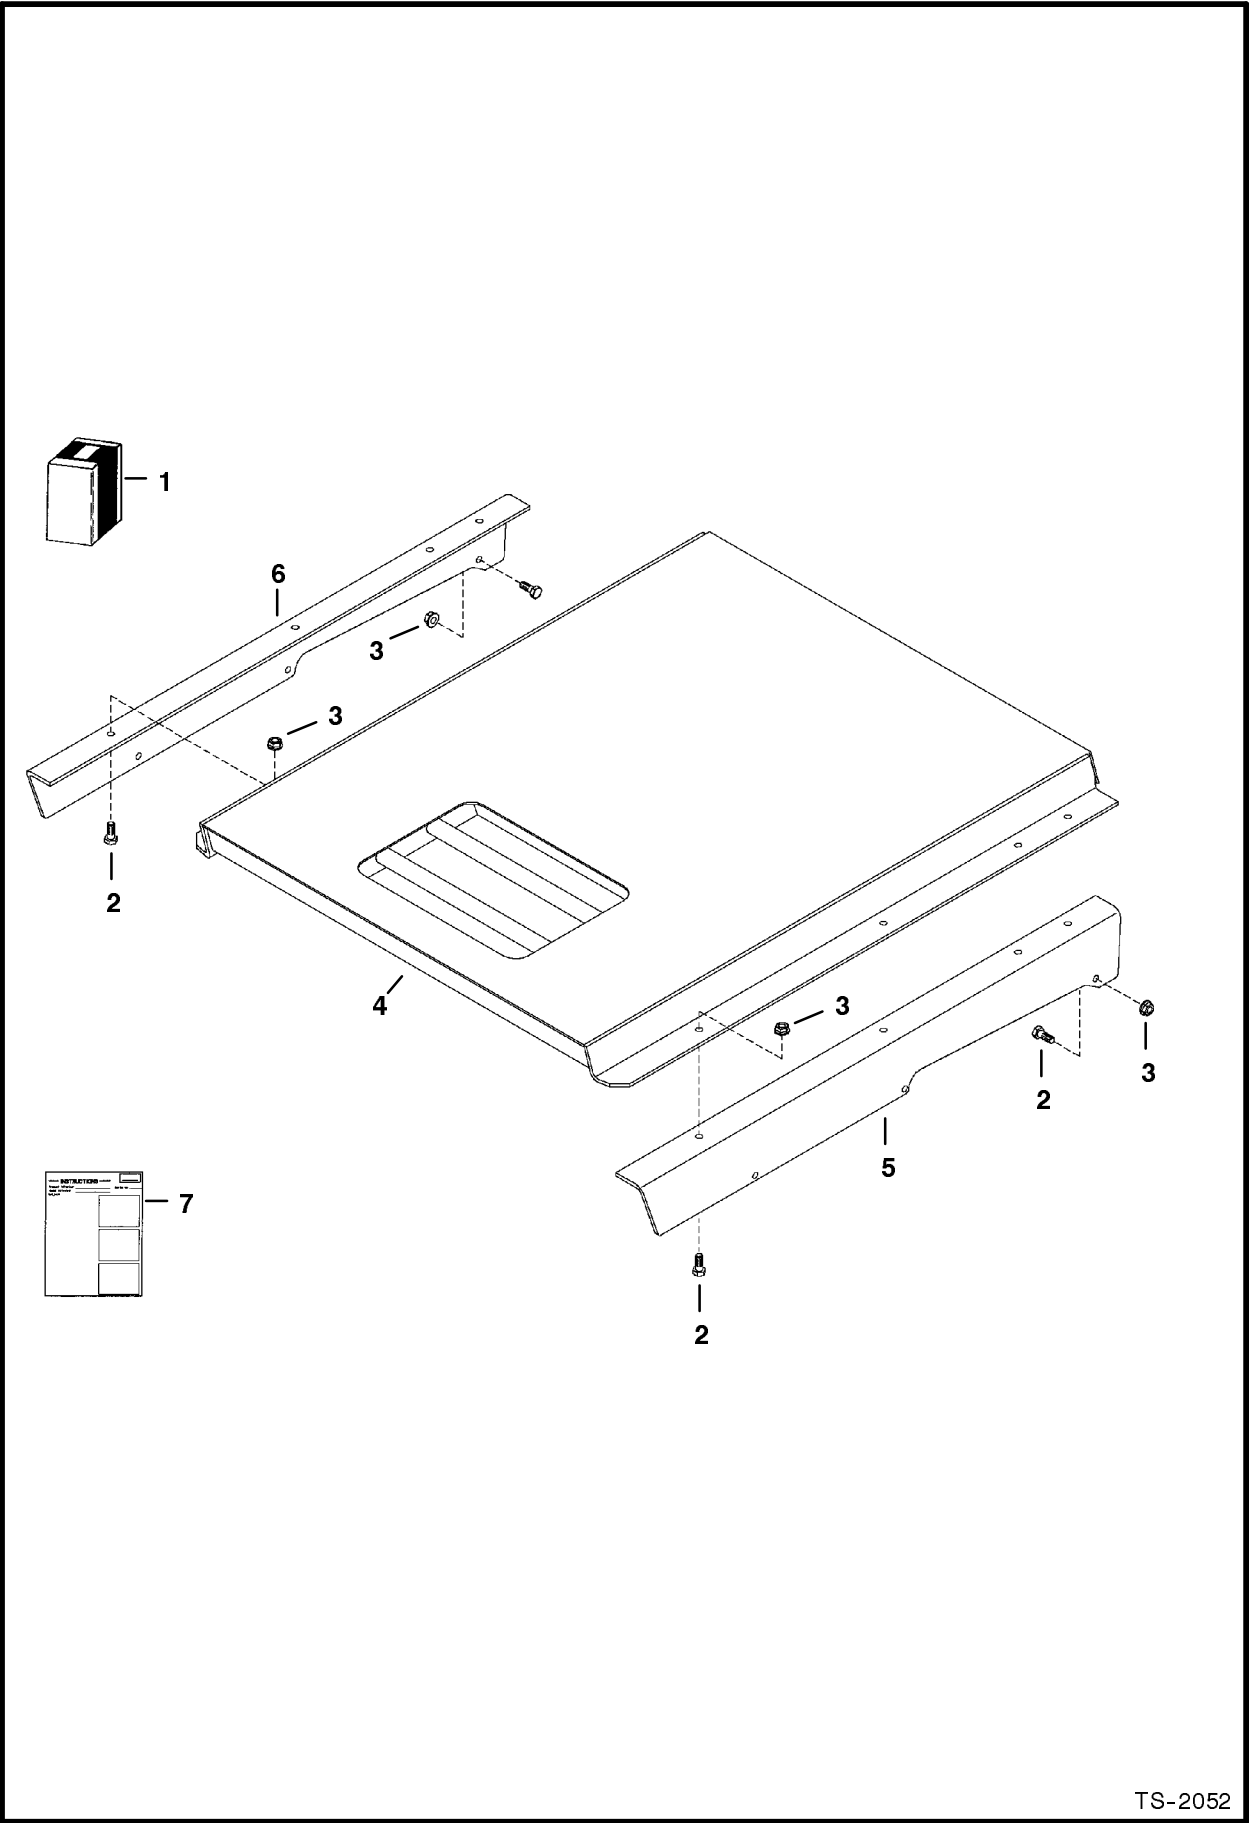


TS-2052

F.O.P.S. KIT (Cont'd)

[illegible]

FLASHER LIGHTS
(4-Way) (Turn Indicators)

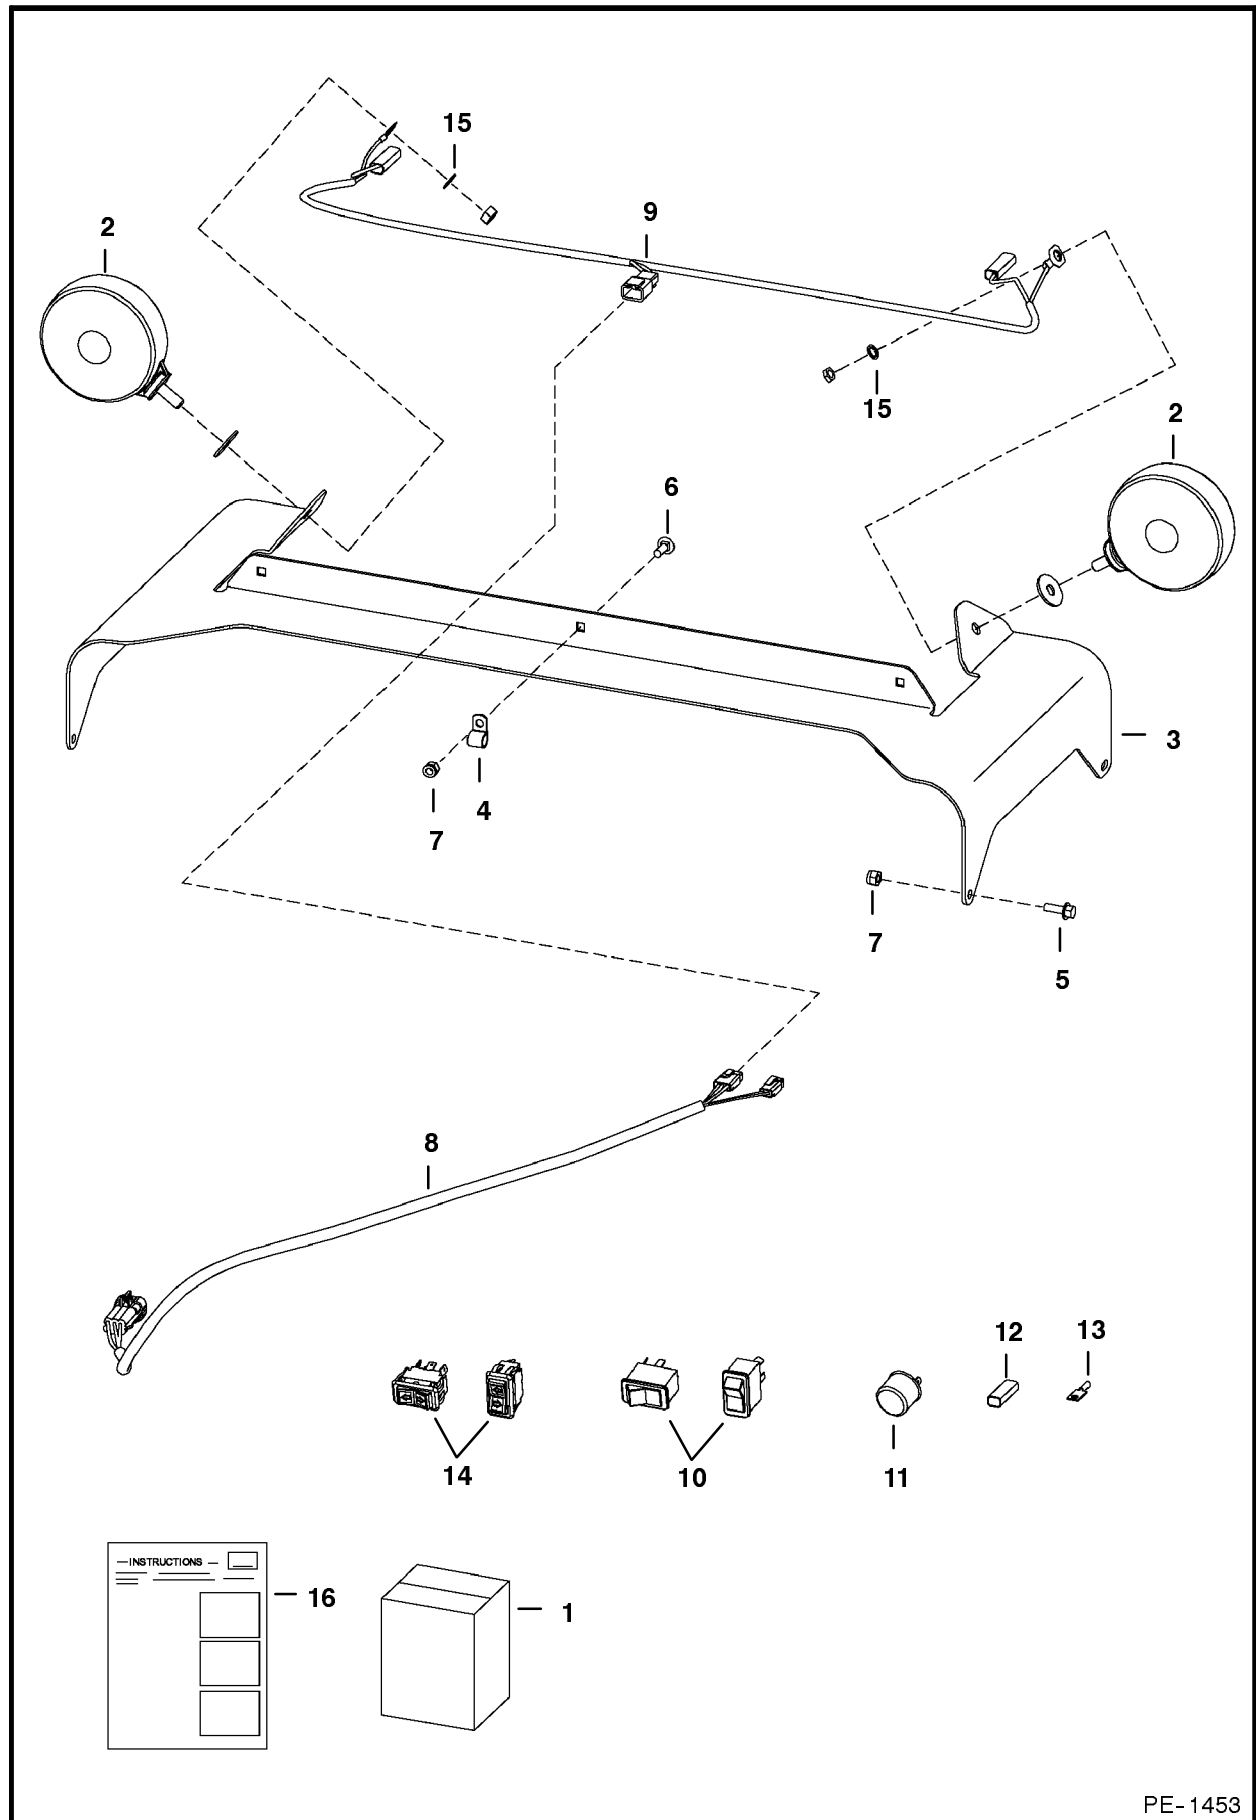


PE-1453

FLASHER LIGHTS (Cont'd) (4-Way) (Turn Indicators)

[illegible]

FRONT AUXILIARY (R.H. Kit)

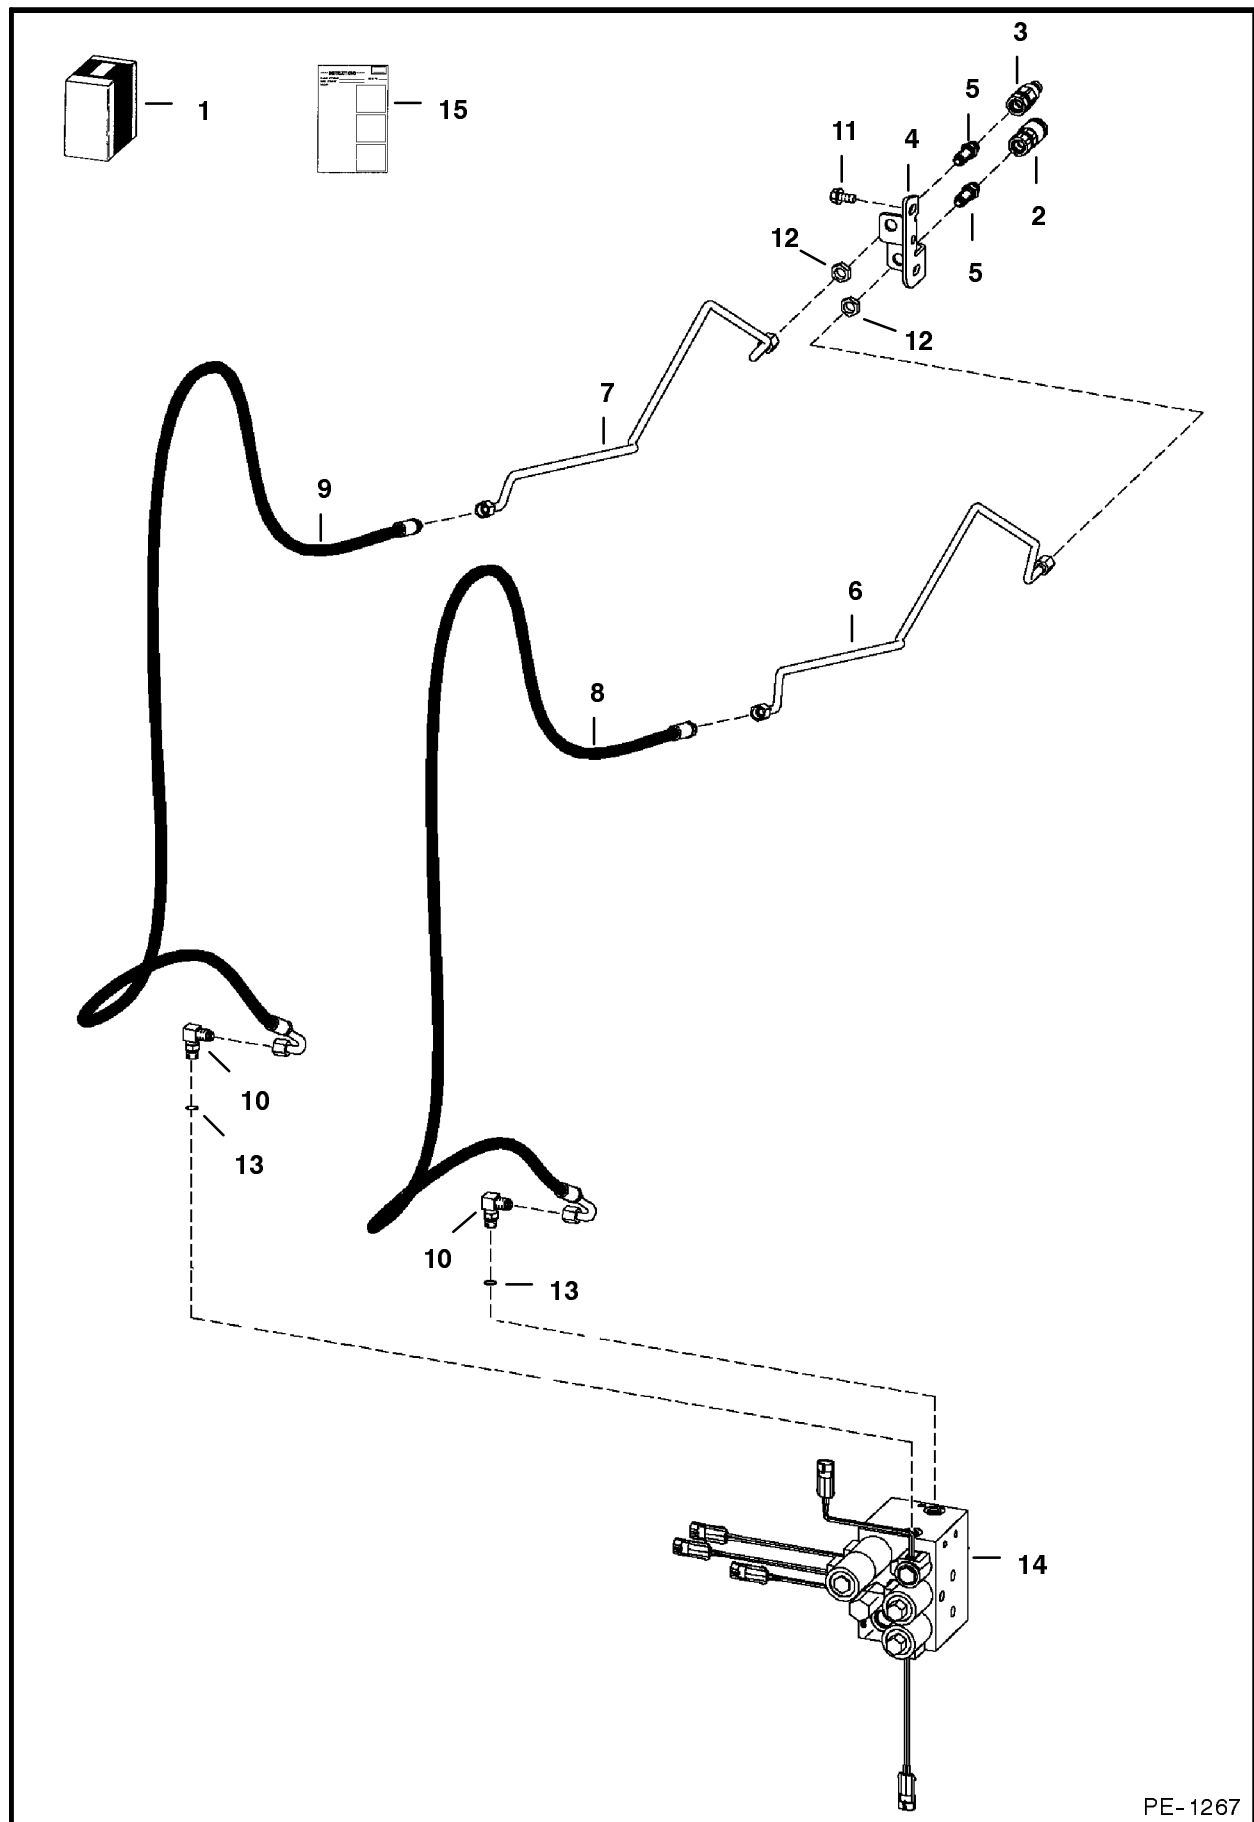


PE-1267

FRONT AUXILIARY (Cont'd)

[illegible]

GAS SPRING KIT

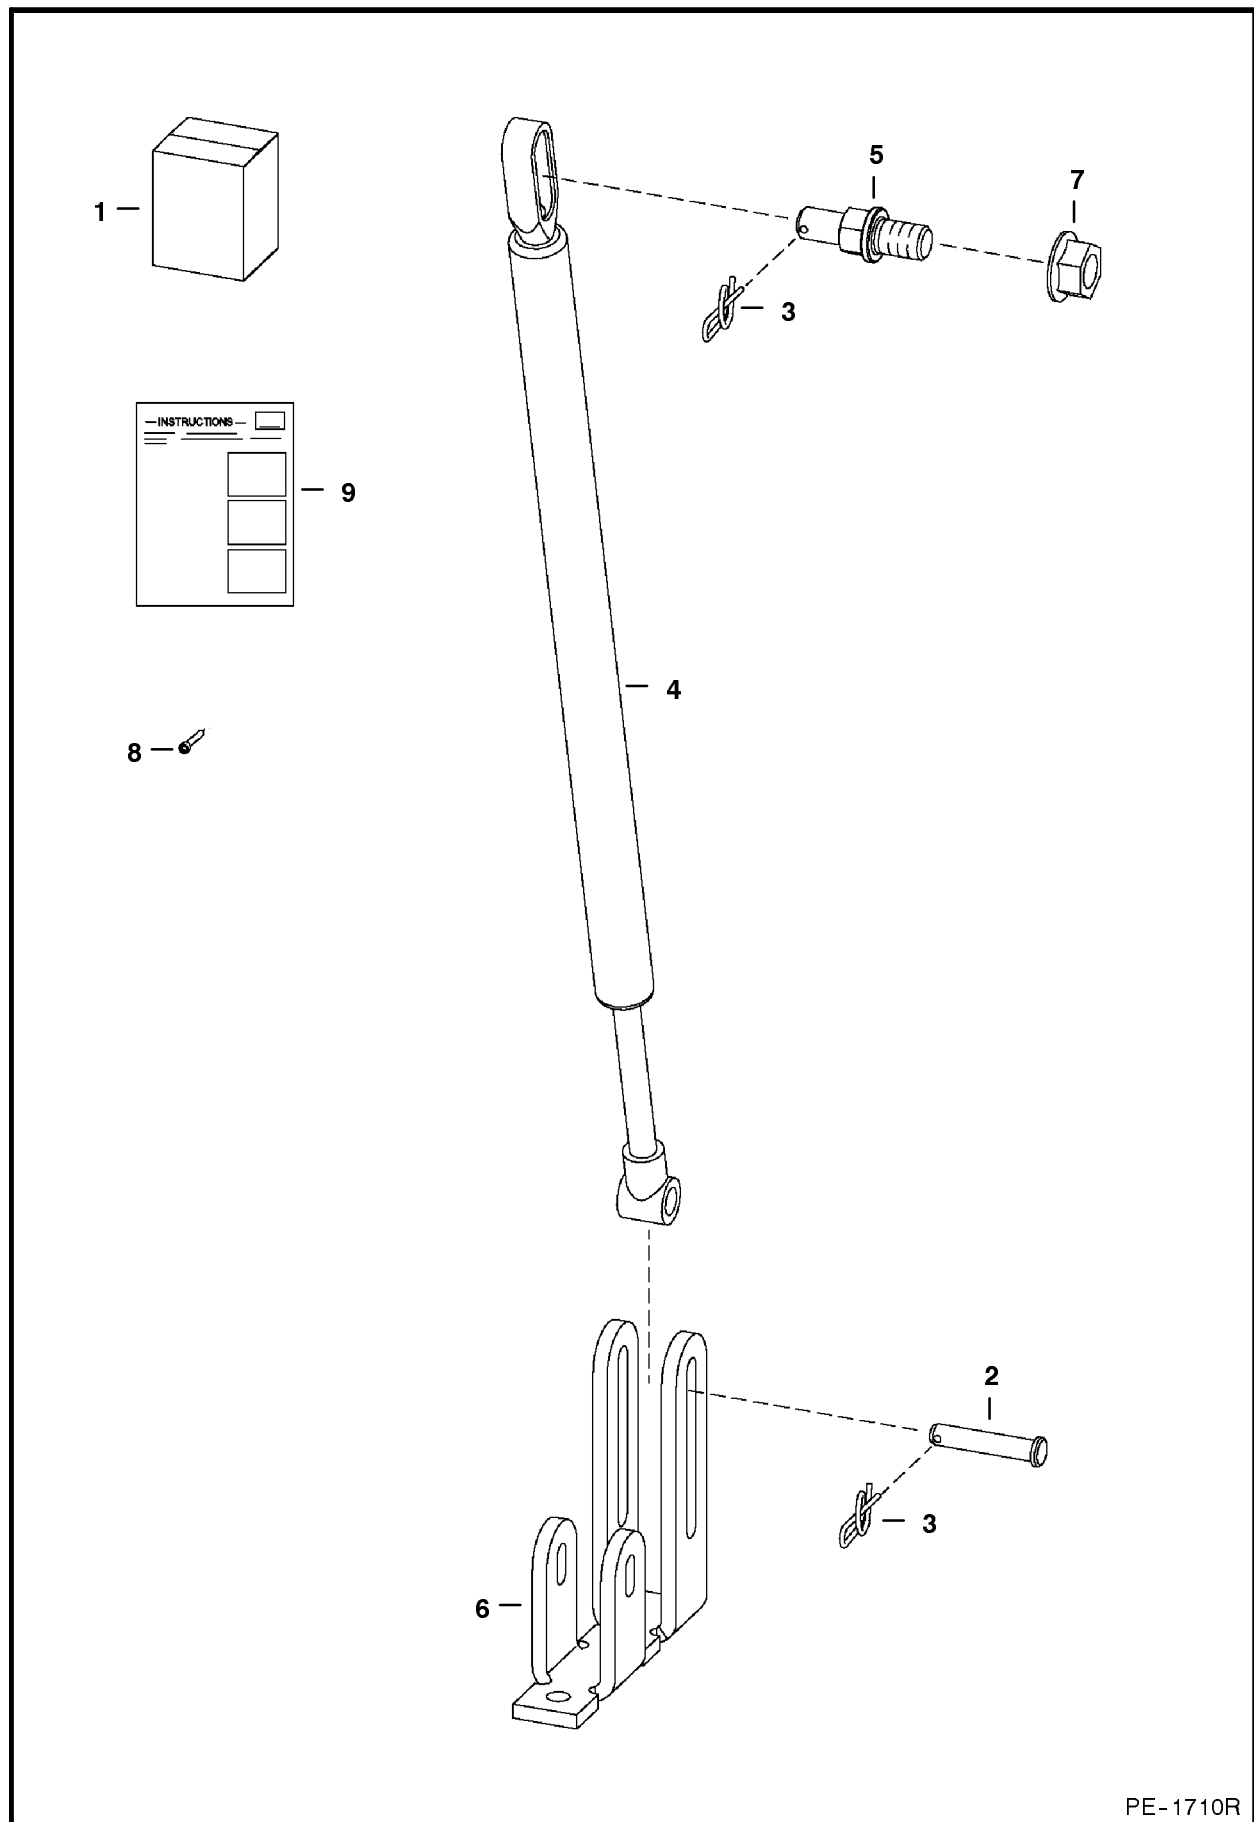


PE-1710R

GAS SPRING KIT (Cont'd)

[illegible]

HAND CONTROL KIT (W/Push Button Float)

NOTE: Also order 6900842 O/M with revised date of 6/00 or newer.

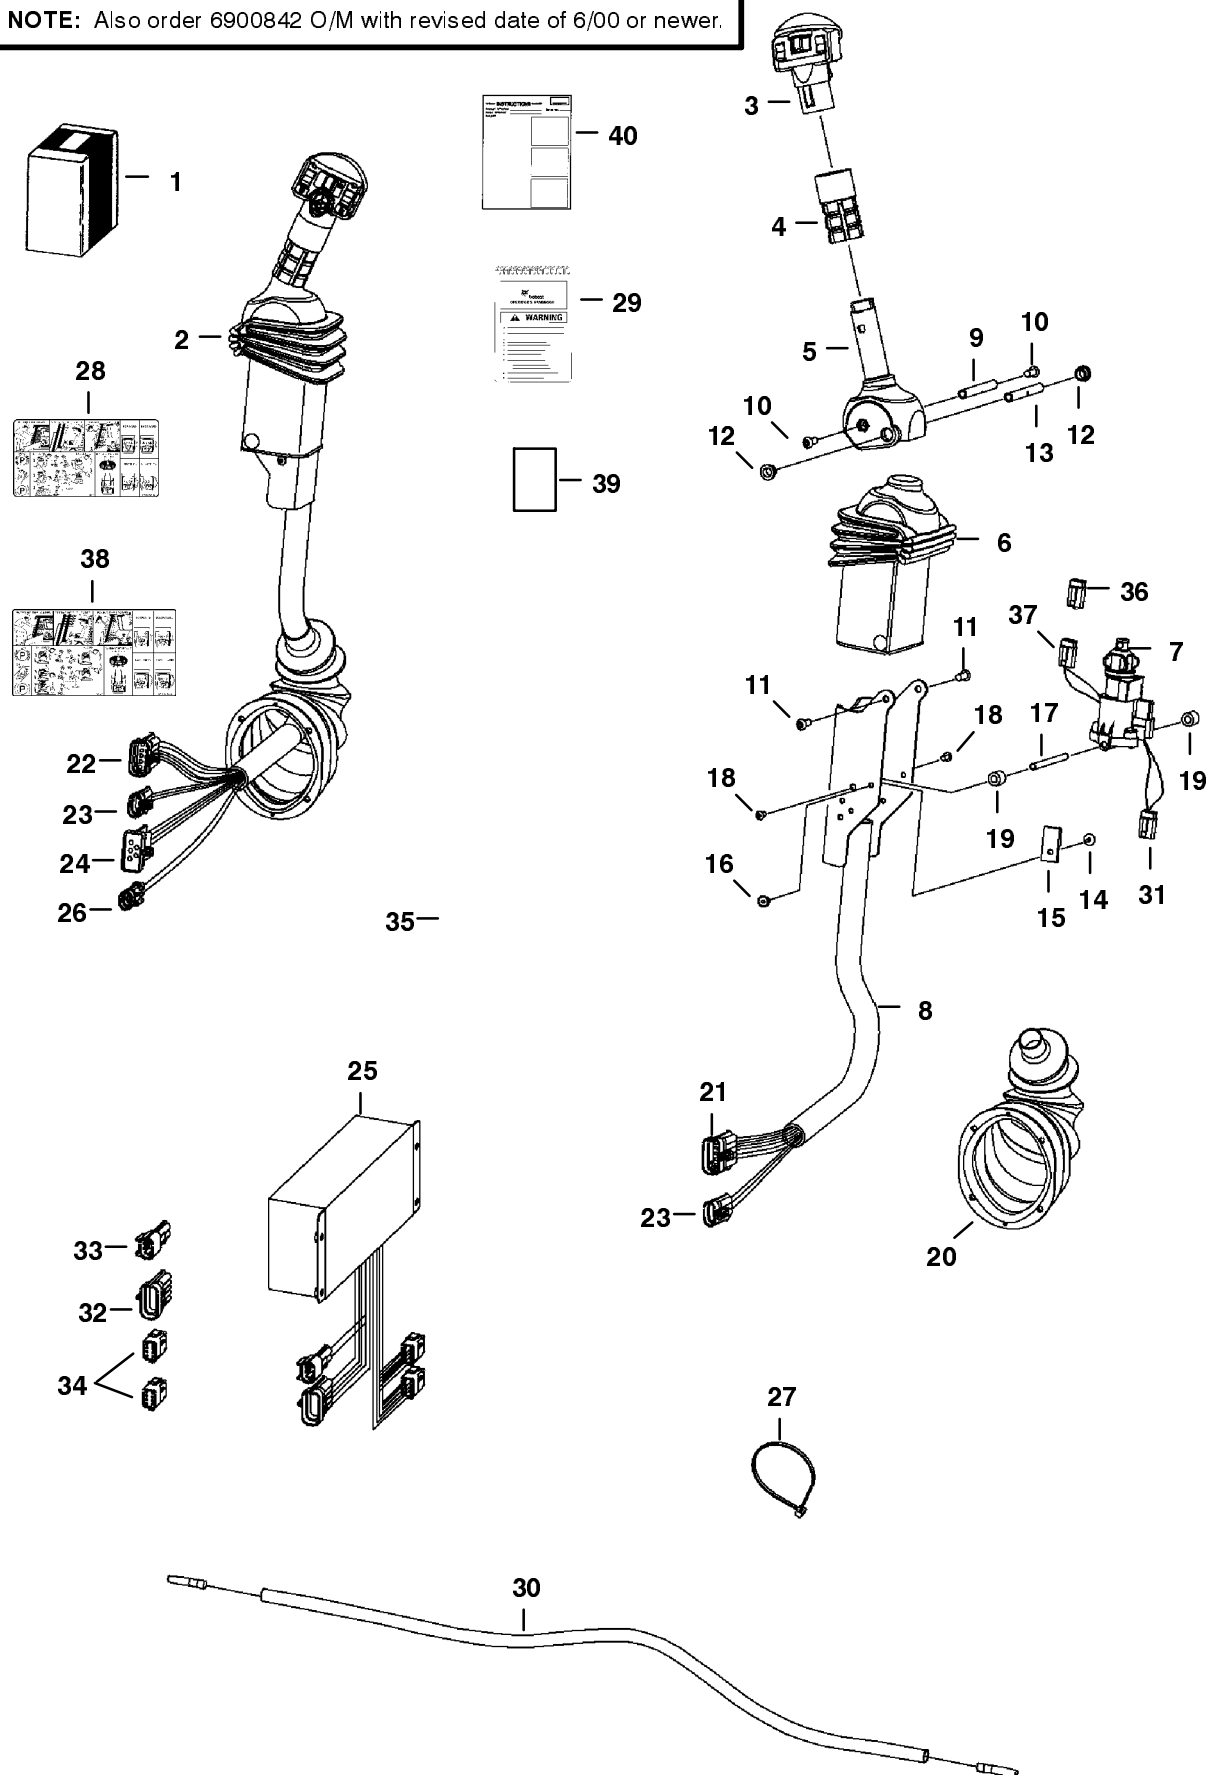


PE-1046R

HAND CONTROL KIT (Cont'd)
(W/Push Button Float)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6727298	KIT	SEE NOTE		1
2*	6684913	LEVER	tilt - R.H. - Was 6680426 [A]		1
*	6684914	LEVER	lift - L.H. - Was 6680425 [A]		1
3	NAP	HANDLE	tilt - R.H. - SEE BTI 335		1
	6680417	HANDLE	lift - L.H.		1
4	NAP	GRIP	Order 6702621 Grip & cut to 2.8"		2
5	6729594	HANDLE	R.H.		1
	6729595	HANDLE	L.H.		1
6	6680471	COVER			2
7	6684910	SENSOR			2
	6670706	CONNECTOR	3-pin		1
	6670714	PIN			3
8	6670710	LOCK			1
	6680481	CHANNEL	R.H.		1
	6680480	CHANNEL	L.H.		1
9	6680469	SPACER			1
10	6727065	BOLT			2
11	25GT-410	BOLT			8
12	6702990	BUSHING			4
13	6713043	SPACER			4
14	6665321	RIVET	male		2
15	6665000	CLIP			2
16	6665322	RIVET	female		2
17	6719834	SPACER	threaded		2
18	6727065	BOLT			4
19	6719835	SLEEVE			4
20	6532127	BOOT			2
21	6640692	CONNECTOR	10-pin		1
	6640690	PIN			8
	6640694	LOCK			1
22	6641176	SEAL			8
	6646582	PLUG	cavity		2
	6640692	CONNECTOR	10-pin		1
	6640690	PIN			6
	6640694	LOCK			1
	6641176	SEAL			6
23	6646582	PLUG	cavity		4
	6640699	CONNECTOR	3-pin		2
	6640690	PIN			3
24	6641176	SEAL			3
	6640700	LOCK			3
	6667144	CONNECTOR	5-pin		1
	6640690	PIN			3
	6641176	SEAL			3
	6646582	PLUG	cavity		1
25	6667145	LOCK			1
	6676153	CONTROLLER			1
26	6641179	CONNECTOR	2-pin		1
	6640690	PIN			2
	6641176	SEAL			2
	6641180	LOCK			1

HAND CONTROL KIT (Cont'd) **(W/Push Button Float)**

NOTE: Also order 6900842 O/M with revised date of 6/00 or newer.

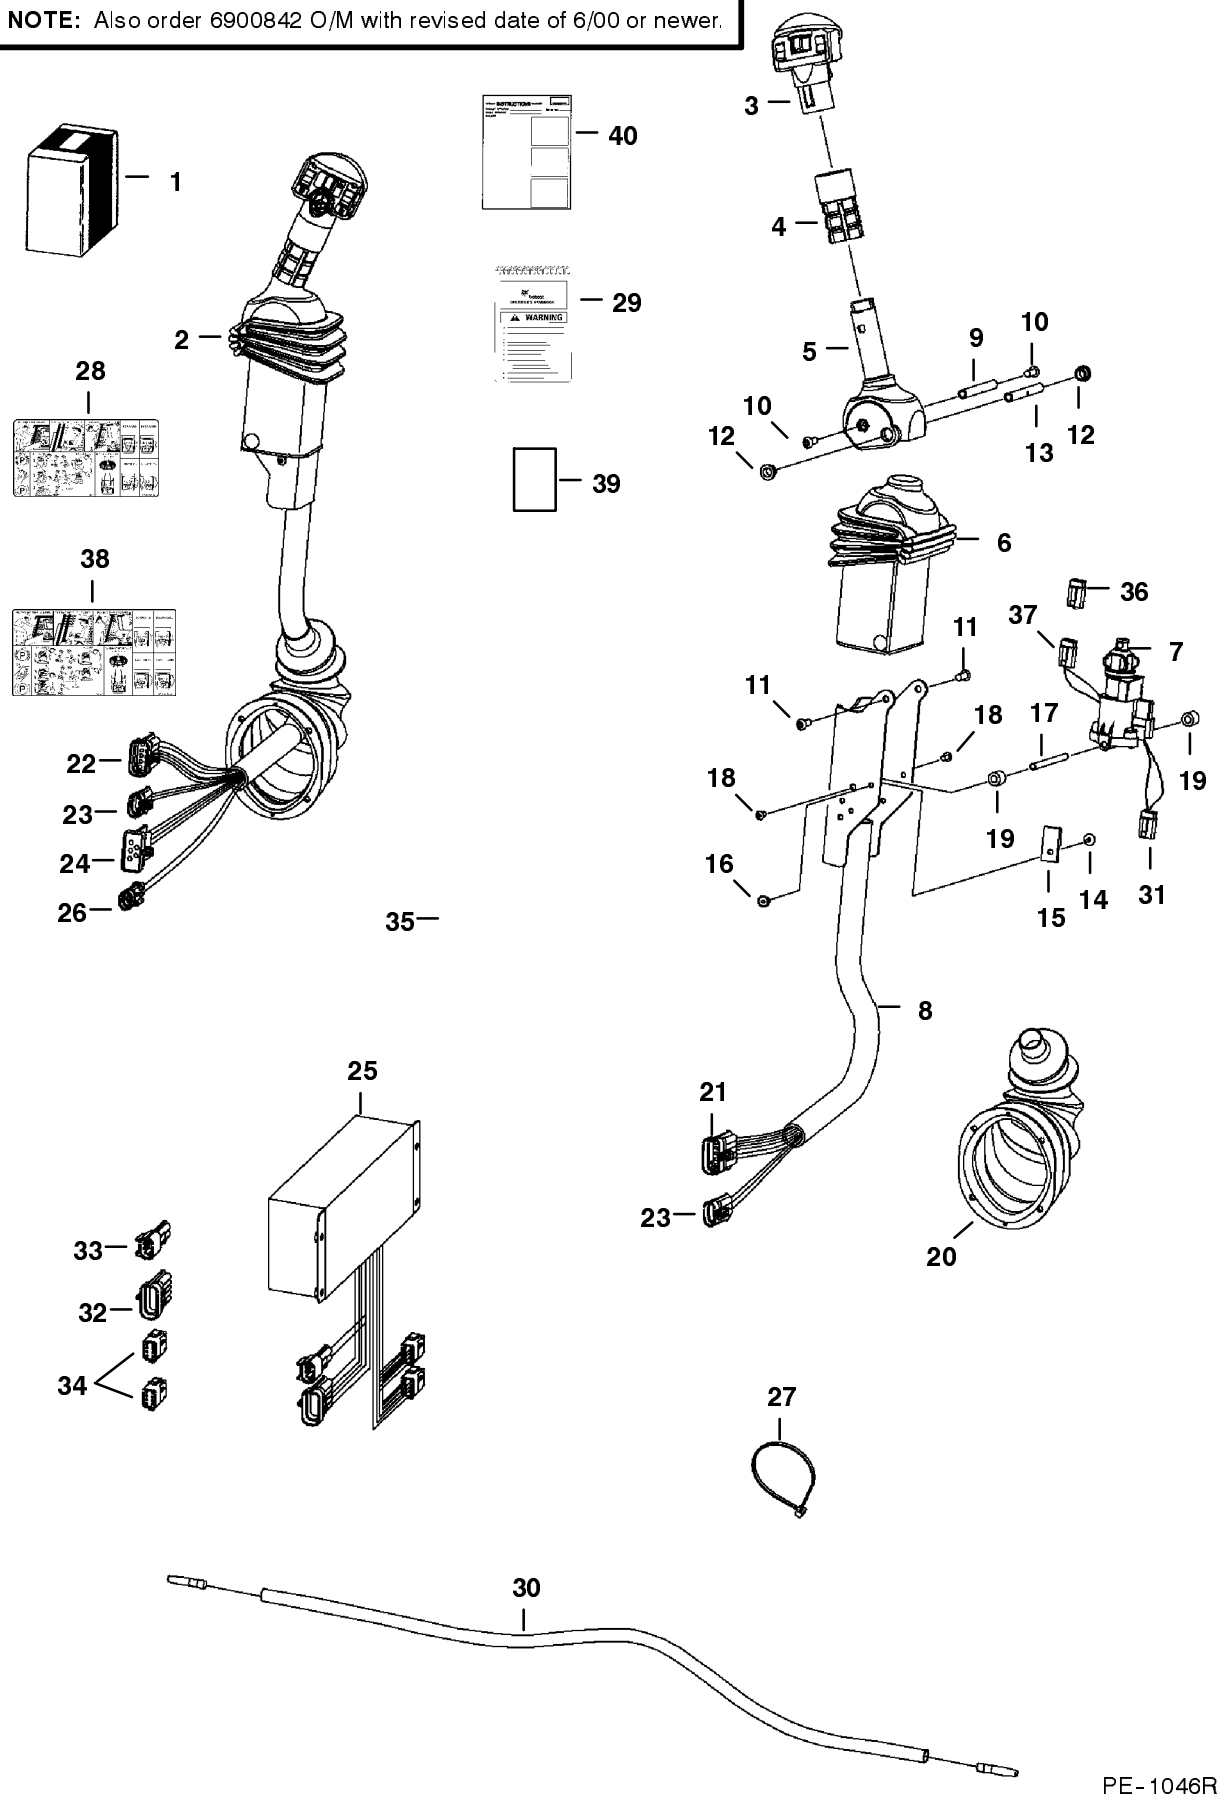


PE-1046R

HAND CONTROL KIT (Cont'd)

[illegible]

HEATER & A/C (Heater Kit)

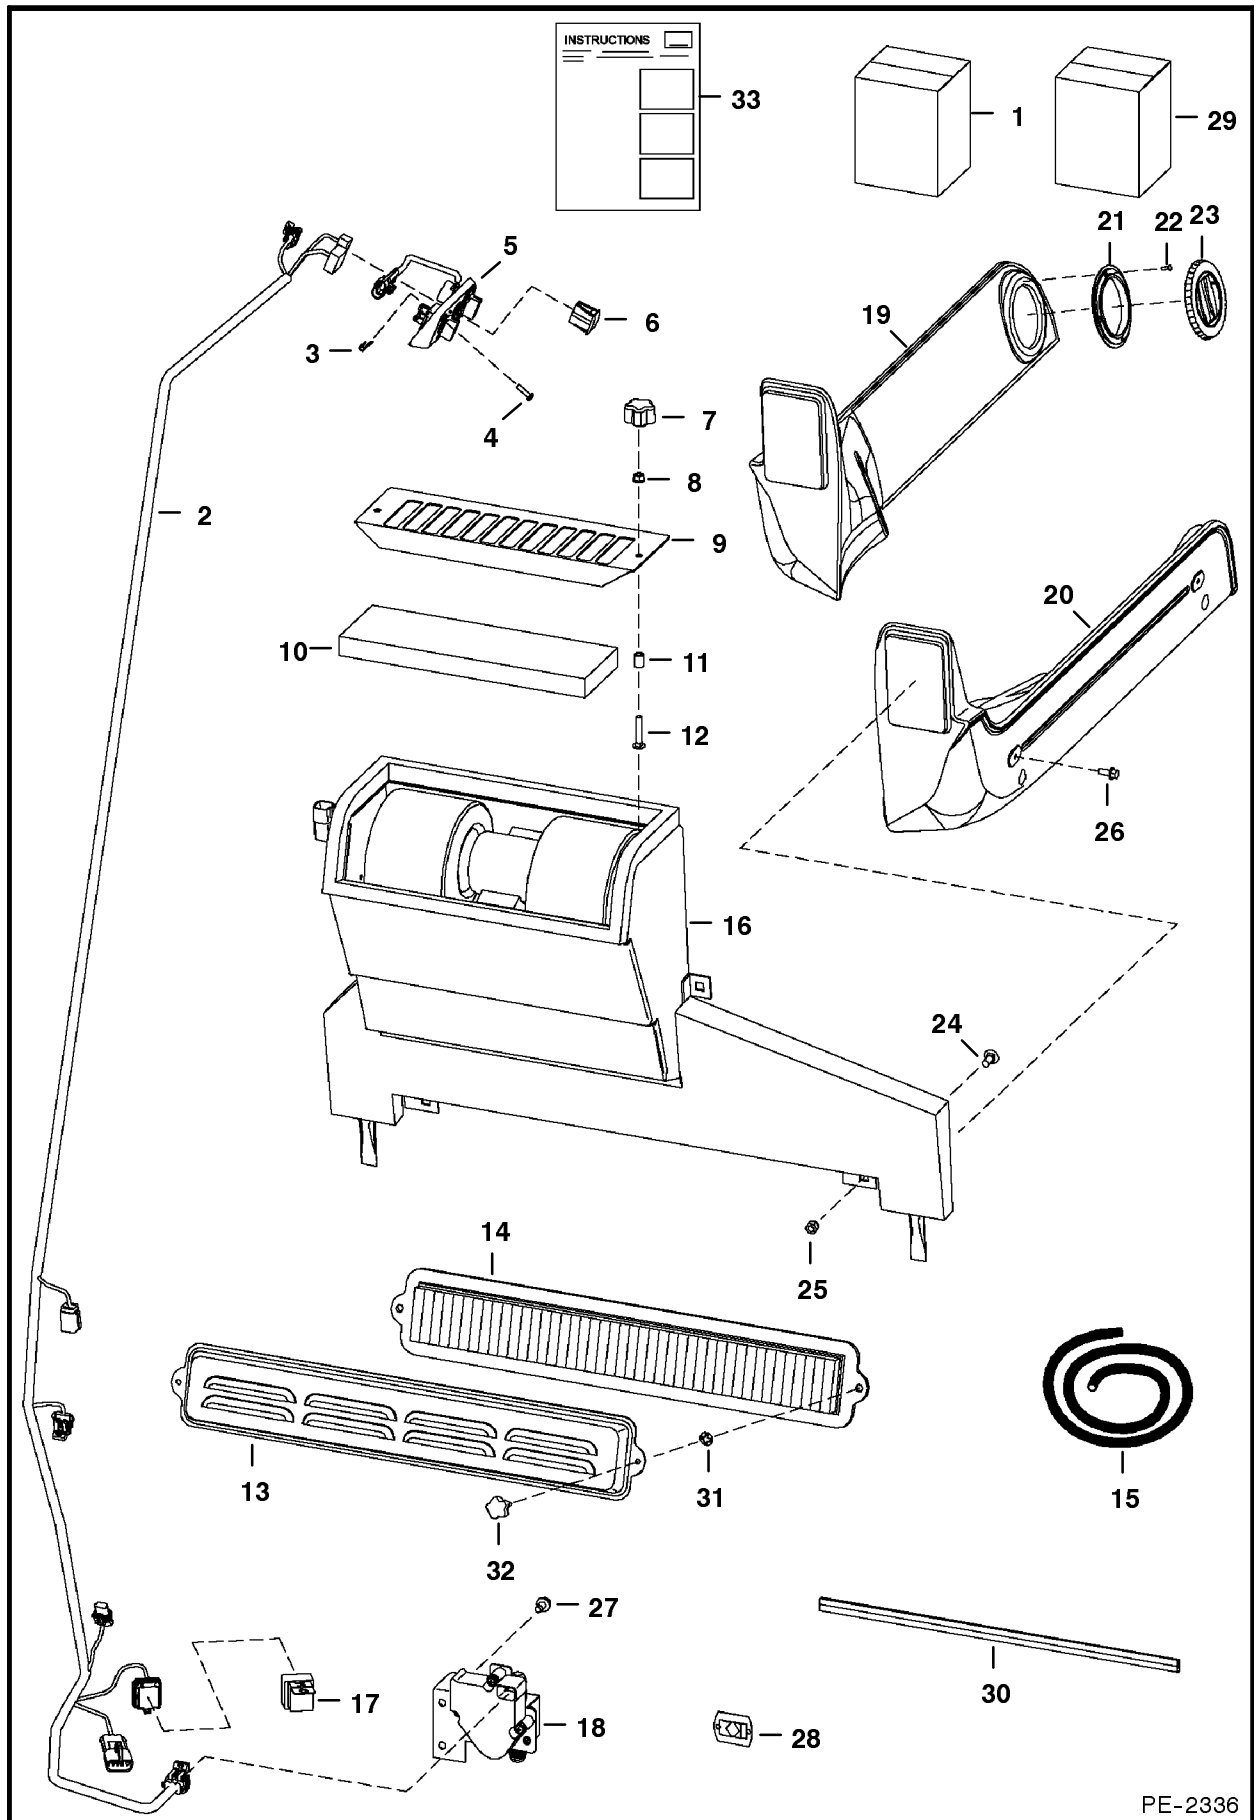


PE-2336

HEATER & A/C (Cont'd) **(Heater Kit)**

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6735773	HEATER KIT	Ref. 2-12, 16-28 & 30-33		1
2	6725933	HARNESS	hvac-W/Ref. 17		1
	6725273	HARNESS	AHC		1
3	6669091	CLIP	retainer		3
4	6669224	BOLT			3
5	6674228	PANEL	control		1
	6640699	CONNECTOR			1
	6718579	DECAL			1
	6718887	PANEL	A/C		1
	6675176	SWITCH	blower		1
	6675177	KNOB			1
	6675846	POTENTIOMETER			1
6	6675181	PLUG	switch hole		1
7	6681614	KNOB			2
8	83D-4	NUT			2
9	6718175	SCREEN	filter		1
10	6678207	FILTER	recirculation		1
11	6718837	SPACER			2
12	37C-424	BOLT			2
13	6727847	COVER			1
14	6677983	FILTER			1
15	6513152	SEAL	bulk - Sold Per Foot		x
16		HEATER	See Page 360		1
17	6670312	SOLENOID	relay		1
18	7100019	VALVE			1
	6640699	CONNECTOR			1
	6675175	BRACKET			1
	6675172	BRACKET			1
	6675173	ACTUATOR	pig tail		1
	6680054	ACTUATOR	square plug		1
	6675174	BODY			1
19	6735246	DUCT	L.H.		1
20*	6735245	DUCT	R.H. - Was 6717643 [A]		1
21	6675179	FLANGE			4
22	57G-608	SCREW			16
23	6674231	VENT	round		4
24	37C-512	BOLT			4
25	59D-5	NUT			4
26	35C-410	BOLT			4
27	84G-3110	BOLT			2
28	774220	NUT	spring		2
29	6725513	PACKAGE	decal		1
30	NAP	SEAL	16.25" (412,8 mm) long -		1
			Order Ref. 15		
31	6676516	NUT	push		2
32	6726386	KNOB			2
33	6900850	INSTRUCTIONS			1
	6902356	INSTRUCTIONS	800 Series W/Kubota Engine		1


HEATER & A/C (HVAC Assembly)

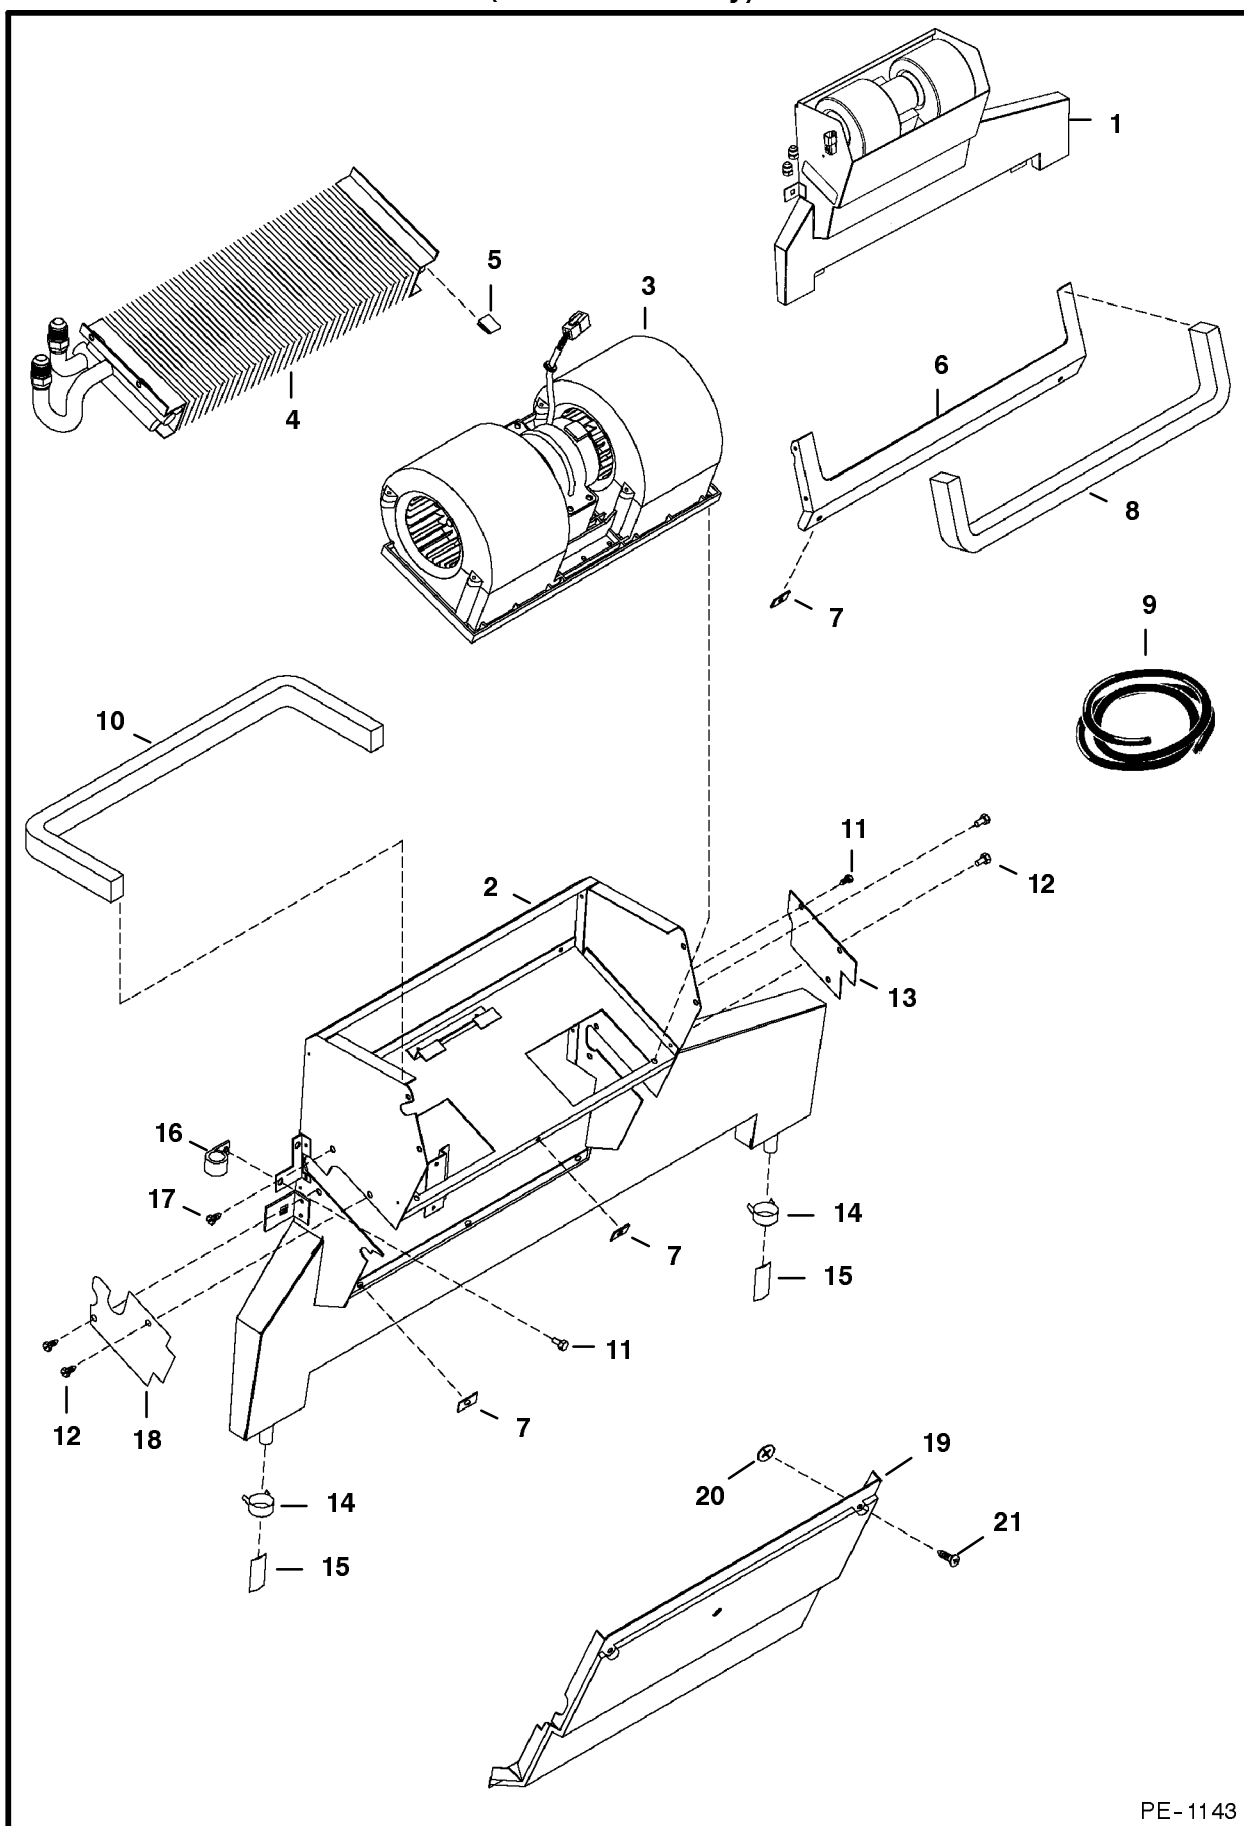

PE-1143

[illegible]

**HEATER & A/C
(Heater Blower Seal Kit)**

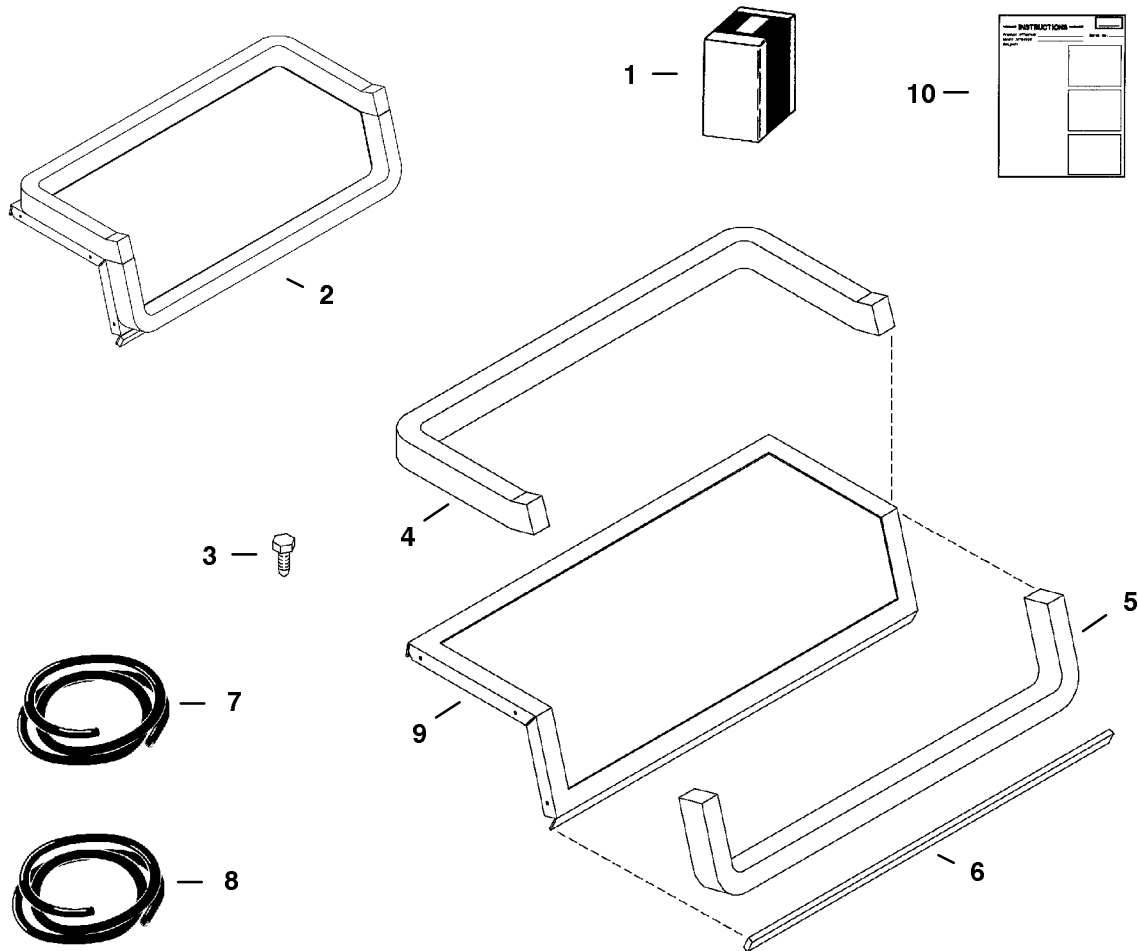


PE-1151

HEATER & A/C (Cont'd)

(Heater Blower Seal Kit)

[illegible]


HEATER & A/C (Heater Coil Kit)

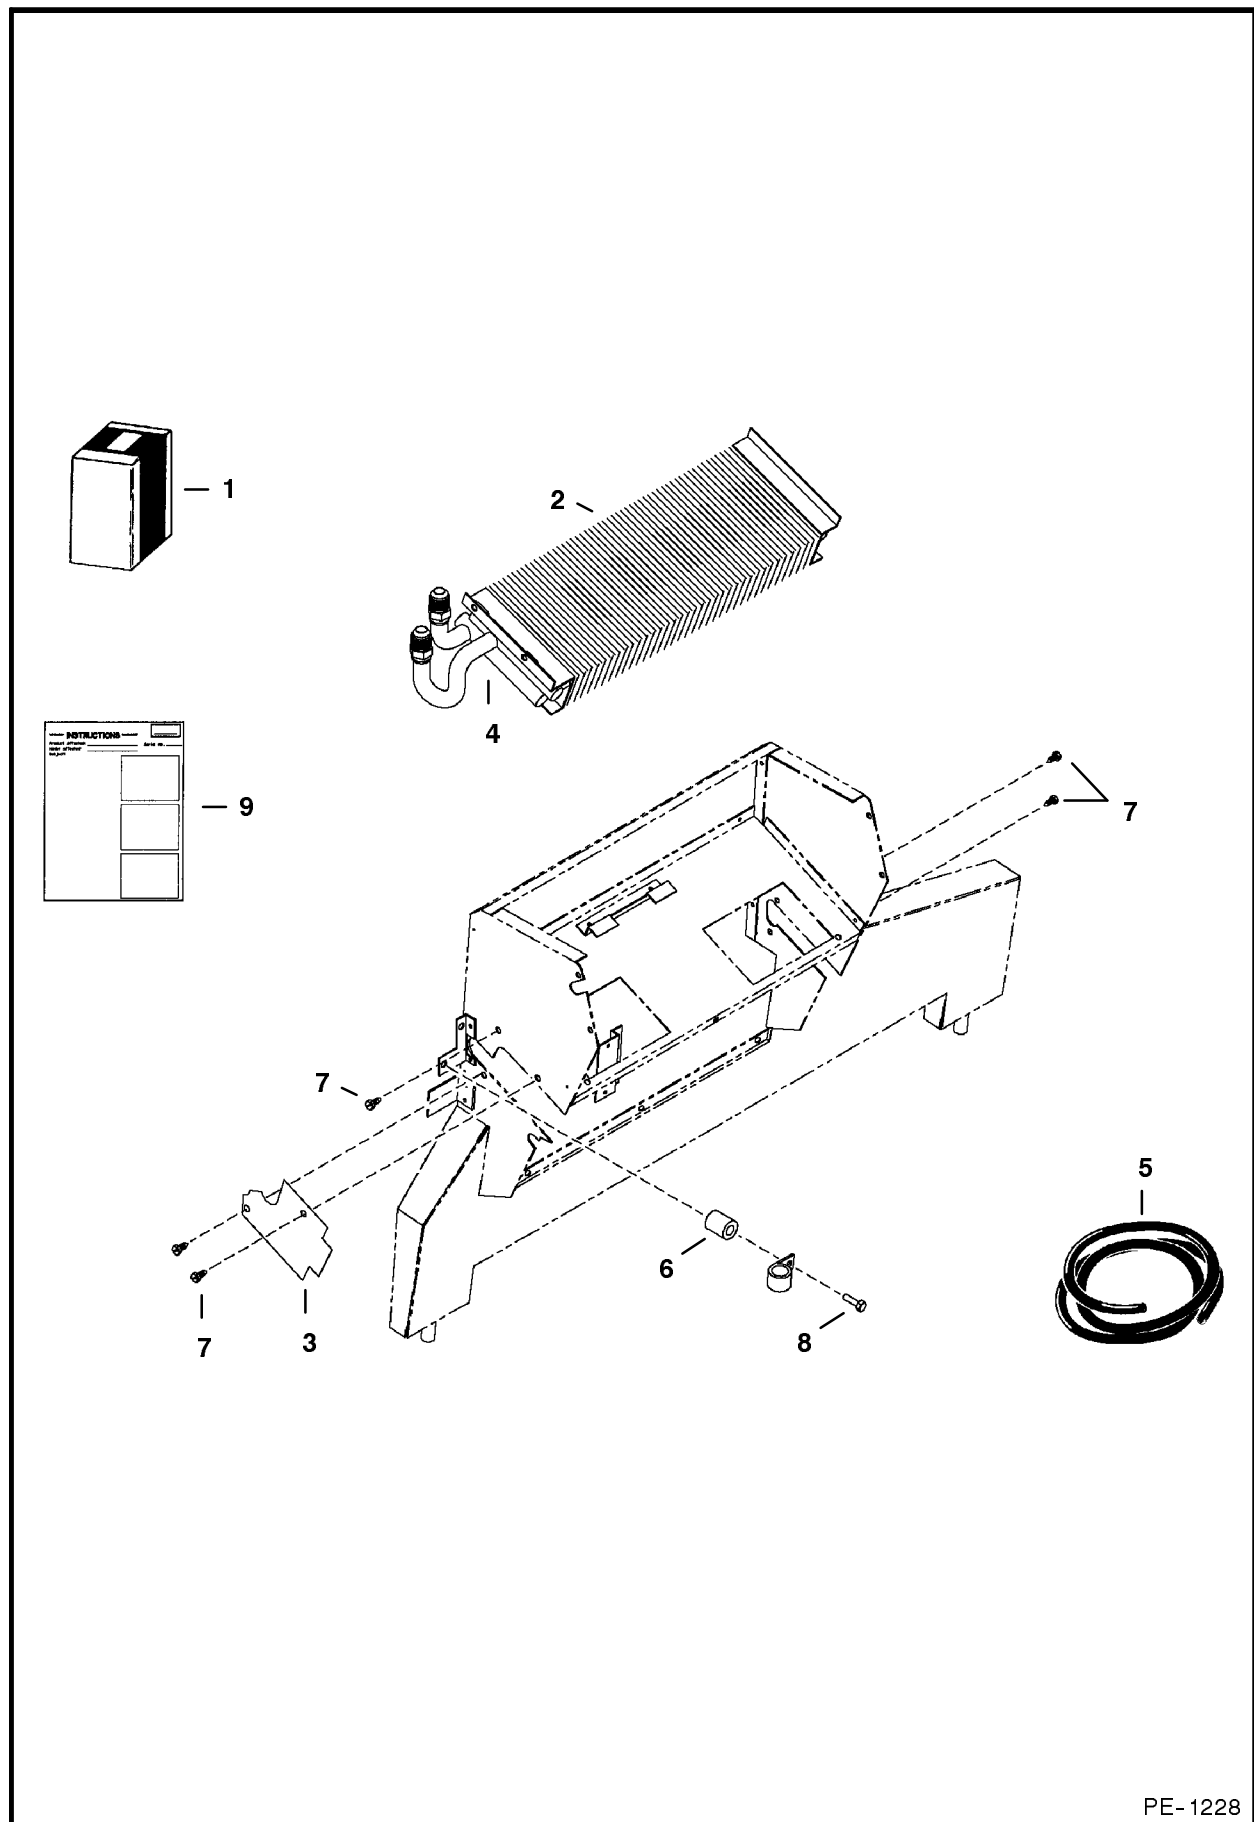

PE- 1228

[illegible]


HEATER & A/C
(Heater Plumbing Kit)

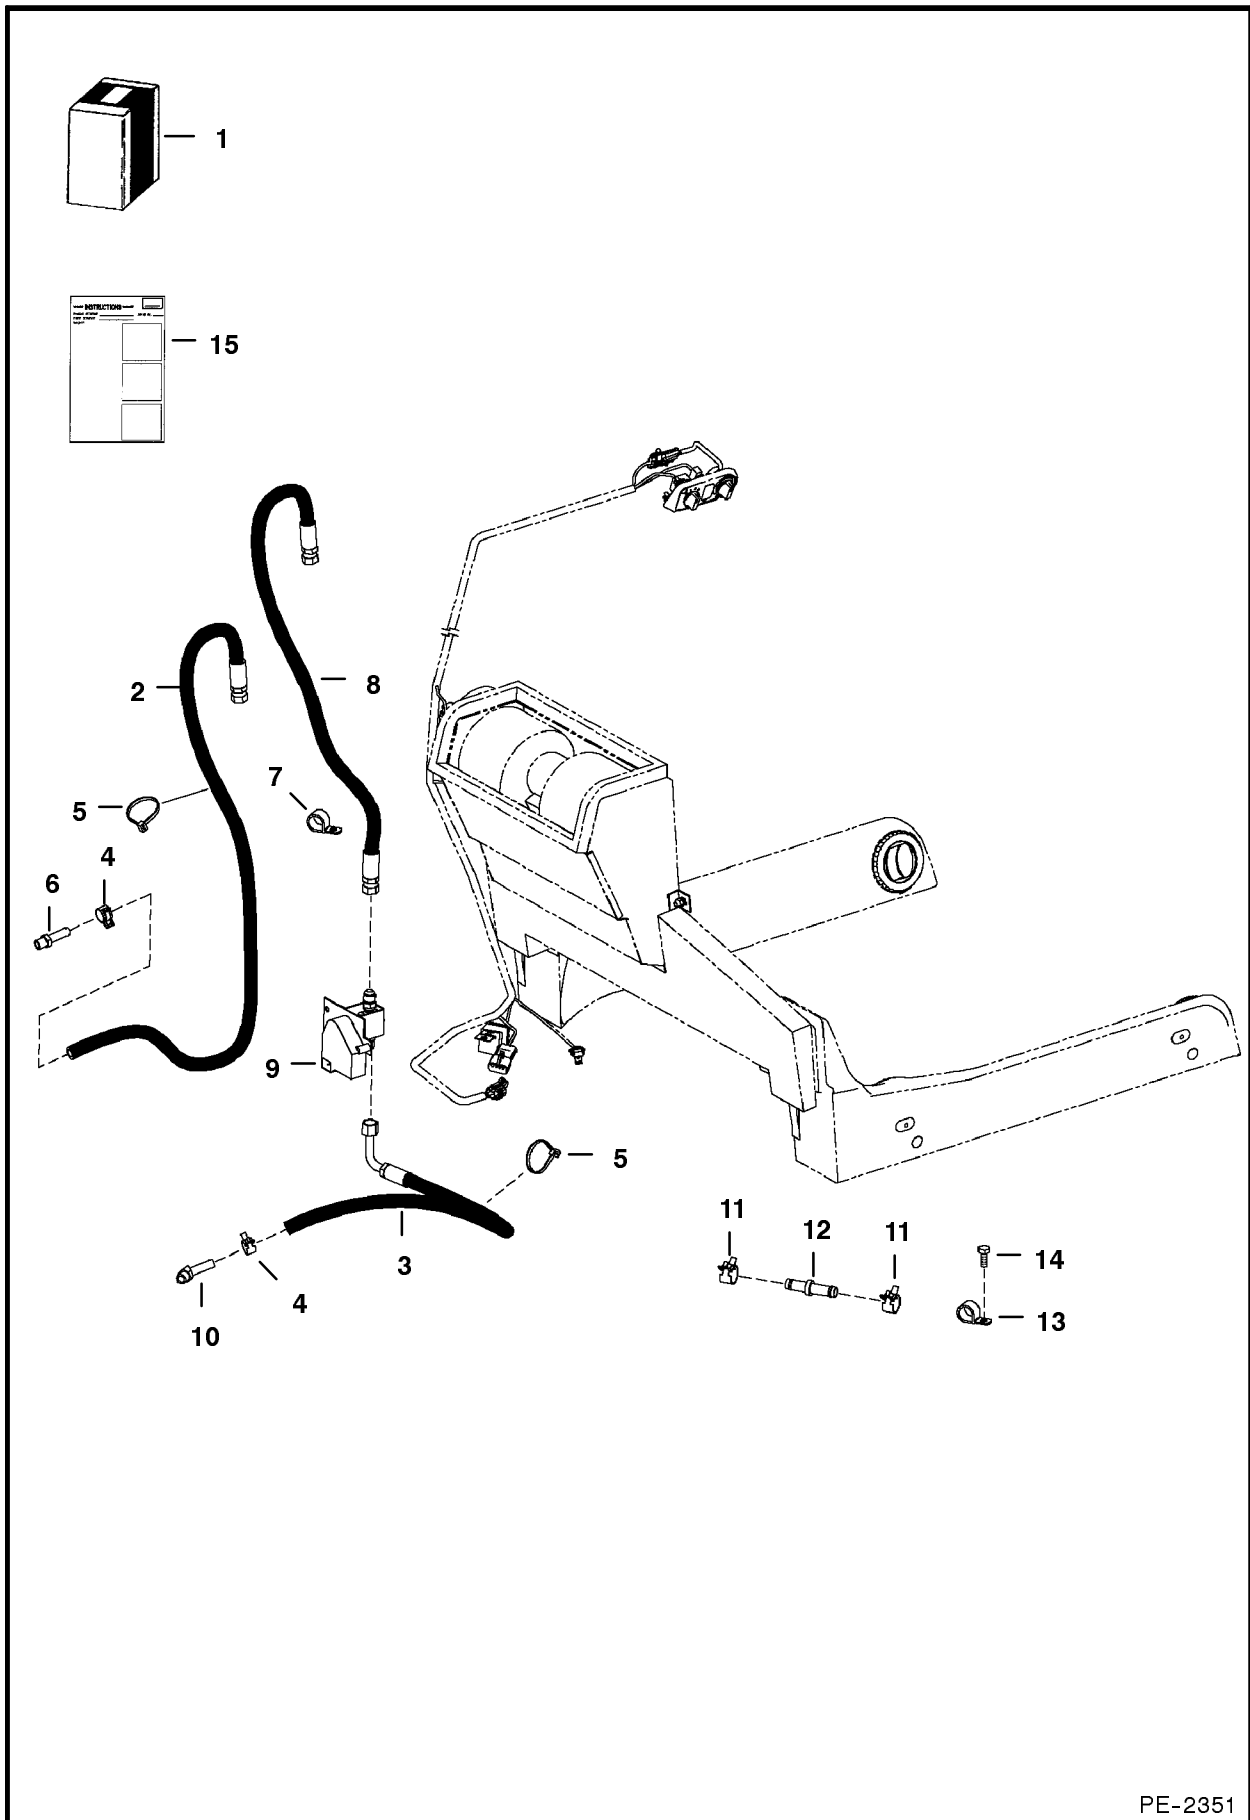

PE-2351

[illegible]

HEATER & A/C (A/C Kit)

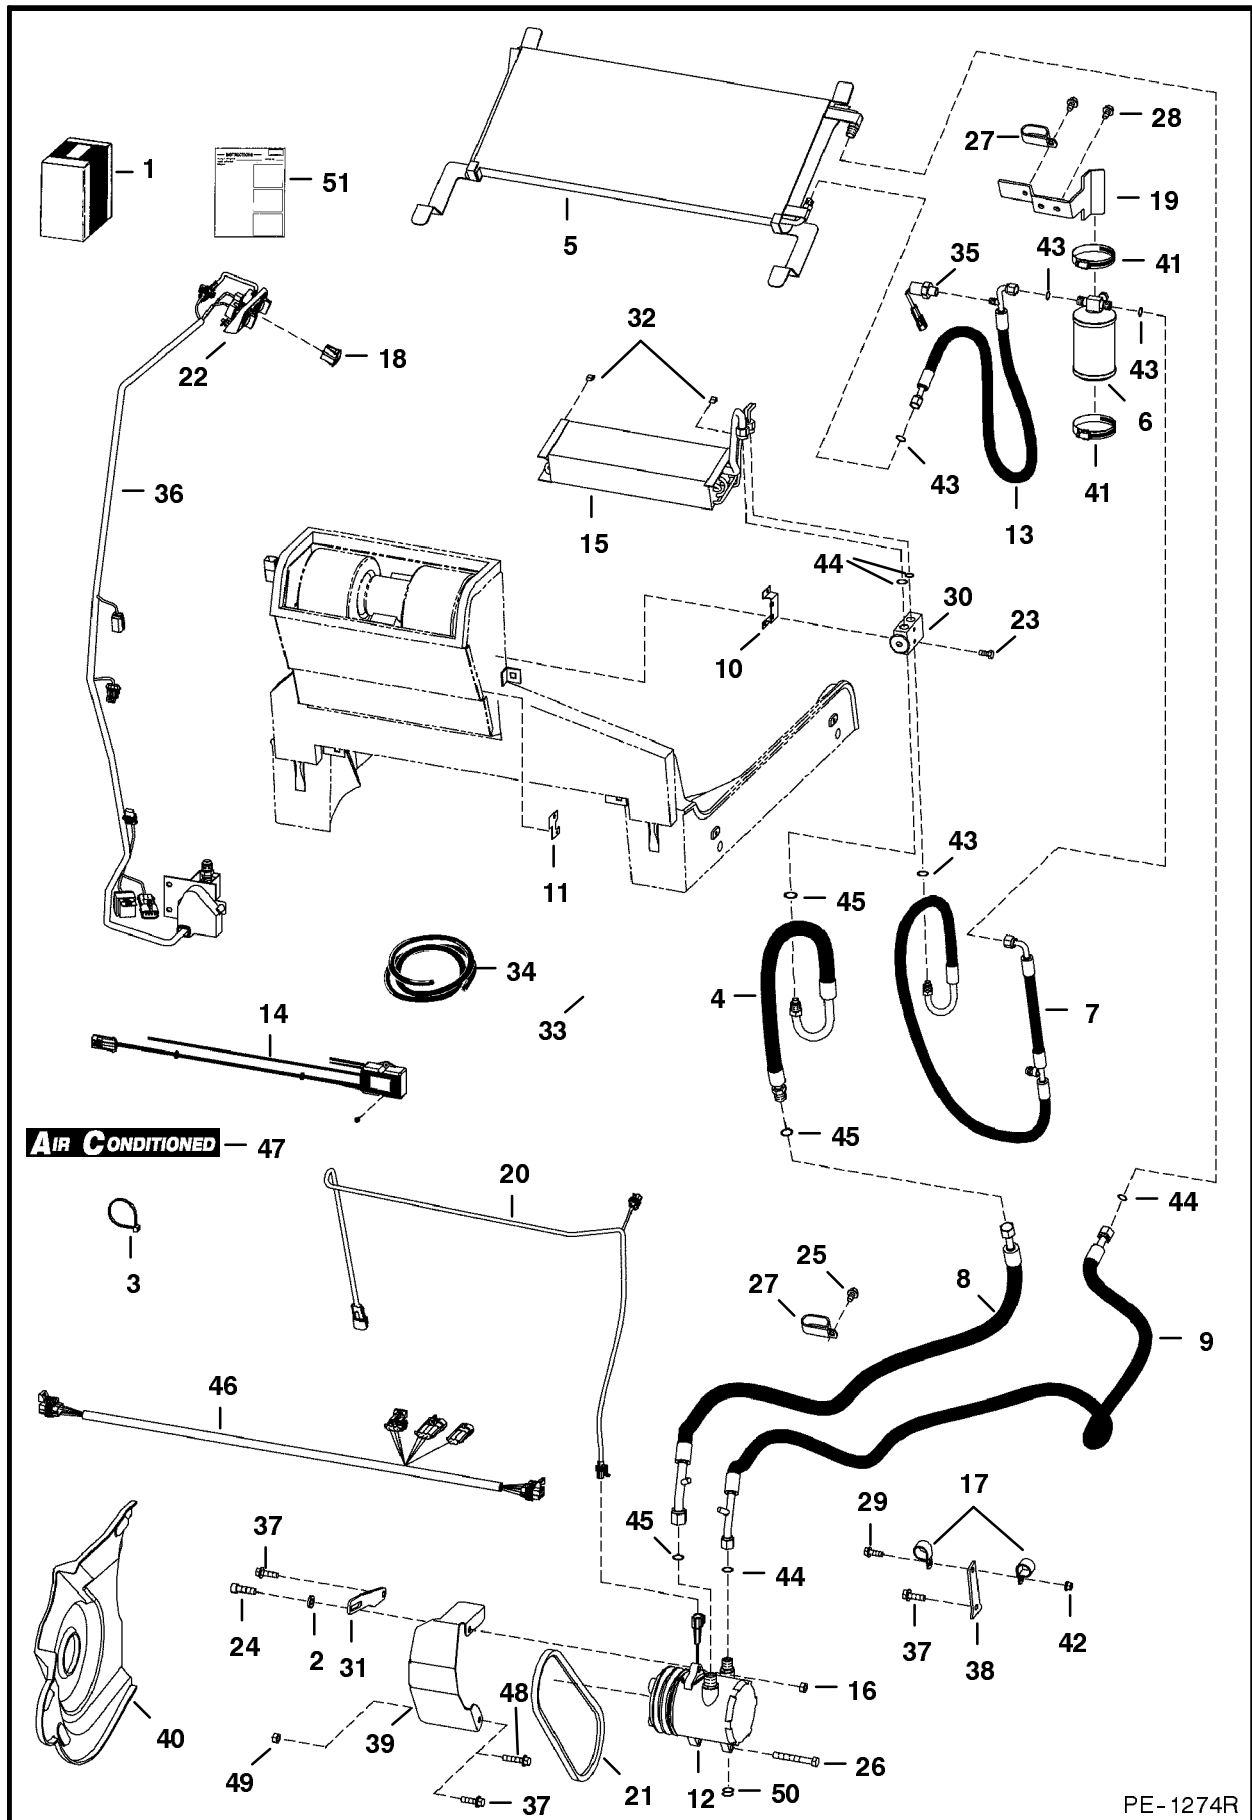


PE-1274R

HEATER & A/C (Cont'd) **(A/C Kit)**

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6737261	KIT			1
2	6557831	WASHER			1
3	6624289	TIE			5
4	6726623	HOSE			1
5	6733001	CONDENSER	A/C		1
6	6674235	RECEIVER DRIER			1
7	6676062	VALVE	relief		1
	6675075	HOSE			1
	6677122	CAP			1
8	6726656	HOSE			1
	6685199	CAP			1
9	6726661	HOSE			1
	6685198	CAP			1
10	6676984	BRACKET	valve		1
11	6677105	COVER	plate		1
12	6733655	COMPRESSOR			1
	6679145	CLUTCH			1
	6648307	CONNECTOR	2-pin		1
	6648308	CONNECTOR			1
13	6727414	HOSE			1
14	6683004	THERMOSTAT			1
15	6683003	COIL	evaporator		1
16	2DM-10	NUT			1
17	30H-50	CLAMP			3
18	6719176	SWITCH			1
19	6726620	BRACKET	receiver drier		1
20	6726888	HARNESS			1
21	6726988	BELT	compressor		1
22	6726621	SCREW			2
23	1CM-635	BOLT			2
24	2GM-1035	BOLT			1
25	84G-3716	BOLT			1
26	5CM-1080	BOLT			1
27	31H-46	CLAMP			2
28	84G-3710	BOLT			3
29	35C-516	BOLT			2
30	6675534	BLOCK VALVE	expansion valve		1
31	6726648	BRACKET	swing		1
32	6676539	CLIP			2
33	NAP	INSULATION	tape - 6"(152,4 mm) long - Order Ref. 34		1
34	6676538	INSULATION	bulk - Sold Per Foot		x
35	6675779	SWITCH	pressure		1
36	6725933	HARNESS	Not in Kit		1
37	35C-620	BOLT			2
38	6728011	BRACKET			1
39	6731495	SHIELD	belt		1
40	6726937	SHIELD			1
41	44H-48	CLAMP			2
42	83D-5	NUT			2

HEATER & A/C (Cont'd) (A/C Kit)

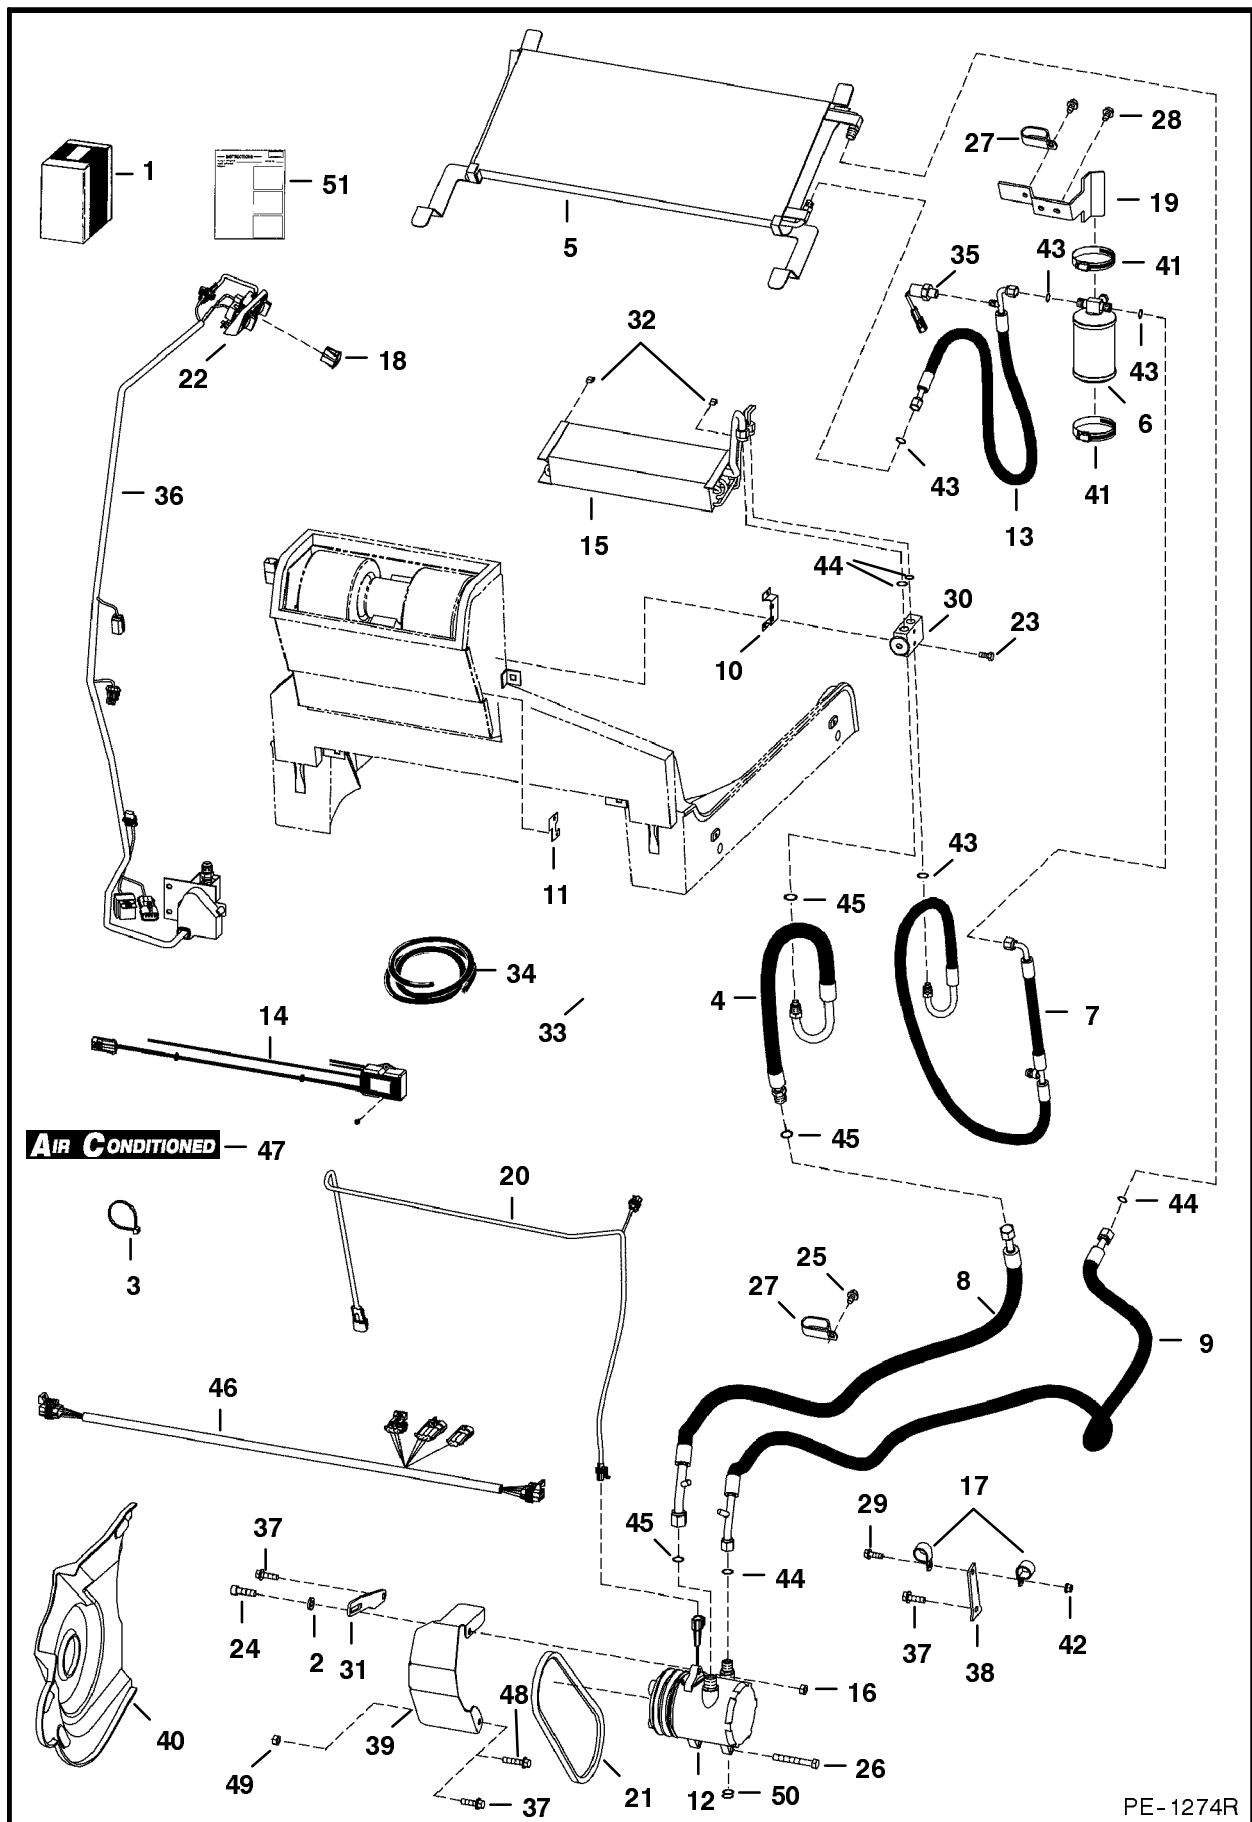


PE-1274R

HEATER & A/C (Cont'd)

[illegible]

HEATER & A/C (HVAC Assembly)

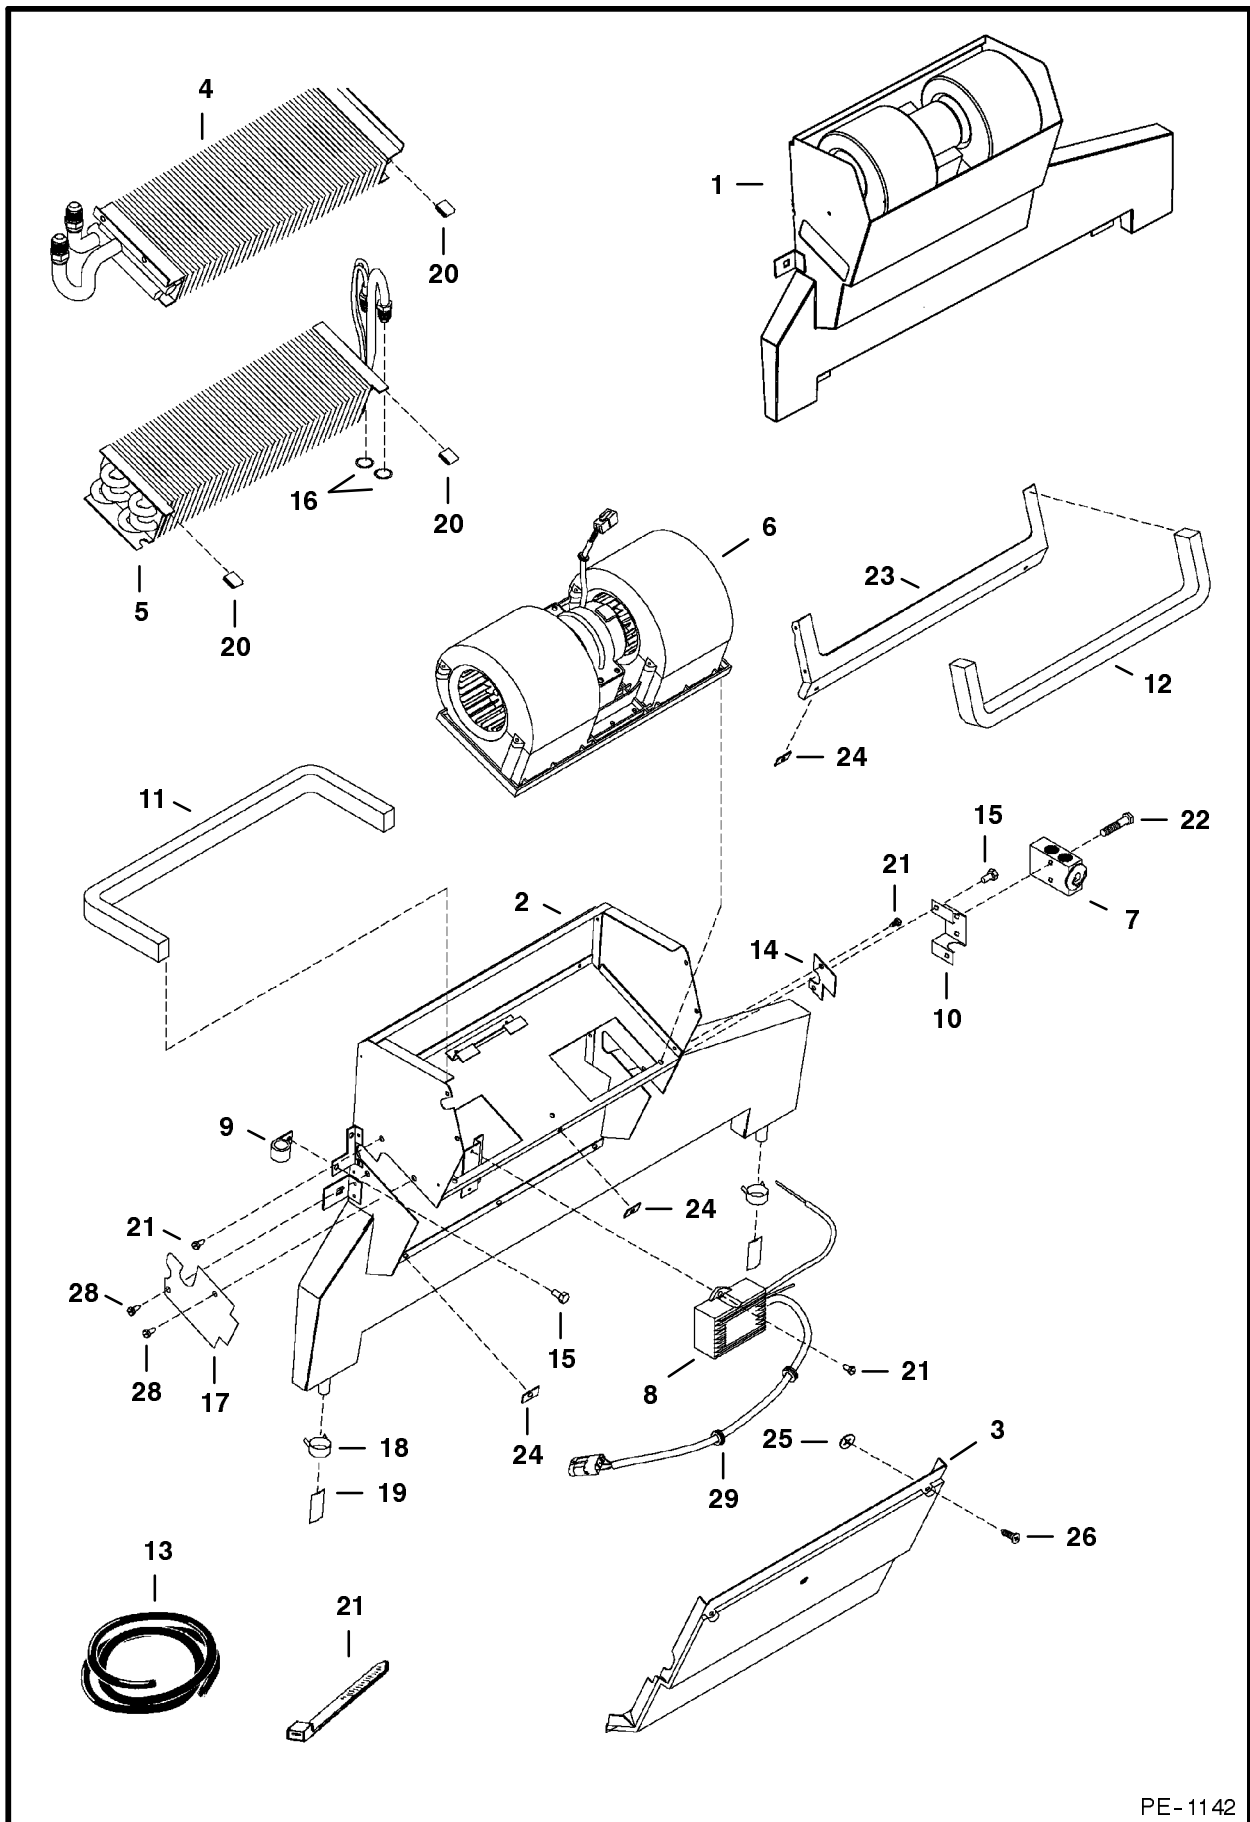


PE-1142

HEATER & A/C (Cont'd) **(HVAC Assembly)**

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6683001	HVAC ASSY	Ref. 2-28		1
2	6677108	HOUSING			1
3	6678151	COVER			1
4	NSS	COIL	heater - Order 6727786 Heater Coil Kit - See Page 364		1
5	6683003	COIL	evaporator		1
6	6675497	BLOWER	assy		1
7	6675534	BLOCK VALVE			1
8	6683004	THERMOSTAT			1
9	6675512	CLAMP	hose		2
10	6676984	BRACKET	valve		1
11	NAP	SEAL	25" (635mm) long - Order Ref. 13		1
12	NAP	SEAL	22.6" (575mm) long - Order Ref. 13		1
13	6677111	SEAL	bulk - Sold Per Foot		x
14	6677105	COVER			1
15	6677118	SCREW	w/washer		4
16	6675538	O-RING			2
17	6677504	COVER			1
18	6675510	CLAMP	drain hose		2
19	6675511	DRAIN VALVE			2
20	6676539	CLIP			3
21	6726621	SCREW	sheetmetal		7
22	1CM-635	BOLT			2
23	6678152	FLANGE			1
24	6677115	FLANGE			1
25	6677116	RECEPTACLE			6
26	6677117	RETAINER			6
27	6677117	SCREW	captive		6
28	6677113	TIE			1
29	6677119	SCREW	sheetmetal		7
30	6675513	GROMMET			1

HORN KIT

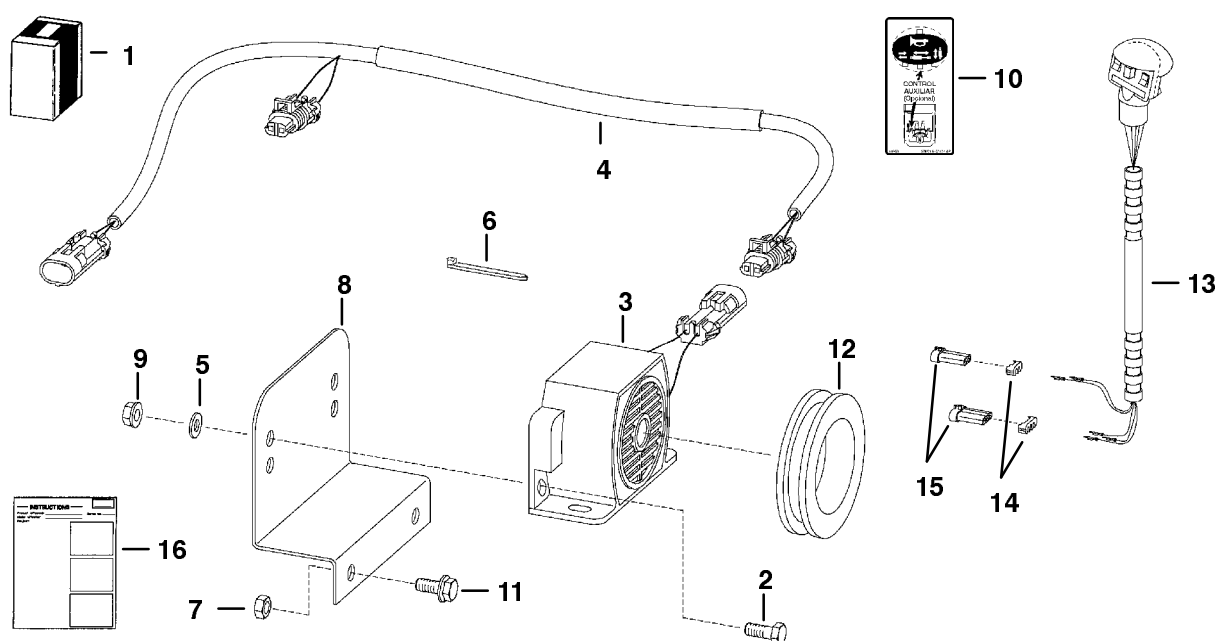


NOTE: Requires multi-switch handle.

TS-1987

HORN KIT (Cont'd)

[illegible]

LIFT KIT (Single Point)

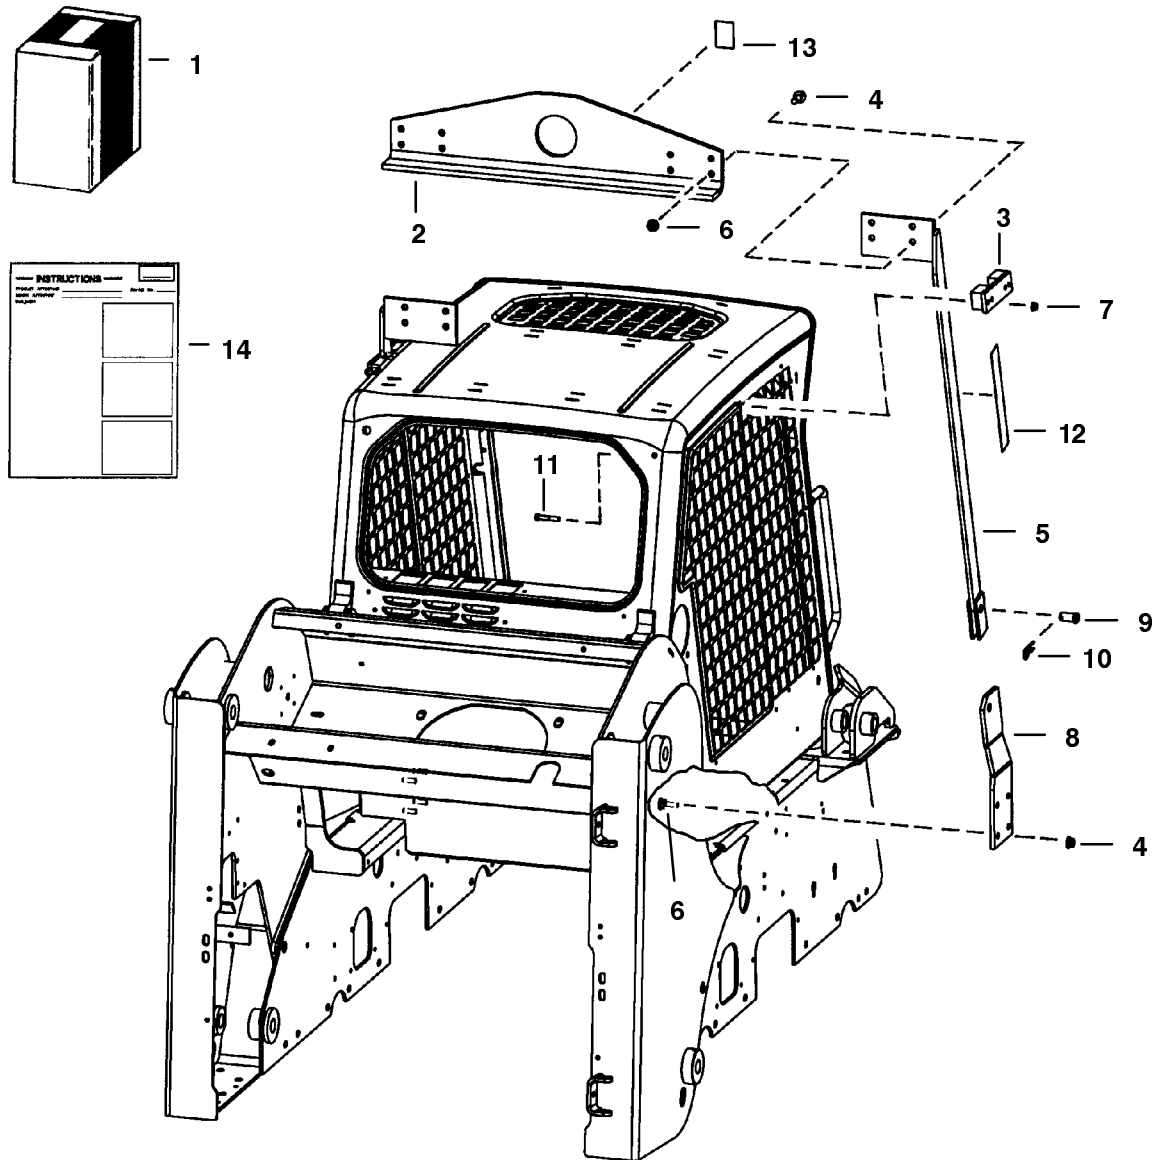


PE-1504

LIFT KIT (Cont'd) (Single Point)


[illegible]

LIFT KIT (Four Point - .75" Thick Lift Eye)

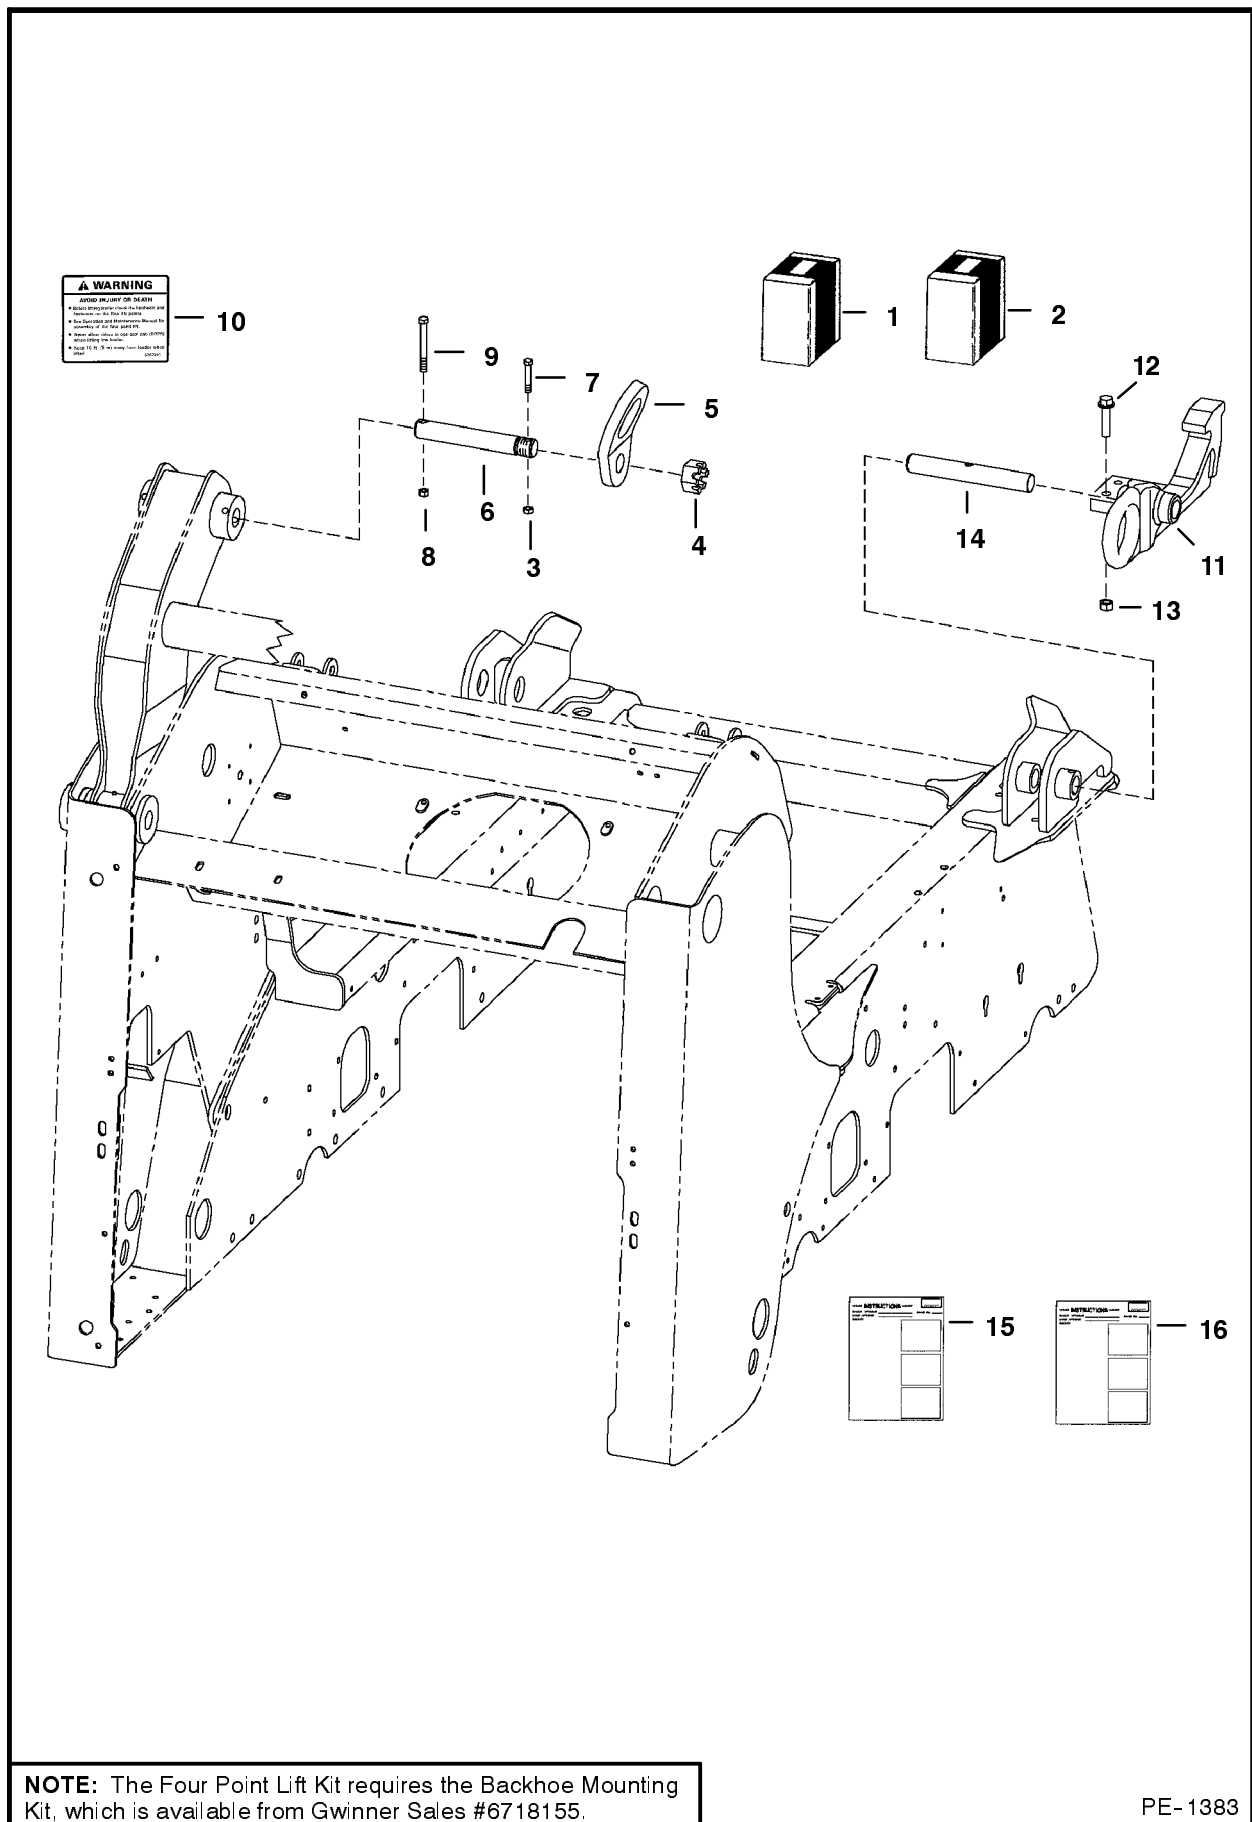

[illegible]

LIGHT KIT

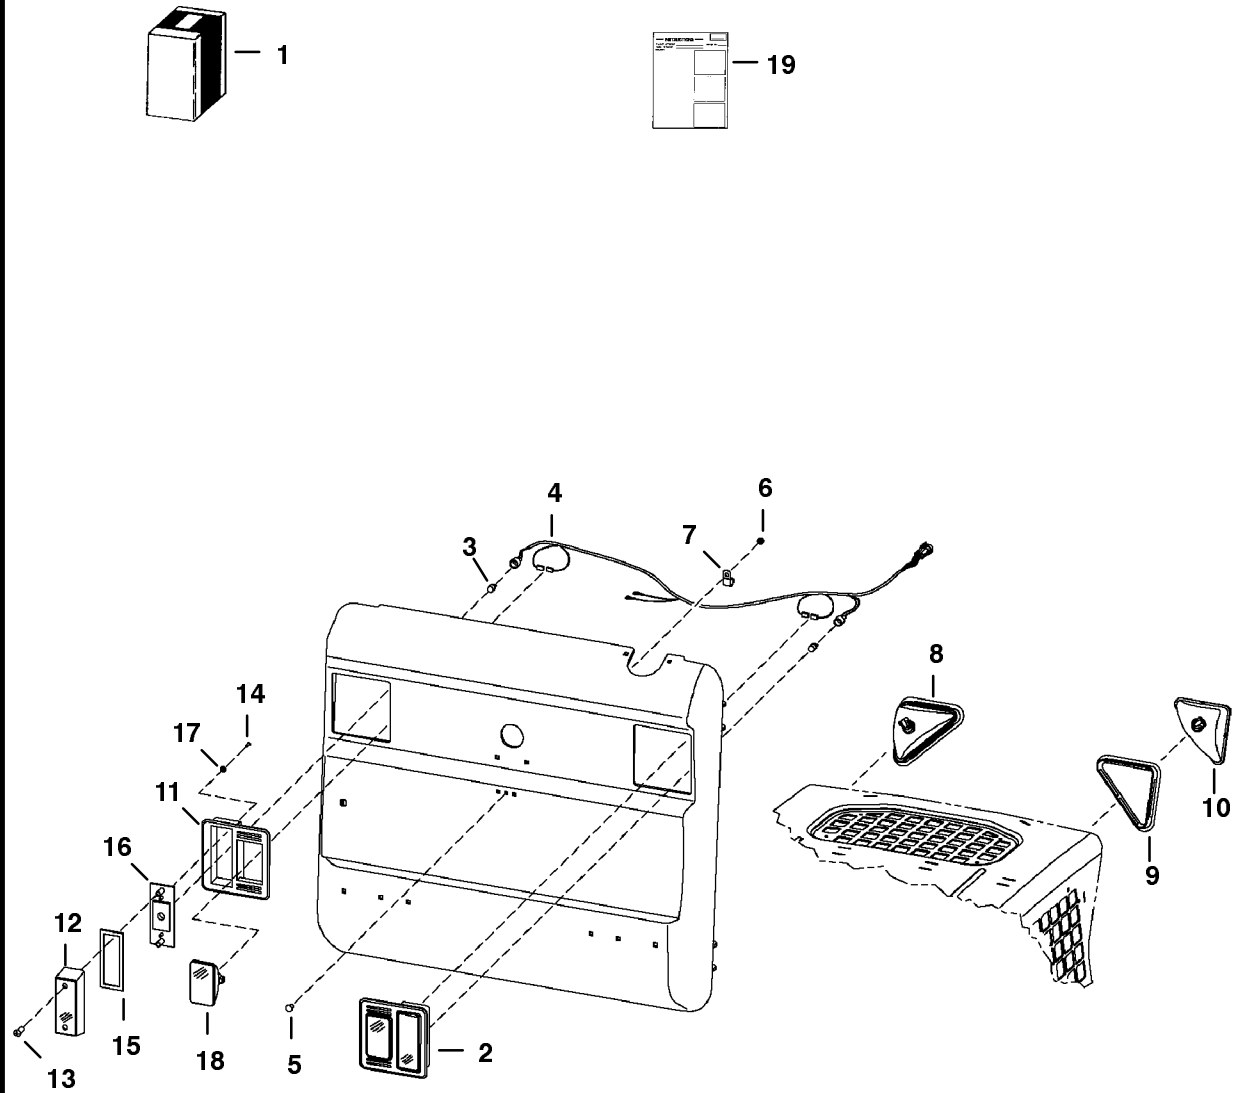


PE-1062

LIGHT KIT (Cont'd)

[illegible]


MUFFLER/PURIFIER KIT

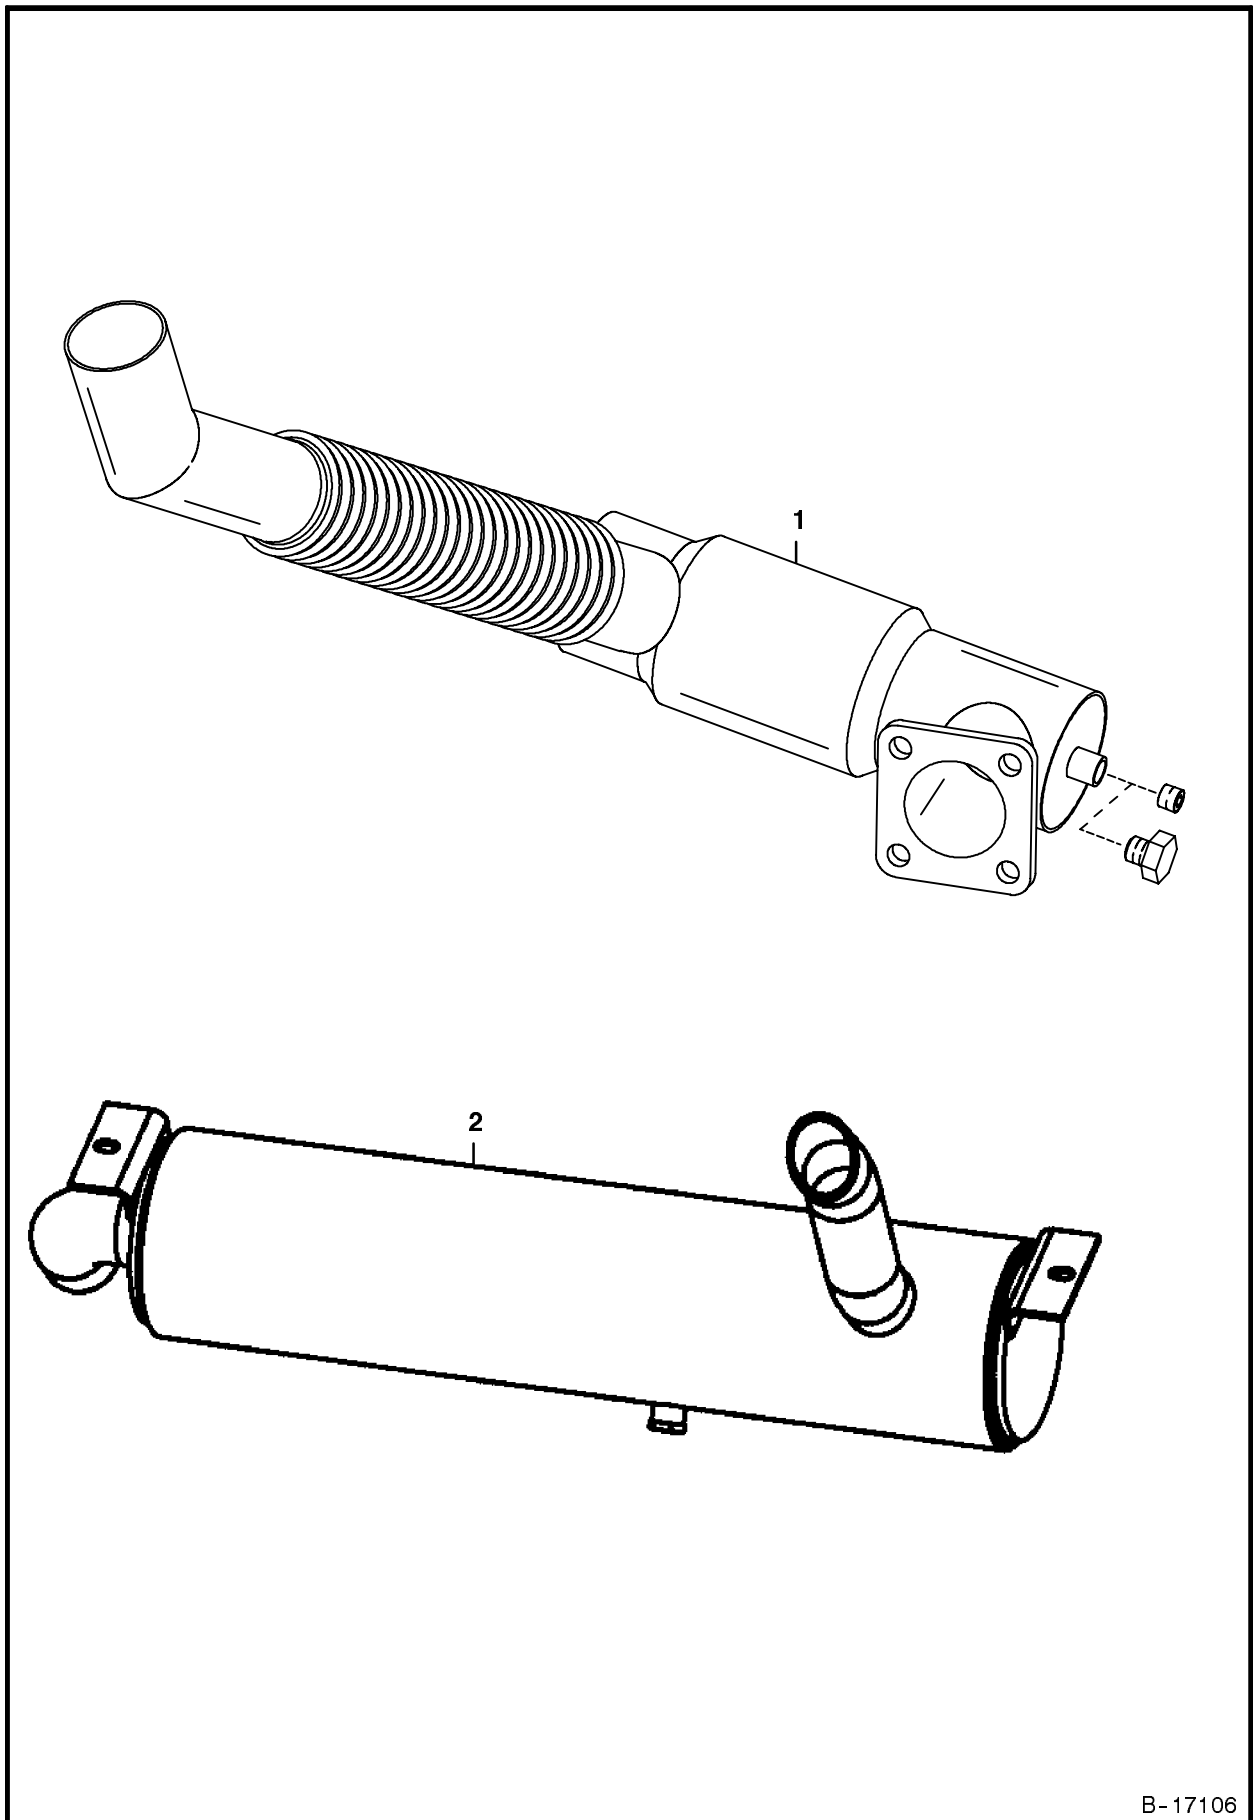

MUFFLER/PURIFIER KIT (Cont'd)

[illegible]

POWER BOB-TACH KIT

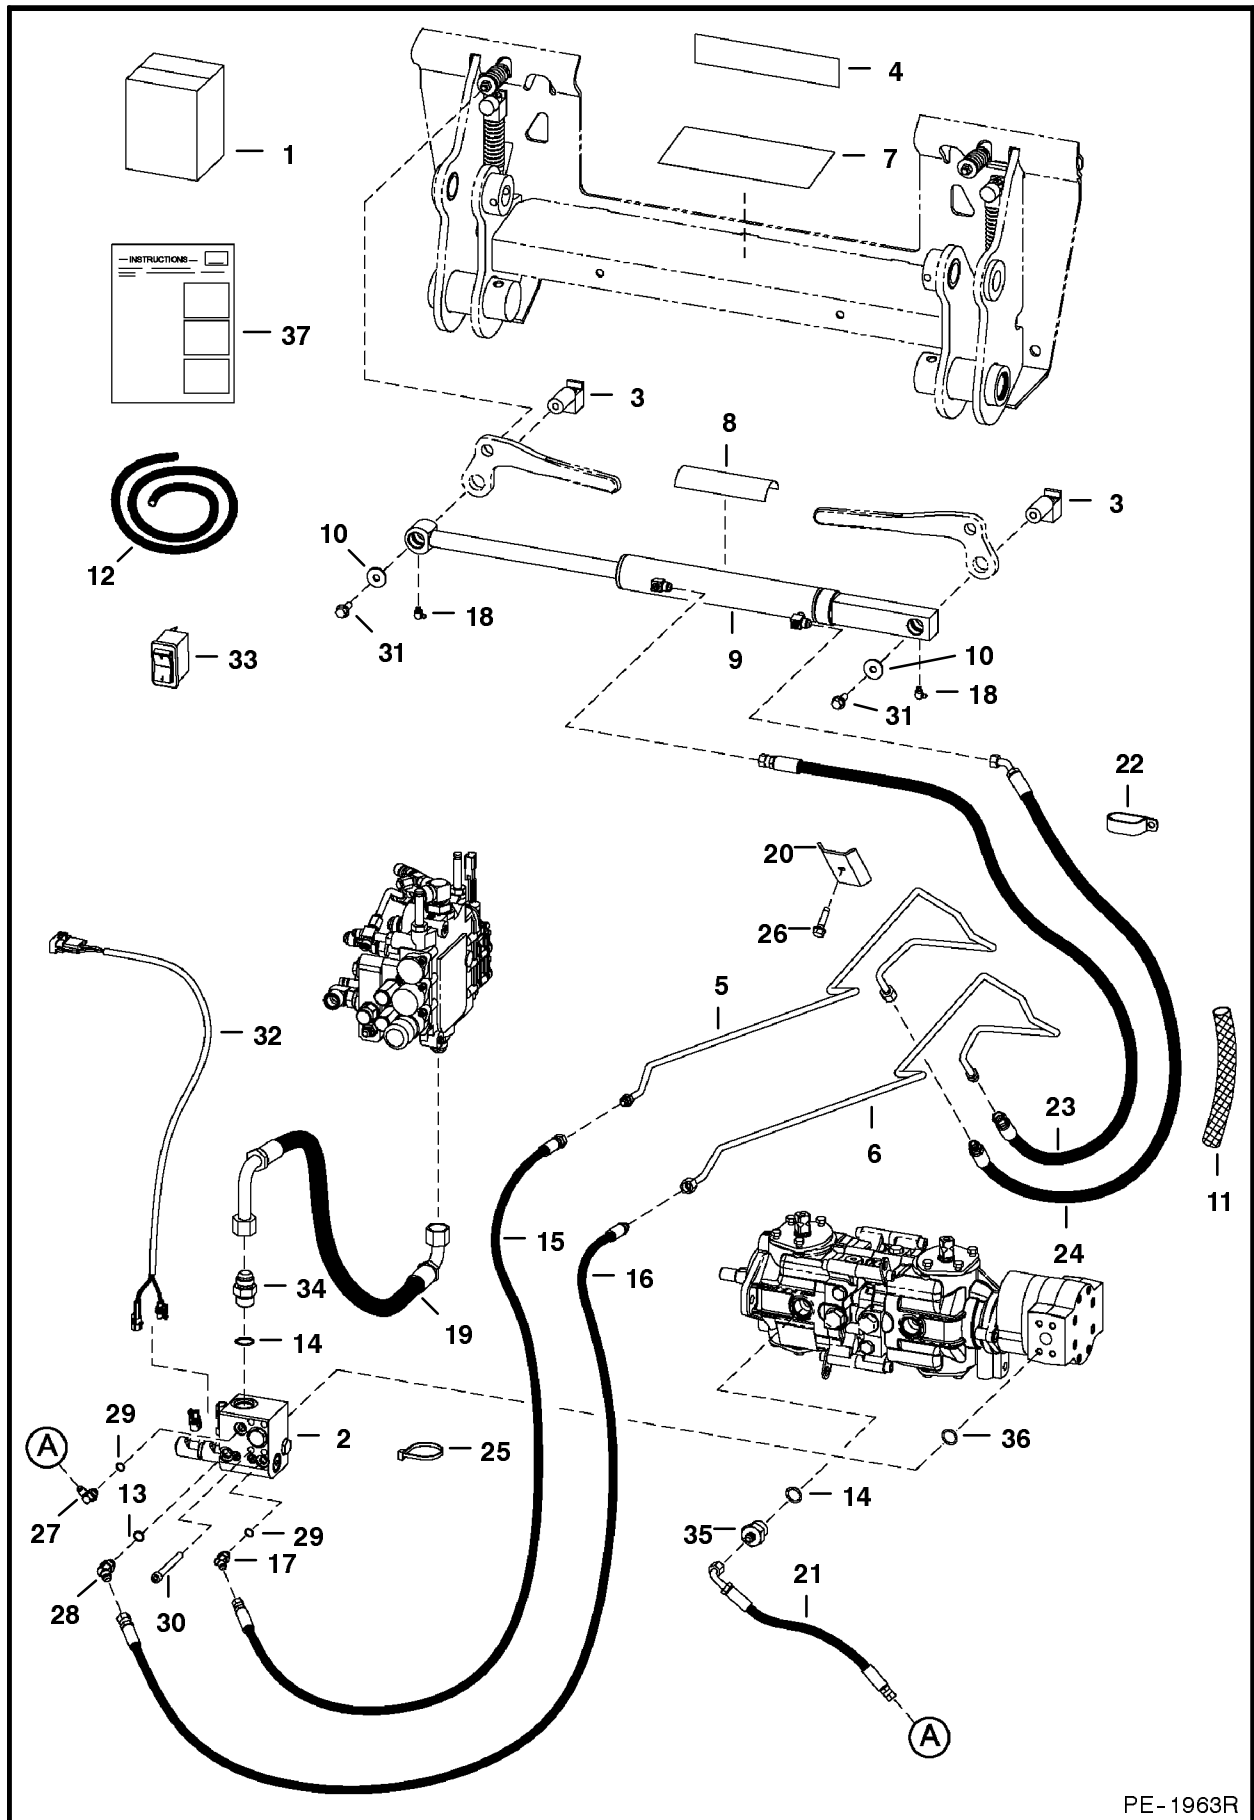


PE-1963R

POWER BOB-TACH KIT (Cont'd)

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1	6735465	KIT	power Bob-Tach		1
2		VALVE	See Page 390		1
3	6714576	PIVOT	Not in Kit		2
4	6719888	DECAL			1
5	6725553	TUBE			1
6	6725552	TUBE			1
7	6725907	DECAL			1
8	6555341	SAFETY TREAD			1
9		CYLINDER	See Page 388		1
10	619021	WASHER			2
11	NAP	COVER	32" (813 mm) long - Order Ref. 12		1
12	6656155	COVER	1.25" I.D. - bulk - Sold Per Foot		x
13	79K-6	O-RING			x
14	79K-12	O-RING			x
15	6719451	HOSE			1
16	6718358	HOSE			1
17	18KB-404	ELBOW	W/Ref. 29		1
18	12H-25	GREASE ZERK	straight		2
19	6737503	HOSE			1
20	6719884	BRACKET			1
21*	7100044	HOSE	17.75" (450,9 mm) long -		
			Not in Kit		1
*	6806403	HOSE	16" (406,4 mm) long		1
22	31H-49	CLAMP			1
23	6729202	HOSE			1
24	6729203	HOSE			1
25	6624289	TIE			5
26	84G-3724	BOLT			1
27	17KB-404	ELBOW			2
28	18KB-606	ELBOW	W/Ref. 13		1
29	79K-4	O-RING			x
30	73G-656	BOLT			4
31	35C-616	BOLT			2
32	6730770	HARNESS			1
33	6676732	SWITCH	vertical		1
34	15KB-1212	ADAPTER	W/Ref. 14		1
35	15KB-612	ADAPTER	W/Ref. 14		1
36	55K-214	O-RING			1
37	6902421	INSTRUCTIONS			1

*** POWER BOB-TACH KIT**

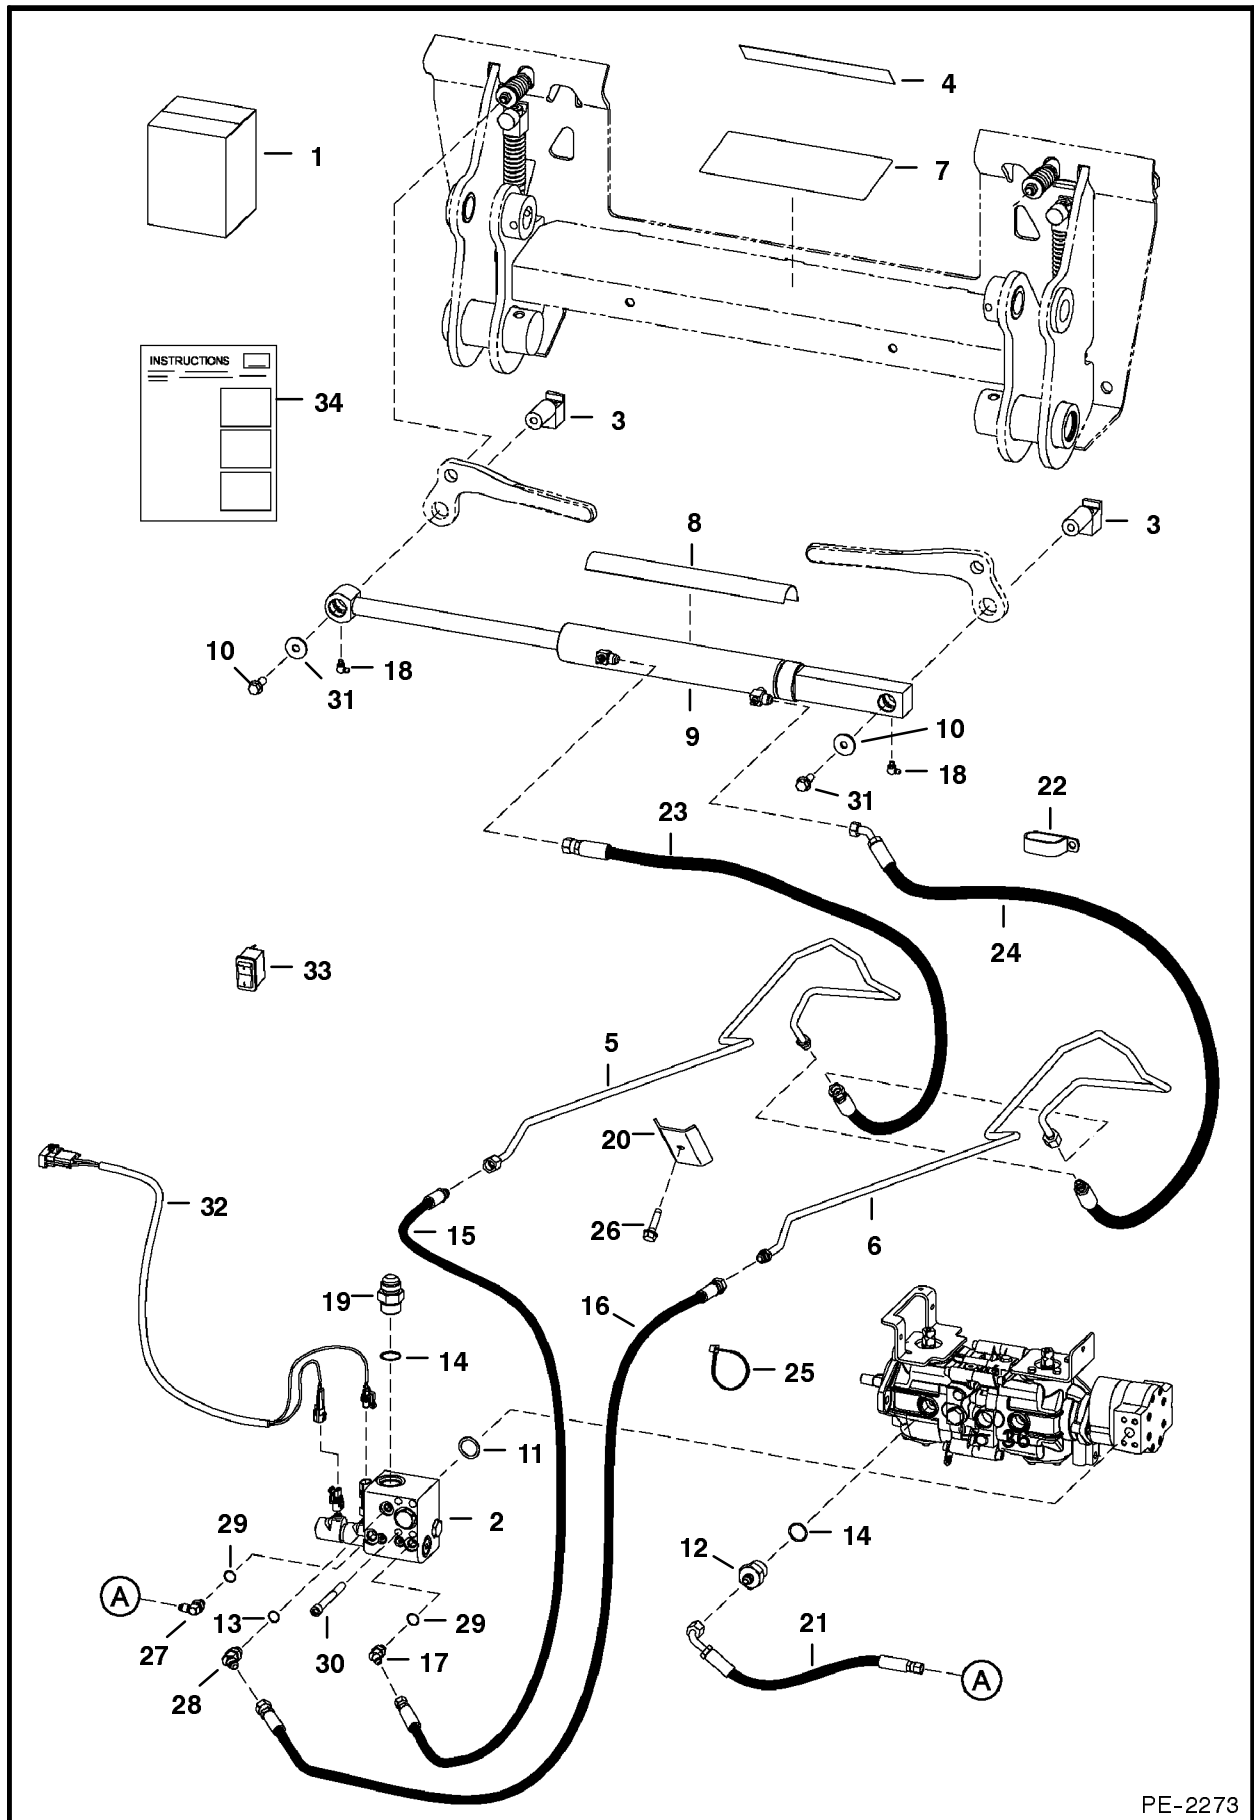


PE-2273

*** POWER BOB-TACH KIT (Cont'd)**

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*	7102865	KIT	power Bob-Tach		1
2*		VALVE	See Page 390		1
3*	6714576	PIVOT			2
4*	6719888	DECAL			1
5*	6734906	TUBE			1
6*	6734907	TUBE			1
7*	6725907	DECAL			1
8*	6555341	SAFETY TREAD			1
9*		CYLINDER	See Page 388		1
10*	619021	WASHER			2
11*	55K-214	O-RING			1
12*	15KB-612	ADAPTER	W/Ref. 14		1
13*	79K-6	O-RING			x
14*	79K-12	O-RING			x
15*	6726987	HOSE			1
16*	6719628	HOSE			1
17*	18KB-404	ELBOW	W/Ref. 29		1
18*	12H-25	GREASE ZERK	straight		2
19*	15KB-1212	ADAPTER	W/Ref. 14		1
20*	6719884	BRACKET			1
21*	6806403	HOSE			1
22*	31H-49	CLAMP			1
23*	6729202	HOSE			1
24*	6729203	HOSE			1
25*	6624289	TIE			3
26*	84G-3724	BOLT			1
27*	17KB-404	ELBOW	W/Ref. 29		1
28*	18KB-606	ELBOW	W/Ref. 13		1
29*	79K-4	O-RING			x
30*	73G-656	BOLT			4
31*	35C-616	BOLT			2
32*	6730770	HARNESS			1
33*	6676732	SWITCH	vertical		1
34*	6902831	INSTRUCTIONS			1

**POWER BOB-TACH
(Cylinder)**

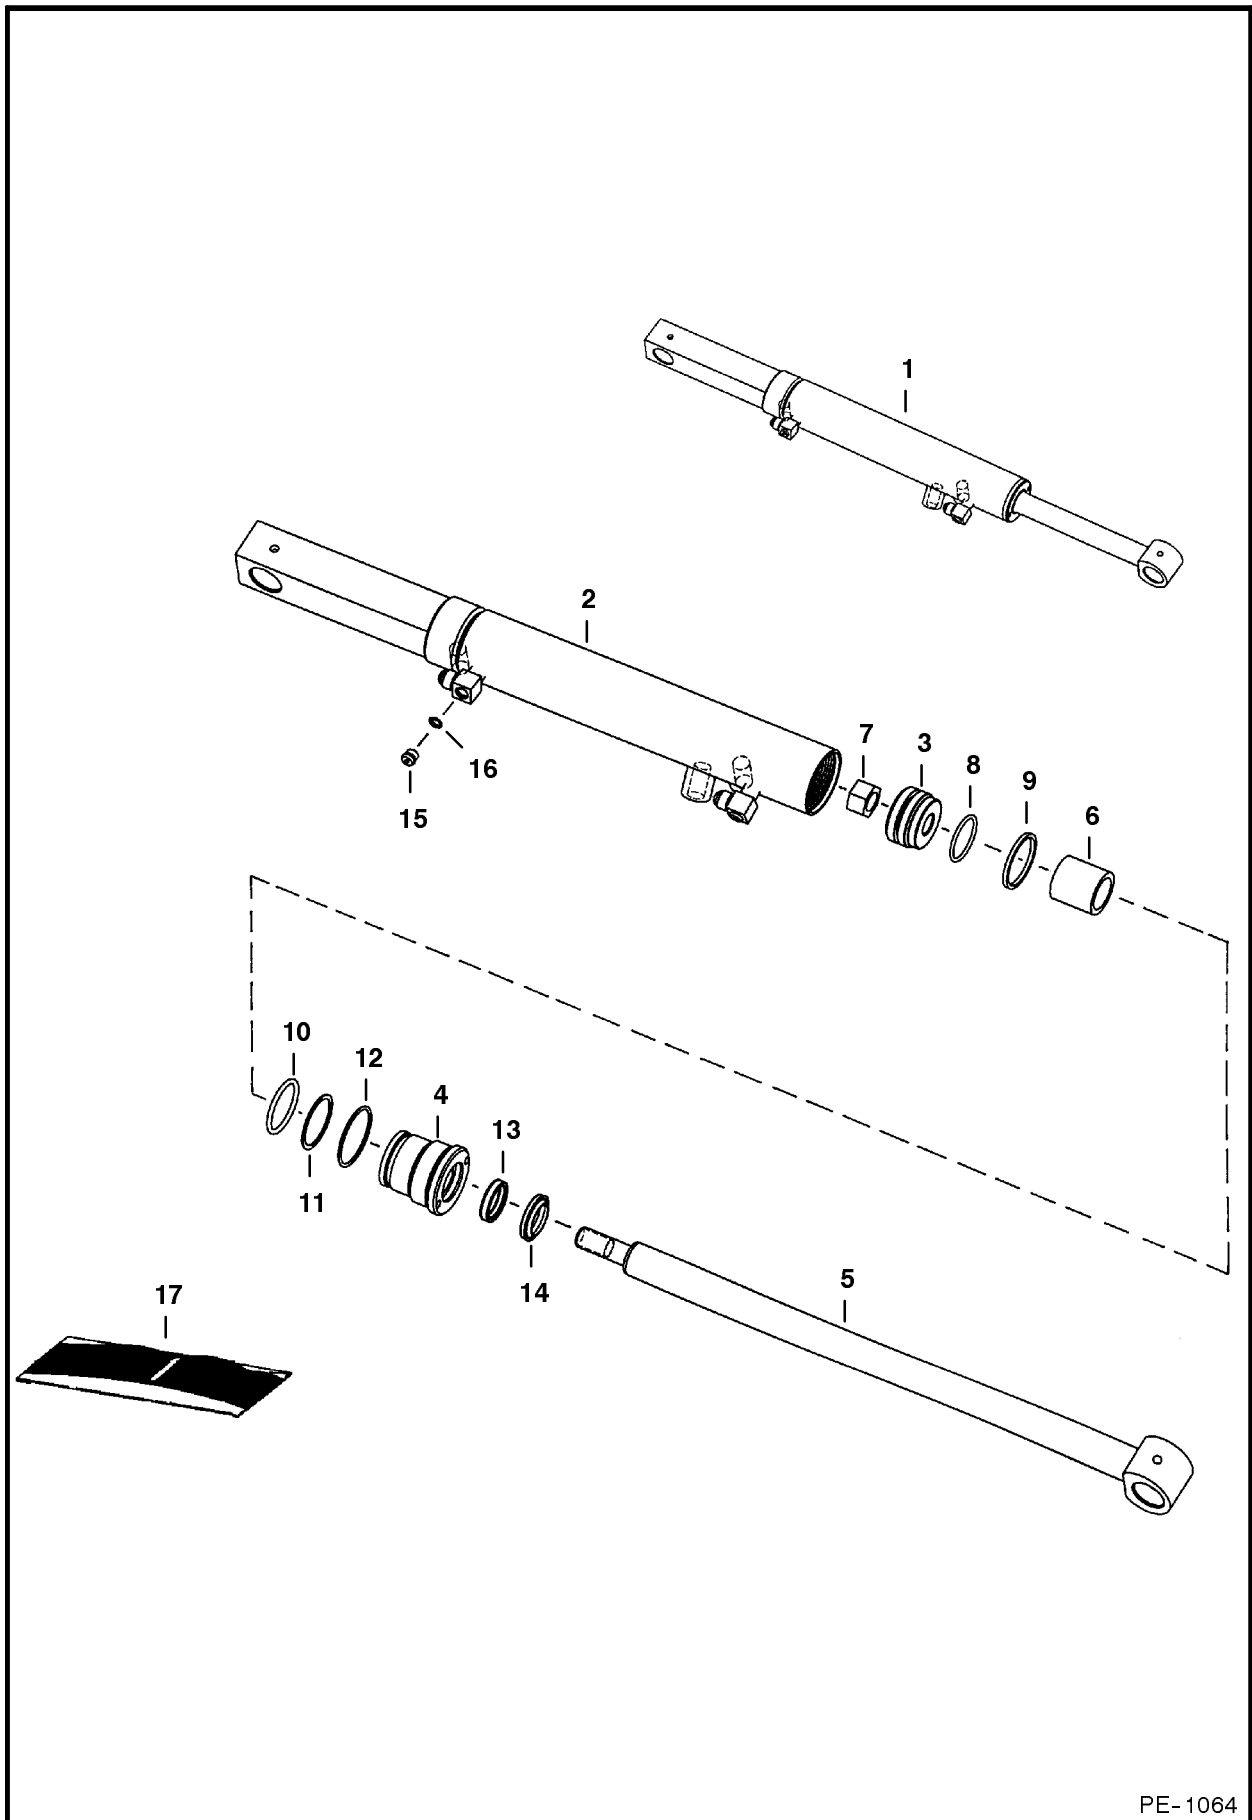


PE-1064

POWER BOB-TACH (Cont'd)

[illegible]


POWER BOB-TACH (Valve Assembly)

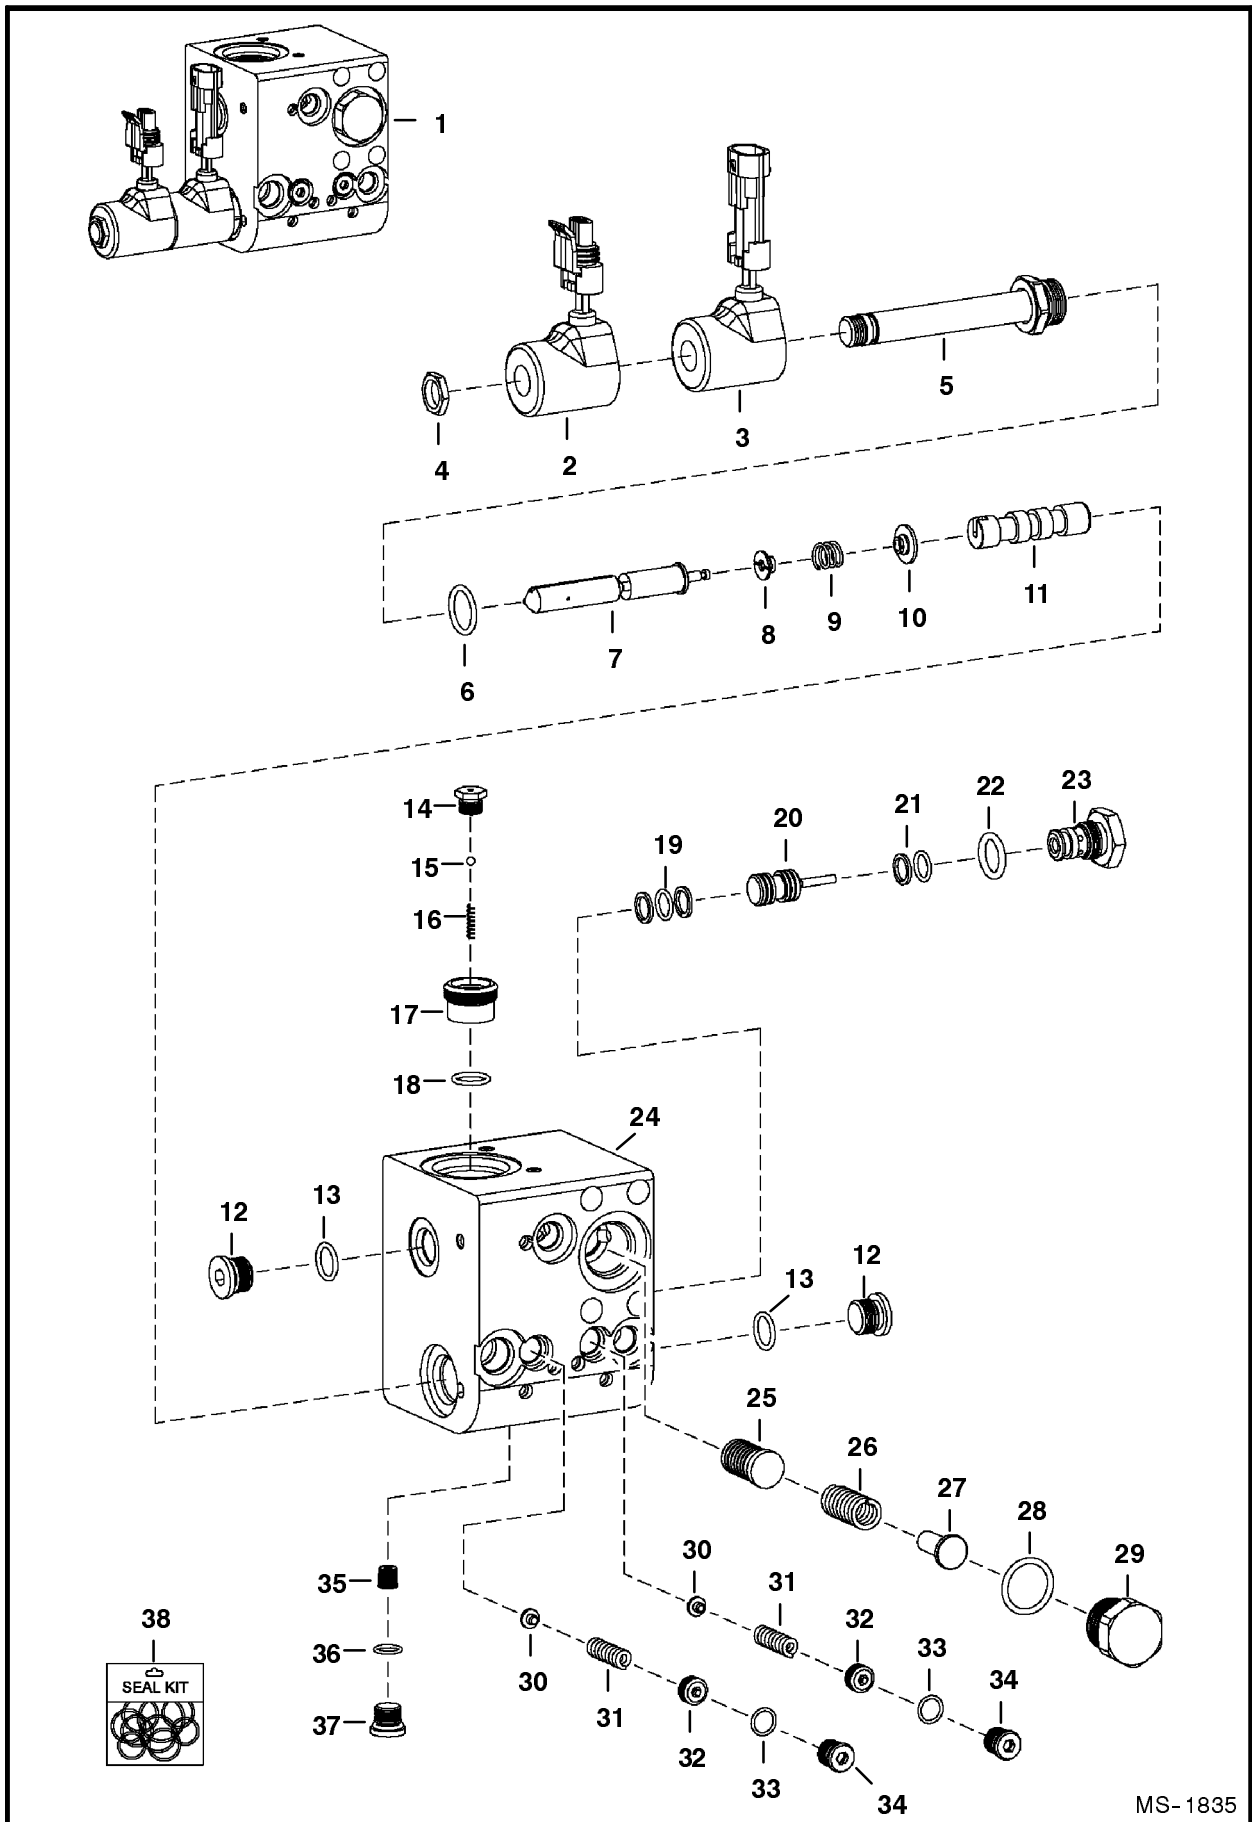

POWER BOB-TACH (Cont'd)
(Valve Assembly)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6685311	VALVE			1
2	6684743	SOLENOID	W/male connector		1
3	6684744	SOLENOID	W/female connector		1
4	6684742	NUT			1
5	NSS	STEM			x
6	79K-8	O-RING			x
7	NSS	STEM			x
8	NSS	RETAINER			x
9	NSS	SPRING			x
10	NSS	WASHER			x
11	NSS	PISTON			x
12	NSS	PLUG			x
13	NSS	O-RING			x
14	NSS	PLUG			x
15	NSS	BALL			x
16	NSS	SPRING			x
17	NSS	VALVE			x
18	NSS	O-RING			x
19	NSS	RINGS			x
20	6684745	PISTON			1
21	NSS	RINGS			x
22	79K-7	O-RING			x
23	6684746	CHECK VALVE	W/Ref. 22		1
24	NSS	BLOCK			x
25	NSS	STEM			x
26	NSS	SPRING			x
27	NSS	POPPET			x
28	79K-10	O-RING			x
29	NSS	PLUG			x
30	NSS	POPPET			x
31	NSS	SPRING			x
32	NSS	PLUG			x
33	NSS	O-RING			x
34	NSS	PLUG			x
35	NSS	POPPET			x
36	NSS	O-RING			x
37	NSS	PLUG			x
38	6684747	SEAL KIT	complete		1

REAR AUXILIARY

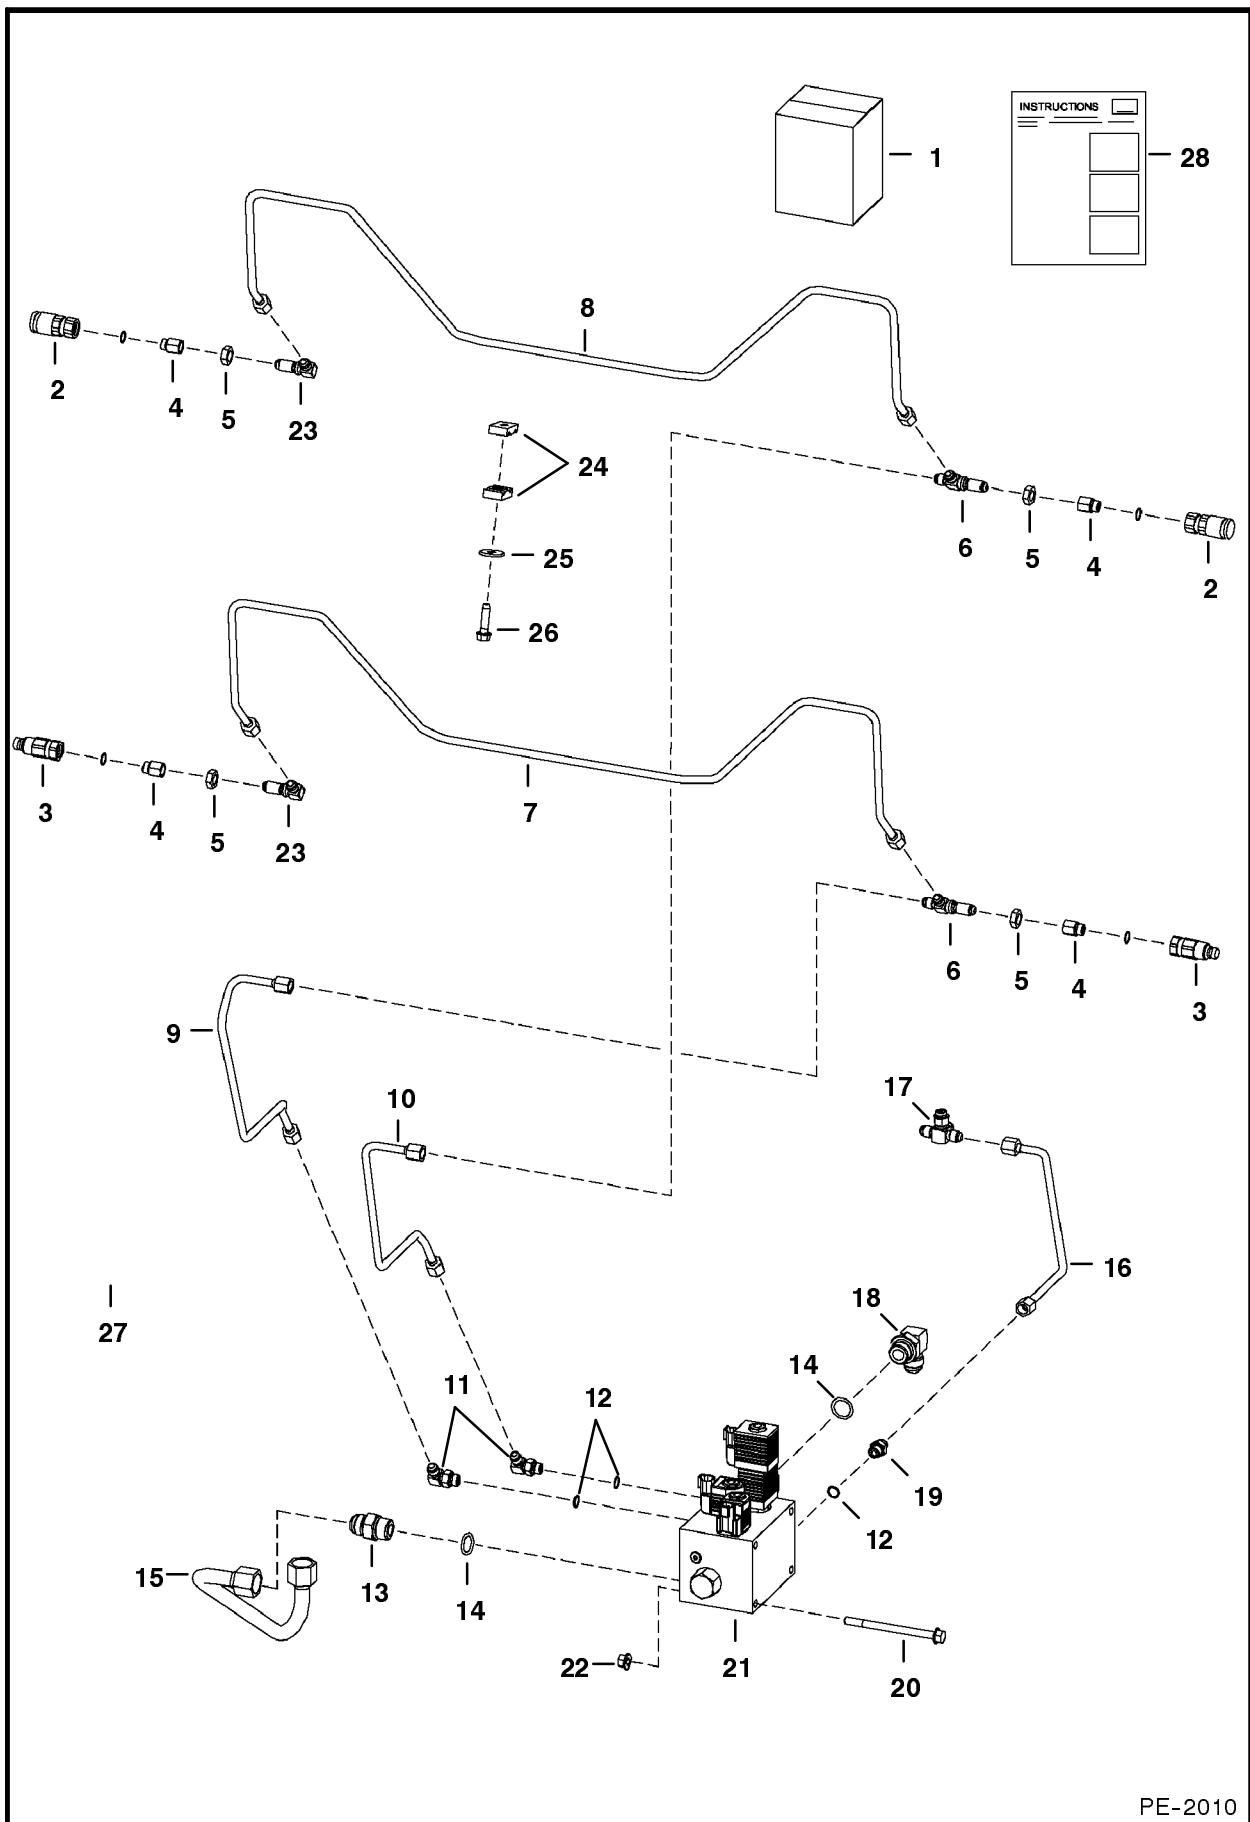


PE-2010

REAR AUXILIARY (Cont'd)

(S/N 5252 & Bel, 5253 & Bel, 5250 & Bel, 5251 & Bel)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1	6735724	KIT	Ref. 2 - 28		1
2	6667803	QUICK COUPLER	female		2
3	6667804	QUICK COUPLER	male		2
	6669657	O-RING			x
4	6706633	CONNECTOR			4
5	86F-5	NUT			4
6	91K-5	TEE			2
7	6726273	TUBE			1
8	6726272	TUBE			1
9	6735828	TUBE			1
10	6735829	TUBE			1
11	17KB-606	ELBOW	W/Ref. 12		2
12	79K-6	O-RING			x
13	15KB-1212	ADAPTER	W/Ref. 14		1
14	79K-12	O-RING			x
15	6737254	TUBE			1
16	6735830	TUBE			1
17	6725497	CROSS			1
18	17KB-1212	ELBOW	W/Ref. 14		2
19	15KB-606	ADAPTER	W/Ref. 12		3
20	17C-680	BOLT			2
21		VALVE	See Page 396		1
22	83D-6	NUT			2
23	88F-5	ELBOW			3
24	6726277	CLAMP			2
25	619021	WASHER			1
26	84G-3724	BOLT			1
27	7101973	HARNESS	jumper		1
28*	6902740	INSTRUCTIONS	Was 6902363 [A]		1

*** REAR AUXILIARY**

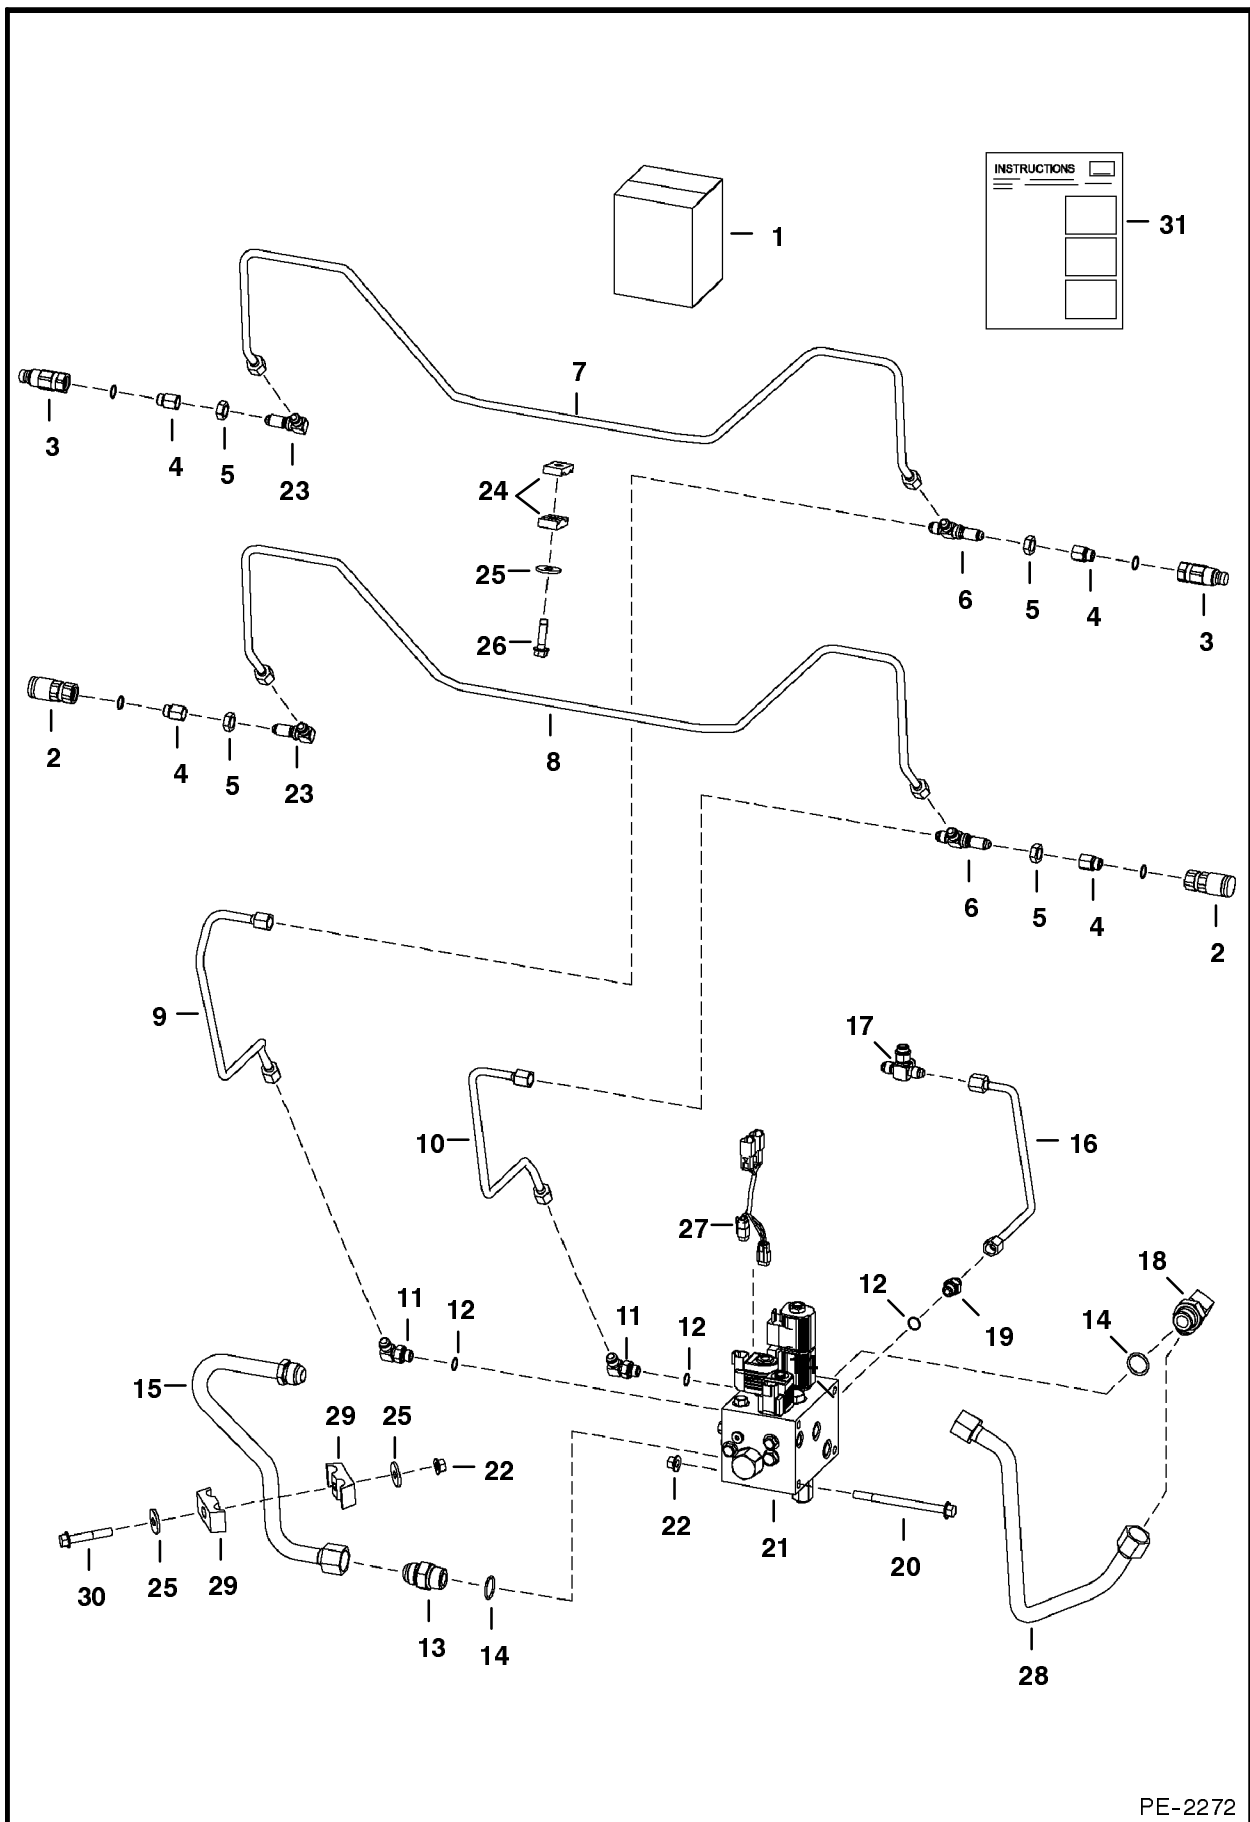


PE-2272

*** REAR AUXILIARY (Cont'd)**

(S/N 5252 & Abv, 5253 & Abv, 5250 & Abv, 5251 & Abv)

Ref. Part No.	Number	Description	Remarks	Serial Number	Qty.
1*	7102870	KIT	Ref. 2 - 28		1
2*	6667803	QUICK COUPLER	female		2
3*	6667804	QUICK COUPLER	male		2
*	6669657	O-RING			x
4*	6706633	CONNECTOR			4
5*	86F-5	NUT			4
6*	91K-5	TEE			2
7*	6736931	TUBE			1
8*	6736930	TUBE			1
9*	6736932	TUBE			1
10*	6736933	TUBE			1
11*	17KB-606	ELBOW	W/Ref. 12		2
12*	79K-6	O-RING			x
13*	15KB-1212	ADAPTER	W/Ref. 14		1
14*	79K-12	O-RING			x
15*	6736686	TUBE			1
16*	6735830	TUBE			1
17*	6725497	CROSS			1
18*	17KB-1212	ELBOW	W/Ref. 14		2
19*	15KB-606	ADAPTER	W/Ref. 12		3
20*	35C-680	BOLT			2
21*		VALVE	See Page 396		1
22*	83D-6	NUT			3
23*	88F-5	ELBOW			3
24*	6726277	CLAMP			2
25*	619021	WASHER			3
26*	84G-3724	BOLT			1
27*	7101973	HARNESS	jumper		1
28*	6733192	TUBE			1
29*	6592506	CLAMP			2
30*	35C-636	BOLT			1
31*	6902834	INSTRUCTIONS			1

REAR AUXILIARY VALVE

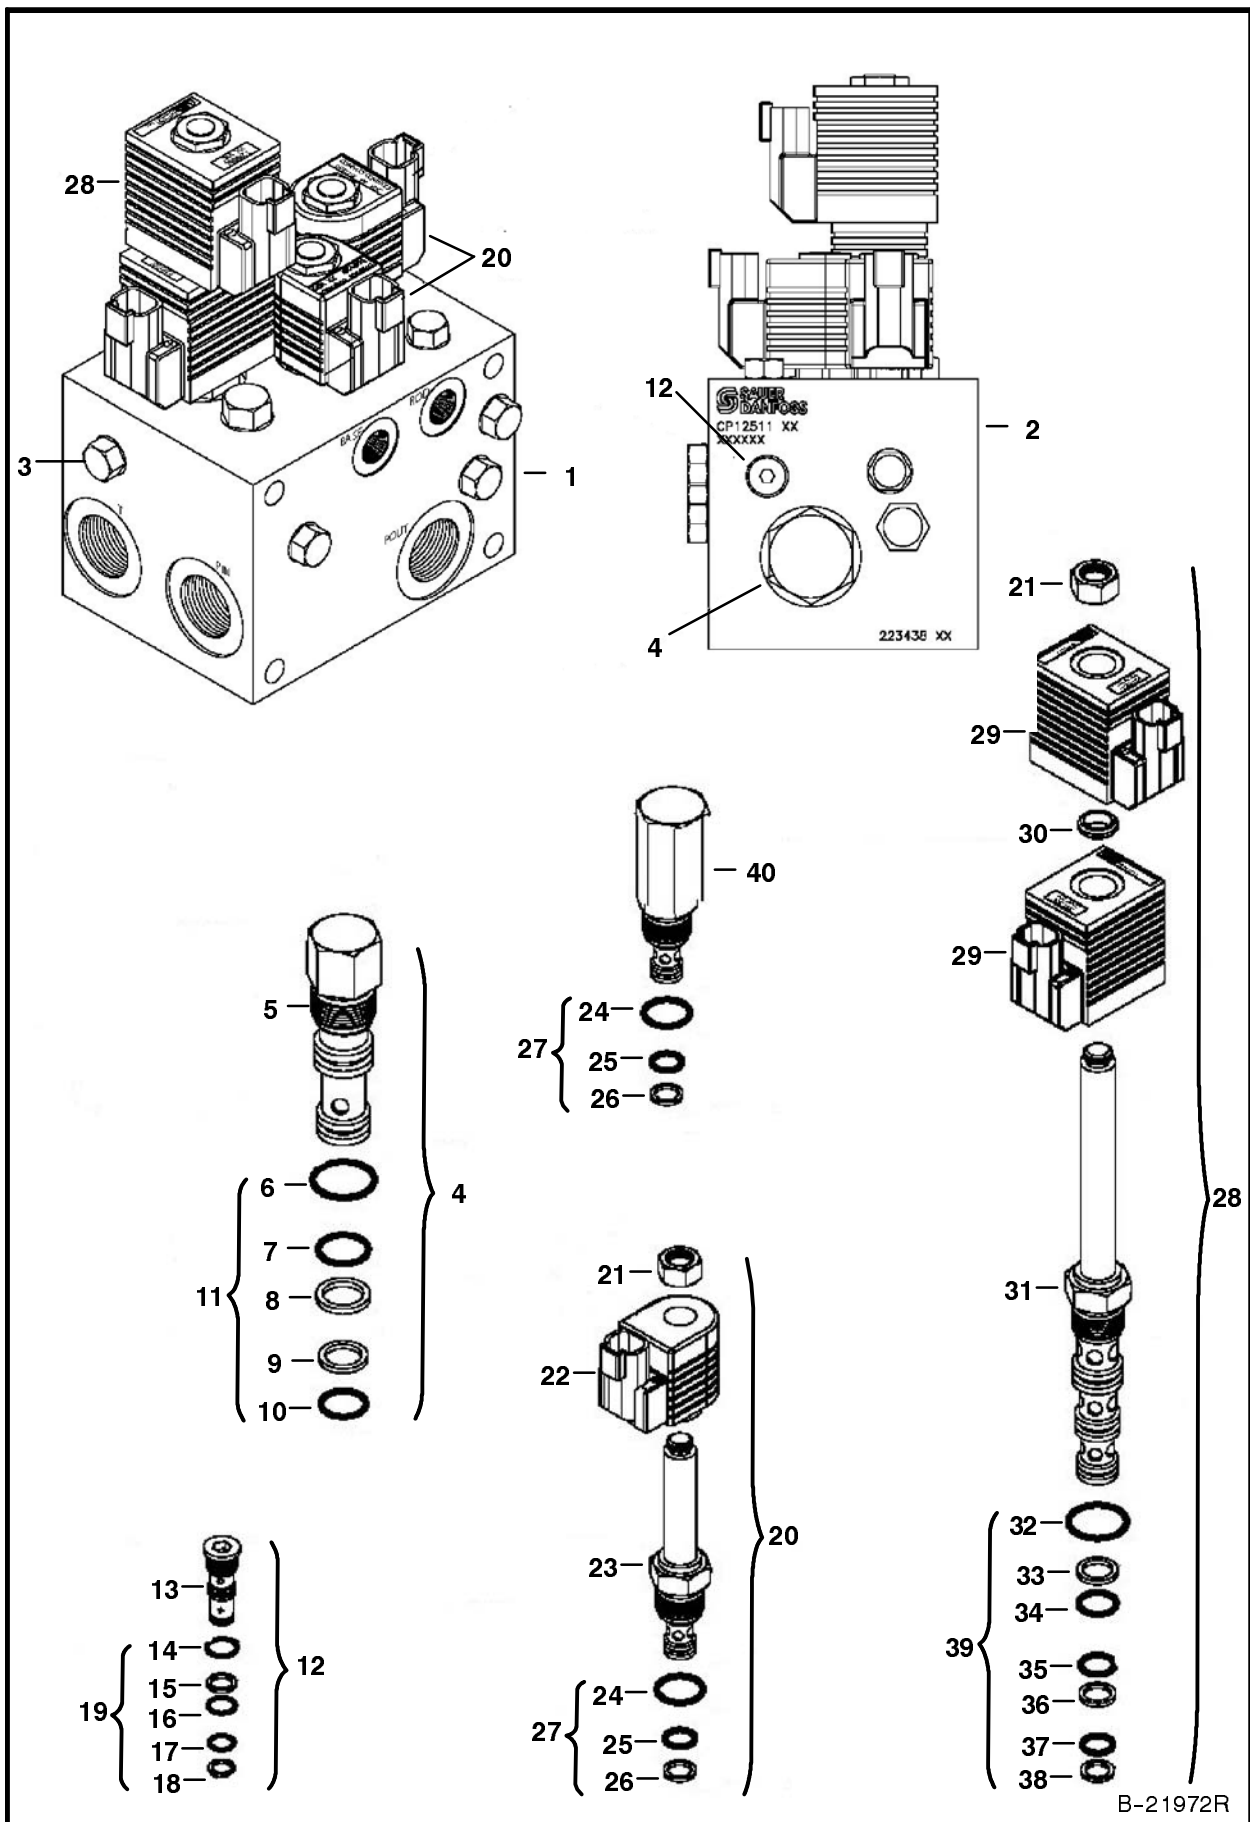


B-21972R

REAR AUXILIARY VALVE (Cont'd)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1*	6685624	VALVE	Was 6683251 [A]		1
2	NSS	BLOCK			1
3		PLUG			x
4	6684044	VALVE	assy. - Ref. 5-10 - differential sensing		1
5	NSS	VALVE	Order Ref. 4		1
6	6684046	O-RING			1
7	6684048	O-RING			1
8	6684047	BACK-UP RING			1
9	6684050	BACK-UP RING			1
10	6684049	O-RING			1
11	6684045	SEAL KIT	Ref. 6-10		1
12	6684061	VALVE	shuttle - Ref. 13-18		1
13	NSS	VALVE	Order Ref. 12		1
14	6684063	O-RING			1
15	6684064	BACK-UP RING			1
16	6684065	O-RING			1
17	6684066	O-RING			1
18	6684067	BACK-UP RING			1
19	6684062	SEAL KIT	Ref. 14-18		1
20	6685061	VALVE	solenoid - Ref. 21-26		2
21	6684060	NUT			2
22	6684073	COIL	12 volt		2
23	NSS	VALVE	Order Ref. 20		2
24	6684070	O-RING			2
25	6684071	O-RING			2
26	6684072	BACK-UP RING			2
27	6684069	SEAL KIT	Ref. 24-26		2
28	6684051	VALVE	solenoid - Ref. 21 & 29-39		1
29	6684058	COIL			2
30	6684059	SPACER			1
31	NSS	VALVE	Order Ref. 28		1
32	6681489	O-RING			1
33	6684053	BACK-UP RING			1
34	6684054	O-RING			1
35	6684056	O-RING			1
36	6684055	BACK-UP RING			1
37	6681487	O-RING			1
38	6684057	BACK-UP RING			1
39	6684052	SEAL KIT	Ref. 32-38		1
40*	6685328	RELIEF VALVE	W/Ref. 24-26		1

REAR DOOR LOCK

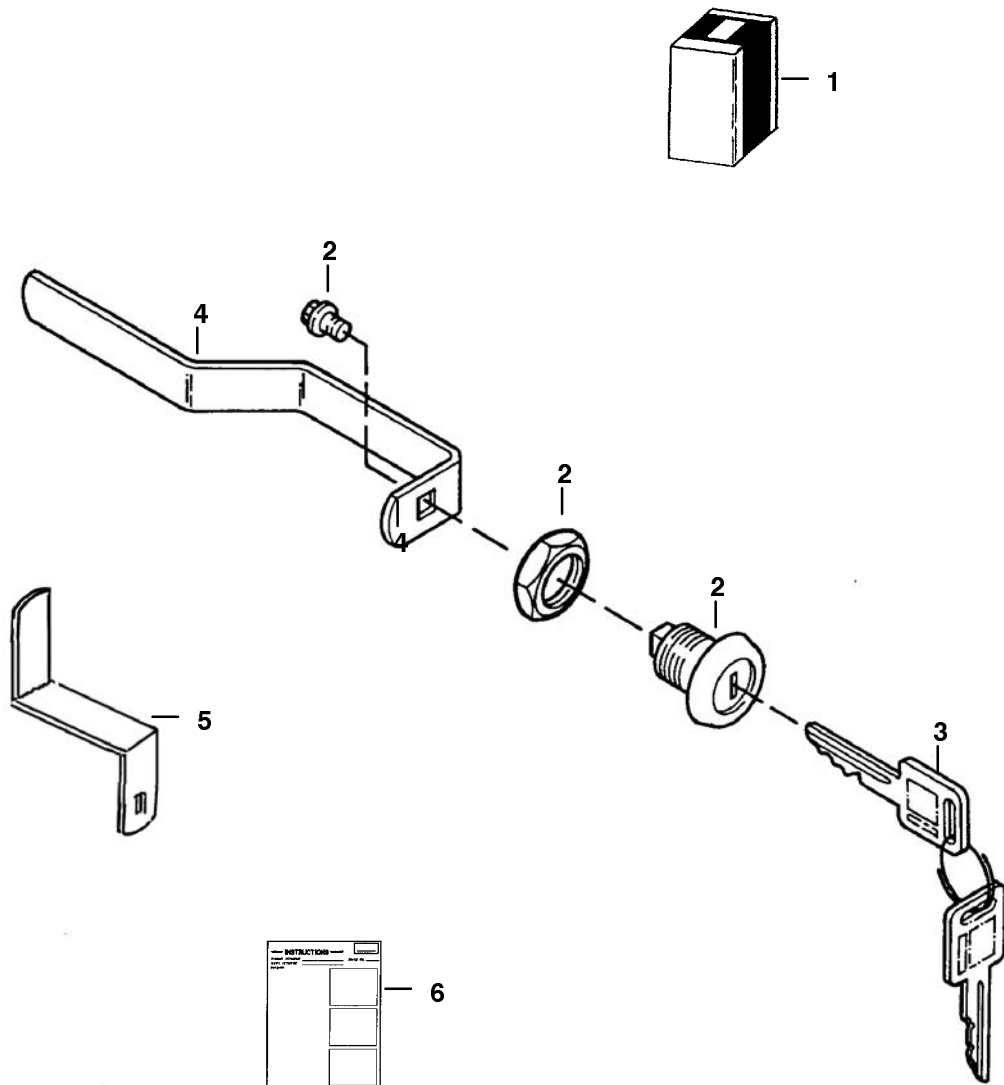


B-15018

REAR DOOR LOCK (Cont'd)

[illegible]

REAR WIPER

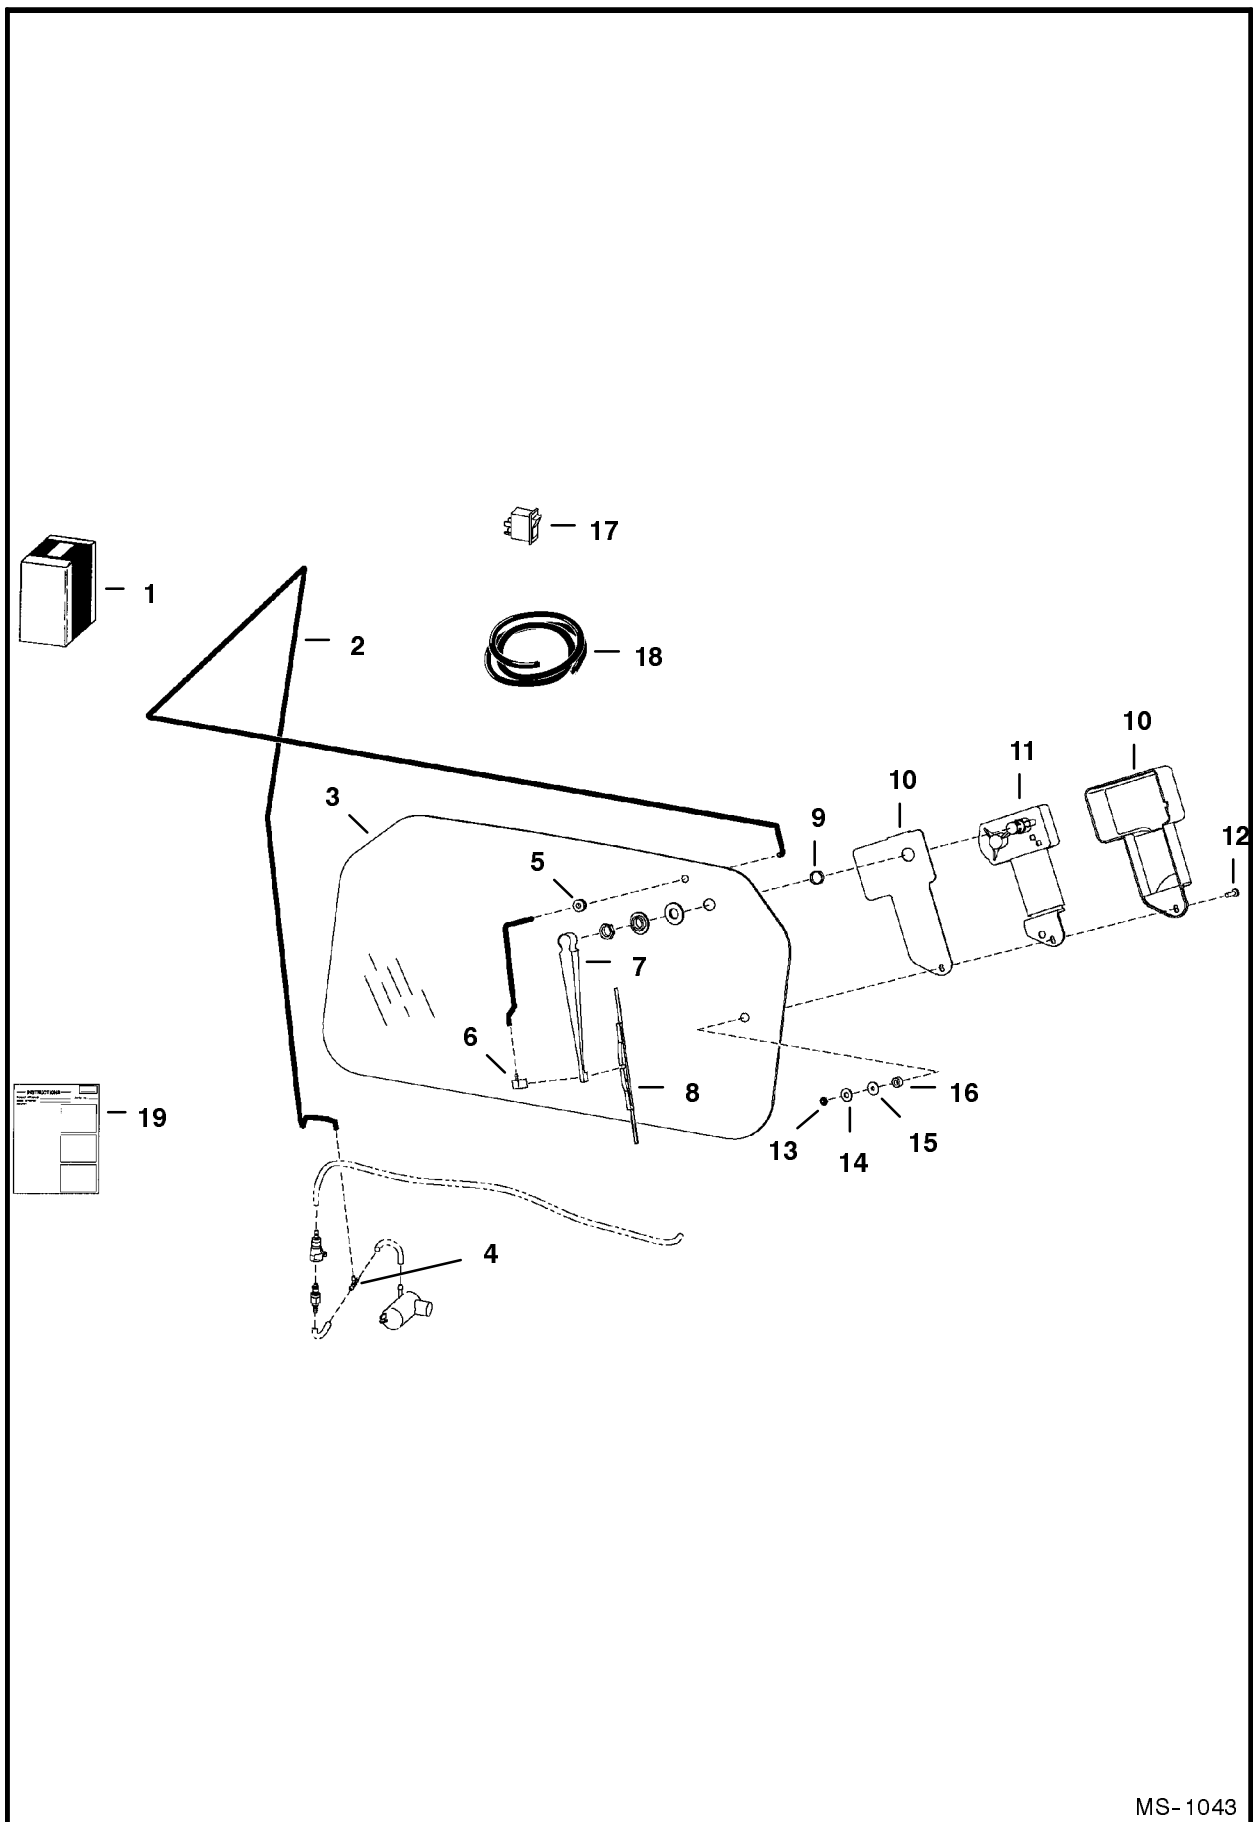


MS-1043

REAR WIPER (Cont'd)

[illegible]

SEAL ENCLOSURE KIT

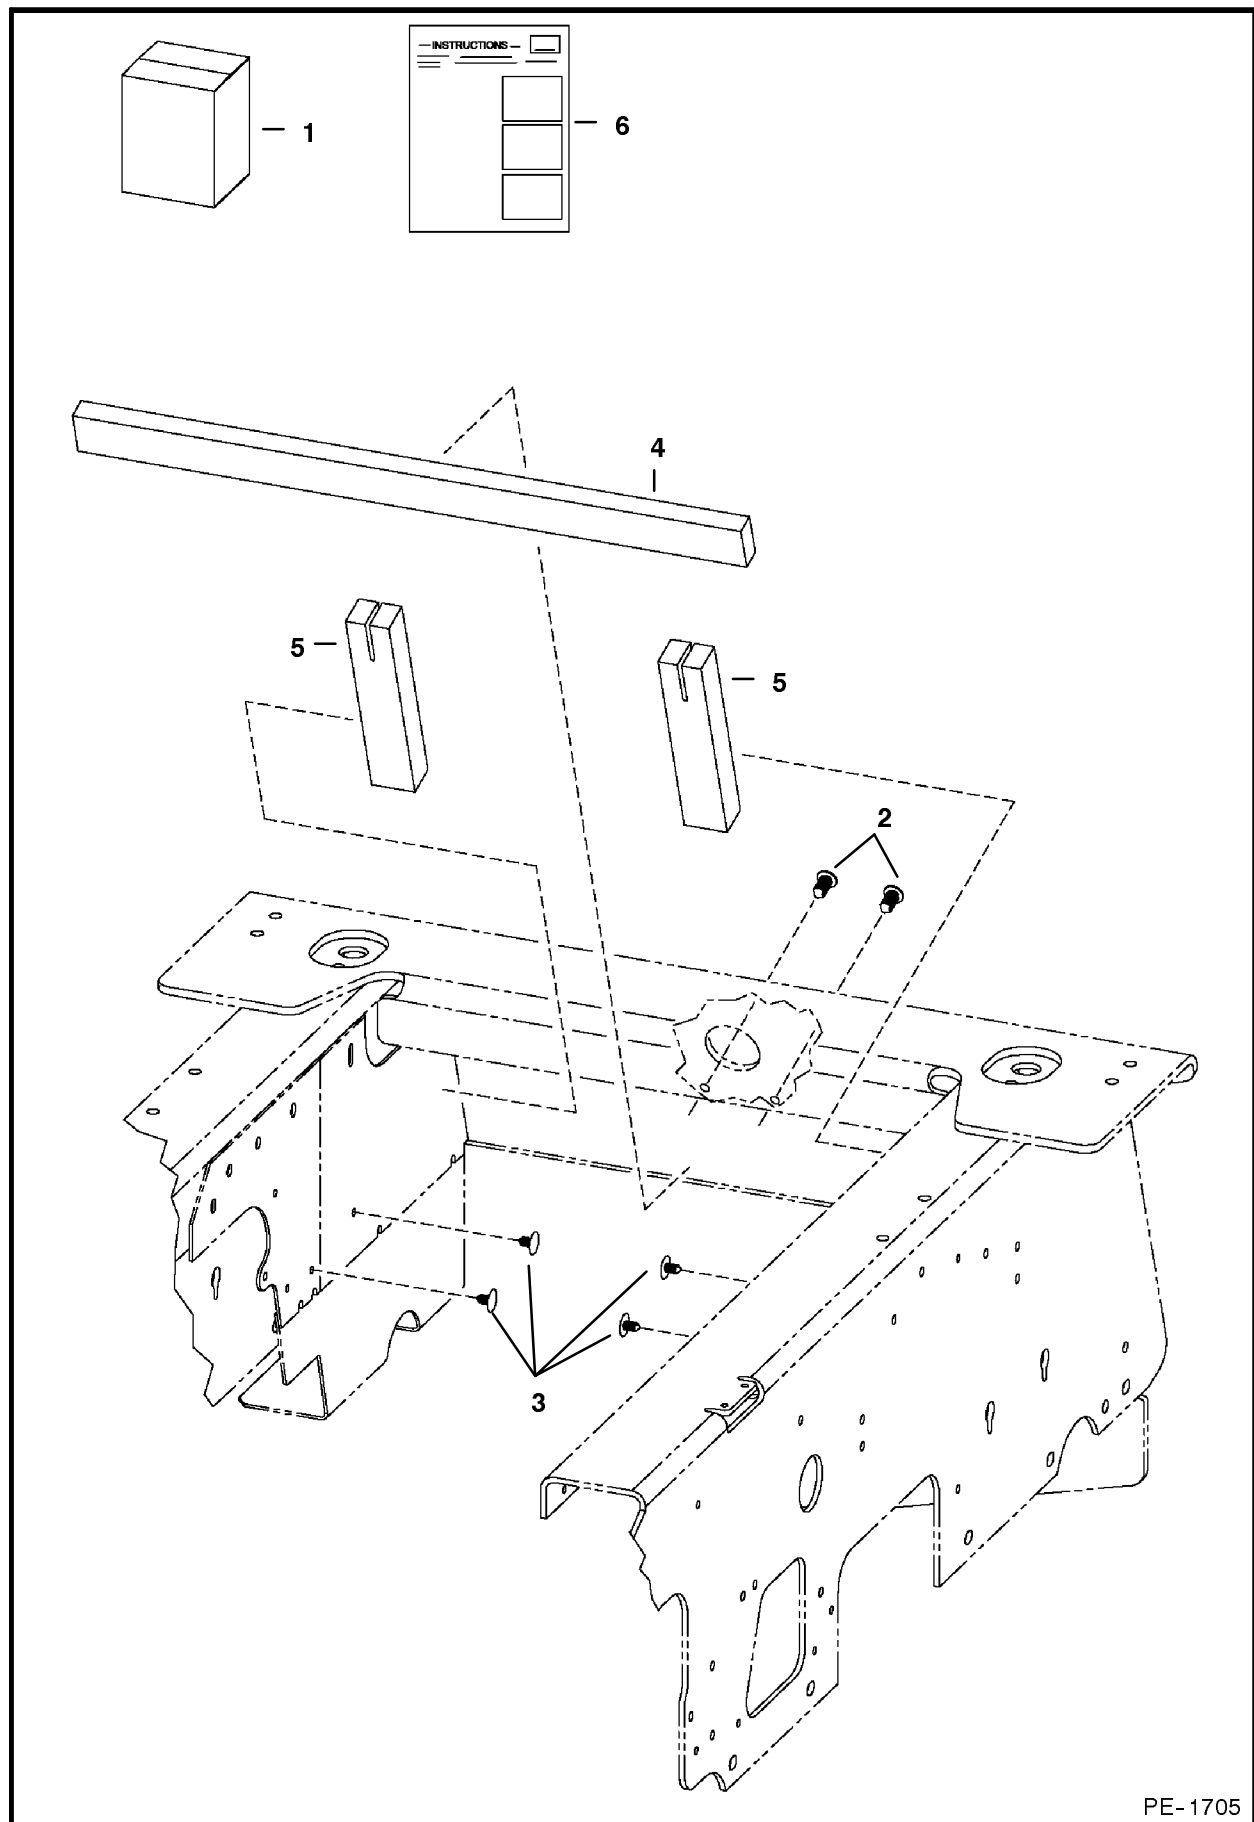


PE-1705

SEAL ENCLOSURE KIT (Cont'd)

[illegible]

SEAT (Suspension - Sears)

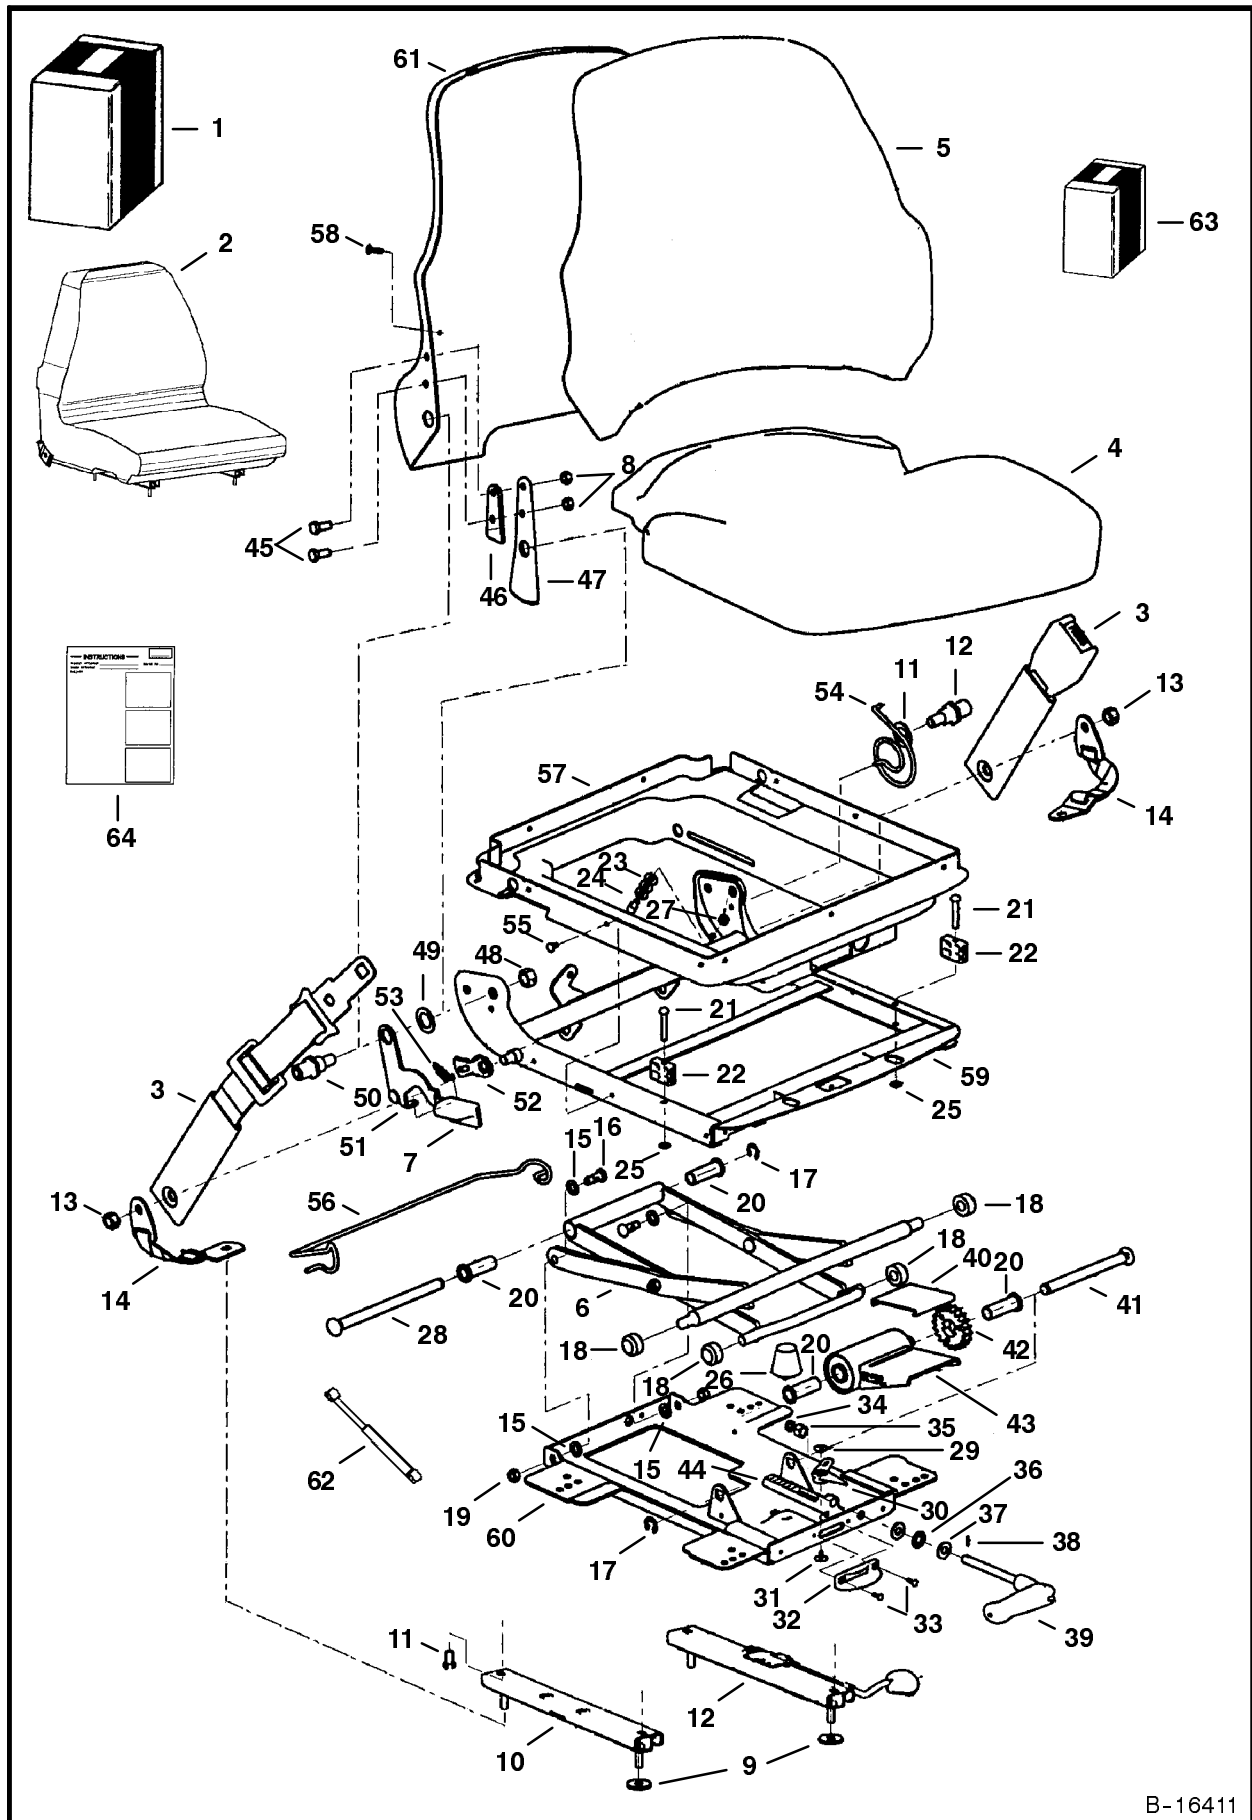


B-16411

SEAT (Cont'd)
(Suspension - Sears)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	NAP	KIT	vinyl seat - Order Ref. 2, 3 & 64		1
	NAP	KIT	fabric seat - Order Ref. 2, 3 & 64		1
2	6675595	SEAT	vinyl - Ref. 4-61 - W/L.H. recliner		
			lever		1
	6675596	SEAT	fabric - W/L.H. recliner lever		1
3	6675170	SEAT BELT	lap		1
4	6675320	SEAT	seat - fabric		1
	6675322	SEAT	seat - vinyl		1
5	6675319	SEAT	backrest - fabric - W/Ref. 58		1
	6675321	SEAT	backrest - vinyl - W/Ref. 58		1
6	6675317	SCISSORS			1
7	6675323	KNOB	recliner		1
8	NSS	NUT			6
9	619021	WASHER			4
10	NSS	SLIDE	slave		1
11	NSS	BOLT			4
12	NSS	SLIDE	locking		1
13	NSS	NUT			2
14	NSS	BELT	tether		2
15	NSS	WASHER	cross pivot		4
16	NSS	BOLT	pivot		2
17	NSS	RING	retaining		2
18	NSS	ROLLER			4
19	NSS	NUT			2
20	NSS	BUSHING	wt adjustment		4
21	NSS	RIVET			2
22	NSS	BLOCK	up stop		2
23	NSS	WASHER			3
24	NSS	STOP	armrest		1
25	NSS	PUSHNUT			2
26	NSS	BUMPER			1
27	NSS	NUT			1
28	NSS	SHAFT	bearing		1
29	NSS	RIVET	female snap		1
30	NSS	INDICATOR	weight		1
31	NSS	RIVET	male snap		1
32	NSS	DIAL	weight indicator		1
33	NSS	POP RIVET			2
34	NSS	SPACER			1
35	NSS	NUT			1
36	NSS	BEARING	thrust		1
37	NSS	RACE	thrust		2
38	NSS	SHEAR PIN			1
39	NSS	HANDLE	weight adjustment		1
40	NSS	PLATE	wear		1
41	NSS	SHAFT	torsion		1
42	NSS	DRIVE GEAR			1
43	NSS	BUSHING	torsion		1
44	NSS	RACK	wt adjustment		1
45	NSS	BOLT			2
46	NSS	SPACER	recliner		1

SEAT (Cont'd) (Suspension - Sears)

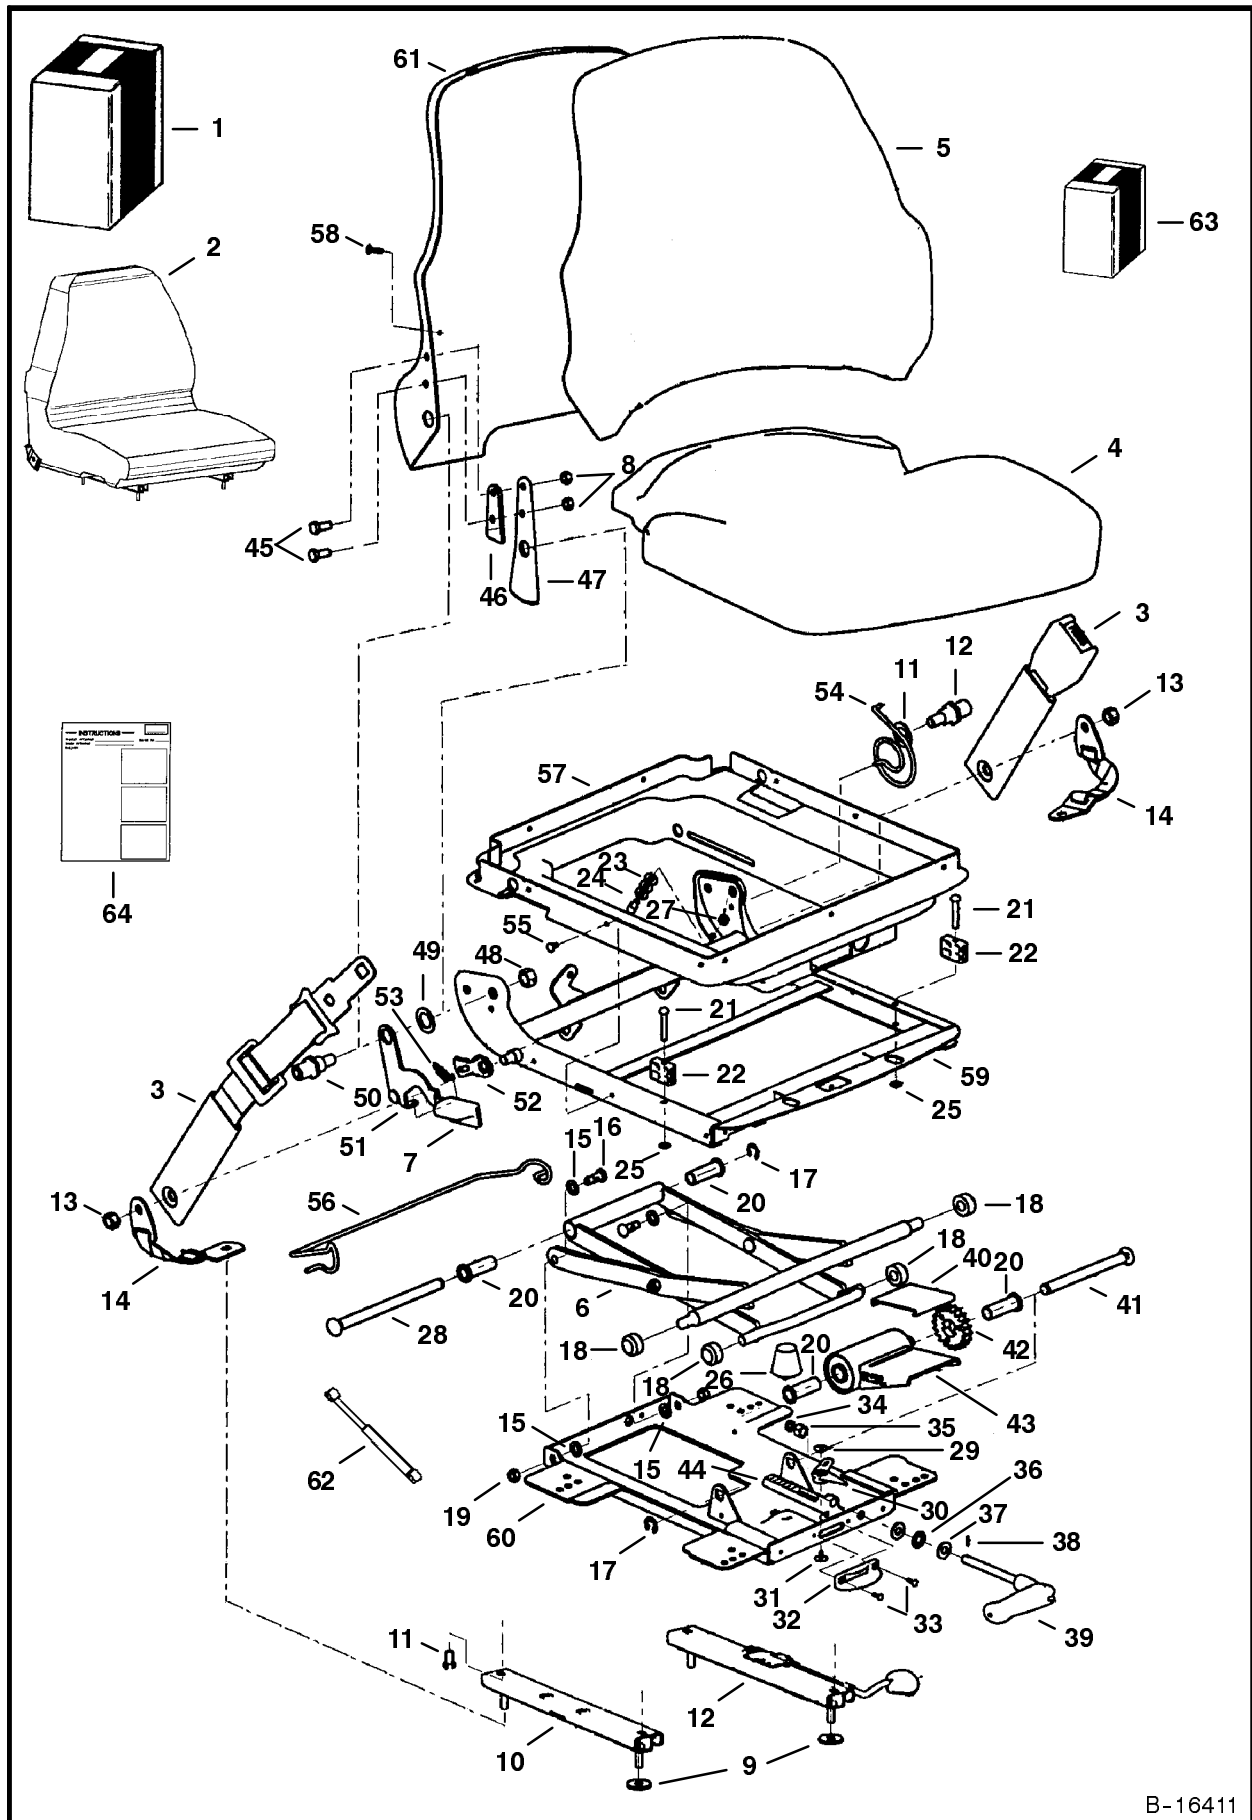


B-16411

SEAT (Cont'd)
(Suspension - Sears)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
47	NSS	BRACKET	back tilt		1
48	NSS	NUT			2
49	NSS	WASHER	plastic		2
50	NSS	BOSS	back pan pivot		2
51	NSS	HANDLE	recliner (RH)		1
52	NSS	LATCH	recliner		1
53	NSS	SPRING	extension		1
54	NSS	SPRING	tilt latch		1
55	NSS	CLIP			6
56	NSS	WIRE	boot support		1
57	NSS	SUSPENSION	boot		1
58	NSS	SCREW			2
59	NSS	HOUSING	upper		1
60	NSS	HOUSING	lower		1
61	NSS	BACK PAN			1
62	6676338	GAS SPRING			1
63	6675309	KIT	slides - W/Ref. 8 - 12		1
	6675310	KIT	tether belt - W/Ref. 9, 13 & 14		1
	6675311	KIT	suspension rollers & bearings - W/Ref. 15 - 20		1
	6675312	KIT	suspension bumpers & stops - W/Ref. 21 - 27		1
	6675313	KIT	rear tube - W/Ref. 17, 20 & 28		1
	6675314	KIT	weight adj. indicator - W/Ref. 29 - 33		1
	6675315	KIT	weight adj. handle - W/Ref. 34 - 39		1
	6675316	KIT	weight adj. - W/Ref. 17, 20 & 40 - 44		1
	6675318	KIT	R.H. recliner - W/Ref. 7, 8 & 45 - 54		1
	6676034	KIT	L.H. recliner - W/Ref. 7, 8 & 45 - 54		1
64	6675308	KIT	susp. boot - W/Ref. 55 - 57		1
	6900861	INSTRUCTIONS			1


SEAT BELT (Three Point Retractable)

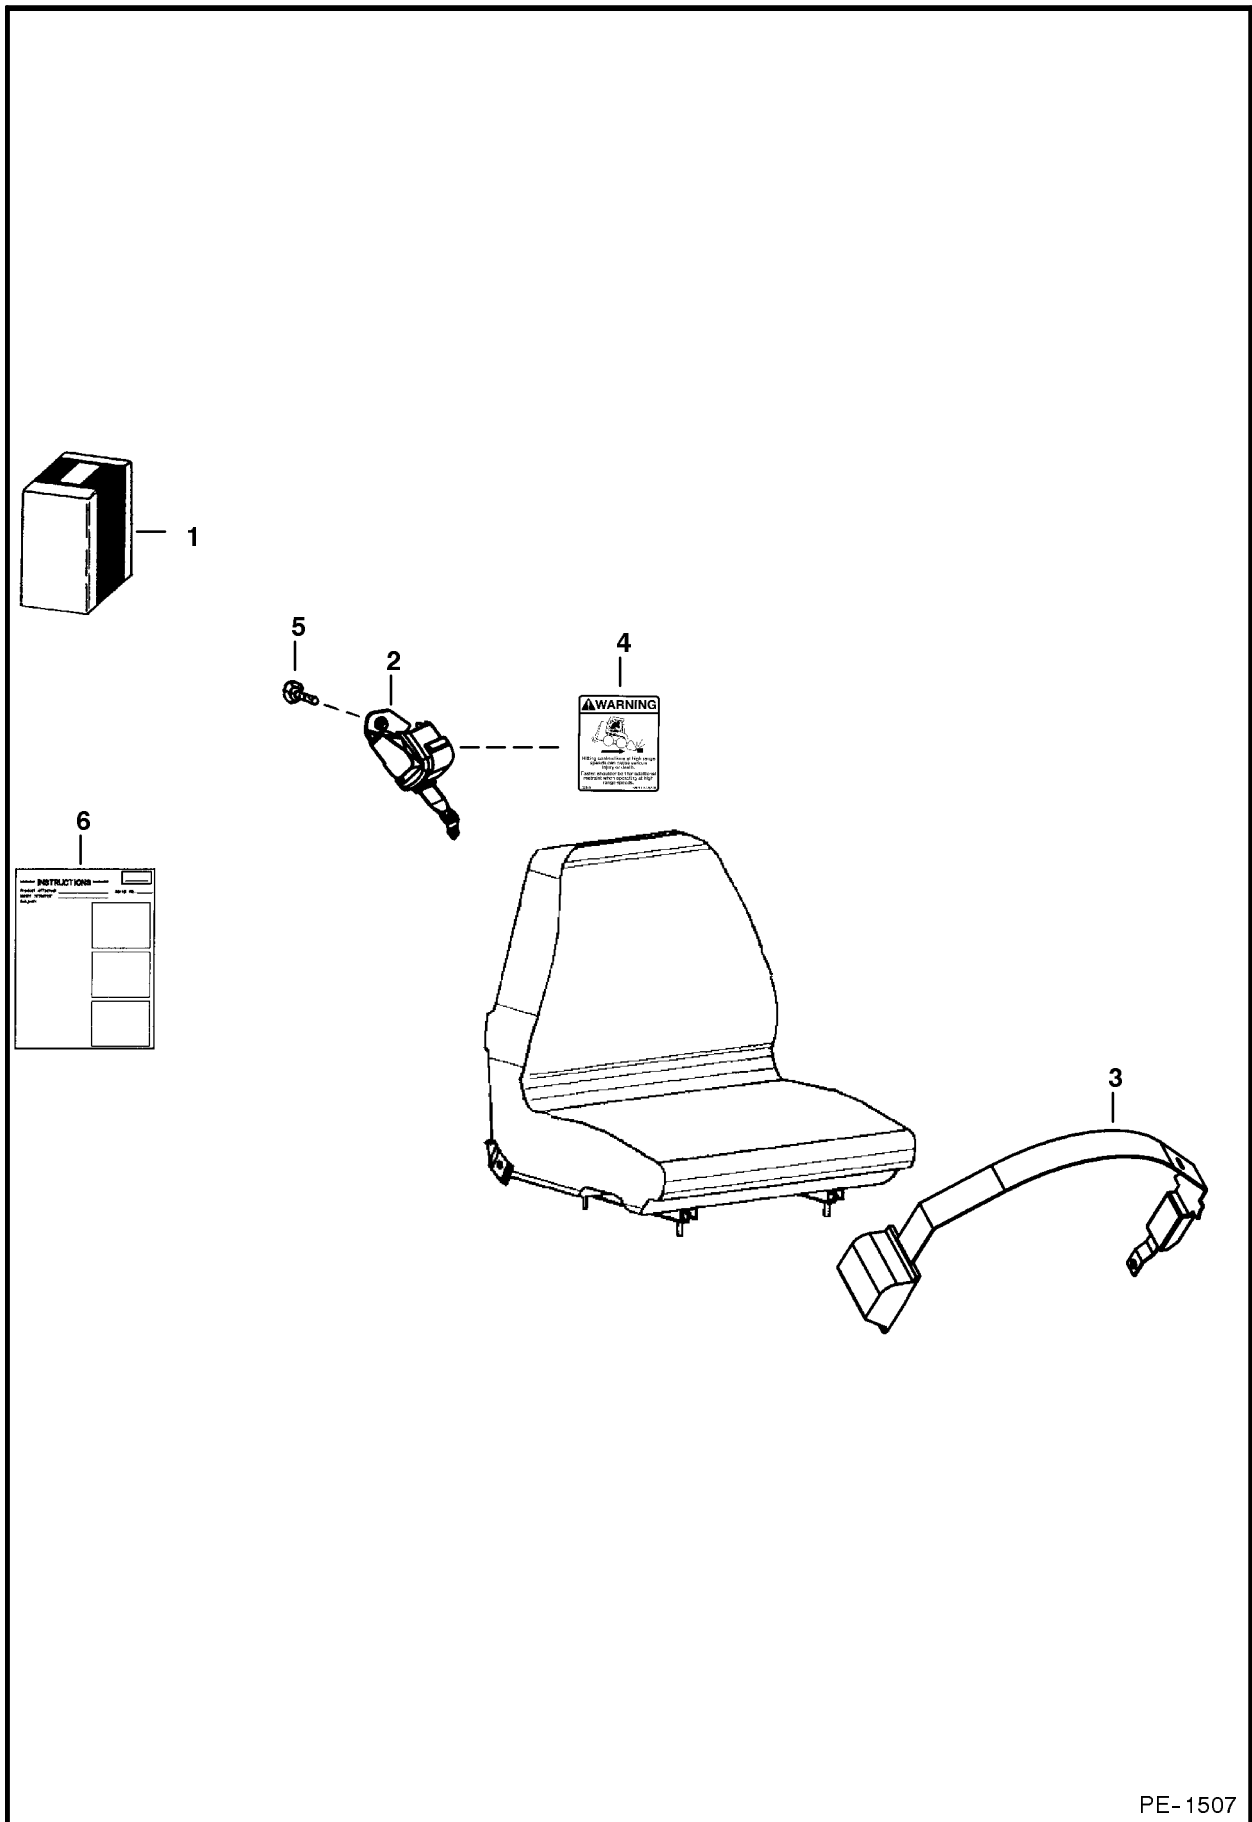

PE-1507

[illegible]

**SEAT BELT
(3" Wide Retractable)**

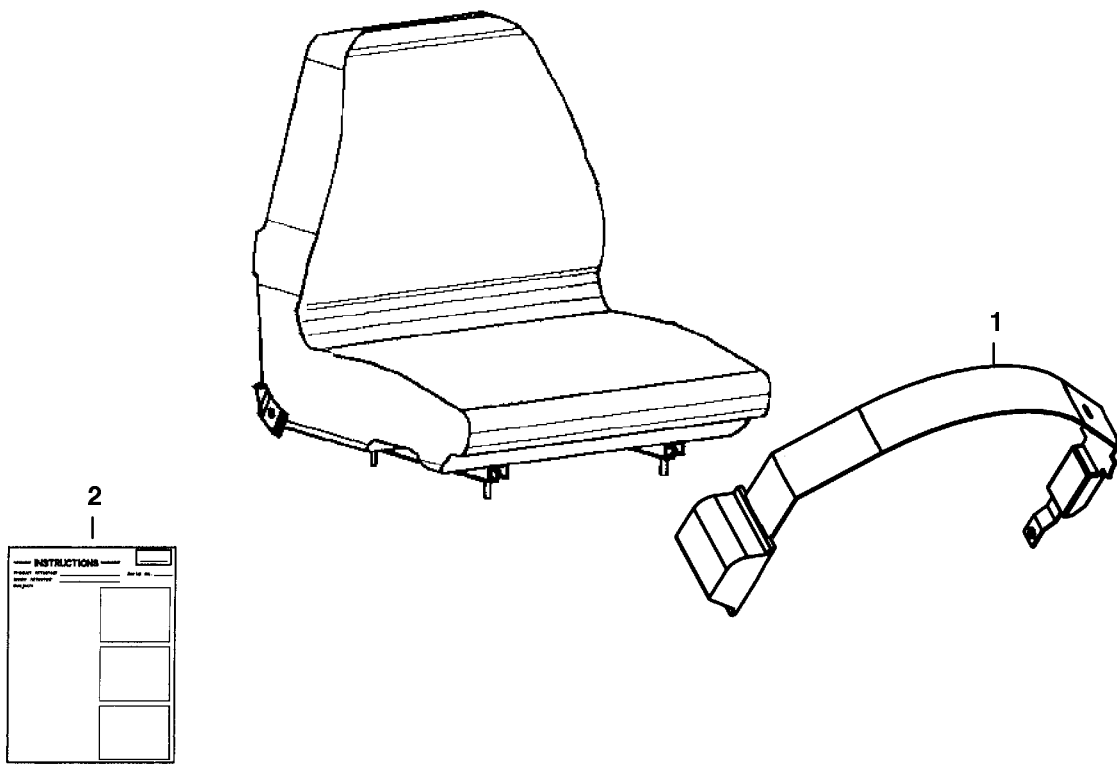


PE- 1508

SEAT BELT (Cont'd)
(3" Wide Retractable)

[illegible]


SEAT BELT (3" Wide)

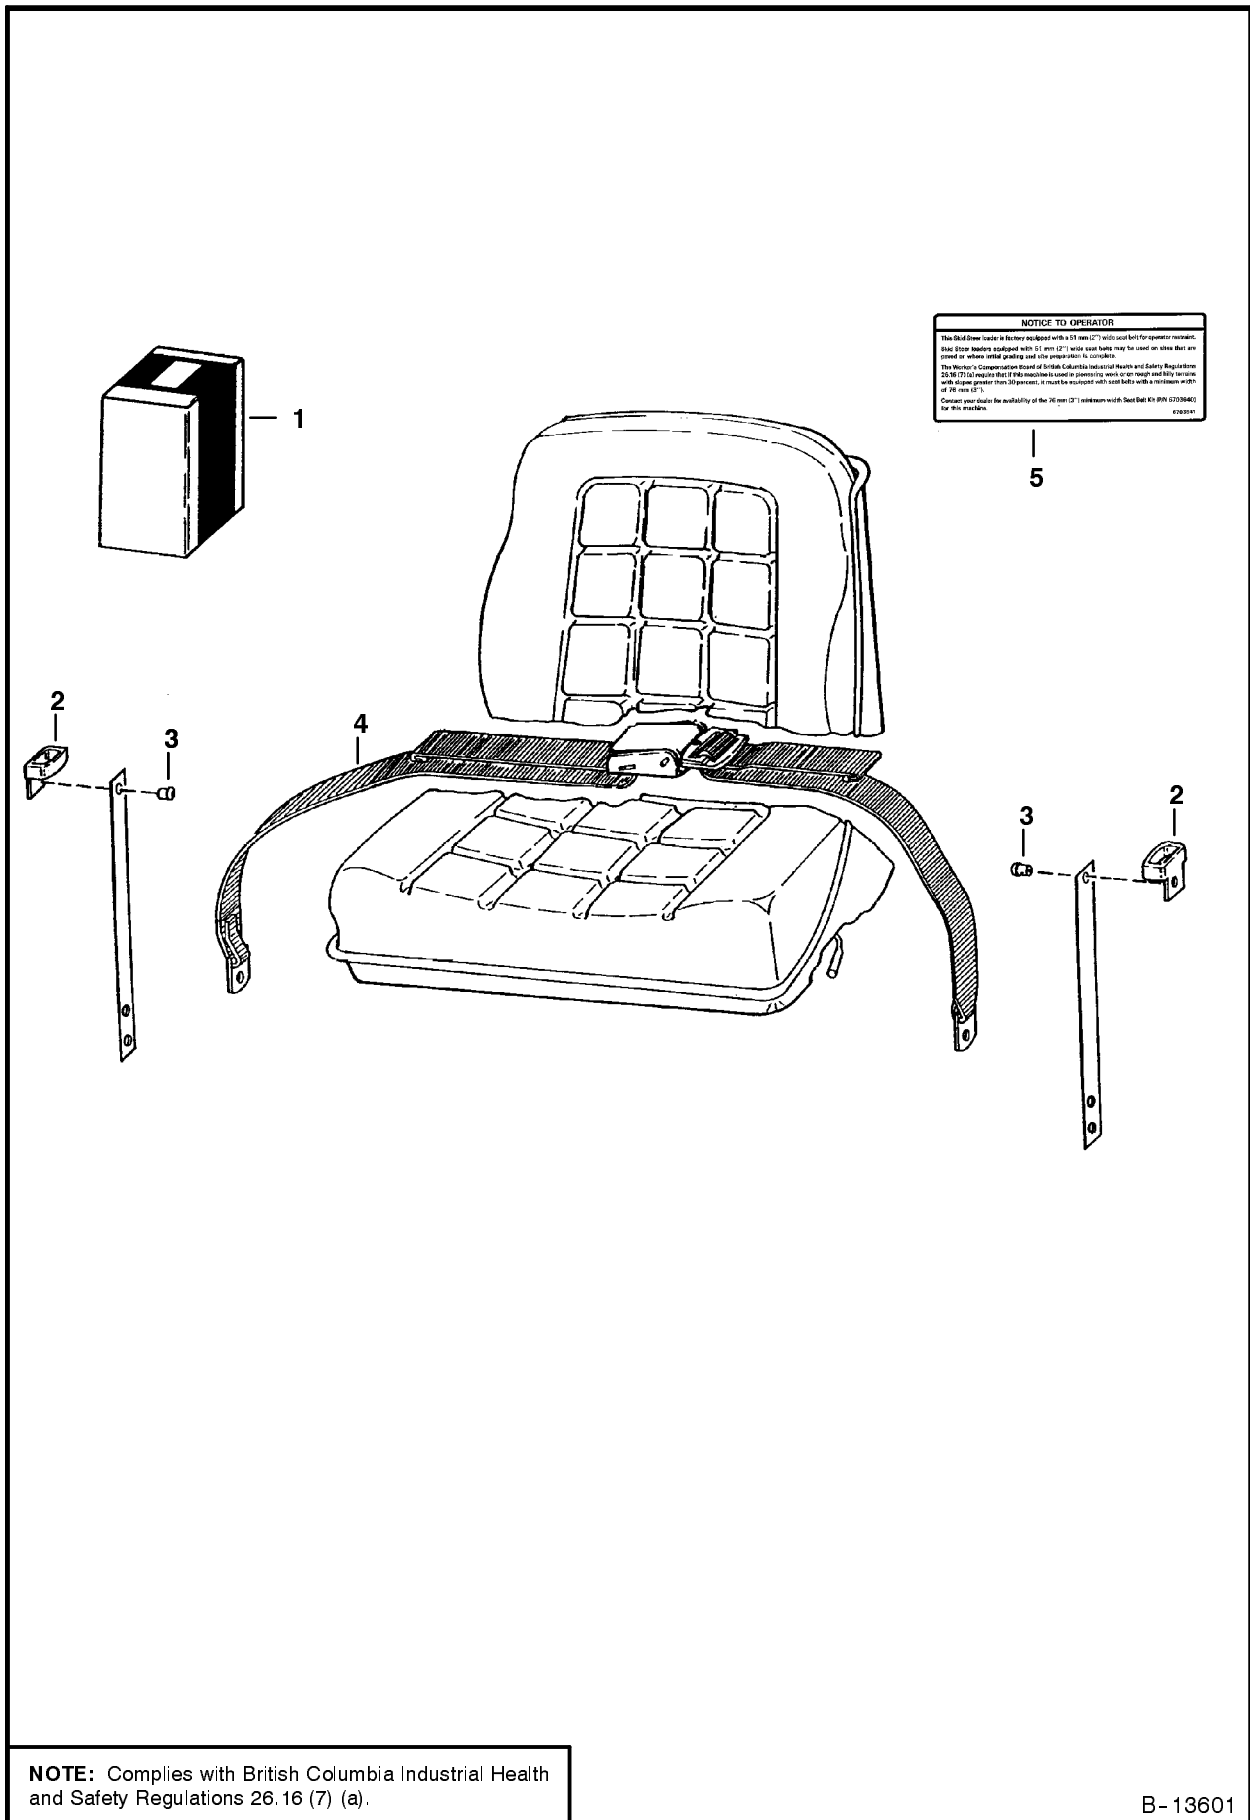

(3" Wide)

[illegible]

SOUND KIT

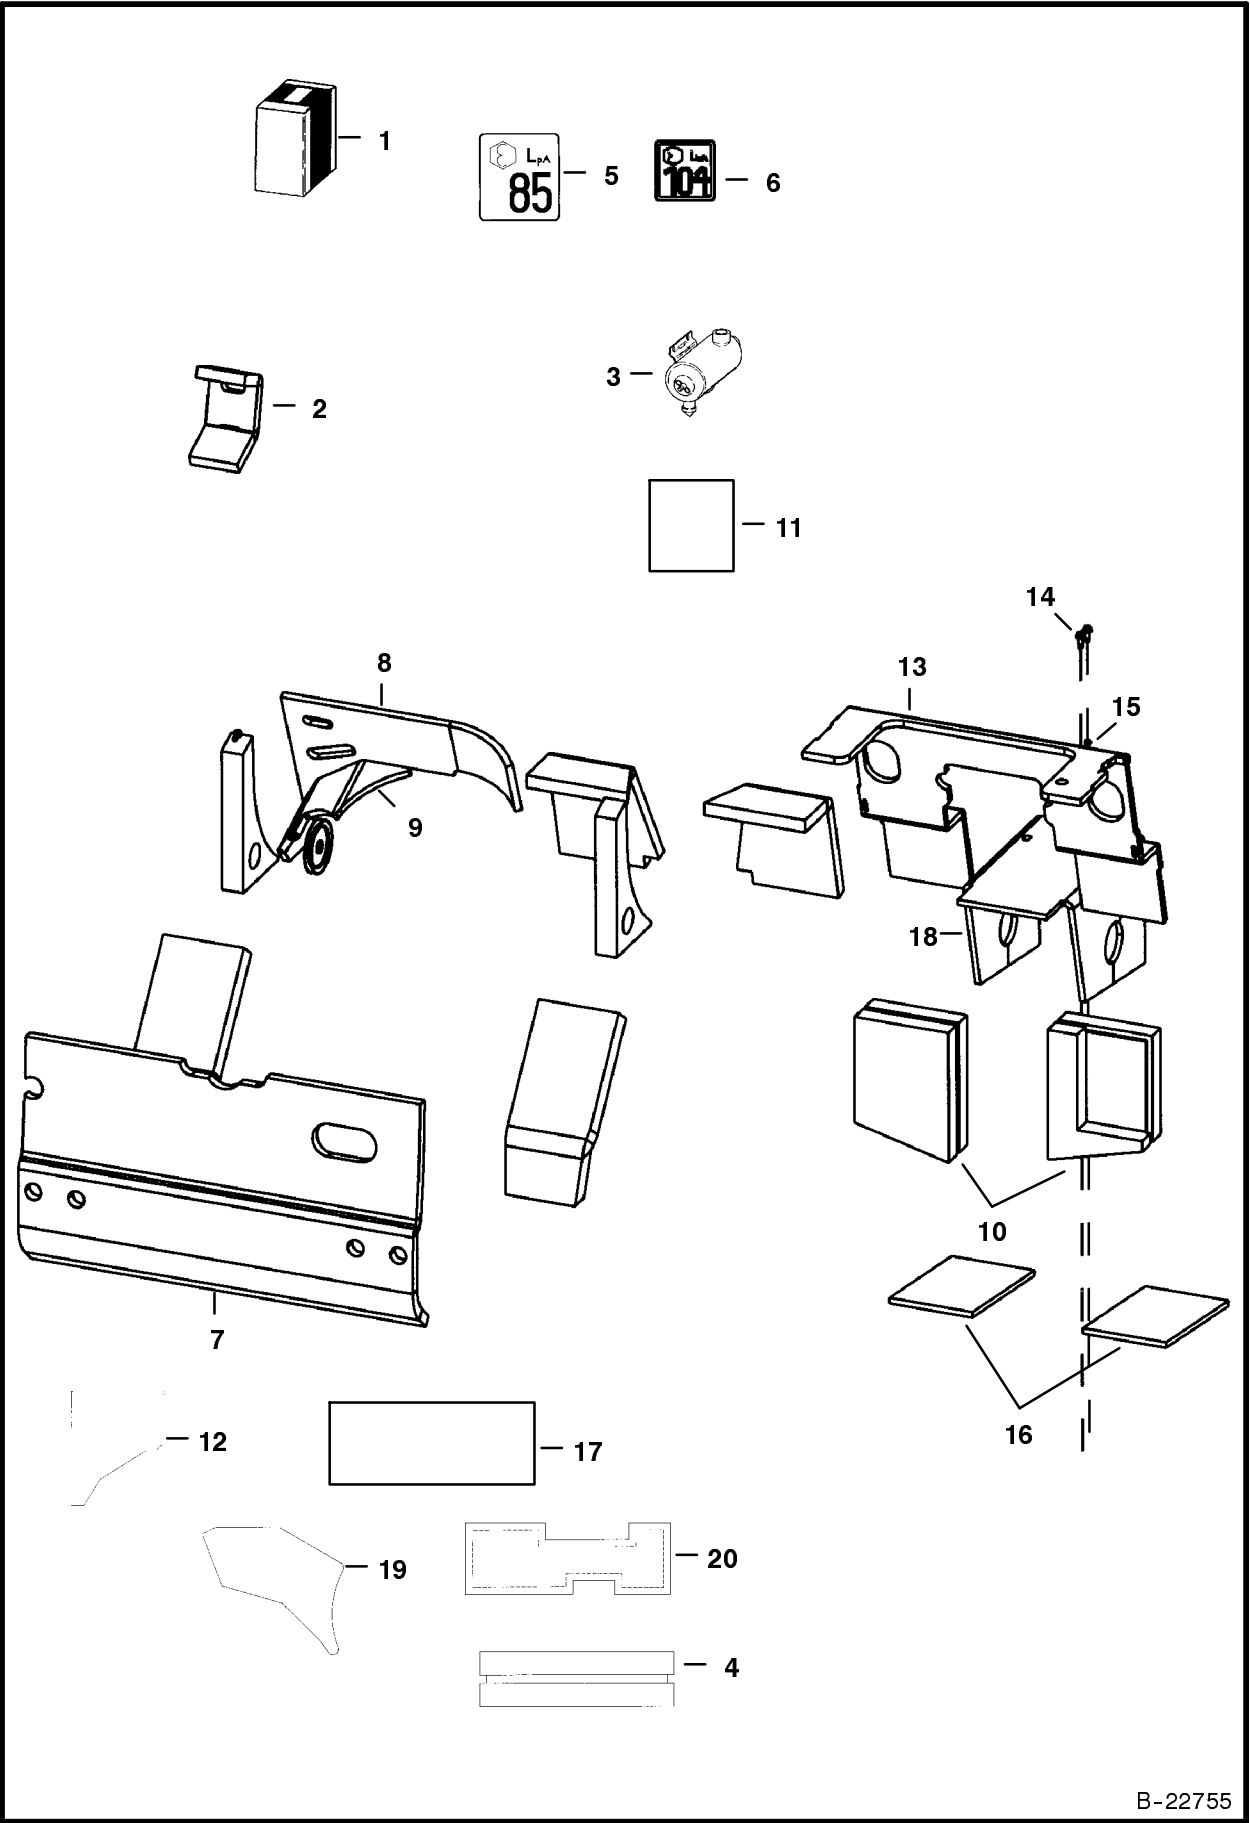


B-22755

SOUND KIT (Cont'd)

[illegible]

SOUND OPTION

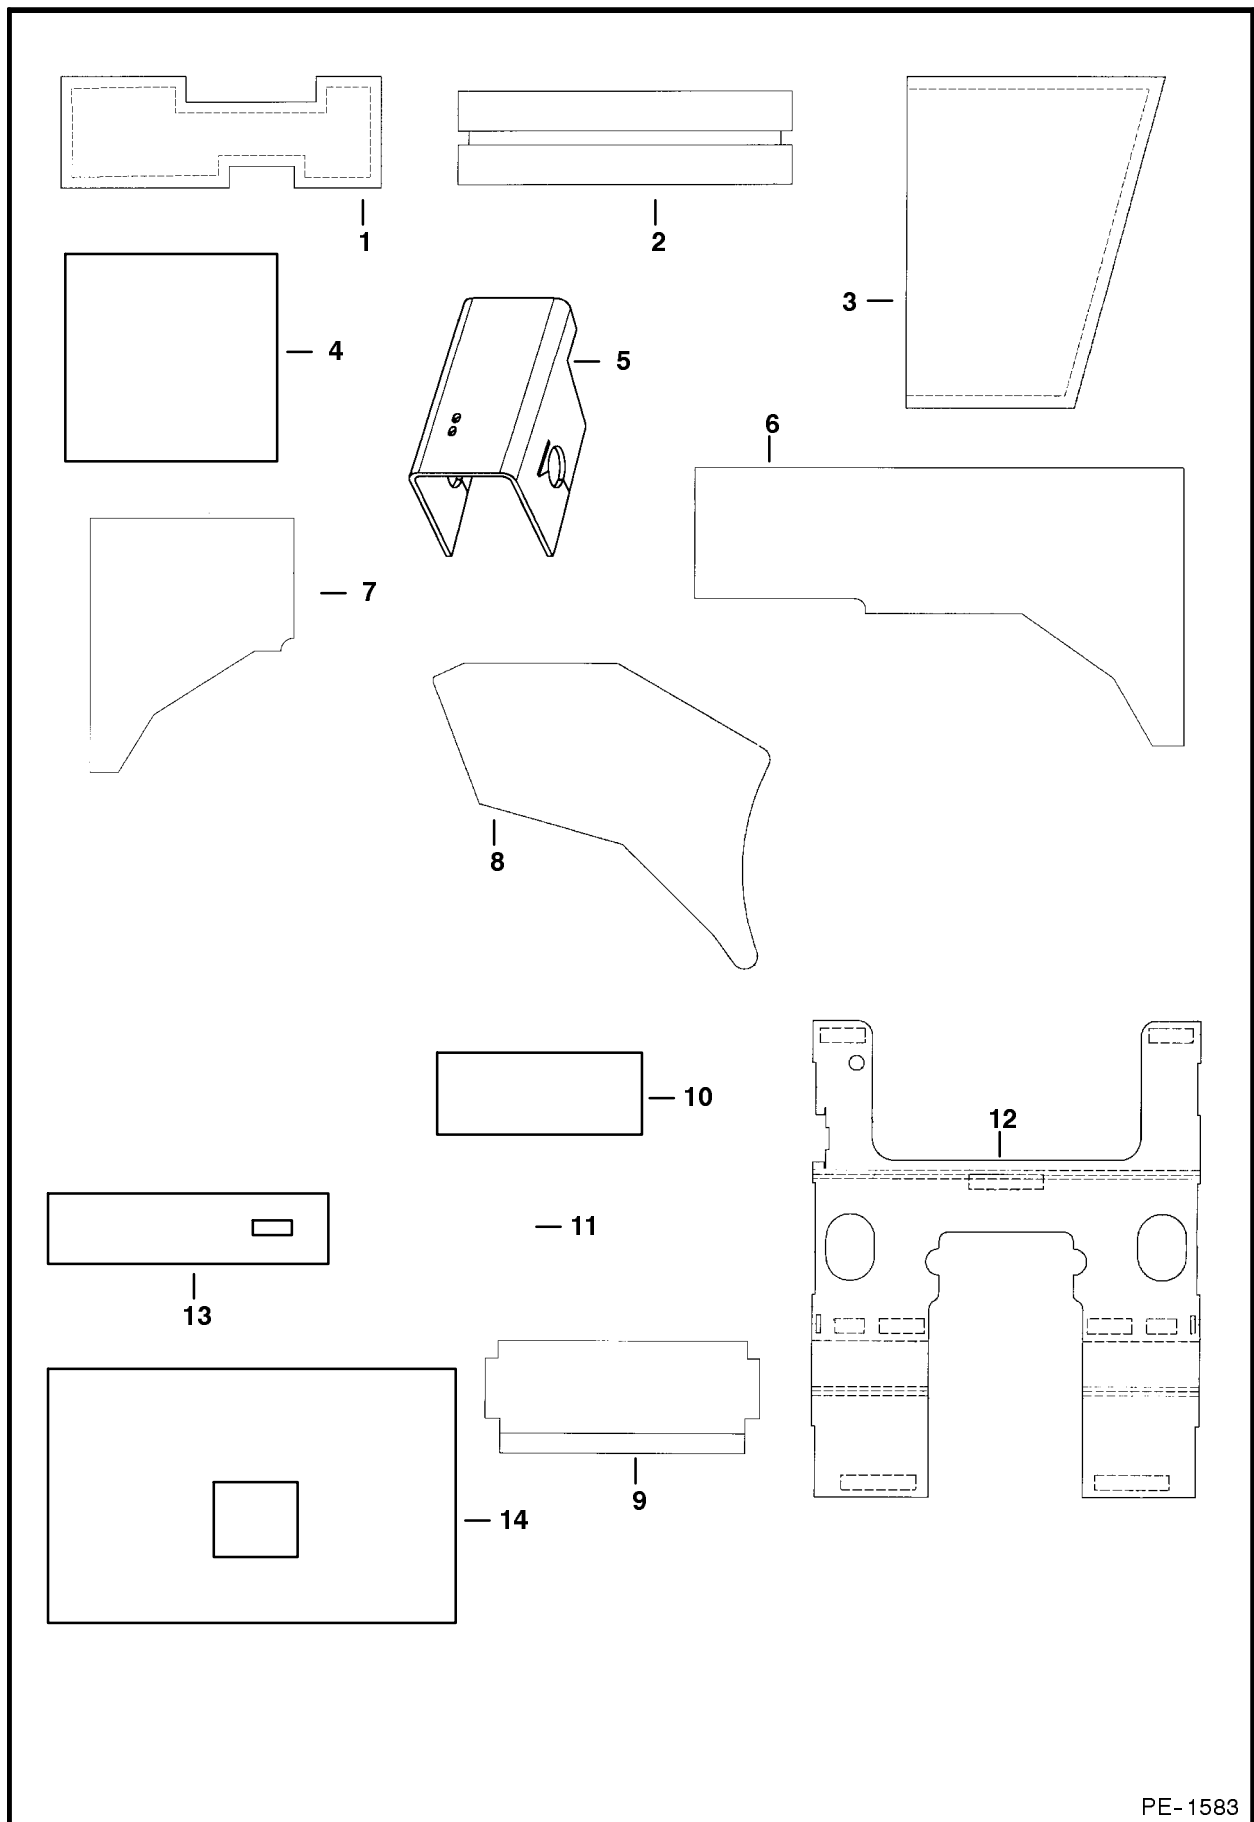


PE-1583

SOUND OPTION (Cont'd)

[illegible]

SOUND REDUCTION HARDHAT

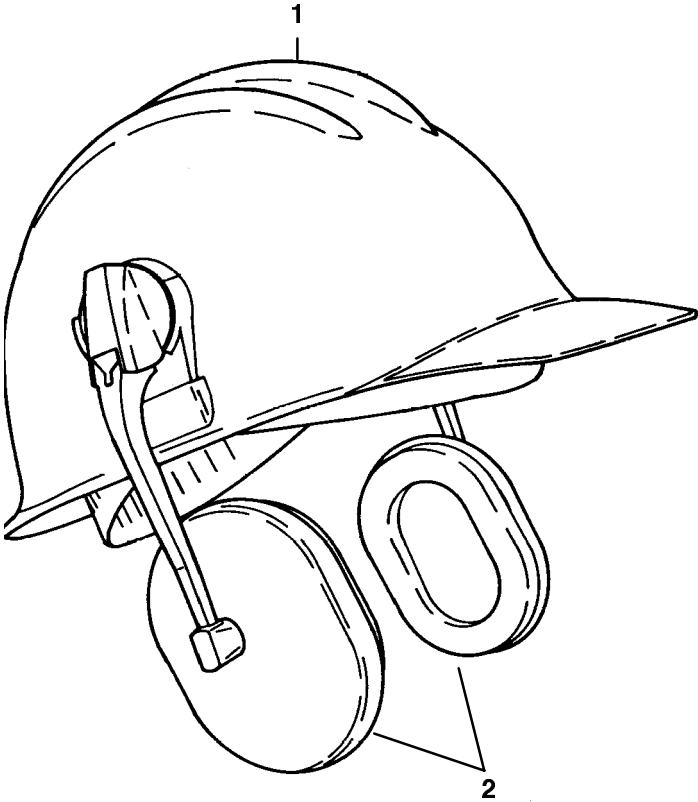


B-3111

SOUND REDUCTION HARDHAT (Cont'd)

[illegible]

STROBE LIGHT

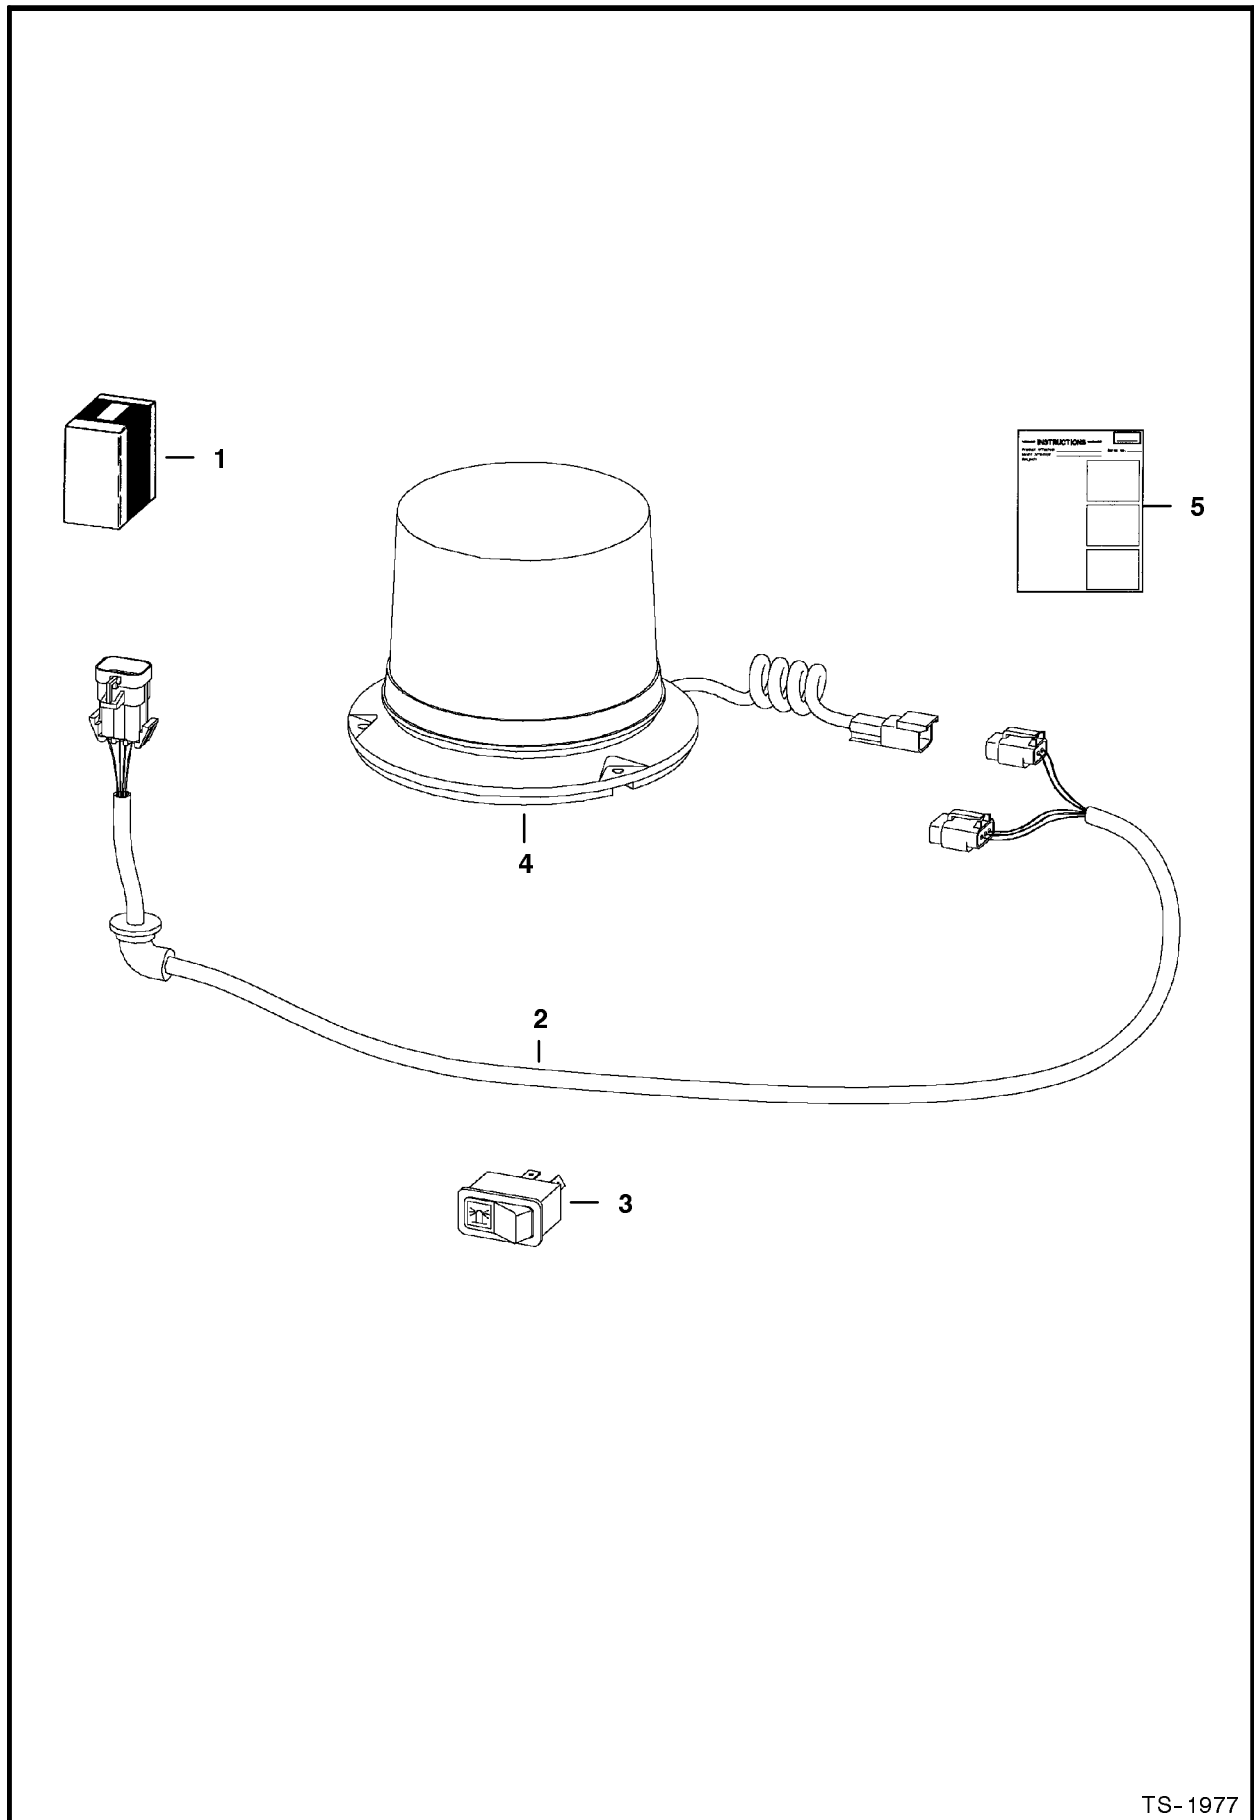


TS-1977

STROBE LIGHT (Cont'd)

[illegible]

TIRES & RIMS (Solid Tire)

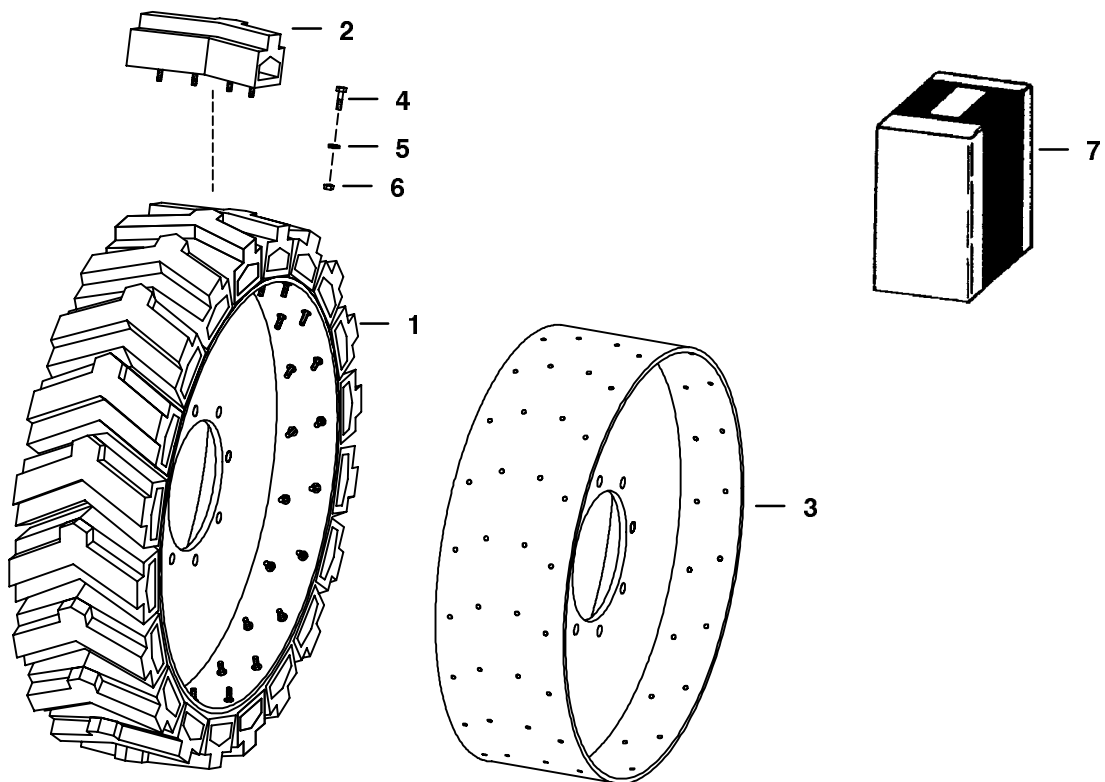


TS-1082

TIRES & RIMS (Cont'd) **(Solid Tire)**

[illegible]

TIRES & RIMS














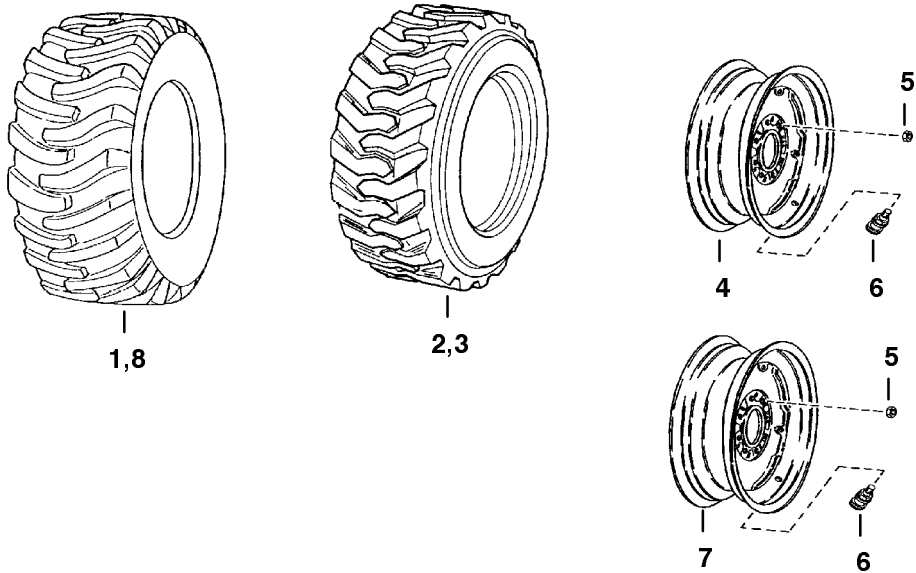


B-17101R

TIRES & RIMS (Cont'd)

[illegible]




BULK ITEMS (SEE NOTE)

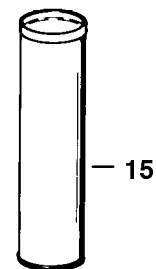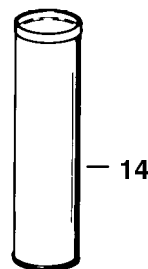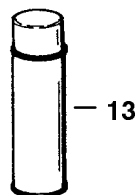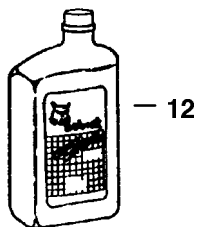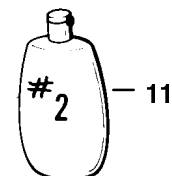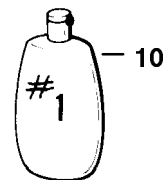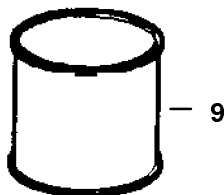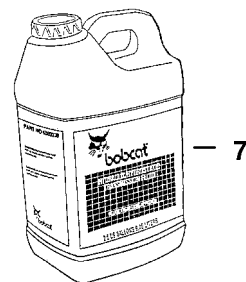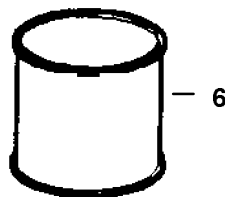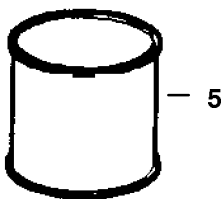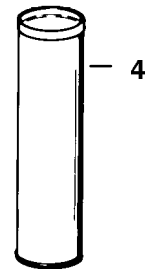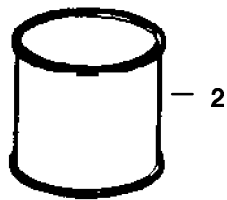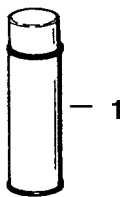

NOTE: Some of these bulk items may not be used on this particular model Bobcat.

NOTE: See Merchandising catalog for more products & information.

NOTE: Paint spray cans are packaged 6 per box.
Motor oil quarts are packaged 12 per box.
Motor oil 5 qt. jugs are packaged 4 per box.
Motor oil 2.5 gal. jugs are packaged 2 per box.



B-16462R

BULK ITEMS (Cont'd)
(SEE NOTE)

Ref. No.	Part Number	Description	Remarks	Serial Number	Qty.
1	6902228	PAINT	orange - Spray Can - SEE NOTE		x
	6902229	PAINT	charcoal - Spray Can-SEE NOTE		x
	6902230	PAINT	white - Spray Can - SEE NOTE		x
2	6902233	PAINT	orange - Qt.		x
	6902234	PAINT	charcoal - Qt.		x
	6902235	PAINT	white - Qt.		x
3	6724094	ANTI-FREEZE	Gal. - Premixed PG		x
	6724354	ANTI-FREEZE	Gal. - PG concentrate		x
4	6633583	SEALANT	chaincase covers, oil cooler grill		x
5	NAP	REDUCER	Gal.		x
6	NAP	PRIMER	Gal.		x
	6902232	PRIMER	spray can (16 oz)		x
7	6563328	FLUID	Hydraulic/Hydrostatic Transmission Fluid - 5 Gal. - 2-2 1/2 Gal. Containers		x
	6722344	FLUID	Hydraulic/Hydrostatic Trans. Fluid - 5 Gal. Container		x
	6563330	FLUID	55 Gal. Drum		x
8	6599360	SEALANT	electrical - 3 oz. tube		x
9	6634393	LUBRICANT	90 wt. gear - pint - For use in cooling fan drive assy.		x
10	6630188	POLISH	window-1 (8 oz.)		x
	NAP	POLISH	window-1 (64 oz.) -Order 6630188 Polish		x
11	6630189	POLISH	window-2 (8 oz.) - scratch remover		x
	NAP	POLISH	window-2 (64 oz.) - scratch remover - Order 6630189 Polish		x
12	6657303	OIL	30 CE/SG - 1 Qt. - SEE NOTE		x
	6724559	OIL	SAE 30 - 1 Gal.		x
	6674206	OIL	SAE 30 - 2.5 Gal. - SEE NOTE		x
	6657301	OIL	10W30 CE/SG - 1 Qt. -SEE NOTE		x
	6724557	OIL	SAE 10W30 - 1 Gal.		x
	6674205	OIL	SAE 10W30 - 2.5 Gal.-SEE NOTE		x
	6657299	OIL	15W40 CE/SG - 1 Qt. -SEE NOTE		x
	6724558	OIL	SAE 15W40 - 1 Gal.		x
	6674204	OIL	SAE 15W40 - 2.5 Gal.-SEE NOTE		x
13	6675380	ADHESIVE	insulation - spray can		x
14	6658266	GREASE	general purpose		x
15	6599719	GREASE	14.5 oz. cartridge - For fan idler bearing & spring loaded drive idler		x
16	6650407	ADHESIVE	1 oz. tube		x
17	6650388	SEALANT	flange		x
18	6736644	PAINT	orange - .5 oz. spray can		x
	6736641	PAINT	charcoal - .5 oz. spray can		x
	6736642	PAINT	white - .5 oz. spray can		x
	6736645	PAINT	red - .5 oz. spray can		x

NUMERICAL INDEX

Part No.	Description	Was	Code	Page
225855	SEAL			54, 58, 60, 64
614142	SLEEVE			348
616783	WASHER			140
619021	WASHER			24, 38, 54, 58, 60, 64, 78, 112, 384, 386, 392, 394, 404
654299	BEARING			124, 128
658128	SNAP RING			124, 128
669863	SNAP RING			124, 128
743332	GREASE ZERK			38
774220	NUT			276, 358
799119	SNAP RING			80, 84
851242	BALL BEARING			194, 236
866028	CLAMP			266
872229	WASHER			54, 58, 60, 64, 72
898731	BULB			380
1306637	PIN			78
1313995	STUD			36
1318565	PIN			330
1320075	COTTER PIN			376
1522534	RING			76
1612281	NUT			310
1614765	VALVE			424
3974037	PIN			182, 224
3974095	GASKET			178, 182, 248
3974192	BOLT			206, 252
3974260	SCREW			214, 262
3974366	BOLT			212, 260
3974368	GASKET			212, 260
3974381	SEAT			212, 260
3974382	SPRING			212, 260
3974383	SEAT			212, 260
3974384	SHIM			212, 260
3974385	TAPPET			212, 260
3974389	CAP			182, 224
3974393	PIN			182, 224
3974394	PIN			182, 224
3974395	PIN			180, 182, 220, 224
3974432	CAP			188, 230
3974433	CAP			188, 230
3974462	STUD			246
3974502	GASKET			210, 258
3974514	SPRING			186, 228
3974515	RETAINER			186, 228
3974516	COLLET			186, 228
3974518	CAP			186, 228
3974521	BRACKET			186, 228
3974524	WASHER			186, 228
3974546	KEY			192, 196, 234, 238
3974547	STOPPER			196, 238
3974577	O-RING			178, 192, 218, 234
3974618	CIR-CLIP			194, 236

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
3974620	CIR-CLIP			194, 236
3974626	SHIM			210, 258
3974671	NUT			192, 234
3974679	CLAMP			184
3974787	RACK			212, 260
3974868	PIN			182, 224
3974871	ADAPTER			182
3974882	HOOK			188, 230
3974893	SEAT			180, 220
3974894	FLANGE			180, 220
3974916	STUD			244
3974920	SCREW			186, 228
3974928	SCREW			184, 226
3974971	NUT			208, 254
3974972	GASKET			208, 244, 254
3974991	BEARING			240
3974996	COVER			194, 236
3975337	COLLAR			192, 234
3975426	OIL PUMP			182
3975441	GEAR			182, 224
5289686	PLUG			316
6510171	LINK			44
6510470	RING GEAR			168
6511855	FOAM STRIP			162
6512026	BUSHING			78
6512797	RIVET			412
6513152	SEAL			290, 296, 358
6513495	COTTER PIN			78
6513532	POPPET			122
6513533	SPRING			122
6513707	JOINT			210, 258
6515131	TERMINAL			348
6515817	WASHER			24
6516229	O-RING			74
6517516	LIGHT			348
6519178	BUMPER			28
6519925	BEARING			46
6531270	SLEEVE			80, 84
6532127	BOOT			32, 150, 354
6532347	SPACER			36
6532453	RING SEAL			388
6533898	DECAL			376
6535451	HOSE			68
6537040	HOSE	6530859	A	108
6539418	HOSE			58, 64
6539645	SPACER			76
6542731	SAFETY TREAD			290, 296
6544654	BUSHING			50, 78
6550826	TIRE			424
6552871	WASHER			46
6553411	BUSHING			40, 44, 50, 52

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6553709	WASHER			24, 54, 58, 60, 64, 72
6554100	SAFETY TREAD			312
6554149	CORD			290, 298, 304, 316
6555341	SAFETY TREAD			384, 386
6555351	SEAL			304
6557224	DECAL			314
6557291	BALL JOINT			174
6557493	GROMMET			400
6557831	WASHER			118, 368
6557904	FLASHER			340, 348
6558309	WIRE ROPE			312
6558310	SLEEVE			312
6559552	HARDHAT			418
6559775	EARMUFFS			418
6560172	COVER			140
6560573	DECAL			314
6560633	MOUNT			24
6561218	SHUTTLE			122
6561383	DECAL			312
6562018	SPRING			38
6562602	BUSHING			24
6562619	BUSHING			272, 342, 414
6563328	FLUID			2, 10, 426
6563330	FLUID			2, 10, 426
6563445	HOSE			172
6563606	WASHER			46
6563914	WASHER			78
6564343	BUSHING			174
6564452	GRIP			34, 174
6564654	PIN			78
6564657	PIN			78, 270
6564669	NUT			46, 424
6565170	CABLE			140
6565200	DECAL			314
6565990	DECAL			314
6567743	PIN			24, 352
6567827	ANGLE			376
6567838	PIN			376
6567962	WASHER			174
6569203	CLAMP			140, 318
6569219	SCREEN			40
6570931	INSTRUCTIONS			272
6571851	SNAP RING			48
6571852	SNAP RING			48
6576033	WASHER			168
6576261	COVER			174
6576262	MOUNT			174
6576280	BOLT			140, 318
6576302	BAR			78
6577058	PIN			118
6577204	SPROCKET			44, 46

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6577382	SPACER			160
6577545	GROMMET			276, 374
6577690	TUBE			82, 90, 106
6577754	DECAL			314
6577821	HOSE			40
6577822	HOSE			40, 162
6577880	KIT			272
6577954	PIN			36
6577961	GROMMET			32, 78
6578139	LEVER			282
6578140	LEVER			282
6578169	HOSE			42
6578172	HOSE			40, 106, 110, 162
6578268	BELLCRANK			174
6578278	PAD			40
6578284	SHIM			176
6578368	DECAL			314
6578689	HUB			46
6579127	CHAIN			44
6579385	DECAL			342, 414
6579404	DECAL			342
6579511	DECAL			314
6579528	DECAL			312
6579613	STOP			24, 160
6579641	HOUSING			176
6586542	HEAD			388
6586543	PISTON			388
6586918	SCREW			80, 84
6587458	KEY			40
6587523	WASHER			80, 84, 90, 94
6587575	ADAPTER			80, 84
6587580	SPRING			80, 84, 90, 94
6587633	BONNET			80, 90
6587763	BOOT			80, 84, 88, 154
6588074	SPOOL			80, 88
6588781	END CAP			80, 88
6589226	BONNET			80, 84
6589564	RETAINER			80, 88
6589565	RETAINER			88
6592098	WASHER			80, 84
6592100	COLLAR			80, 84, 90, 94
6592105	BALL			80, 84
6592107	SPRING			80, 84
6592109	ADAPTER			80, 84, 90, 94
6592115	SEAT			80, 88
6592116	NUT			80, 88
6592117	SPRING			80, 84, 88, 92
6592506	CLAMP			72, 112, 394
6592720	PLUG			82, 90
6595014	DECAL			312, 314
6595663	BUSHING			80, 84, 88, 92

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6595951	SLEEVE			82, 90
6596332	SPRING			82, 90
6596807	PLUG			80, 84
6598098	PIN			208, 254
6598099	KEY			194, 236
6598102	COCK			210, 258
6598116	PLUG			188, 230
6598146	PIPE			214, 262
6598155	PULLEY			240
6598156	STUD			188, 230
6598158	CIR-CLIP			194, 236
6598187	PLUG			182, 224
6598275	BOLT			168
6598362	CARTRIDGE			2, 266
6598485	SEALANT			274
6598492	CARTRIDGE			2, 266
6599084	SCREW			260
6599118	GASKET			210, 258
6599119	GASKET			212, 260
6599136	CLIP			214, 262
6599360	SEALANT			426
6599365	KIT			136
6599645	PLUG			44
6599719	GREASE			168, 426
6599741	WASHER			118
6599744	BALL JOINT			118, 330
6599931	ALARM			276
6610510	TIE			106, 110, 316, 356, 374
6624289	TIE			54, 58, 60, 64, 72, 100, 142, 160, 270, 322, 324, 326, 340, 366, 368, 384, 386
6626631	CLAMP			160
6628571	VALVE			68, 80, 96
6630188	POLISH			426
6630189	POLISH			426
6630207	RIVET			32
6630945	WASHER			174
6631046	GASKET			178, 190, 218, 232
6631418	PIN			24, 28, 352
6631561	NUT			288
6631664	SEAL			192, 234
6632218	BEARING			48
6632279	SEAL KIT			82, 90
6632541	RACE			48
6633583	SEALANT			426
6634393	LUBRICANT			6, 176, 426
6634609	RACE			46
6640690	PIN			144, 150, 354, 356, 374
6640692	CONNECTOR			144, 150, 354, 356
6640694	LOCK			144, 150, 354, 356
6640699	CONNECTOR			150, 354, 358, 374

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6640700	LOCK			150, 354, 374
6640728	BOLT			246
6641176	SEAL			144, 150, 354, 356, 374
6641179	CONNECTOR			144, 150, 354, 374
6641180	LOCK			144, 150, 354, 374
6643249	CONDUIT			58, 66
6645080	O-RING			128
6645081	O-RING			124
6645086	PLUG			124, 128
6645090	SEAL			124
6646383	CONNECTOR			142
6646582	PLUG			150, 354, 356
6646627	BEARING			176
6646705	MOULDING			162
6646781	SWITCH			276
6647777	PIN			288
6647778	CAP			288
6647780	PLUG			288
6647783	LOAD CHECK			288
6647784	PLUG			288
6647785	SPRING			288
6647786	SEAL KIT			288
6648293	SCREW			288
6648294	SPRING			288
6648307	CONNECTOR			356, 368
6648308	CONNECTOR			368
6648330	TERMINAL			142
6648348	PLUG			32
6648944	CAP			8
6649244	BALL STUD			290, 296
6649245	RETAINER			290, 296
6649481	BULB			380
6649551	SHOCK			118
6649949	PLUG			316
6650388	SEALANT			426
6650407	ADHESIVE			162, 426
6650627	PLATE			124, 128
6650629	PIN			124, 128
6650630	RETAINER			124, 128
6650634	GASKET			124, 128
6650635	BEARING			124, 130
6650636	PIN			124, 128
6650637	BOLT			124, 128
6650646	O-RING			124
6650647	O-RING			124
6650648	PLUG			126
6650652	POPPET			124
6650668	BOLT			124, 128
6650675	COUPLER			124
6651489	COVER			200, 242
6651542	BALL			122

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6651709	SEAL			38
6651934	RIVET			194, 236
6652018	BOLT			128
6652574	PLUG			182, 224
6652575	PLUG			182, 224
6652580	BOLT			182, 198, 224, 240
6652633	PLUG			192, 196, 234, 238
6652652	SPRING			180, 220
6652653	PLUG			184, 226
6652670	STUD			200, 202, 210, 242, 258
6652682	BOLT			256
6652688	CLAMP			214, 262
6652689	CLAMP			214, 262
6652748	CLAMP			222
6652762	BOLT			198, 240
6652764	STUD			180, 204, 208, 250, 254
6652792	NUT			188, 198, 200, 230, 240, 242, 246
6652918	NUT			172, 328
6653561	NUT			204, 208, 254, 256
6653702	SEAL			176
6653757	SNAP RING			176
6653758	SNAP RING			176
6653798	BOLT			190, 232
6653807	BOLT			220
6653808	BOLT			198, 220
6653809	ADAPTER			180
6653821	BOLT			192, 234
6653830	SEAL			186, 228
6653833	SPRING			186, 228
6653859	SLEEVE			192, 234
6653861	SLINGER			192, 234
6653888	NUT			182, 224
6653894	SLEEVE			212, 260
6653916	WASHER			206, 252
6653946	STUD			198, 240
6654139	MOULDING			146, 172, 354
6654170	STRIKER BOLT			296
6654374	KEY			40
6654718	CLIP			214, 262
6654806	FUSE			142
6655154	GUIDE			188, 230
6655155	SEAT			186, 228
6655156	SEAT			186, 228
6655158	BOLT			188, 230
6655160	PLUG			188, 230
6655161	WASHER			188, 230
6655176	PUSH ROD			196, 238
6655179	PIN			192, 234
6655180	CIR-CLIP			192, 234
6655181	ROD			192, 234
6655183	BEARING			192, 234

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6655195	BOLT			182, 224
6655197	PIPE ASSY			210, 258
6655201	ELEMENT			212, 260
6655202	VALVE			212, 260
6655203	SPRING			212, 260
6655204	HOLDER			212, 260
6655205	PLATE ASSY			212, 260
6655206	BOLT			212, 260
6655207	PLATE			212, 260
6655209	PLATE			212, 260
6655210	SHIM			210, 258
6655212	GEAR			194
6655213	SLEEVE			194, 236
6655214	CASE			194, 236
6655215	BALL			194, 236
6655216	FUEL PUMP			40, 210, 258
6655218	GASKET			216, 264
6655223	NUT			208, 254
6655224	LEVER			206, 252
6655236	BEARING			192, 234
6655237	BEARING			192, 234
6655243	BUSHING			192, 234
6655384	CAMSHAFT			196, 238
6655498	BOLT			192, 234
6655518	O-RING			212, 260
6655781	BEARING			168
6655870	ARM			186, 228
6655872	HEAT SEAL			216, 264
6655873	PIECE			216, 264
6655874	CLIP			210, 258
6655880	PIPE			184, 202, 226
6655884	PLUG			182
6655893	STUD			244
6655938	VALVE			266
6656126	WASHER			216, 264
6656127	WASHER			216, 264
6656128	WASHER			216, 264
6656129	WASHER			216, 264
6656130	WASHER			216, 264
6656131	WASHER			216, 264
6656132	WASHER			216, 264
6656155	COVER			384
6657028	O-RING			124, 130
6657067	COVER			126, 128
6657068	COVER			124, 128
6657299	OIL			2, 4, 6, 426
6657301	OIL			2, 4, 6, 426
6657303	OIL			2, 4, 6, 426
6657376	ELBOW			160
6657414	BOLT			256
6657415	BOLT			200, 242

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6657416	BOLT			246
6657422	O-RING			220, 222
6657460	NUT			216, 264
6657463	WASHER			216, 264
6657663	PLUG			182, 224
6657719	PLUG			44, 304, 316
6657734	PUMP			40
6657742	KIT			216, 264
6658180	PLUG			42
6658228	SEAL			46, 274
6658266	GREASE			6, 426
6658301	SPRING			126
6658536	SNAP RING			168
6658672	SNAP RING			50, 52
6658847	SNAP RING			168
6659999	BELT			412
6660260	SWITCH			136, 142
6660339	GASKET			128
6660644	CAP			80, 84
6660814	O-RING			124, 128
6660995	RING			168
6661022	FILTER			10, 106, 110, 134
6661062	PLUG			164, 166
6661114	CAP			40
6661117	TANK			330
6661150	SWITCH			340
6661213	CLAMP			40
6661242	COVER			266
6661243	WING NUT			266
6661244	WASHER			266
6661248	ELEMENT			2, 8, 114, 116, 136
6661353	LIGHT ASSY			380
6661481	O-RING			126
6661608	SEAL KIT			334
6661696	CAP			40
6661785	MOUNT			172
6661787	WASHER			172, 328
6661807	KIT			134
6661808	KIT			134
6662306	RING			46, 274
6662848	CAP			82, 90, 94
6662997	PULLEY			168
6664004	CLAMP			164
6664035	CAP			326
6664036	NUT			326
6664037	WASHER			326
6664040	PIN			326
6664065	WASHER			400
6664085	BUSHING			294, 304, 316, 400
6664097	COVER			400
6664103	NUT			400

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6664209	SEAL			170
6664221	RETAINER			316
6664223	OUTLET			316
6664224	CAP			316
6664554	PUMP			292
6664566	SCREW			400
6664815	SEAL			44, 122
6665000	CLIP			150, 292, 354
6665086	SEAL			76
6665314	PLUG			138, 316
6665316	SWITCH			348
6665321	RIVET			150, 290, 354
6665322	RIVET			150, 290, 354
6665367	BULB			316
6665371	SWITCH			266
6665568	SEAL			290, 298
6665569	WASHER			80, 84, 88, 92
6665570	RING			80, 84, 88, 92
6665602	MOTOR			400
6665701	BUSHING			78
6665707	SWITCH			290
6665727	LIGHT			340
6665728	LIGHT			340
6665729	LIGHT			340
6665839	BOLT			78
6665860	KIT			340
6665915	SIGHT GAUGE			106, 110
6666338	WASHER			124, 128
6666339	BOLT			128
6666341	VALVE			62, 66, 284, 286, 288
6666542	SEAL			388
6666543	SEAL			74
6666568	BULB			338
6666571	BULB			278
6666766	GROMMET			292
6666781	GASKET			178, 202
6666782	GASKET			182, 224
6666802	GASKET			178, 200, 218, 242
6666814	GASKET			192, 234
6666932	BRAKE			330, 332
6666933	CYLINDER			330, 334
6667139	CAP			330
6667144	CONNECTOR			144, 150, 354
6667145	LOCK			144, 354
6667176	PLUG			288
6667201	SPACER			400
6667323	SEAL			388
6667325	SEAL			74
6667326	SEAL			76
6667352	ELEMENT			2, 6, 40
6667353	FILTER ASSY			40

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6667418	PLUG			182, 224
6667419	WASHER			206, 252
6667420	BOLT			190, 194, 232, 236
6667421	BOLT			188, 230
6667422	WASHER			180, 186, 188, 198, 200, 220, 228, 230, 240, 242, 246
6667428	TAPPET			196, 238
6667433	CIR-CLIP			196, 238
6667451	WASHER			186, 228
6667457	CLAMP			262
6667461	PIN			186, 228
6667533	COVER			100
6667549	VALVE			80, 88
6667569	CONNECTOR			326
6667676	COVER			288
6667677	O-RING			288
6667680	SNAP RING			288
6667687	STEM			84, 92, 96
6667803	QUICK COUPLER			350, 392, 394
6667804	QUICK COUPLER			350, 392, 394
6667844	VALVE			68, 70, 98
6667887	BULB			338
6668007	SCREW			338
6668010	LENS			338
6668079	PLUG			122
6668080	SHIM			122
6668082	POPPET			122
6668088	PISTON			122
6668089	PLUG			122
6668097	SCREW			334
6668104	MOUNT			328
6668114	BEARING			168
6668742	SWITCH			316
6668765	VALVE			84, 92, 96
6668791	ORIFICE			68, 82, 96
6668815	SWITCH			340, 348
6668816	SWITCH			278, 340, 420
6668820	NUT			86, 92, 96
6668879	DECAL			276
6668881	CORD			280
6668953	BRACKET			30
6669057	CHECK VALVE			96
6669085	VALVE			98
6669087	SEAL KIT			98
6669089	TRACK			30
6669091	CLIP			316, 358
6669135	SEAT			26, 28, 30
6669154	BOLT			332
6669155	PLATE			332
6669156	SPACER			332
6669159	PISTON			332

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6669162	NUT			332
6669163	PLUG			332
6669164	ADAPTER			332
6669165	SCREW			332
6669184	STATOR ASSY			332
6669185	SEAL KIT			332
6669203	VALVE			350
6669224	BOLT			316, 358
6669308	RETAINER			402
6669384	SPEEDY SLEEVE			176
6669402	HOUSING			126
6669403	HOUSING			128
6669405	END CAP			128
6669406	END PLATE			124
6669407	SHAFT			128
6669409	WASHER			124
6669410	SHIM KIT			126
6669411	BEARING			124, 128
6669442	HOUSING			122
6669444	SPRING			122
6669446	O-RING			122
6669447	PLATE			122
6669448	PLATE			122
6669449	O-RING			122
6669450	RING			122
6669451	FLANGE			122
6669452	O-RING			122
6669453	SEAL			122
6669454	RING			122
6669455	SEAL KIT			122
6669469	SHAFT			122
6669470	BOLT			122
6669549	SOCKET			100, 320, 324, 326
6669657	O-RING			350, 392, 394
6669732	SEAL KIT			86, 92, 96
6669733	SEAL KIT			96
6669734	SEAL KIT			96
6670160	CUSHION			30
6670251	BATTERY			318
6670284	LIGHT			380
6670287	COVER			34
6670312	SOLENOID			340, 358
6670472	NUT			214, 262
6670634	SEAL KIT			284, 286
6670682	BEARING			168
6670684	CHECK VALVE			126, 130
6670706	CONNECTOR			150, 354
6670707	CONNECTOR			150, 356
6670709	CONNECTOR			356
6670710	LOCK			150, 354
6670711	LOCK			150, 152, 356

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6670714	PIN			354
6670715	PIN			150, 152, 356
6670726	LOCK			398
6670759	SEAL			296
6670769	GASKET			178, 214, 218, 262
6670785	PIPE			240
6670831	ELBOW			114, 116
6671025	COIL			86, 92, 96
6671027	LIGHT			338
6671106	HORN			340
6671509	COUPLER			128
6671510	RELIEF VALVE			126, 130
6671512	BLOCK ASSY			126, 128
6671513	SWASH PLATE			124, 128
6671516	SEAL KIT			126, 130
6671518	BOLT			124
6671527	NUT			284, 286
6671617	MOTOR			122
6672126	GEROLER			122
6672190	VALVE			182, 222, 224
6672272	WASHER			380
6672273	SCREW			380
6672274	SCREW			380
6672275	GASKET			380
6672276	LENS			380
6672277	BRACKET			380
6672279	MOUNT			380
6672348	PANEL			138
6672360	PLUG			180, 220
6672486	SEALANT			176
6672491	CAP			166
6672492	RETAINER			276
6672515	SEAL KIT			102
6672715	SPACER			30
6672863	SOLENOID			284, 286
6673200	FUSE BLOCK			142
6673710	BEARING			118, 146
6673789	BEARING			118, 146
6673828	HOSE			114, 116
6673881	SEAL			124, 130
6674000	CLAMP			144
6674003	TIRE & RIM			422
6674004	TIRE & RIM			422
6674007	KIT			422
6674013	TRACK			30
6674169	PULLEY			198
6674202	NUT			138
6674204	OIL			2, 4, 6, 426
6674205	OIL			2, 4, 6, 426
6674206	OIL			2, 4, 6, 426
6674228	PANEL			358

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6674231	VENT			358
6674235	RECEIVER DRIER			368
6674315	SWITCH			140
6674316	SWITCH			140
6674400	HOUSING			380
6674401	HOUSING			380
6674402	MOUNT			380
6674403	COVER			26, 138
6674406	SENSOR			28
6674407	SHOULDER BELT			408
6674408	SEAT BELT			408
6674519	WINDOW			304
6674520	WINDOW			304
6674521	WINDOW			304
6674522	WINDOW			304
6674666	LATCH			290, 296
6674667	HANDLE			290, 296
6674687	BATTERY			2, 140
6674798	REPAIR KIT			114, 116
6674799	ADAPTER			100, 324
6674802	CONNECTOR			100, 320, 324, 326
6674808	SPOOL			80
6674809	SPOOL			80
6674810	SPOOL			80
6674814	SPOOL			80
6674815	SPOOL			80
6674816	SPOOL			80
6674895	RETAINER			316, 402
6674993	CAP			292
6675026	CAP			100, 320, 324, 326
6675033	INSERT			24, 26, 138
6675064	TERMINAL			340
6675074	SEAT BELT			26
6675075	HOSE			368
6675099	HORN			374
6675134	GAS SPRING			24
6675135	GAS SPRING			24
6675136	GAS SPRING			24
6675140	SNAP RING			24
6675154	HOLDER			140
6675155	FUSE			140
6675170	SEAT BELT			404
6675171	CLAMP			138, 142
6675172	BRACKET			358
6675173	ACTUATOR			358
6675174	BODY			358
6675175	BRACKET			358
6675176	SWITCH			358
6675177	KNOB			358
6675179	FLANGE			358
6675181	PLUG			358

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6675212	RETAINER			304
6675221	BOLT			172
6675257	ROD END			24
6675273	WASHER			34
6675281	MOUNT			326
6675298	COUPLER			292
6675299	COUPLER			292
6675308	KIT			406
6675309	KIT			406
6675310	KIT			406
6675311	KIT			406
6675312	KIT			406
6675313	KIT			406
6675314	KIT			406
6675315	KIT			406
6675316	KIT			406
6675317	SCISSORS			404
6675318	KIT			406
6675319	SEAT			404
6675320	SEAT			404
6675321	SEAT			404
6675322	SEAT			404
6675323	KNOB			404
6675332	LINK			44
6675336	BULB			380
6675339	VALVE PLATE			128
6675340	VALVE PLATE			124
6675342	PIN			124, 128
6675378	CLIP			292
6675380	ADHESIVE			426
6675387	EXTRUSION			304, 316
6675497	BLOWER			360, 372
6675510	CLAMP			360, 372
6675511	DRAIN VALVE			360, 372
6675512	CLAMP			360, 372
6675513	GROMMET			360, 372
6675517	FILTER			2, 4, 6, 180, 220
6675522	STROBE			420
6675523	BEACON			278, 340
6675524	CLIP			26
6675534	BLOCK VALVE			368, 372
6675538	O-RING			370, 372
6675544	VINYL CAB			300
6675545	GROMMET			304, 316
6675558	SEAL			290, 296
6675559	SOLENOID			86, 92
6675562	SEAT BELT			410
6675581	EXTINGUISHER			344
6675590	DOOR			300
6675591	HINGE KIT			300
6675595	SEAT			404

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6675596	SEAT			404
6675611	SEAL			362
6675618	CLAMP			200, 242, 248
6675622	BOLT			248
6675623	GASKET			218, 248
6675626	GASKET			248
6675635	CLAMP			246
6675636	GASKET			246
6675637	GASKET			246
6675681	ADAPTER			220
6675683	PIN			248
6675734	TIE			160
6675779	SWITCH			368
6675824	O-RING			370
6675825	O-RING			370
6675833	SEAL			304
6675835	TURN SIGNAL			348
6675837	BELT			6
6675846	POTENTIOMETER			358
6675858	FLASH TUBE			420
6675982	PLUG			138
6675999	SWITCH			400
6676000	TEE			400
6676001	ARM			400
6676002	BLADE			400
6676003	HOSE			290, 294, 400
6676028	NOZZLE			400
6676029	SOLENOID			146, 150, 154, 270
6676034	KIT			406
6676062	VALVE			368
6676338	GAS SPRING			406
6676400	CONNECTOR			142
6676499	GROMMET			290
6676500	ELBOW			290
6676516	NUT			358
6676536	SWITCH			138
6676537	SWITCH			146, 270
6676538	INSULATION			364, 368
6676539	CLIP			360, 368, 372
6676562	HEATER			360
6676606	SPACER			364
6676640	SEAL			152, 356
6676653	SCREW			364
6676732	SWITCH			384, 386
6676870	CONNECTOR			152, 356
6676872	TURN SIGNAL			340, 348
6676917	ELBOW			292
6676918	HOSE			290
6676927	FELT STRIP			304
6676969	FILTER ASSY			136
6676984	BRACKET			368, 372

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6677105	COVER			360, 368, 372
6677108	HOUSING			360, 372
6677111	SEAL			360, 362, 372
6677113	TIE			372
6677115	RECEPTACLE			360, 372
6677116	RETAINER			360, 372
6677117	SCREW			360, 372
6677118	SCREW			360, 372
6677119	SCREW			360, 372
6677122	CAP			368
6677136	SOCKET			100, 320, 324, 326
6677192	MAGNET			292
6677193	RIVET			292
6677194	STRIKER BOLT			290
6677198	CAP			304
6677203	TUBE			190, 232
6677216	CONNECTOR			142
6677364	CONNECTOR			356
6677383	SOLENOID			82, 86
6677485	SPACER			156
6677486	NUT			156
6677487	COVER			156
6677488	RECTIFIER ASSY			156
6677489	REGULATOR ASSY	NSS	D	156
6677490	BRACKET			156
6677491	BRACKET			156
6677492	ROTOR ASSY			156
6677493	STATOR ASSY			156
6677494	BOLT			156
6677495	SPACER			156
6677496	PULLEY			156
6677497	NUT			156
6677504	COVER			360, 364, 372
6677817	BOLT			156
6677818	BEARING			156
6677819	RETAINER			156
6677820	BEARING			156
6677833	ARM ASSY			290, 294
6677834	BLADE			294
6677836	COVER			294
6677837	BOLT			294
6677839	GASKET			294
6677840	SWIVEL ASSY			294
6677841	WASHER			294
6677842	NUT			294
6677843	NUT			294
6677844	NUT			294
6677845	ADAPTER			294
6677847	GROMMET			294
6677973	PLUG			304
6677983	FILTER			358

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6678076	BLOCK ASSY			72
6678151	COVER			372
6678152	FLANGE			360, 372
6678198	BOLT			294
6678205	ALTERNATOR			156
6678207	FILTER			358
6678283	HANDLE			304
6678292	GAS SPRING			352
6678548	SOCKET			290, 296
6678549	SEAL KIT			104
6678552	VALVE			82
6678574	VALVE			80, 88
6678666	MOUNT			142, 160
6678667	MOUNT			140
6678668	STRAP			140
6678669	STRAP			140, 318
6678675	CONTROLLER			322, 326
6678680	PANEL			138
6678681	PANEL			138
6678739	WASHER			294
6678818	MOUNT			142
6678891	COIL			88
6678893	SOLENOID			88, 92
6678920	NOZZLE			290, 294
6678921	GUIDE			294
6678931	PISTON			76
6678946	FITTING			222, 224
6678974	MOUNT			318
6679034	MOUNT			140
6679145	CLUTCH			368
6679247	BOLT			46
6679476	MOTOR			290, 294
6679820	SWITCH			142
6679836	KIT			72
6679837	KIT			72
6679838	KIT			72
6679839	KIT			72
6679840	SEAL KIT			72
6679841	SEAL KIT			72
6679842	SWITCH			138
6679845	CROSSMEMBER			138
6679855	BULB			138
6679856	ALARM			138
6679990	CLIP			24
6679991	SEAL			160
6679994	SEAL			24
6680054	ACTUATOR			358
6680326	LIGHT			316
6680410	CONTROLLER			146
6680414	HANDLE ASSY			374
6680415	HANDLE			144

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6680417	HANDLE			150, 354
6680418	HANDLE ASSY			144
6680419	HANDLE ASSY			144
6680436	SENSOR			40, 140
6680441	BUSHING			28
6680443	BUSHING			28
6680447	DECAL			144
6680462	HANDLE			150
6680468	MOUNT			152, 270
6680469	SPACER			150, 270, 354
6680470	SPRING			150, 270
6680471	COVER			150, 354
6680477	STRAP			150, 270
6680478	SHIELD			148, 154
6680479	SHIELD			148, 154
6680480	CHANNEL			150, 354
6680481	CHANNEL			150, 354
6680550	CLAMP			246
6680564	STUD			246
6680567	PLUG			190, 232
6680628	CLAMP			256
6680639	CAP			182, 224
6680663	NUT			210, 258
6680685	BOLT			186, 228
6680692	COVER			226
6680706	BOLT			206, 252
6680779	GASKET			214, 262
6680801	BOLT			210, 258
6680821	CIR-CLIP			256
6680830	BOLT			206, 252
6680970	BREATHER			50, 52, 160
6681487	O-RING			396
6681489	O-RING			396
6681492	NUT			102
6681512	SOLENOID			50, 52
6681581	SEAL KIT			132
6681594	PUMP			104
6681602	PUMP			132
6681614	KNOB			304, 316, 358
6681932	SHIM			82, 86
6681944	HOSE			114, 116
6681945	ELBOW			114, 116
6682422	CONTROLLER	6678674	A	140
6682442	BEARING			168
6682498	OIL PUMP			224
6682500	OIL FILTER			190, 232
6682515	SHIM			210, 258
6682532	NUT			202, 244
6682586	GAS SPRING			290, 296
6682856	TIRE & RIM			422
6682857	TIRE & RIM			422

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6682858	KIT			422
6683001	HVAC ASSY			372
6683003	COIL			368, 372
6683004	THERMOSTAT			368, 372
6683087	STUD			204
6683159	BOLT			200, 242
6683202	ENGINE			164, 178
6683203	ENGINE			166, 218
6683274	SEAL			80, 84
6683395	PANEL			316
6683819	VALVE			100, 102
6683820	PIPE			166
6683915	MUFFLER			166
6684033	NUT			28, 160
6684037	SENSOR			140
6684044	VALVE			396
6684045	SEAL KIT			396
6684046	O-RING			396
6684047	BACK-UP RING			396
6684048	O-RING			396
6684049	O-RING			396
6684050	BACK-UP RING			396
6684051	VALVE			396
6684052	SEAL KIT			396
6684053	BACK-UP RING			396
6684054	O-RING			396
6684055	BACK-UP RING			396
6684056	O-RING			396
6684057	BACK-UP RING			396
6684058	COIL			102, 396
6684059	SPACER			396
6684060	NUT			396
6684061	VALVE			396
6684062	SEAL KIT			396
6684063	O-RING			396
6684064	BACK-UP RING			396
6684065	O-RING			396
6684066	O-RING			396
6684067	BACK-UP RING			396
6684069	SEAL KIT			396
6684070	O-RING			396
6684071	O-RING			396
6684072	BACK-UP RING			396
6684073	COIL			396
6684125	COUPLER			86, 94
6684645	VALVE			84, 92
6684742	NUT			390
6684743	SOLENOID			390
6684744	SOLENOID			390
6684745	PISTON			390
6684746	CHECK VALVE			390

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6684747	SEAL KIT			390
6684752	GASKET			182, 218, 224
6684753	GASKET			178, 190, 218, 232
6684754	O-RING			190, 232
6684755	HEAD			230
6684756	GUIDE			188, 230
6684757	GASKET			230
6684758	GASKET			230
6684759	GASKET			230
6684760	GASKET			230
6684761	GASKET			230
6684762	SEAT			188
6684763	SEAT			188
6684770	GASKET			178, 180, 218, 220
6684772	BOLT			180, 220
6684774	GASKET			180, 220
6684776	CLAMP			226
6684777	CLAMP			226
6684778	CLAMP			226
6684779	SHIELD			184, 226
6684780	GASKET			178, 184, 218, 226
6684781	BOLT			184, 226
6684782	O-RING			178, 184, 218, 226
6684785	PLUG			190, 232
6684788	GASKET			192, 234
6684789	SEAL			192, 234
6684791	CAMSHAFT			196, 238
6684792	GEAR			196, 238
6684793	GEAR ASSY			196, 238
6684794	BUSHING			196, 238
6684795	COLLAR			196, 238
6684799	PISTON			234
6684800	PISTON			234
6684803	PISTON			234
6684804	PISTON			234
6684806	CRANKSHAFT			192, 234
6684810	CAMSHAFT			236
6684811	GEAR			236
6684813	GASKET			194, 236
6684815	APPARATUS			250
6684816	BOLT ASSY			250
6684817	NUT			204, 250
6684818	GASKET			204, 250
6684819	CAP			204, 250
6684823	SPRING			208, 254
6684824	GASKET			178, 208, 218, 254, 256
6684825	GUIDE			204, 250
6684826	SOLENOID			140, 204, 250
6684827	NUT			204, 250
6684828	PUMP			258, 260
6684829	SHIM			210, 258

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6684830	BOLT			210, 258
6684832	LEVER			206, 252
6684833	SHAFT			206, 252
6684836	BOLT			208, 254
6684838	LEVER			206, 208, 252, 254
6684839	LEVER			208, 254
6684841	GASKET			204
6684842	PIPE			214, 262
6684843	HOLDER KIT			262, 264
6684844	BOLT			214, 262
6684845	CLAMP			214, 262
6684846	PIPE			262
6684847	PIPE			262
6684848	PIPE			214, 262
6684849	PIPE			214, 262
6684850	GLOW PLUG			214, 262
6684851	CORD			214, 262
6684855	FLANGE			200, 242
6684856	FLANGE			200, 242
6684857	PLUG			200, 242
6684862	PIPE			200, 242
6684863	GASKET			178, 200, 218, 242
6684865	WATER PUMP			240
6684866	BODY			240
6684867	IMPELLER			198, 240
6684868	SET SEAL			198, 240
6684869	FLANGE			198, 240
6684870	GASKET			178, 198, 218, 240
6684872	VALVE			186, 228
6684873	VALVE			186, 228
6684875	SHAFT			186, 228
6684877	GASKET			178, 202, 218, 244
6684879	GASKET			178, 202, 218, 244
6684880	GASKET			218, 244
6684884	PIPE			248
6684889	CLAMP			200, 242
6684891	NUT			204, 250
6684910	SENSOR			150, 354
6684911	SENSOR	6680421	A	146, 154
6684911	SENSOR	6680421	D	270
6684912	SENSOR	6680420	A	146, 154
6684912	SENSOR	6680420	D	270
6684913	LEVER	6680426	A	354
6684914	LEVER	6680425	A	354
6684915	LEVER			150
6684915	LEVER	6680424	B	146
6684916	LEVER			150
6684916	LEVER	6680423	B	146
6684923	CAP			110
6684923	CAP	6648944	B	106
6684932	KNOB	6679130	A	36

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6685017	VALVE			80, 84
6685018	PANEL	6683395	A	138
6685033	PUMP			100
6685061	VALVE			396
6685077	GASKET			188
6685078	GASKET			188
6685079	GASKET			188
6685080	GASKET			188
6685081	GASKET			188
6685085	COVER			184
6685086	COVER			184
6685087	VALVE			184
6685095	RINGS			192
6685096	RINGS			192
6685102	PIPE			214
6685103	PIPE			214
6685104	BOLT			200, 242
6685105	WATER PUMP			198
6685106	BODY			198
6685157	VALVE			84, 92
6685183	SOLENOID			102
6685184	SEAL KIT			102
6685185	RELIEF VALVE			102
6685186	CHECK VALVE			102
6685190	STARTER			158
6685198	CAP			368
6685199	CAP			368
6685311	VALVE			390
6685328	RELIEF VALVE			396
6685372	SEAL			52
6685464	BOLT			206, 252
6685465	O-RING			204, 250
6685466	O-RING			180, 220
6685467	O-RING			180, 220
6685468	O-RING			178, 180, 218, 220
6685469	KEY			192, 234
6685470	SCREW			212
6685472	CAP			182, 224
6685473	JOINT			258
6685474	BEARING			198
6685475	MANIFOLD			202
6685476	SEAL			208, 254
6685477	PLUG			182, 224
6685478	FLANGE			182, 224
6685479	BALL BEARING			194, 236
6685480	CASE			192, 234
6685481	GEAR			192, 234
6685482	BOLT			192, 234
6685483	CASE			192
6685484	CASE			192
6685485	CASE			192

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6685486	BEARING			192, 234
6685487	BEARING			192, 234
6685488	WASHER			192, 234
6685489	WASHER			192, 234
6685490	BEARING			192, 234
6685491	BEARING			192, 234
6685492	BEARING			192, 234
6685493	BEARING			192, 234
6685494	WASHER			192, 234
6685495	WASHER			192, 234
6685496	WASHER			192, 234
6685497	WASHER			192, 234
6685498	GASKET			214, 262
6685499	DIPSTICK			190, 232
6685500	COVER			204, 256
6685501	WASHER			180
6685502	SPRING			206
6685503	HEAD			188
6685504	CAMSHAFT			194
6685506	PISTON			192
6685509	PISTON			192
6685511	PUMP			210, 212
6685512	HOLDER KIT			214
6685513	BOLT ASSY			204
6685514	SPRING			206, 252
6685515	COVER			192, 234
6685516	COLLAR			194, 236
6685517	STOPPER			194, 236
6685518	OIL PAN			190, 232
6685519	SHAFT			196, 238
6685520	THERMOSTAT			200, 242
6685521	PULLEY			192, 234
6685522	CRANKCASE			182
6685523	GEAR CASE			180, 220
6685524	PIPE			184
6685525	MANIFOLD			202
6685526	PLATE			208, 254
6685579	CRANKCASE			224
6685580	TUBE			226
6685581	O-RING			226
6685584	CASE			234
6685585	CASE			234
6685586	CASE			234
6685592	MANIFOLD			244
6685593	TURBO			246, 248
6685594	HOSE			246
6685595	FLANGE			246
6685596	HOSE			246
6685597	PIPE			248
6685598	BOLT			248
6685599	PIPE			248

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6685600	PIPE			248
6685601	CLAMP			248
6685603	SEAL KIT			82, 86
6685624	VALVE	6683251	A	396
6685633	WASHER			256
6685634	GASKET			256
6685635	TUBE			256
6685636	SPRING			252
6685637	COLLAR			220
6685638	COMPENSATOR			256
6685639	STUD			256
6685640	MANIFOLD			244
6685641	OIL COOLER			220, 222
6685642	HOSE			222
6685643	HOSE			222
6685644	SCREW			244
6685645	PIPE ASSY			256
6685735	SEAL	6661112	A	170
6686334	APPARATUS	NAP	D	204
6700115	SPRING			168
6700170	WASHER			174
6700182	COVER			44
6700330	COVER			50
6700535	SPACER			172
6700711	AIR CLEANER			266
6700782	CAP			176
6701097	WASHER			160
6701123	BOLT			164, 166
6701151	PIPE			164
6701159	SHIM			176
6701174	WASHER			24
6701449	FILLER TUBE			40
6701535	SPRING			28, 118
6701893	CLAMP			54, 58, 60, 64
6702102	GEAR			176
6702103	GEAR			176
6702135	SHAFT			176
6702137	SHAFT			176
6702144	SHIM			176
6702165	SHIM			176
6702166	SHIM			176
6702301	DECAL	6579639	A	312
6702302	DECAL	6579509	A	312
6702402	SHIELD			346
6702444	FUSE			142
6702474	RETAINER			168
6702543	LEVER			118
6702593	SPACER			276
6702621	GRIP			144
6702650	MOUNT			340
6702716	BLOCK			118

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6702903	LEVER			38
6702904	LEVER			38
6702958	BUSHING			38
6702971	BOLT			24
6702977	HOUSING			160
6702990	BUSHING			150, 354
6703022	CLIP			168
6703097	GASKET			50
6703140	WASHER			172
6703168	BEARING			170
6703331	INSULATION			342, 414
6703471	BRACKET			160
6703483	PULLEY			342
6703507	IDLER ARM			168
6703640	KIT			412
6703641	DECAL			412
6703703	GUIDE			412
6703727	DECAL			374
6703879	BUSHING			118
6703915	CHAIN			44
6703968	INSULATION			342, 414, 416
6703981	MOUNT			172
6704146	BRACKET			376
6704147	BRACKET			376
6704248	PIVOT			38
6704391	PULLEY			170
6704443	BUSHING			168
6704444	WASHER			168
6704484	WASHER			168
6704631	HOSE			106, 110
6704769	INSULATION			342, 414
6704786	DECAL			376
6704820	O-RING			168
6704878	GASKET			44
6704892	RIVET			322, 326
6705106	WASHER			172, 328
6705231	WASHER			168
6705232	WASHER			168
6705452	LEVER			174
6705491	SPRING			168
6705847	SEAL			48
6706042	COVER			50
6706043	BUSHING			172
6706098	GUIDE			118
6706104	RETAINING NUT			78
6706105	YOKE			78
6706106	MOUNT			118
6706349	MOUNT			24
6706393	SHIELD			164
6706394	SHIELD			164
6706427	AXLE			46

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6706485	HOOK			44
6706517	SCREW			40, 160
6706572	SET SCREW			174
6706633	CONNECTOR			392, 394
6706718	MOUNT			50, 52
6706737	GASKET			50, 52
6706807	PIN			378
6706808	COVER			22
6706825	LIFT EYE			378
6706968	GASKET			50
6707040	ELBOW			140
6707077	HOUSING ASSY			176
6707078	HOUSING ASSY			176
6707101	SEAL			68, 70, 98
6707726	MOUNT			374
6707789	LIGHT			338
6707804	HOUSING			340
6707852	DECAL			290
6708009	LINK			78
6708016	GASKET			50, 52
6708018	SPRING			50, 52
6708043	BUSHING			78
6708189	TUBE			24
6708267	BOLT			50, 52
6708310	HOSE			292
6708770	CAP			168
6708929	DECAL			314
6708987	BRACKET			22
6709022	LEVER			174
6709030	DECAL			168, 314
6709170	STUD			46
6709229	BOLT			330
6709234	DISC			330
6709236	MOUNT			330
6709237	CLAMP			330
6709239	PEDAL ASSY			330
6709400	TUBE			330
6709527	KEY			138, 290, 296, 398
6709547	HOSE			330
6710358	DECAL			312
6710585	WASHER			168
6710659	BUSHING			28
6710746	SAFETY TREAD			312
6711527	LATCH PLATE			34
6711632	MOUNTING KIT			328
6711643	CAM			118
6711674	BRACKET			350
6711699	HUB ASSY			170
6711840	DECAL			312
6712161	MOUNT			172
6712791	SAFETY TREAD			312

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6712970	PULLEY			342
6712971	PULLEY			342
6713040	SPRING			38
6713043	SPACER			150, 354
6713115	PEDAL			336
6713116	BUSHING			336
6713150	MOUNT			340
6713151	MOUNT			340
6713370	PIN			168
6713507	DECAL			312
6713589	CLEVIS			28
6713736	BRACKET			340
6713793	BRACKET			276
6713840	DECAL			340
6713841	SHIELD			340
6713887	BOLT			28
6713993	HARNESS			340
6713994	HARNESS			340
6714037	LATCH			398
6714126	DOOR STOP			34
6714278	GUIDE			50, 52
6714361	WEIGHT			308, 310
6714576	PIVOT			38, 384, 386
6714726	PLUG			146
6714820	SHIELD			340
6714904	TEE			100
6715106	INSULATION			342, 414
6715132	RETAINER			140
6715142	FAN			160
6715143	SET SCREW			160
6715163	BUSHING			118
6715164	SLEEVE			118
6715190	ELBOW			106, 110
6715191	ELBOW			106, 110
6715193	ELBOW			40
6715197	CLAMP			140
6715287	SPACER			328
6715365	HARNESS			315, 316
6715428	DECAL			342
6715653	TEE			114
6715659	HARNESS			276
6715860	SEAT BAR			28
6715863	BRACKET			28
6715864	BUSHING			28
6715865	BUSHING			28
6715866	BUSHING			28
6716061	TEE			54, 58, 60, 64
6716089	CONNECTOR			350
6716228	BRAKE			50, 52
6716419	HARNESS			380
6716545	ROD			118

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6716571	LOUVER			160
6716573	LOUVER			160
6716621	COVER			32
6716843	WASHER			46
6716916	WASHER			146
6716977	BELLCRANK			146
6717025	BUSHING			36
6717026	BUSHING			36
6717039	BUSHING			36
6717041	BUSHING			36
6717146	SPACER			290, 296
6717151	MOUNT			68, 70
6717208	SHIELD			32
6717246	BUSHING			36
6717259	BUSHING			38
6717260	BUSHING			38
6717277	BUSHING			22
6717278	BUSHING			22
6717293	MOUNT			378
6717343	DECAL			312
6717356	BUSHING			22
6717358	BUSHING			22
6717369	BRACKET			290, 296
6717393	LEVER			146
6717401	PLUG			40
6717402	BUSHING			42
6717478	INLET			160
6717517	INSULATION			316
6717518	INSULATION			316
6717519	INSULATION			316
6717520	INSULATION			316
6717560	PIN			36
6717562	BUSHING			36
6717579	GASKET			40, 140
6717591	HOSE			164, 166
6717592	HOSE			164, 166
6717593	HINGE			292, 296
6717639	DECAL			312
6717704	HOSE			40
6717707	PIN			378
6717820	BAR			78
6717827	CAP			106, 110
6717830	TUBE			106, 110
6717870	TRACK			304
6717871	TRACK			304
6717872	TRACK			304
6717873	TRACK			304
6717874	WINDOW			304, 316
6717890	COVER			32
6717908	HOSE			106
6717933	CLAMP			54, 58, 60, 64

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6717951	CLAMP			72
6717961	GUSSET			36
6718020	HOSE			106, 110
6718030	TUBE			54, 60
6718034	FUSE			142
6718066	HOSE			54, 58, 60, 64
6718067	HOSE			54, 58, 60, 64
6718080	ELBOW			100
6718101	COVER			26
6718122	MOUNT			378
6718175	SCREEN			358
6718198	HARNESS			338
6718200	DECAL			312
6718205	TUBE			330
6718206	TUBE			330
6718238	BRACKET			54, 58, 60, 64
6718244	TUBE			350
6718245	TUBE			350
6718260	BATTERY PAN			140
6718298	KIT			422
6718312	STOP			36
6718326	MOUNT			348
6718358	HOSE			384
6718376	HINGE			292, 296
6718411	KIT			348
6718414	SWITCH	6718415	B	140
6718426	HARNESS			100, 324
6718454	HOSE			350
6718455	HOSE			350
6718489	INSULATION			26
6718506	PIN			146
6718520	COVER			296
6718521	HANDLE			292, 296
6718579	DECAL			358
6718580	PANEL			316
6718648	RADIATOR			166
6718659	HOUSING			140
6718706	DECAL			146
6718719	HANDBOOK			2
6718728	MOUNT ASSY			330
6718730	BELT			160
6718750	MOUNT			100, 324
6718772	GASKET			106, 110
6718774	DECAL			32, 142, 312
6718784	COVER			24
6718789	PIN			36
6718796	PLUG			34
6718820	HARNESS			276
6718822	KIT			276
6718833	BRACKET			346
6718834	BRACKET			346

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6718837	SPACER			358
6718872	HARNESS			278, 340, 348, 420
6718873	HARNESS			348
6718879	GUSSET			36
6718880	GUSSET			36
6718887	PANEL			358
6718924	KIT			346
6718942	NUT			36
6719005	MOUNT			24
6719018	DECAL			314
6719037	STRIKER			304
6719056	BLOCK			50, 52
6719057	BLOCK			50, 52
6719063	STOP			304
6719064	MOUNT			352
6719065	COVER			304
6719084	BOLT			138
6719144	HOSE			366
6719150	KIT			330
6719151	HARNESS			374
6719176	SWITCH			368
6719184	BRACKET			376
6719185	BRACKET			376
6719201	COVER			22
6719264	KIT			376
6719317	WINDOW			400
6719327	INSULATION			342, 414, 416
6719328	INSULATION			342, 414, 416
6719330	INSULATION			342, 414, 416
6719331	INSULATION			342, 414, 416
6719332	INSULATION			342, 414, 416
6719333	INSULATION			342, 414, 416
6719334	INSULATION			342, 414, 416
6719372	INSULATION			342, 414, 416
6719389	INSULATION			416
6719413	WINDOW			304
6719424	TEE			54
6719425	INSULATION			416
6719439	HOSE			54, 60
6719448	MAGNET			322, 326
6719451	HOSE			384
6719503	CONTAINER			26
6719504	INSULATION			26
6719525	BAR			34
6719628	HOSE			386
6719672	OPERATOR CAB			24, 26
6719766	STOP			34
6719825	BOLT			168
6719826	BOLT			172
6719827	BOLT			172
6719828	BOLT			168, 172

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6719829	BOLT			172
6719834	SPACER			150, 270, 354
6719835	SLEEVE			150, 354
6719854	KIT			278
6719857	KIT			420
6719884	BRACKET			384, 386
6719888	DECAL			384, 386
6720038	INSTRUCTIONS			280
6720592	INSTRUCTIONS			346
6720736	HEATER			280
6722147	HOLDER			216
6722344	FLUID			2, 10, 426
6722597	VELCRO			300
6722907	KIT			46, 274
6722908	INSTRUCTIONS			274
6724094	ANTI-FREEZE			426
6724354	ANTI-FREEZE			426
6724482	INSTRUCTION			328
6724557	OIL			2, 4, 6, 426
6724558	OIL			2, 4, 6, 426
6724559	OIL			2, 4, 6, 426
6725092	DECAL			310, 312
6725128	ADAPTER			146
6725168	KIT			408
6725182	TEE			68, 70
6725256	WEIGHT			310
6725273	HARNESS			358
6725301	COVER			26
6725302	GASKET			32
6725303	FRAME			26
6725337	TUBE			54, 60
6725361	INSULATION			342, 414, 416
6725370	DECAL			408
6725373	SPRING PLATE			26
6725374	DECAL			312
6725421	HANDLE			306
6725497	CROSS			392, 394
6725502	ELBOW			266
6725513	PACKAGE			358
6725552	TUBE			384
6725553	TUBE			384
6725898	KIT			344
6725906	BRACKET			344
6725907	DECAL			384, 386
6725933	HARNESS			358, 368
6725937	CLAMP			296
6725938	CLAMP			296
6725946	KIT			306
6726062	SHIELD			22
6726069	COVER			22
6726162	BRACKET			106, 110

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6726166	TUBE			54
6726167	TUBE			56, 62
6726168	TUBE			54, 60
6726180	TUBE			62, 284
6726199	HOSE			56, 62
6726251	HOSE			106
6726253	MOUNT			54, 60
6726254	BRACKET			106, 110
6726255	PAD			106, 110
6726272	TUBE			392
6726273	TUBE			392
6726277	CLAMP			56, 58, 60, 64, 392, 394
6726303	DECAL			306
6726357	HARNESS			370
6726386	KNOB			358
6726423	DECAL			378
6726427	KIT			298
6726430	HARNESS			340
6726433	SPACER			160, 164, 166
6726435	DOOR			290
6726539	PULLEY			168
6726573	BRACKET			146, 270
6726620	BRACKET			368
6726621	SCREW			362, 364, 368, 372
6726623	HOSE			368
6726648	BRACKET			368
6726655	KIT			400
6726656	HOSE			368
6726661	HOSE			368
6726679	MOUNT			78, 270
6726680	PEDAL			78, 270
6726681	LINK			146, 270
6726888	HARNESS			368
6726898	BELT			6
6726932	DOOR			296
6726937	SHIELD			168, 368
6726945	MOUNT			326
6726987	HOSE			386
6726988	BELT			368
6727065	BOLT			150, 270, 354
6727155	DECAL			356
6727176	KIT			320
6727178	HARNESS			138
6727190	HARNESS			316
6727243	DECAL			356
6727298	KIT			354
6727299	INSULATION			316
6727328	HARNESS			356
6727414	HOSE			368
6727496	PIN			146, 270
6727508	BRACKET			140, 318

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6727595	DECAL			314
6727637	ELBOW			106, 110
6727638	TEE			54, 58, 60, 64
6727640	TUBE			54, 114
6727643	HOSE			114
6727646	BRACKET			284, 286
6727647	TUBE			114, 116
6727657	HOSE			72
6727705	HOSE			56, 58, 62, 64
6727707	CLAMP			54, 60
6727708	CLAMP			56, 58, 62, 64
6727739	KIT			326
6727752	GASKET			164
6727753	GASKET			166
6727786	KIT			364
6727847	COVER			358
6727863	ROD LINK			36
6727869	SENDER			140
6727912	DECAL			314
6727913	DECAL			100, 312, 314
6727926	DECAL			146, 270, 312
6727941	DECAL			146, 270, 312
6727993	KIT			378
6727995	HORN KIT			374
6728011	BRACKET			368
6728045	DECAL			270
6728062	MOUNT			168
6728337	SENDER			172
6728473	BOLT			38
6728539	DECAL			146, 270, 312
6728540	DECAL			270
6728567	KIT			362
6728626	HARNESS			142
6728629	WINDOW			304, 316
6728673	TANK			106, 110
6728742	HARNESS			356
6729008	CABLE			140
6729009	SEAL			304
6729010	SEAL			304
6729011	SEAL			304
6729012	INSULATION			24
6729013	INSULATION			24
6729052	HOSE			110
6729077	DECAL			370
6729082	MOUNT			114, 116
6729083	MOUNT			114, 116
6729141	MOUNT			352
6729173	COVER			50
6729202	HOSE			384, 386
6729203	HOSE			384, 386
6729233	KIT			316

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6729380	HARNESS			326
6729467	SPACER			146, 270
6729594	HANDLE			150, 354
6729595	HANDLE			150, 354
6729688	LATCH			398
6729776	WINDOW			290, 294
6729853	HOSE			40
6729854	HOSE			40
6729896	TIRE			424
6729900	TIRE			424
6729909	TUBE			56, 62
6729939	LATCH PLATE			34
6729982	SCREEN			112
6729991	REAR DOOR			34
6729991	REAR DOOR	6711524	B,D	22
6730078	COVER			44
6730106	TIRE			424
6730107	TIRE			424
6730142	TEE			54, 58, 60, 64
6730192	KIT			108
6730202	TUBE			54, 60
6730203	TUBE			54, 60
6730209	TUBE			62, 284
6730290	BOLT			36
6730291	BRACKET			326
6730770	HARNESS			384, 386
6730771	RIM			424
6730772	RIM			424
6730775	RIM			424
6730816	SHIELD			290, 296
6730822	KIT			290
6730823	KIT			296
6730867	BRACKET	6727084	B,D	172
6730885	HARNESS			292
6730886	KIT			284
6730996	HOSE			366
6730997	BUSHING			38
6730998	HOSE			366
6730999	TUBE ASSY			164, 166
6731059	INLET			42
6731060	SHIELD			172
6731084	CONNECTOR			366
6731085	ELBOW			366
6731108	SEAL			402
6731121	PLUG			44
6731151	KIT			270
6731158	KIT			366
6731160	WASHER			36
6731212	SENSOR			292
6731217	CHAIN			44
6731218	CHAIN			44

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6731222	PIN			340
6731228	TUBE			72
6731229	TUBE			72
6731230	TUBE			72
6731231	TUBE			72
6731239	HARNESS			340
6731256	CABLE			140
6731275	INSULATION			32
6731336	DECAL			314
6731478	EXIT TAG			304, 316
6731495	SHIELD			368
6731507	DECAL			314
6731508	DECAL			314
6731524	KIT			350
6731578	BUSHING			22
6731617	PAN			318
6731657	BRACKET			376
6731658	BRACKET			376
6731665	CABLE			318
6731666	CABLE			318
6731694	KIT			318
6731746	BRACKET			318
6731757	DECAL			312
6731819	STRAP			340
6731973	HOLDER			340
6731979	BUSHING			38
6731994	DECAL			342, 414
6732001	KIT			398
6732023	CONNECTOR			366
6732206	SPACER			340
6732225	SPACER			22
6732264	FRAME LINK			36
6732265	BUSHING			36
6732318	SPACER			160
6732350	WINDOW			298
6732351	WINDOW			296
6732375	TANK			160
6732423	DECAL			314
6732443	CUP			38
6732457	WASHER			160
6732532	DECAL			312, 314
6732533	DECAL			312, 314
6732537	BOB-TACH			38
6732619	SEAL			402
6732620	PANEL			32
6732621	PANEL			32
6732715	LATCH			34
6732718	KIT			402
6732724	INSULATION			342, 414, 416
6732730	HARNESS			322
6732732	BUSHING			370

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6732870	MOUNT			160
6732928	KIT			352
6732975	DECAL			290
6732997	U-BOLT			118
6733001	CONDENSER			368
6733002	MAIN FRAME			22
6733022	BRACKET			118
6733024	BRACKET			118
6733107	PLUG ASSY			24
6733136	KIT			322
6733142	KIT			324
6733144	MOUNT			322
6733192	TUBE			394
6733195	TUBE			286
6733196	TUBE			286
6733197	HOSE			110
6733292	HARNESS			146
6733429	CAP			160
6733447	TEE			100
6733529	SEAL			32
6733575	HINGE			34
6733616	BUMPER			34
6733621	SHAFT			48, 50, 52
6733652	HOSE			106, 110
6733653	TUBE			106
6733655	COMPRESSOR			368
6733667	LATCH			34
6733683	TUBE			72
6733684	TUBE			62, 284
6733694	HOUSING			48
6733695	MOUNT ASSY			44, 48
6733804	GRILL			160
6733886	BOLT			160
6733956	COVER			52
6733970	MOUNT			276
6734048	TEE			112
6734100	RADIATOR			160
6734104	HOUSING ASSY			160, 176
6734190	TUBE			116
6734192	TUBE			286
6734194	HOSE			110
6734230	CHAINCASE			44
6734236	ADAPTER			160
6734432	SPACER			172
6734495	TUBE			58, 64
6734496	TUBE			58, 64
6734534	DECAL			314
6734550AR	KIT			312, 314
6734550BR	KIT			312, 314
6734551AR	KIT			312, 314
6734551BR	KIT			312, 314

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6734551JP	KIT			312, 314
6734554AR	KIT			312, 314
6734554BR	KIT			312, 314
6734555AR	KIT			312, 314
6734555BR	KIT			312, 314
6734555JP	KIT			312, 314
6734561	WASHER			106, 110
6734563	WASHER KIT			106, 110
6734660	BUSHING			36
6734661	PIN			36
6734662	PIN			36
6734664	HOSE			72
6734743	OIL COOLER			114, 116
6734906	TUBE			386
6734907	TUBE			386
6735140	DECAL			312
6735204	SCREEN			160
6735246	DUCT			358
6735285	AIR CLEANER			266, 342, 414
6735316	COVER			52
6735349	HOSE			164, 166
67354245	DUCT	6717643	A	358
6735465	KIT			384
6735651	HOSE			116
6735662	BUSHING			36
6735669	SHIELD			58
6735724	KIT			392
6735773	HEATER KIT			358
6735825	SPACER			340
6735828	TUBE			392
6735829	TUBE			392
6735830	TUBE			392, 394
6735854	TUBE			72
6735855	TUBE			72
6735862	DECAL			312
6735864	DECAL			314
6735883	BRACKET			168
6735884	IDLER ASSY			168
6735901	DECAL			314
6735922	TUBE			110
6735986	MOUNT			174
6736071	KIT			32
6736195	ROD			174
6736200	HOSE			108, 110
6736201	HOSE			108
6736205	TUBE			100
6736206	BRACKET			100
6736207	BRACKET			100
6736210	HOSE			100
6736586	ELBOW			100
6736641	PAINT			426

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6736642	PAINT			426
6736644	PAINT			426
6736645	PAINT			426
6736647	HOSE			100
6736660	TANK			40
6736685	TUBE			100
6736686	TUBE			394
6736773	TUBE			110
6736775	BELT			168
6736807	FLYWHEEL ASSY			168
6736810	BRACKET			100
6736817	MOUNT			172
6736875	TANK			292
6736930	TUBE			394
6736931	TUBE			394
6736932	TUBE			394
6736933	TUBE			394
6737088	COVER			272
6737182	LIFT ARM			36
6737191	WEDGE ASSY	6704242	A	38
6737254	TUBE			392
6737261	KIT			368
6737355	HOSE			166
6737368	BRACKET			42
6737453	ELBOW			106, 110
6737503	HOSE			384
6737524	KNOB			70
6737524	KNOB	6668913	A	98
6737648	HOSE			54
6737704	INSULATION	6717515	A	316
6737783	KIT	6719563	A	312, 356
6800124	RESTRICTOR			88
6801059	WASHER			294, 400
6801167	PLUG			88, 94
6803092	BONNET			88, 92
6803473	SEAL KIT			388
6804790	DECAL			26
6804920	BUSHING			84, 92
6805087	CASE			76
6805102	BUSHING			82, 84, 92
6805453	BUSHING			74
6806007	SPRING			82
6806124	HEAD			76
6806315	PISTON			74
6806330	SEAL KIT			74
6806332	HEAD			74
6806403	HOSE			384, 386
6809425	SEAL KIT			90
6809511	DECAL			56, 58, 62, 64
6809726	ROLLER			34
6809727	CHANNEL			34

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6809734	BUSHING			34
6809845	BOLT			34
6810132	SPRING			34
6810141	SPRING			34
6810349	CASE			388
6810356	SPACER			388
6810430	ROD			76
6810611	CYLINDER			388
6810612	ROD			388
6810950	SPRING			86, 92
6812031	BLOCK			80
6812170	PLUG			388
6813153	PLATE			84
6813778	PAD			84, 92
6814279	BLOCK			84, 94
6814323	SPOOL			84, 92
6814423	CROSS			94
6814433	CROSS			86, 116
6814694	RETAINER			84, 92
6814925	VALVE			80
6815016	SEAT			84, 92
6815060	VALVE			84
6815061	SPOOL			92
6815062	SPOOL			92
6815151	SPOOL			84
6815152	SPOOL			84
6815308	TUBE			86, 94
6815621	TUBE			86, 92
6816252	SEAL KIT			82
6816549	PLUG			86, 94
6816564	VALVE			92
6817553	CROSS			82
6817553	CROSS	6805241	A	106
6817566	BUSHING			172
6817707	NUT			84, 92
6900366	INSTRUCTIONS			308
6900410	INSTRUCTIONS			310
6900827	INSTRUCTIONS			378
6900838	INSTRUCTIONS			284
6900848	INSTRUCTIONS			348
6900850	INSTRUCTIONS			358, 366
6900851	INSTRUCTIONS			316
6900853	INSTRUCTIONS			304
6900857	INSTRUCTIONS			276
6900861	INSTRUCTIONS			406
6900888	INSTRUCTIONS			376
6900934	INSTRUCTIONS			330
6900991	INSTRUCTIONS			278
6900992	INSTRUCTIONS			420
6901010	INSTRUCTIONS			408
6901011	INSTRUCTIONS			410

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
6901013	INSTRUCTIONS			292, 296, 304
6901025	INSTRUCTIONS			344
6901029	INSTRUCTIONS			306
6901036	INSTRUCTIONS			298
6901061	INSTRUCTIONS			400
6901076	INSTRUCTIONS			320
6901100	INSTRUCTIONS			356
6901116	INSTRUCTIONS			326
6901120	INSTRUCTIONS			364
6901146	INSTRUCTIONS			374
6901203	INSTRUCTIONS			378
6901213	INSTRUCTIONS			362
6901224	INSTRUCTIONS			370
6901492	INSTRUCTIONS			270
6901515	INSTRUCTIONS			350
6901602	INSTRUCTIONS			318
6901656	INSTRUCTIONS			398
6901663	INSTRUCTIONS			340
6901774	INSTRUCTIONS			402
6901816	INSTRUCTIONS			352
6901871	INSTRUCTIONS			324
6901872	INSTRUCTIONS			322
6902228	PAINT			426
6902229	PAINT			426
6902230	PAINT			426
6902232	PRIMER			426
6902233	PAINT			426
6902234	PAINT			426
6902235	PAINT			426
6902296	KIT			312, 314
6902356	INSTRUCTIONS			358
6902421	INSTRUCTIONS			384
6902600	MANUAL			356
6902688	MANUAL			2
6902690	MANUAL			2
6902732	MANUAL			2
6902740	INSTRUCTIONS	6902363	A	392
6902831	INSTRUCTIONS			386
6902833	INSTRUCTIONS			286
6902834	INSTRUCTIONS			394
7100019	VALVE			358
7100024	HOSE			164, 166
7100034	PULLEY			160
7100044	HOSE			384
7100110	KIT			414
7100142	HOSE			110
7100153	MOUNT			276
7100462	CLAMP			112
7100572	BELT	6675837	A	172
7100573	HOSE			164
7100840	MUFFLER	6671667	A	164

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
7101181	HARNESS			140
7101291	ELBOW	6681462	A	40
7101311	HARNESS			140
7101345	BONNET			92
7101557	GASKET	6717859	B	42
7101647	TUBE			286
7101708	CLAMP	6677363	A	164, 166
7101797	ADAPTER			110
7101973	HARNESS			392, 394
7102019	TEE			86, 92
7102099	ROD	6702397	A	174
7102200	SHIELD	6719851	A	160
7102277	ROD			174
7102865	KIT			386
7102869	KIT			286
7102870	KIT			394
7103790	MUFFLER	6675707	B,D	382
7103791	MUFFLER	6726531	B,D	382
7103952	TEE	6734048	A	108
1CM-620	BOLT			290, 296
1CM-635	BOLT			296, 368, 372
1CM-640	BOLT			290, 296
1CM-820	BOLT			118
1CM-830	BOLT			422
1CM-835	BOLT			180, 200, 220, 242
1CM-870	BOLT			140, 180, 220
1CM-875	BOLT			200, 242
1CM-880	BOLT	1CM-890	B	172
1CM-8100	BOLT			172
2DM-8	NUT			186, 228
2DM-10	NUT			368
2EM-8	WASHER			188, 230
2GM-1035	BOLT			368
4CM-20	BOLT			208, 254
4CM-616	BOLT			204, 210, 258
4CM-620	BOLT			180, 220, 248
4CM-635	BOLT			290
4CM-818	BOLT			196, 238
4CM-822	BOLT			202, 226, 244
4CM-825	BOLT			192, 234
4CM-828	BOLT			192, 198, 234, 240
4D-20	NUT			378
4DM-5	NUT			338
4DM-10	NUT			140
4DM-6	NUT			290, 296
4F-6106	PIN			28
5CM-812	BOLT			186, 228
5CM-1080	BOLT			368
5HM-13	CLAMP			42
5HM-14	CLAMP			40, 160
5HM-20	CLAMP			366

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
5HM-24	CLAMP			40, 106, 110, 160
5HM-27	CLAMP			100
5HM-42	CLAMP			106, 110, 164, 166
5HM-58	CLAMP			40
5JM-24	CIR-CLIP			194, 236
6E-4	WASHER			276
6E-5	WASHER			138, 140, 172, 348
6E-6	WASHER			140
6EM-60	WASHER			290, 296
6J-807	KEY			168
6J-1664	WOODRUFF KEY			46
7D-4	NUT			68, 70
7J-2010	KEY			176
7J-2108	KEY			160
8D-6	NUT			118, 330
9G-512	SCREW			176
10C-410	BOLT			304
10C-416	BOLT			304
10C-616	BOLT			28
10H-25	GREASE ZERK			36
10H-35	GREASE ZERK			38, 118
10J-5	BALL			194, 236
10J-13	BALL			180, 220
11H-15	GREASE ZERK			36
12D-6	NUT			340
12D-8	NUT			340
12D-10	NUT			344
12H-15	GREASE ZERK			36
12H-25	GREASE ZERK			384, 386
14J-5032	PIN			38
15JM-410	KEY			182, 224
15KB-606	ADAPTER			106, 110, 392, 394
15KB-612	ADAPTER			384, 386
15KB-810	ADAPTER			286
15KB-1212	ADAPTER			56, 106, 384, 386, 392, 394
16F-2	PLUG			182, 224
16F-8	PLUG			176
17C-410	BOLT			340, 374
17C-412	BOLT			50, 52, 140, 276
17C-420	BOLT			290, 296, 318
17C-428	BOLT			68
17C-432	BOLT			70
17C-508	BOLT			340
17C-512	BOLT			142, 296, 312, 340
17C-514	BOLT			146, 270
17C-516	BOLT			318, 336
17C-520	BOLT			318
17C-532	BOLT			330
17C-540	BOLT			140, 378
17C-608	BOLT			146, 270
17C-610	BOLT			40, 114, 116, 168

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
17C-612	BOLT			26, 68, 118, 164, 166, 292, 296, 330
17C-616	BOLT			106, 110, 118, 146, 160, 346
17C-620	BOLT			54, 58, 60, 64, 78, 108, 112, 118,
				168, 176
17C-624	BOLT			68, 78, 296
17C-626	BOLT			174
17C-628	BOLT			54, 58, 60, 64, 118, 296
17C-632	BOLT			58, 376
17C-640	BOLT			28, 36, 308, 310, 378
17C-644	BOLT			100
17C-648	BOLT			36
17C-656	BOLT			36
17C-660	BOLT			36, 38
17C-680	BOLT			118, 392
17C-716	BOLT			26
17C-820	BOLT			34, 50
17C-828	BOLT			168, 172
17C-1016	BOLT			36
17C-1056	BOLT			24
17C-1072	BOLT			36
17C-1080	BOLT			36
17C-6116	BOLT			160
17KB-404	ELBOW			384, 386
17KB-606	ELBOW			70, 86, 94, 106, 108, 110, 112, 350,
				392, 394
17KB-810	ELBOW			66, 284, 286
17KB-1010	ELBOW			66, 100, 114, 284, 286
17KB-1210	ELBOW			114, 116
17KB-1212	ELBOW			116, 392, 394
18C-1636	BOLT			46
18KB-404	ELBOW			384, 386
18KB-606	ELBOW			384, 386
19J-12	CLAMP			108, 110
19KB-1210	TEE			100
21G-804	BOLT			352
21KB-606	TEE			108, 110, 112
21KB-610	TEE			284
24K-5	PLUG			86, 94, 108, 112
24K-7	PLUG			84, 92
25E-11	WASHER			330
25E-13	WASHER			50, 52, 150, 154, 270, 276, 374
25E-14	WASHER			304
25E-15	WASHER			140, 318, 422
25E-16	WASHER			290, 296, 318
25E-17	WASHER			118, 148, 330
25E-18	WASHER			174
25E-21	WASHER			172
25E-25	WASHER			330
25G-512	BOLT			24, 30
25G-520	BOLT			30
25G-612	BOLT			322, 326

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
25GT-410	BOLT			150, 354
25K-20016	O-RING			80, 84, 88, 92
25K-20020	O-RING			86, 94
25K-30118	O-RING			106, 110
25K-30202	O-RING			76
25K-30508	O-RING			44
27E-6	WASHER			54, 58, 60, 64
27E-10	WASHER			36
29CM-820	BOLT			142, 172
29G-412	BOLT			88
29G-416	BOLT			80, 84, 88, 92
29G-444	BOLT			80, 84, 92
30G-416	BOLT			80, 84
30H-19	CLAMP			276
30H-21	CLAMP			348
30H-22	CLAMP			40
30H-23	CLAMP			174
30H-27	CLIP			324
30H-42	CLAMP			380
30H-44	CLAMP			114, 116
30H-45	CLAMP			54, 366
30H-50	CLAMP			322, 366, 368
30H-62	CLAMP			146, 270
31C-410	BOLT			344
31C-820	BOLT			22
31C-824	BOLT			330, 376
31C-828	BOLT			22
31C-836	BOLT			378
31H-27	CLAMP			40
31H-46	CLAMP			368
31H-49	CLAMP			384, 386
35C-408	BOLT			292
35C-410	BOLT			276, 340, 358
35C-412	BOLT			28, 348
35C-508	BOLT			160
35C-512	BOLT			326, 374
35C-516	BOLT			368
35C-536	BOLT			284, 286, 340
35C-612	BOLT			78, 164, 166
35C-616	BOLT			54, 60, 142, 384, 386
35C-620	BOLT			140, 168, 172, 368
35C-624	BOLT			70, 370
35C-636	BOLT			394
35C-680	BOLT			394
35C-1032	BOLT			44
36K-5	CAP			54, 60, 106, 110
36K-6	CAP			172
36K-7	CAP			54, 58
36K-8	CAP			54, 60
37C-412	BOLT			348
37C-424	BOLT			358

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
37C-512	BOLT			276, 338, 358, 380
37C-620	BOLT			78, 270
37C-632	BOLT			310
37C-648	BOLT			100
37C-888	BOLT			22
38C-610	BOLT			174
38C-820	BOLT			168
38C-824	BOLT			34
38C-840	BOLT			34
40DM-8	NUT			422
40K-6	PLUG			164, 166
42H-10	CLAMP			40
42H-32	CLAMP			40, 164, 166
42HL-300	CLAMP			164, 166
42HS-4	CLAMP			40
43C-408	BOLT			148, 154
43C-524	BOLT			96
43C-532	BOLT			68, 96
43C-616	BOLT			140
43C-852	BOLT			172, 328
43DM-8	NUT			140
44H-48	CLAMP			368
45C-620	BOLT			118
45G-1006	BOLT			344
45K-3	ELBOW			330
46D-5	NUT			290, 296
47C-820	BOLT			50, 52
47K-8	PLUG			124, 128
47K-10	PLUG			106, 110
53D-6	NUT			24, 28
53D-10	NUT			24
53DM-8	NUT			172
54K-20002	O-RING			82, 86, 88, 92
54K-20028	O-RING			86, 92, 96
54K-30110	O-RING			388
54K-30210	O-RING			74
54K-40116	O-RING			388
54K-40208	O-RING			76
54K-40224	O-RING			74
54K-60212	O-RING			74
55D-5	NUT			340
55D-6	NUT			296
55K-204	O-RING			82, 86, 88, 92, 96
55K-212	O-RING			82, 88, 96
55K-214	O-RING			110, 384, 386
57D-5	NUT			60, 64, 284, 286
57D-6	NUT			78, 270, 310, 376
57D-8	NUT			376
57G-608	SCREW			358
58K-13	O-RING			86, 94
58K-14	O-RING			80, 84, 88, 92

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
58K-17	O-RING			80, 84, 88, 92
58K-22	O-RING			86, 94
58K-116	RING			288
58K-120	O-RING			146
58K-124	O-RING			80, 90
58K-127	O-RING			82, 84, 88
58K-132	O-RING			388
58K-214	O-RING			106
58K-230	O-RING			76
59D-4	NUT			174, 304, 348
59D-5	NUT			24, 140, 292, 296, 318, 358
59D-6	NUT			34, 54, 58, 60, 64, 112
59D-8	NUT			24, 54, 58, 60, 64, 72
59G-616	BOLT			276
61D-4	NUT			276, 290, 296, 318
61D-5	NUT			34, 276, 292, 296, 312
61D-6	NUT			22, 100, 106, 110, 160, 164, 166, 168, 292, 308, 310
62D-6	NUT			118, 330
63D-8	NUT			378
69G-436	BOLT			92, 146
72F-1	DRAIN COCK			40
73G-656	BOLT			168, 384, 386
73G-824	BOLT			118
73K-222	WASHER			388
73K-228	WASHER			76
75K-3	O-RING			74, 76, 388
75K-6	O-RING			114, 116
75K-12	O-RING			82
79K-2	O-RING			162
79K-4	O-RING			384, 386
79K-5	O-RING			40, 122
79K-6	O-RING			68, 70, 82, 86, 90, 92, 106, 110, 122, 384, 386, 392, 394
79K-7	O-RING			82, 86, 288, 390
79K-8	O-RING			80, 84, 88, 92, 124, 128, 172, 288, 390
79K-10	O-RING			54, 58, 60, 64, 80, 84, 88, 92, 100, 114, 116, 126, 284, 286, 350, 390
79K-12	O-RING			56, 62, 72, 106, 108, 110, 114, 116, 126, 130, 384, 386, 392, 394
79K-16	O-RING			86, 94, 100, 106, 110
79K-20	O-RING			100
80K-13	WASHER			86
80K-14	WASHER			80, 84, 88, 92
80K-16	WASHER			86, 94
80K-332	WASHER			74
83D-4	NUT			28, 68, 70, 140, 340, 358, 374
83D-5	NUT			368, 374
83D-6	NUT			54, 58, 60, 64, 68, 70, 78, 112, 118, 322, 326, 346, 392, 394

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)

Part No.	Description	Was	Code	Page
83D-6	NUT			100
83D-8	NUT			22, 172
83F-3	ELBOW			330
84G-3112	BOLT			24, 32, 40, 100, 162, 276, 312, 322, 324, 326
84G-3116	BOLT			42
84G-3708	BOLT			114, 116, 164, 166
84G-3710	BOLT			106, 110, 146, 270, 368
84G-3712	BOLT			22, 32, 42, 44, 50, 54, 58, 60, 64, 114, 116, 138, 140, 164, 166, 172, 174, 284, 286, 340, 350, 366
84G-3716	BOLT			42, 50, 52, 106, 110, 140, 172, 174, 340, 342, 368, 414
84G-3720	BOLT			50, 52, 54, 58, 60, 64, 100, 112, 272
84G-3724	BOLT			54, 60, 174, 384, 386, 392, 394
84G-3728	BOLT			56, 58, 62
84G-3732	BOLT			112
84G-3736	BOLT			72
84G-3740	BOLT			72
85D-4	NUT			340
85D-5	NUT			40, 142, 174, 336, 380
85D-6	NUT			26, 34, 36, 38, 378
85D-7	NUT			26
85D-8	NUT			24, 168, 172
85G-616	BOLT			340
85G-808	BOLT			340
86F-3	NUT			330
86F-5	NUT			350, 392, 394
86F-8	NUT			114, 116
87D-5	NUT			378
88F-5	ELBOW			392, 394
90K-5	PLUG			114, 116
90K-8	PLUG			82
91D-5	NUT			330
91D-6	NUT			118, 142, 330
91D-7	NUT			290, 296
91G-420	BOLT			304, 316
91K-5	TEE			392, 394
92D-10	NUT			388
92D-12	NUT			168
92D-16	NUT			74
93G-824	BOLT	73G-824	B	44
95D-5	NUT			24, 140, 146, 270
95D-6	NUT			78, 146, 174, 176, 296
95D-8	NUT			24
95K-6	O-RING			106, 110
96D-8	NUT			162
97D-4	NUT			276
97D-5	NUT			318
97D-6	NUT			370
97D-8	NUT			352

Code for disposition of old part number

A — Use up

B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales

D — Part Number Error

NUMERICAL INDEX (Cont'd)[illegible]

Code for disposition of old part number
A — Use up
B — Use on other application (See PNI)

C — File PDR Report with Bobcat Parts Sales
D — Part Number Error